

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM1000000029DJX
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: MIRROR (INT): DIGITAL INNER MIRROR: ON-VEHICLE INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

ON-VEHICLE INSPECTION

PROCEDURE

1. INSPECT INNER REAR VIEW MIRROR ASSEMBLY

NOTICE:

- Perform this inspection indoors.
- When anti-glare is not operating, the mirror surface is bright. When anti-glare is operating, the mirror surface is darkened.

Pre-procedure1


- (a) Turn the ignition switch to ON.

Procedure1

- (b) Confirm that the mode selection lever is set to the optical mirror mode side.

HINT:

If the mode selection lever is set to the digital mirror mode side, move it to the optical mirror mode side.

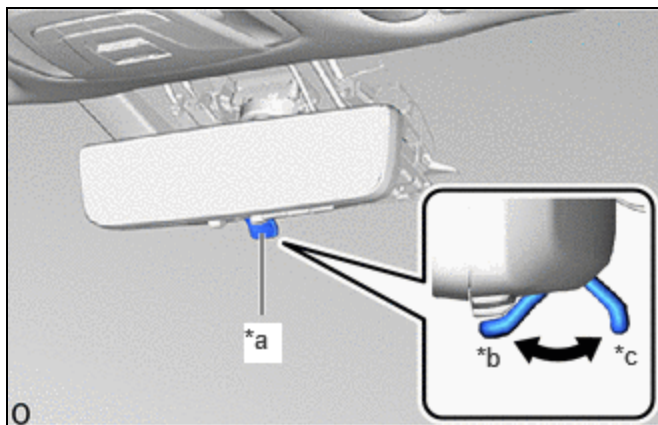


*a	Mode Selection Lever
*b	Digital Mirror Mode
*c	Optical Mirror Mode

(c) Operate the menu switch and confirm that the cursor is in the location shown in the illustration and that anti-glare is not operating.

HINT:

- If the cursor is in the location shown in the illustration, automatic anti-glare mode is on and anti-glare is not operating.
- If the cursor is in a location other than that shown in the illustration, move the cursor to the location shown in the illustration using the menu and cursor operation switches.
- Depending on the ambient conditions, anti-glare may operate.

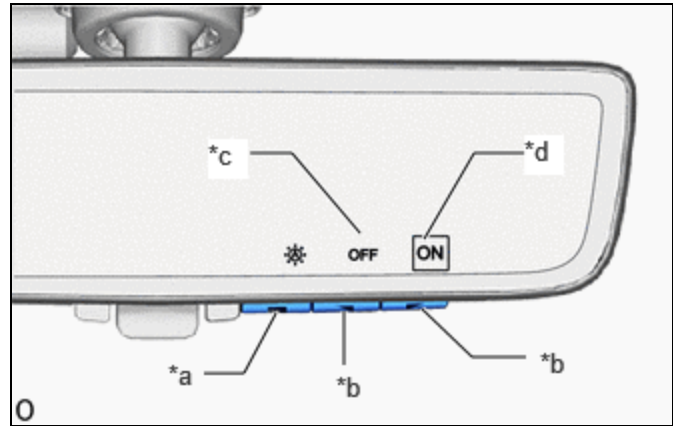


*a	Menu Switch
*b	Cursor Operation Switch
*c	Automatic Anti-glare Mode OFF
*d	Automatic Anti-glare Mode ON

(d) Using the menu switch and cursor operation switches, turn off automatic anti-glare mode.

HINT:

When automatic anti-glare mode is off, anti-glare does not operate regardless of the ambient conditions.

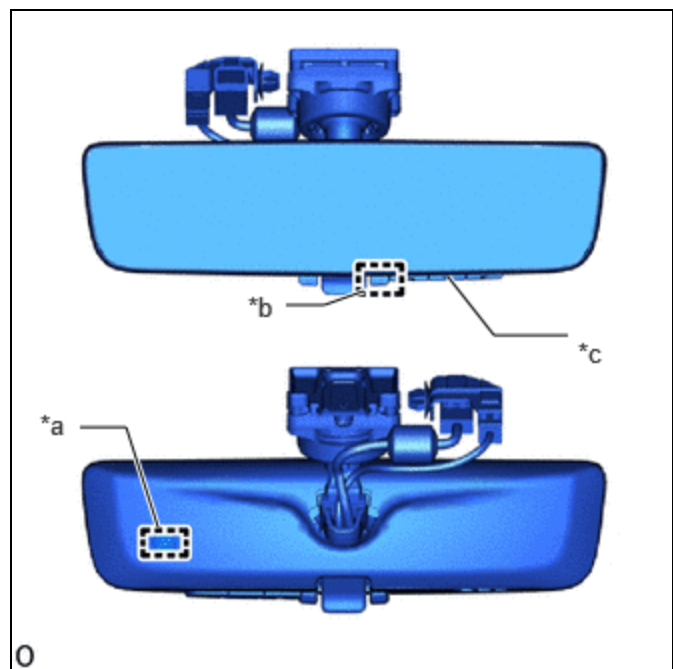

*a	Ambient Light Sensor
*b	Rearward Facing Light Sensor
*c	Cursor Operation Switch

(e) Using the menu switch and cursor operation switches, turn on automatic anti-glare mode.

(f) While covering the ambient light sensor with your hand, shine a light on the rearward facing light sensor and confirm that anti-glare operates.

(g) Remove your hand from the sensor and stop shining the light at the rearward facing light sensor and confirm that anti-glare stops operating.

NOTICE:

If the system does not operate as indicated above, perform the test several times with the digital inner mirror at different angles or with different ambient conditions.

Post-procedure1

(h) None

