

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000029DJU
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> MIRROR (INT): INNER REAR VIEW MIRROR (w/ EC Mirror): INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

# INSPECTION


## PROCEDURE

### 1. INSPECT INNER REAR VIEW MIRROR ASSEMBLY

Pre-procedure1

- (a) Connect a positive (+) lead from the auxiliary battery to terminal 1 and a negative (-) lead to terminal 2.
- (b) Attach black colored tape to the forward sensor to prevent it from sensing.

Procedure1

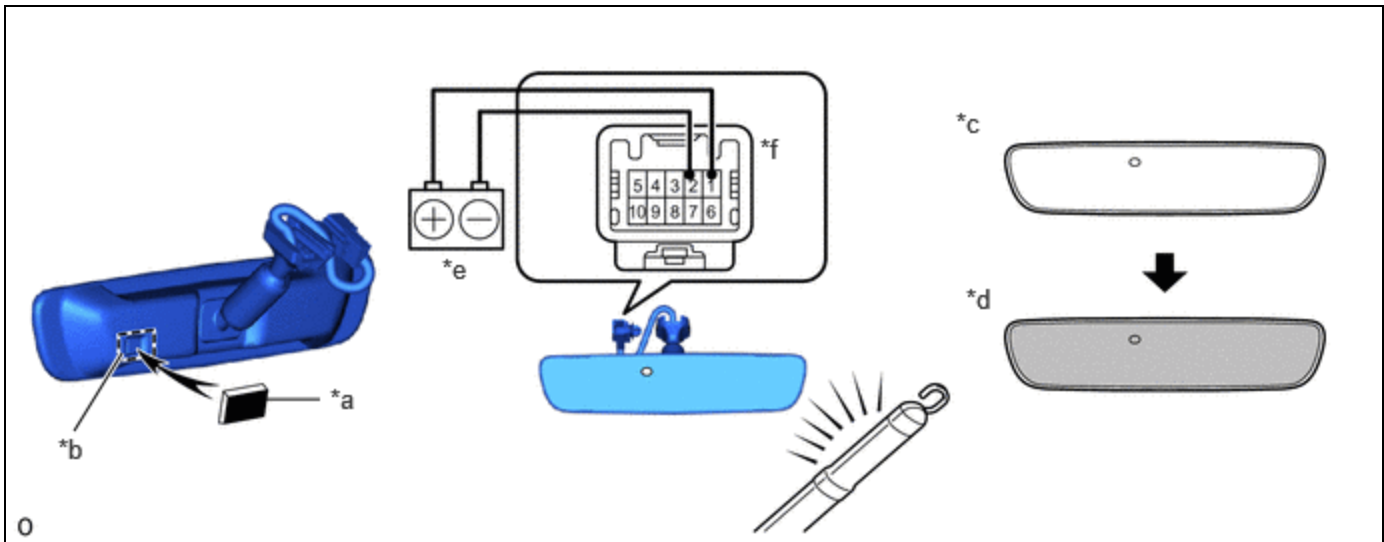

*a	Black Colored Tape	*b	Forward Sensor
*c	Bright	*d	Dark
*e	Auxiliary Battery	*f	Component without harness connected (Inner Rear View Mirror Assembly)

(1) Light up the mirror with an electric light, and check that the mirror surface changes from bright to dark.

OK:

Mirror surface changes from bright to dark.

If the result is not as specified, replace the inner rear view mirror assembly.

Post-procedure1

- (d) None

