

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000002B3HW
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> POWER OUTLETS (INT): POWER OUTLET SOCKET (for Luggage Compartment): INSPECTION; 2023 - 2024 MY Prius Prius Prime [03/2023 - ]		

## INSPECTION

### PROCEDURE

#### 1. INSPECT REAR NO. 1 POWER OUTLET SOCKET ASSEMBLY

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:




[Click Location & Routing\(R83\)](#)

[Click Connector\(R83\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION
A - R83-4 (E)	Always	Below 1 Ω
B - R83-2 (ACC2)	Always	Below 1 Ω
C - R83-1 (ACC1)	Always	Below 1 Ω
R83-1 (ACC1) - R83-2 (ACC2)	Always	10 kΩ or higher
R83-1 (ACC1) - R83-4 (E)	Always	10 kΩ or higher
R83-2 (ACC2) - R83-4 (E)	Always	10 kΩ or higher

If the result is not as specified, replace the rear No. 1 power outlet socket assembly.

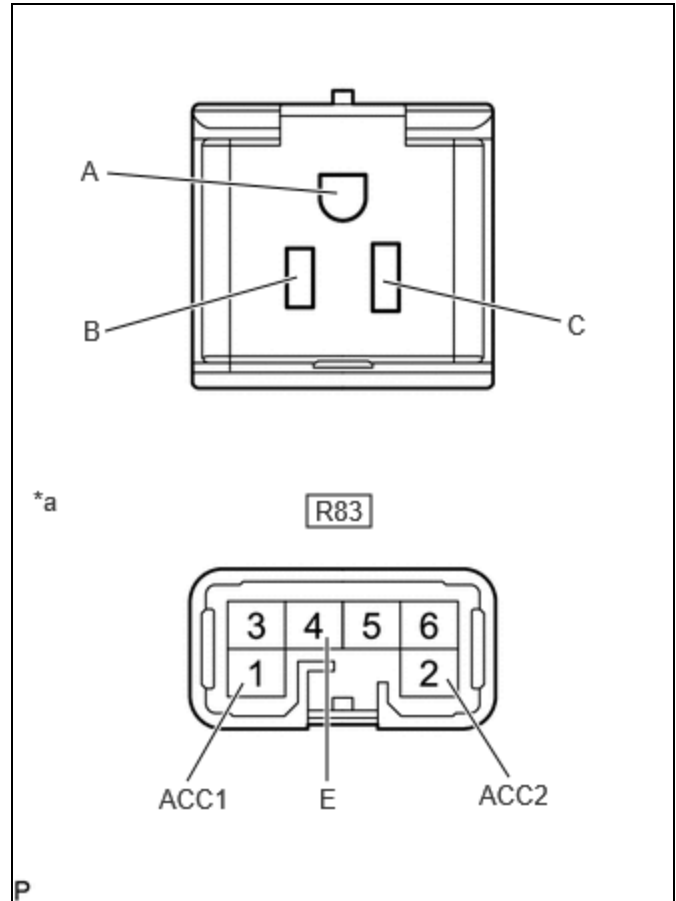

*a	Component without harness connected (Rear No. 1 Power Outlet Socket Assembly)
----	---

