

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000028TZN
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: GARAGE DOOR OPENER: GARAGE DOOR OPENER SYSTEM (for Digital Inner Mirror): DTC CHECK / CLEAR; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

DTC CHECK / CLEAR

ALL READINESS

HINT:

- With "All Readiness", you can check whether or not the DTC judgment has been completed by using the GTS.
- You should check "All Readiness" after simulating malfunction symptoms or for validation after finishing repairs.

- Connect the GTS to the DLC3.
- Turn the ignition switch to ON
- Turn the GTS on.
- Clear the DTCs even if no DTCs are stored. Enter the following menus: Body Electrical / Digital Rear-View Mirror / Trouble Codes.

Body Electrical > Digital Rear-View Mirror > Clear DTCs

- Turn the ignition switch off.
- Turn the ignition switch to ON.
- Check that the power supply voltage of the inner rear view mirror assembly is 10 V or more, then turn the ignition switch to ON and wait for 20 seconds or more.
- Enter the following menus: Body Electrical / Digital Rear-View Mirror / Utility.

Body Electrical > Digital Rear-View Mirror > Utility

TESTER DISPLAY
All Readiness

- Input the DTC to be confirmed.
- Check the DTC judgment result.

GTS DISPLAY	DESCRIPTION
Normal	<ul style="list-style-type: none"> • DTC judgment completed • System normal
Abnormal	<ul style="list-style-type: none"> • DTC judgment completed • System abnormal
Incomplete	<ul style="list-style-type: none"> • DTC judgment not completed
N/A	<ul style="list-style-type: none"> • Unable to perform DTC judgment • Number of DTCs which do not fulfill DTC preconditions has reached ECU memory limit

If the judgment result shows Incomplete or N/A, check that the power supply voltage of the inner rear view mirror assembly is 10 V or more, then turn the ignition switch to ON and wait for 20 seconds or more, then run the DTC judgement.

