

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000028VQU
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> PARK ASSIST / MONITORING: INTUITIVE PARKING ASSIST SYSTEM: C161504; Clearance Warning ECU System Internal Failure; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

<b>DTC</b>	<b>C161504</b>	<b>Clearance Warning ECU System Internal Failure</b>
------------	----------------	--

## DESCRIPTION

This DTC is stored if the clearance warning ECU assembly self-diagnosis detects an internal malfunction in the clearance warning ECU assembly.

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	DTC OUTPUT FROM	PRIORITY
C161504	Clearance Warning ECU System Internal Failure	<ul style="list-style-type: none"> <li>Communication malfunction with sub-CPU</li> <li>Mirror check error</li> </ul>	Clearance warning ECU assembly	Clearance Warning	A

## CAUTION / NOTICE / HINT

### NOTICE:

- Perform registration after replacing and installing the clearance warning ECU assembly.

Click here [INFO](#)

- If a DTC is detected again after the repair, turn the ignition switch to ON and turn the intuitive parking assist system on, and then clear the DTC.

## PROCEDURE

<b>1.</b>	<b>REPLACE CLEARANCE WARNING ECU ASSEMBLY</b>
-----------	---

(a) Replace the clearance warning ECU assembly with a new one.

### HINT:

Click here [INFO](#)

**NEXT**  **END**

