

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000029XUY
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: BRAKE CONTROL / DYNAMIC CONTROL SYSTEMS: REAR SPEED SENSOR (for AWD): REMOVAL; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

REMOVAL


CAUTION / NOTICE / HINT

HINT:

- Use the same procedure for the RH side and LH side.
- The following procedure is for the LH side.

CAUTION / NOTICE / HINT

COMPONENTS (REMOVAL)

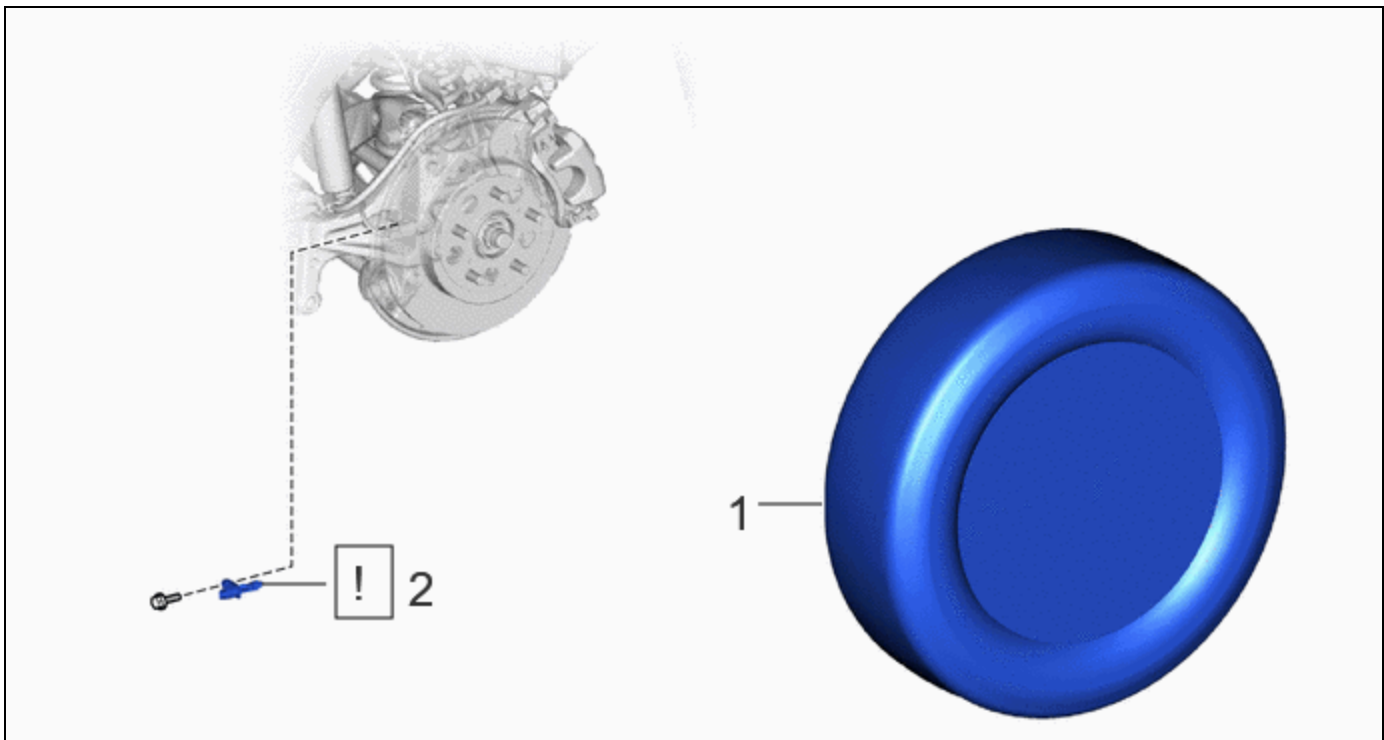


	PROCEDURE	PART NAME CODE			
1	REAR WHEEL	-	-	-	-
2	REAR SKID CONTROL SENSOR	89544E	INFO	-	-

PROCEDURE

1. REMOVE REAR WHEEL

Click here [INFO](#)

2. REMOVE REAR SKID CONTROL SENSOR

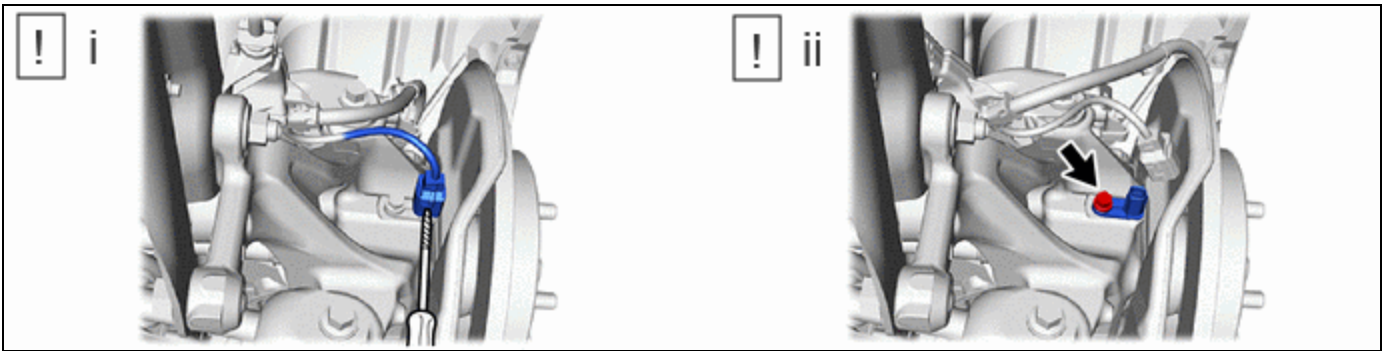

(1) Using a screwdriver with its tip wrapped with protective tape, Disconnect the rear skid control sensor connector from the rear skid control sensor.

NOTICE:

- Remove any dirt or foreign matter on and around the rear speed sensor connector before performing this step.
- Be careful not to damage the rear speed sensor or connector cover.

(2) Remove the bolt and rear skid control sensor from the rear axle carrier sub-assembly.

NOTICE:

- Keep the tip of the rear skid control sensor and installation hole free of foreign matter.
- Do not rotate or apply excessive force to the rear skid control sensor when removing it from the rear axle carrier sub-assembly. Rotating or applying excessive force may result in damage to the rear speed sensor.

