

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029UVU
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> M20A-FXS (EMISSION CONTROL): EGR VALVE: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSPECTION

## PROCEDURE


### 1. INSPECT EGR VALVE ASSEMBLY

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION
1 (EGA+) - 2 (EGA-)	20°C (68°F)	3.1 to 3.7 Ω
3 (EGB-) - 4 (EGB+)	20°C (68°F)	3.1 to 3.7 Ω

If the result is not as specified, replace the EGR valve assembly.

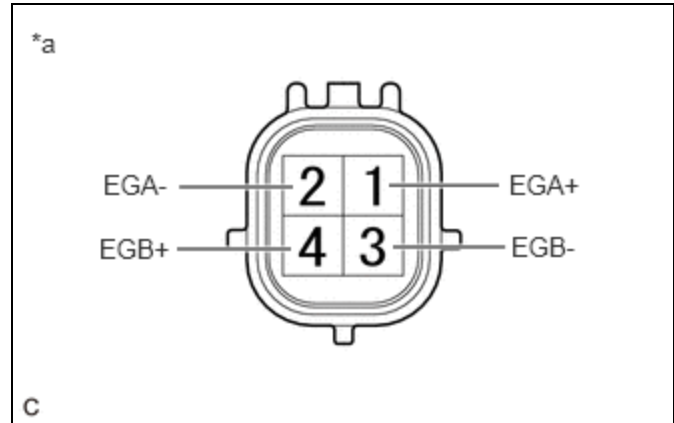

*a	Component without wire harness connected (EGR Valve Assembly)
----	---

