

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000029UWF
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> M20A-FXS (EMISSION CONTROL): PCV VALVE: ON-VEHICLE INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## ON-VEHICLE INSPECTION


### PROCEDURE

#### 1. INSPECT VENTILATION VALVE SUB-ASSEMBLY

Pre-procedure1

- (a) Start the engine.

**Powertrain > Hybrid Control > Utility**

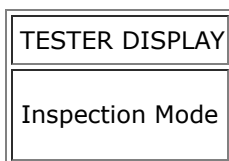

- (b) Slide the clip and disconnect the No. 2 ventilation hose from the air cleaner hose assembly.


Procedure1

- (c) Check that air is sucked into the No. 2 ventilation hose.

Standard:

Air is sucked into the No. 2 ventilation hose.

If the result is not as specified, replace the PCV valve (ventilation valve sub-assembly).

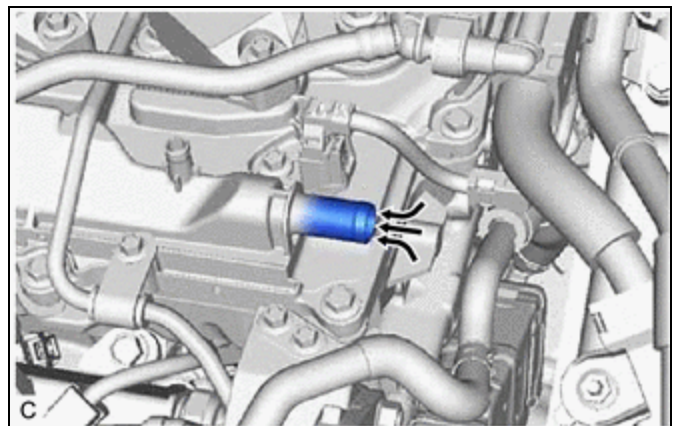

Post-procedure1

- (d) None

