

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000002BHUE
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: HYBRID / BATTERY CONTROL: HYBRID BATTERY SYSTEM (for PHEV Model): P060687; Hybrid/EV Battery Energy Control Module Processor to Monitoring Processor Missing Message; 2023 - 2024 MY Prius Prime [03/2023 -]		

DTC	P060687	Hybrid/EV Battery Energy Control Module Processor to Monitoring Processor Missing Message
------------	----------------	--

DESCRIPTION

The battery ECU assembly monitors its internal operation and will store a DTC when it detects an internal malfunction.

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	WARNING INDICATE	DTC OUTPUT FROM	PRIORITY	NOTE
P060687	Hybrid/EV Battery Energy Control Module Processor to Monitoring Processor Missing Message	ECU internal malfunction (1 trip detection logic)	Battery ECU assembly	Comes on	Master Warning: Comes on	HV Battery	A	SAE Code: P0606

MONITOR DESCRIPTION

The battery ECU assembly monitors its internal operation. If the internal operation is malfunctioning, the battery ECU assembly illuminates the MIL and stores a DTC.

MONITOR STRATEGY

Related DTCs	P0606 (INF P060687): Control module processor (battery energy control module)
Required sensors/components	Battery ECU assembly
Frequency of operation	Continuous
Duration	TMC's intellectual property
MIL operation	Immediately
Sequence of operation	None

TYPICAL ENABLING CONDITIONS

The monitor will run whenever the following DTCs are not stored	TMC's intellectual property
Other conditions belong to TMC's intellectual property	-

TYPICAL MALFUNCTION THRESHOLDS

TMC's intellectual property

-

COMPONENT OPERATING RANGE

Battery ECU assembly

DTC P0606 (INF P060687) is not detected

CONFIRMATION DRIVING PATTERN

HINT:

- After repair has been completed, clear the DTC and then check that the vehicle has returned to normal by performing the following All Readiness check procedure.

[Click here](#) **INFO**

- When clearing the permanent DTCs, refer to the "CLEAR PERMANENT DTC" procedure.

[Click here](#) **INFO**

- Clear the DTCs (even if no DTCs are stored, perform the clear DTC procedure).
- Turn the ignition switch off and wait for 2 minutes or more.
- Turn the ignition switch to ON and wait for 30 seconds or more.[*1]

HINT:

[*1]: Normal judgment procedure.

The normal judgment procedure is used to complete DTC judgment and also used when clearing permanent DTCs.

- Enter the following menus: Powertrain / HV Battery / Utility / All Readiness.
- Check the DTC judgment result.

HINT:

- If the judgment result shows NORMAL, the system is normal.
- If the judgment result shows ABNORMAL, the system has a malfunction.
- If the judgment result shows INCOMPLETE or N/A, perform the normal judgment procedure again.

CAUTION / NOTICE / HINT

NOTICE:

Be sure to check that the applicable DTC is output from the hybrid battery system.

PROCEDURE

1. REPLACE BATTERY ECU ASSEMBLY

HINT:

[Click here](#) **INFO****NEXT**  **COMPLETED**