

| | | |
|--|---------------------------|--------------------------------------|
| Last Modified: 12-04-2024 | 6.11:8.1.0 | Doc ID: RM10000002BI23 |
| Model Year Start: 2023 | Model: Prius Prime | Prod Date Range: [03/2023 -] |
| Title: HYBRID / BATTERY CONTROL: HYBRID CONTROL SYSTEM (for PHEV Model): P060694; Hybrid/EV Powertrain Control Module Processor Unexpected Operation; 2023 - 2024 MY Prius Prime [03/2023 -] | | |

| | | |
|------------|----------------|---|
| DTC | P060694 | Hybrid/EV Powertrain Control Module Processor Unexpected Operation |
|------------|----------------|---|

DTC SUMMARY

MALFUNCTION DESCRIPTION

The main CPU and sub CPU of the Hybrid vehicle control ECU monitor each other.

The cause of this malfunction may be the following:

Hybrid vehicle control ECU internal malfunction

- Hybrid vehicle control ECU malfunction

DESCRIPTION

The hybrid vehicle control ECU monitors its internal operation and will store these DTCs when it detects an internal malfunction.

| DTC NO. | DETECTION ITEM | DTC DETECTION CONDITION | TROUBLE AREA | MIL | WARNING INDICATE | DTC OUTPUT FROM | PRIORITY | NOTE |
|---------|--|--|----------------------------|----------|-----------------------------|-----------------|----------|--------------------|
| P060694 | Hybrid/EV Powertrain Control Module Processor Unexpected Operation | The main CPU value received by the sub CPU of the hybrid vehicle control ECU exceeds the threshold for a certain period of time. (1 trip detection logic) | Hybrid vehicle control ECU | Comes on | Master Warning: Comes on | Hybrid Control | A | SAE Code: P0606 |

MONITOR DESCRIPTION

The hybrid vehicle control ECU monitors its internal operation. If the internal operation is malfunctioning, the hybrid vehicle control ECU illuminates the MIL and stores a DTC.

MONITOR STRATEGY

| | |
|-----------------------------|---|
| Related DTCs | P0606 (INF P060694): Control module processor |
| Required sensors/components | Hybrid vehicle control ECU |
| Frequency of operation | Continuous |
| Duration | TMC's intellectual property |
| MIL operation | 1 driving cycle |

| | |
|-----------------------|------|
| Sequence of operation | None |
|-----------------------|------|

TYPICAL ENABLING CONDITIONS

| | |
|---|-----------------------------|
| The monitor will run whenever the following DTCs are not stored | TMC's intellectual property |
| Other conditions belong to TMC's intellectual property | - |

TYPICAL MALFUNCTION THRESHOLDS

| | |
|-----------------------------|---|
| TMC's intellectual property | - |
|-----------------------------|---|

COMPONENT OPERATING RANGE

| | |
|----------------------------|---|
| Hybrid vehicle control ECU | DTC P0606 (INF P060694) is not detected |
|----------------------------|---|

CONFIRMATION DRIVING PATTERN

HINT:

- After repair has been completed, clear the DTC and then check that the vehicle has returned to normal by performing the following All Readiness check procedure.

Click here [INFO](#)

- When clearing the permanent DTCs, refer to the "CLEAR PERMANENT DTC" procedure.

Click here [INFO](#)

- Clear the DTCs (even if no DTCs are stored, perform the clear DTC procedure).
- Turn the ignition switch off and wait for 2 minutes or more.
- Turn the ignition switch to ON (READY) and wait for 10 seconds or more. [*1]

HINT:

[*1]: Normal judgment procedure.

The normal judgment procedure is used to complete DTC judgment and also used when clearing permanent DTCs.

- Enter the following menus: Powertrain / Hybrid Control / Utility / All Readiness.
- Check the DTC judgment result.

HINT:

- If the judgment result shows NORMAL, the system is normal.
- If the judgment result shows ABNORMAL, the system has a malfunction.
- If the judgment result shows INCOMPLETE, perform the normal judgment procedure again.

PROCEDURE

| | |
|-----------|--|
| 1. | CHECK DTC OUTPUT (HYBRID CONTROL) |
|-----------|--|

Pre-procedure1

(a) None.

Procedure1

(b) Check for DTCs.

Powertrain > Hybrid Control > Trouble Codes

| RESULT | PROCEED TO |
|-----------------------------------|------------|
| Only P060694 is output | A |
| P060694 and other DTCs are output | B |

Post-procedure1

(c) Turn the ignition switch off.

A ► **REPLACE HYBRID VEHICLE CONTROL ECU**

B ► **GO TO DTC CHART (HYBRID CONTROL SYSTEM)**

