

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000002BIY6
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: HYBRID / BATTERY CONTROL: PLUG-IN CHARGE CONTROL SYSTEM (for PHEV Model): P06881F; Plug-in Control Module Power Relay Sense Circuit Intermittent; 2023 - 2024 MY Prius Prime [03/2023 -]		

DTC	P06881F	Plug-in Control Module Power Relay Sense Circuit Intermittent
------------	----------------	--

DESCRIPTION

The plugin charge control ECU assembly monitors the internal operation of the ECU and outputs a diagnostic code when an abnormality is detected.

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	WARNING INDICATE	DTC OUTPUT FROM	PRIORITY	NOTE
P06881F	Plug-in Control Module Power Relay Sense Circuit Intermittent	Plug-in charge control ECU assembly internal malfunction (Plug-in charge control ECU reset performed, abnormality occurs with detection of charging start and completion) (1 trip detection logic)	Plug-in charge control ECU assembly	Comes on	Master Warning: Comes on	Plug-in Control	A	SAE Code: P2511

MONITOR DESCRIPTION

The plugin charge control ECU assembly monitors its internal operation. If the internal operation is malfunctioning, the plugin charge control ECU assembly stores a DTC.

MONITOR STRATEGY

Related DTCs	P2511: ECM/PCM Power Relay Sense Circuit Intermittent
Required sensors/components	Plug-in charge control ECU
Frequency of operation	Continuous
Duration	TMC's intellectual property
MIL operation	Immediately
Sequence of operation	None

TYPICAL ENABLING CONDITIONS

The monitor will run whenever the following DTCs are not stored	TMC's intellectual property
Other conditions belong to TMC's intellectual property	-

TYPICAL MALFUNCTION THRESHOLDS

TMC's intellectual property

-

COMPONENT OPERATING RANGE

Plug-in charge control ECU

DTC P06881F is not detected

CONFIRMATION DRIVING PATTERN

HINT:

- After repair has been completed, clear the DTC and then check that the vehicle has returned to normal by performing the following All Readiness check procedure.

[Click here](#) INFO

- When clearing the permanent DTCs, refer to the "CLEAR PERMANENT DTC" procedure.

[Click here](#) INFO

- Connect the GTS to the DLC3.
- Turn the ignition switch to ON and turn the GTS on.
- Clear the DTCs (even if no DTCs are stored, perform the clear DTC procedure).
- Turn the ignition switch off and wait for 2 minutes or more.
- Connect the electric vehicle charger cable assembly, and AC charge the vehicle for 30 seconds or more. [*1]
- Disconnect the electric vehicle charger cable assembly and wait for 10 seconds or more. [*2]

HINT:

[*1] to [*2] : Normal judgment procedure.

The normal judgment procedure is used to complete DTC judgment and also used when clearing permanent DTCs.

- Turn the ignition switch to ON and turn the GTS on.
- Enter the following menus: Powertrain / Plug-in Control / Utility / All Readiness.
- Check the DTC judgment result.

HINT:

- If the judgment result shows NORMAL, the system is normal.
- If the judgment result shows ABNORMAL, the system has a malfunction.
- If the judgment result shows INCOMPLETE or N/A, perform the normal judgment procedure again.

CAUTION / NOTICE / HINT

NOTICE:

Be sure to check that the applicable DTC is output from the Plug-in Charge Control System.

PROCEDURE

1. REPLACE PLUGIN CHARGE CONTROL ECU ASSEMBLY

HINT:

[Click here](#) INFO

NEXT  **COMPLETED**



