

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029SJ7
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> MAINTENANCE: FRONT WIPER RUBBER: REMOVAL; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## REMOVAL

### CAUTION / NOTICE / HINT


#### NOTICE:




Make sure to hold the front wiper arm while lifting it, as lifting the front wiper arm by the front wiper blade may damage or deform the front wiper blade.

#### HINT:

- The following procedure is for the LH side.
- Use the same procedure for the RH side and LH side.
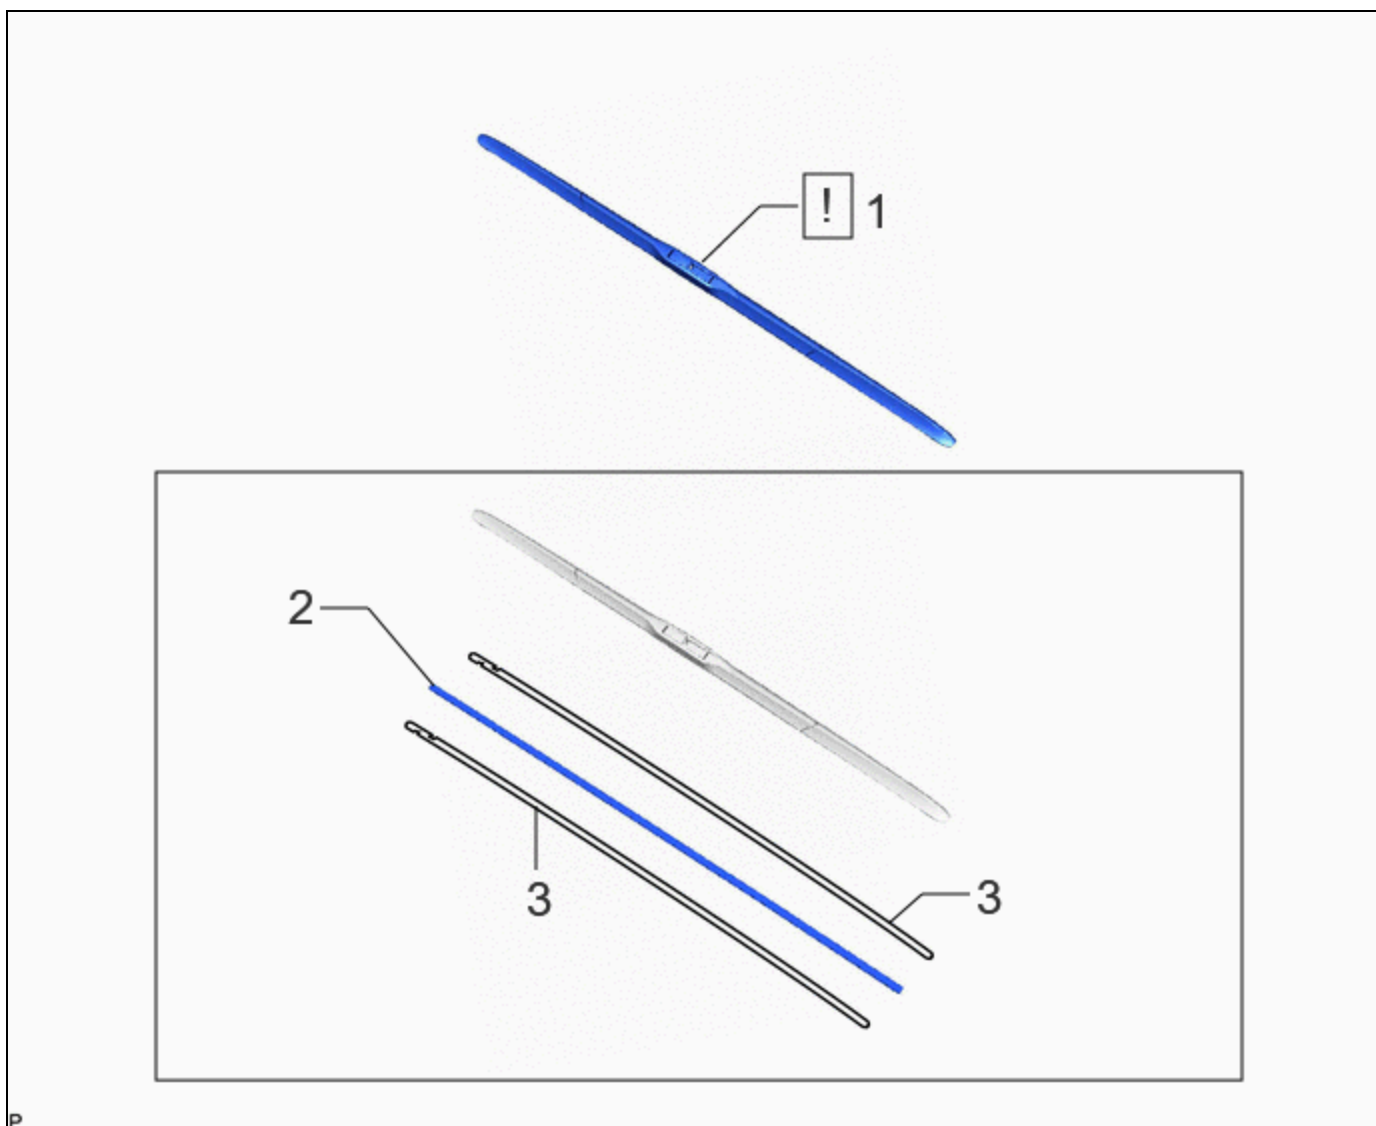
### COMPONENTS (REMOVAL)




	PROCEDURE	PART NAME CODE			
1	FRONT WIPER BLADE LH	85222A	INFO	-	-
2	WIPER RUBBER LH	85214B	-	-	-
3	BACKING PLATE	-	-	-	-


## CAUTION / NOTICE / HINT

### PROCEDURE


 
#### 1. REMOVE FRONT WIPER BLADE LH

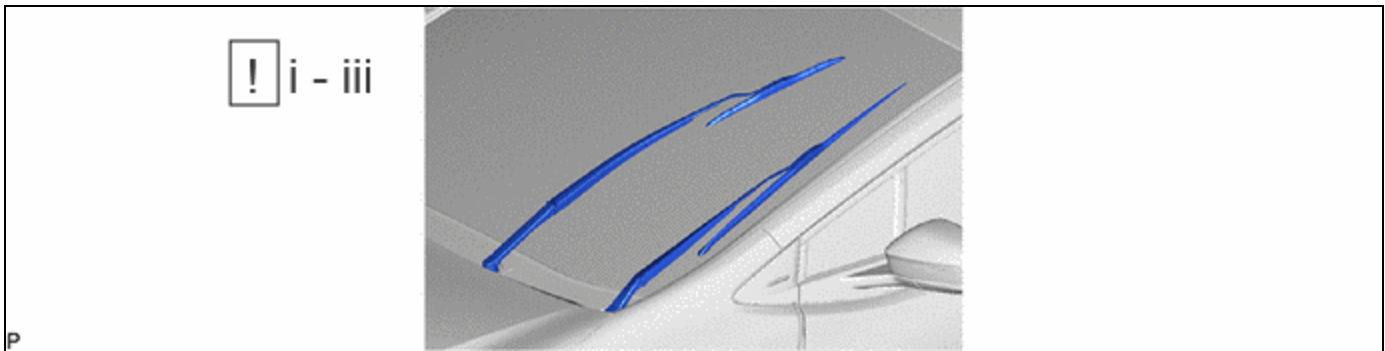

- (1) With the power switch on (IG), turn the power switch off.
- (2) Within 42 seconds of turning the power switch off, operate and hold the windshield wiper switch assembly MIST function for 2 seconds.
- (3) Check that the front wiper stops in the upper reverse position.

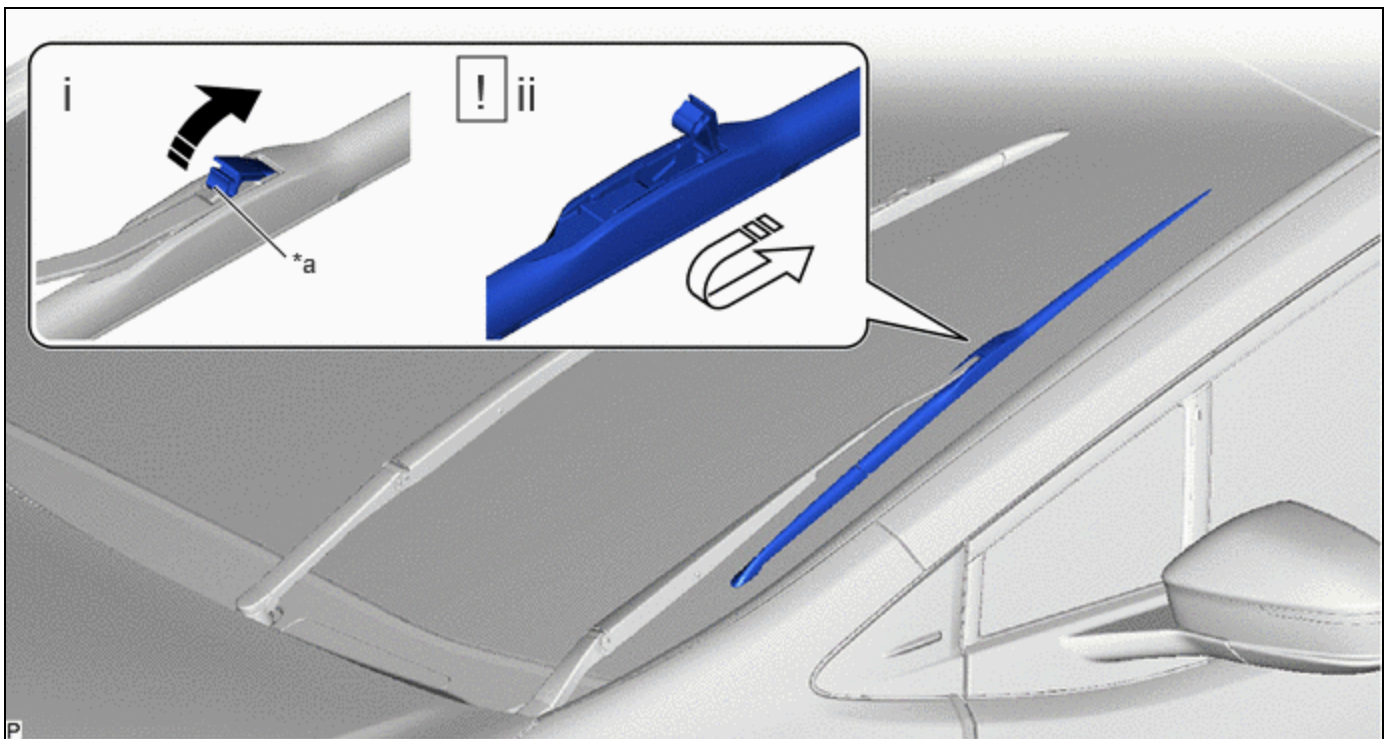

*a	Holder	-	-
----	--------	---	---


	Rotate in this Direction		Remove in this Direction
---	--------------------------	---	--------------------------


- (1) Pull up the holder of the front wiper blade LH as shown in the illustration.
- (2) Remove the front wiper blade LH from the front wiper arm as shown in the illustration.

**NOTICE:**


Place a piece of cloth between the front wiper arm and windshield glass to avoid damaging the windshield glass.


**2. REMOVE WIPER RUBBER LH**

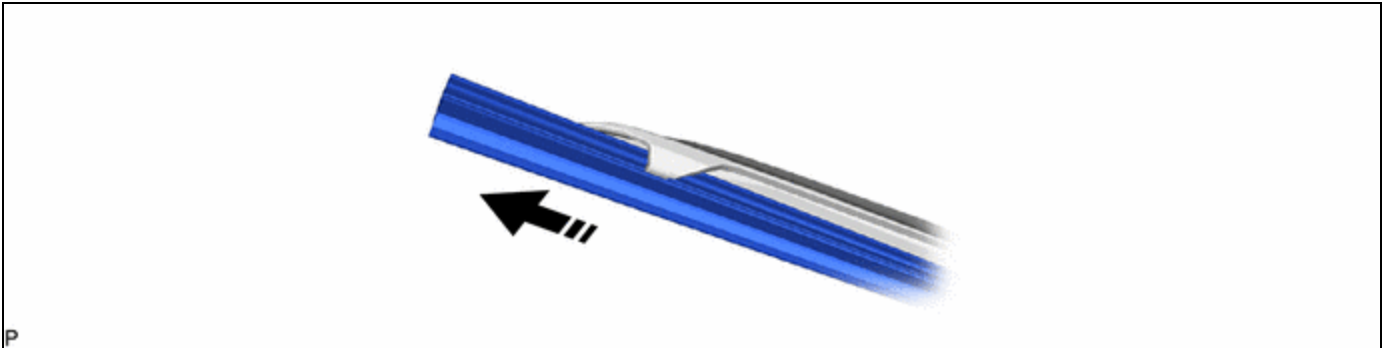

	Remove in this Direction	-	-
---	--------------------------	---	---

**3. REMOVE BACKING PLATE**

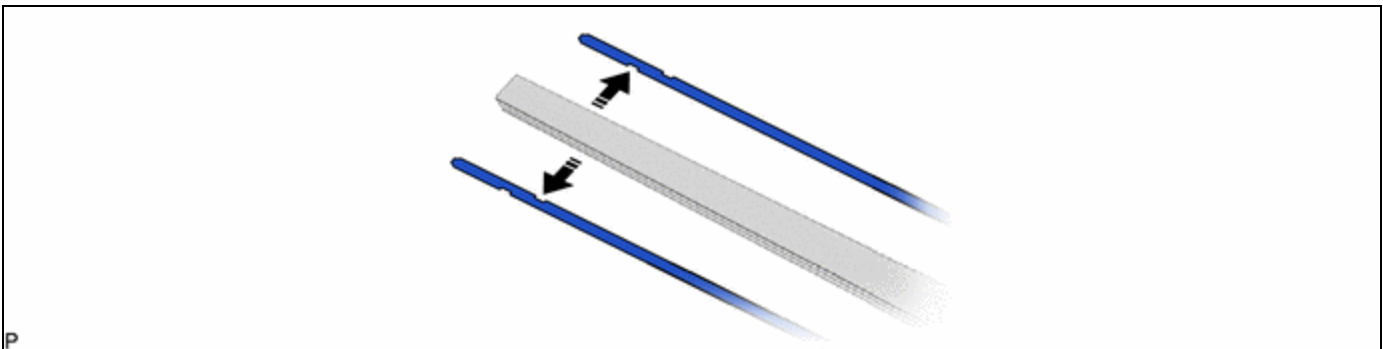

	Remove in this Direction	-	-
---	--------------------------	---	---

