


<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000002B4JI
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> DOOR / HATCH: FUEL LID OPENER MOTOR ASSEMBLY: INSTALLATION; 2023 - 2024 MY Prius Prius Prime [03/2023 - ]		

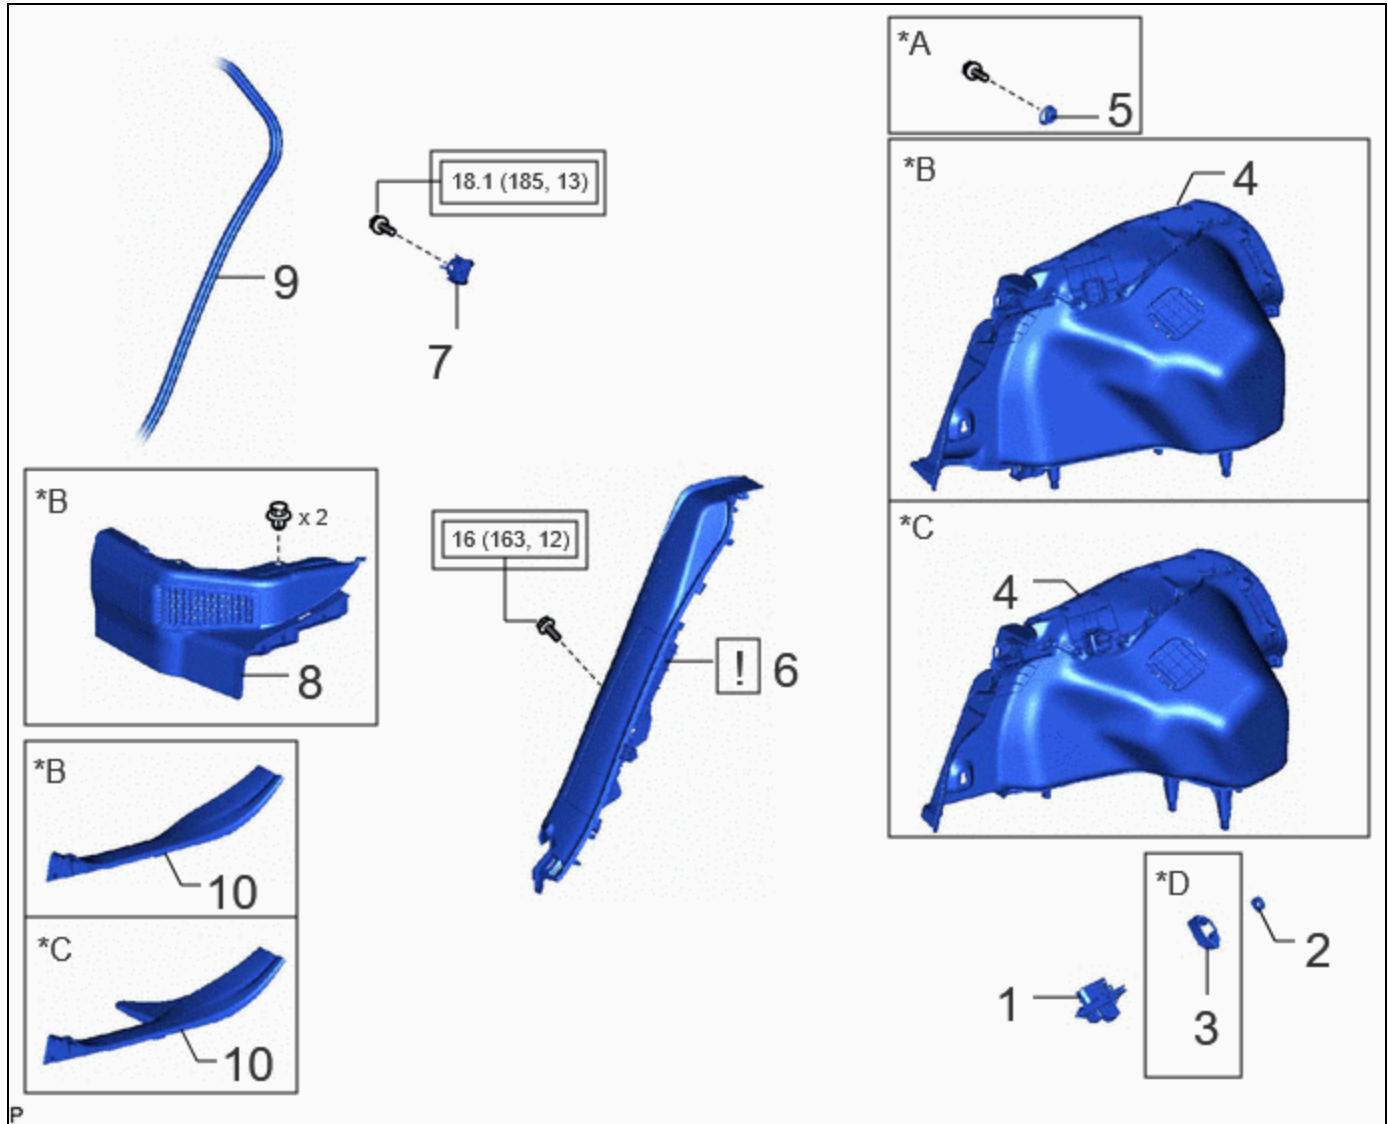


## INSTALLATION


### CAUTION / NOTICE / HINT


#### COMPONENTS (INSTALLATION)






	PROCEDURE	PART NAME CODE	!	📄	⚙️
1	FUEL LID LOCK WITH MOTOR ASSEMBLY	77030A	-	-	-
2	FUEL FILLER OPENING LID LOCK RETAINER	77377	-	-	-


PROCEDURE		PART NAME CODE			
3	FUEL FILLER OPENING LID LOCK COVER	77378A	-	-	-
4	DECK TRIM SIDE PANEL ASSEMBLY LH	64740C	-	-	-
5	LUGGAGE HOLD BELT STRIKER ASSEMBLY	58460D	-	-	-
6	REAR SEAT SIDE GARNISH LH	62552F	<b>INFO</b>	-	-
7	REAR SEATBACK HINGE SUB-ASSEMBLY LH	71304C	-	-	-
8	REAR UNDER SIDE COVER LH	76974E	-	-	-
9	REAR DOOR OPENING TRIM WEATHERSTRIP LH	62332A	-	-	-
10	REAR DOOR SCUFF PLATE INSIDE LH	67918F	-	-	-

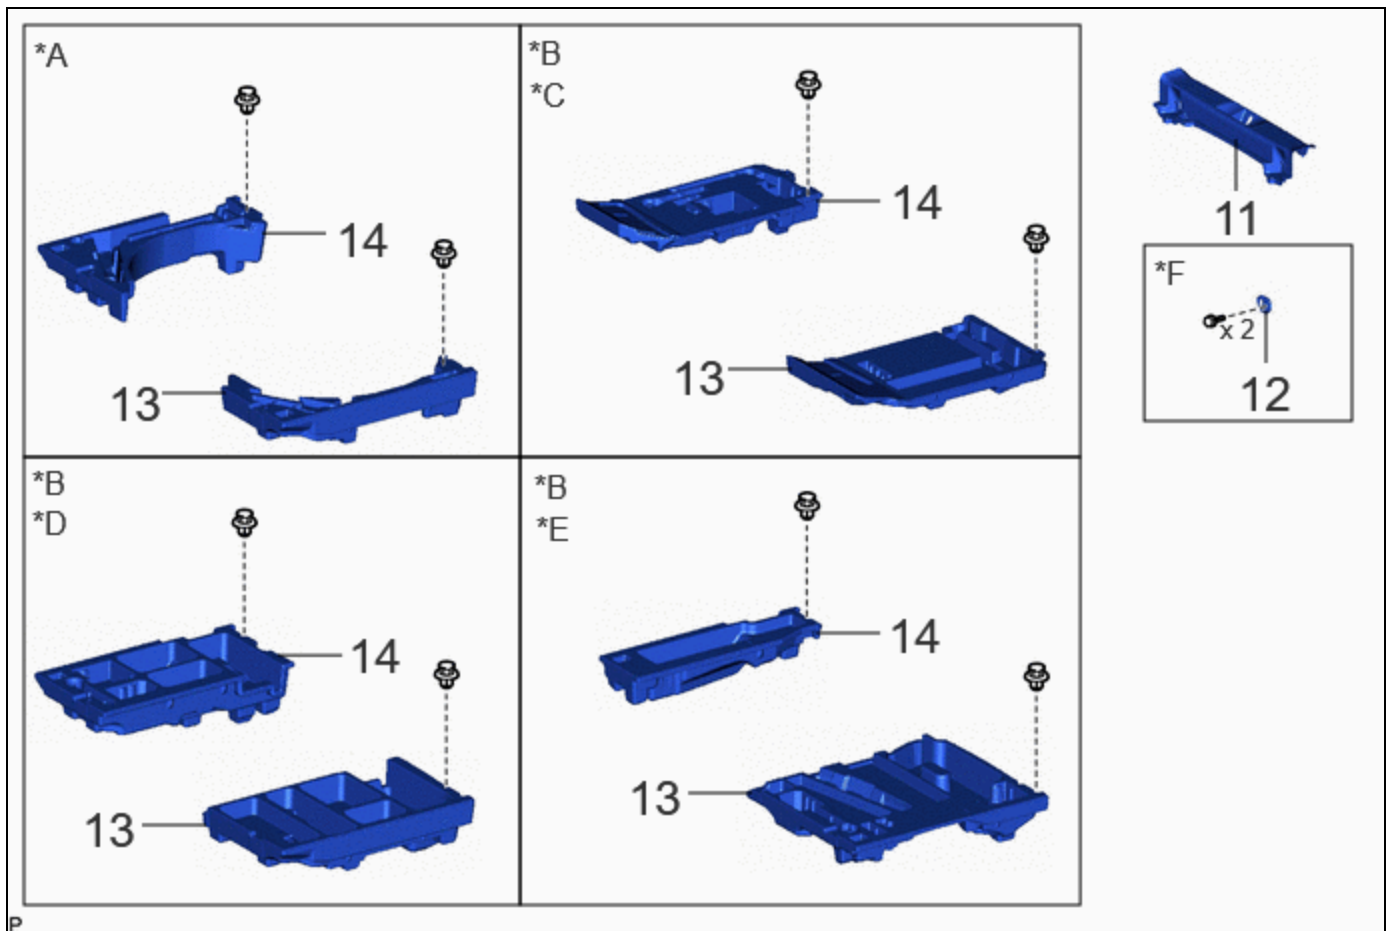


*A	for LH Side	*B	for HEV Model
*C	for PHEV Model	*D	w/ Cover
	Tightening torque for "Major areas involving basic vehicle performance such as moving/turning/stopping": N*m (kgf*cm, ft.*lbf)		-




PROCEDURE		PART NAME CODE			
11	REAR DECK TRIM COVER	64716D	-	-	-
12	LUGGAGE HOLD BELT STRIKER ASSEMBLY	58460D	-	-	-
13	DECK FLOOR BOX LH	64997	-	-	-
14	DECK FLOOR BOX RH	64995	-	-	-

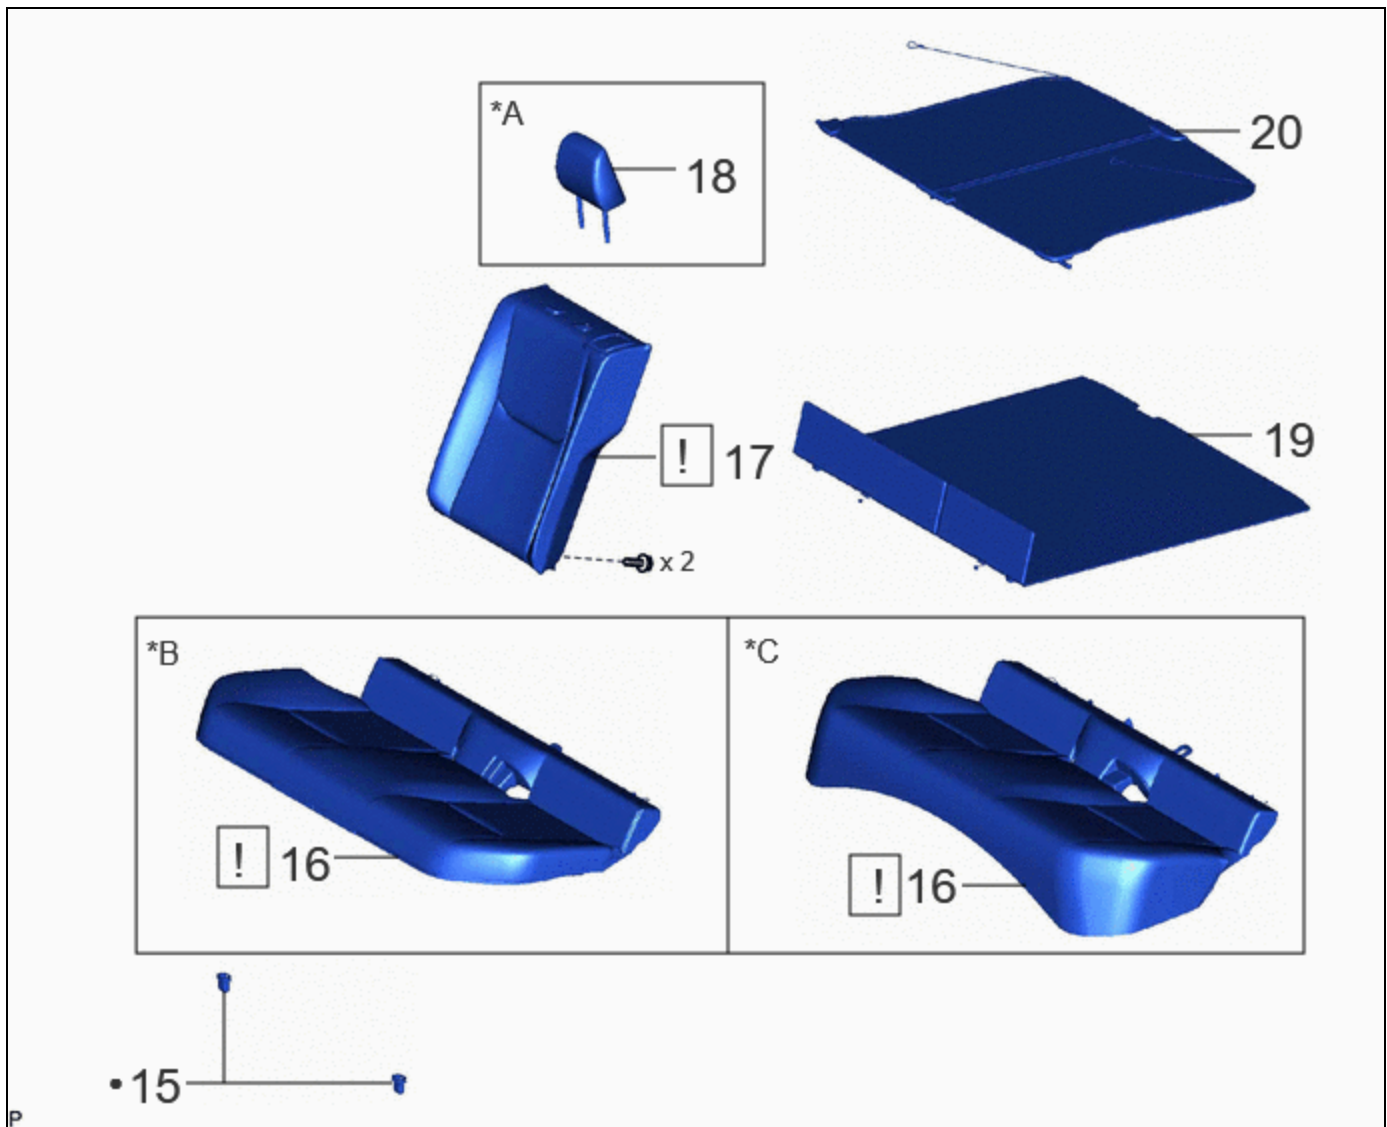*A	w/ Spare Tire	*B	w/o Spare Tire
*C	for Type A	*D	for Type B
*E	for Type C	*F	for Rear Side



PROCEDURE		PART NAME CODE			
15	REAR SEAT CUSHION LOCK HOOK	72693	-	-	-
16	REAR SEAT CUSHION ASSEMBLY	-	<a href="#">INFO</a>	-	-
17	REAR SEATBACK ASSEMBLY LH	-	<a href="#">INFO</a>	-	-
18	REAR SEAT HEADREST ASSEMBLY	71940A	-	-	-
19	DECK BOARD ASSEMBLY	58410B	-	-	-
20	TONNEAU COVER ASSEMBLY	64910J	-	-	-

*A	for LH Side	*B	for HEV Model
*C	for PHEV Model	-	-
	Tightening torque for "Major areas involving basic vehicle performance such as moving/turning/stopping": N*m (kgf*cm, ft.*lbf)	•	Non-reusable part

## PROCEDURE

1. INSTALL FUEL LID LOCK WITH MOTOR ASSEMBLY
2. INSTALL FUEL FILLER OPENING LID LOCK RETAINER
3. INSTALL FUEL FILLER OPENING LID LOCK COVER (w/ Cover)
4. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH
5. INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY (for LH Side)
6. INSTALL REAR SEAT SIDE GARNISH LH

	Click here <a href="#">INFO</a>
-------------------------------------------------------------------------------------	---------------------------------

7. INSTALL REAR SEATBACK HINGE SUB-ASSEMBLY LH

Click here [INFO](#)

8. INSTALL REAR UNDER SIDE COVER LH (for HEV Model)
9. CONNECT REAR DOOR OPENING TRIM WEATHERSTRIP LH
10. INSTALL REAR DOOR SCUFF PLATE INSIDE LH
11. INSTALL REAR DECK TRIM COVER
12. INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY (for Rear Side)
13. INSTALL DECK FLOOR BOX LH


**14. INSTALL DECK FLOOR BOX RH**

**15. INSTALL REAR SEAT CUSHION LOCK HOOK**

**16. INSTALL REAR SEAT CUSHION ASSEMBLY**

	Click here <a href="#">INFO</a>
-----------------------------------------------------------------------------------	---------------------------------

**17. INSTALL REAR SEATBACK ASSEMBLY LH**

	Click here <a href="#">INFO</a>
-----------------------------------------------------------------------------------	---------------------------------

**18. INSTALL REAR SEAT HEADREST ASSEMBLY (for LH Side)**

**19. INSTALL DECK BOARD ASSEMBLY**

**20. INSTALL TONNEAU COVER ASSEMBLY**

