

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000000292KM
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> LIGHTING (EXT): LICENSE PLATE LIGHT ASSEMBLY: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSPECTION

### PROCEDURE

#### 1. INSPECT LICENSE PLATE LIGHT SUB-ASSEMBLY (for LH Side)

(a) Illumination Inspection


(1) Apply auxiliary battery voltage to the license plate light sub-assembly and check that the light comes on.

OK:



[Click Location & Routing\(P8\)](#)

[Click Connector\(P8\)](#)

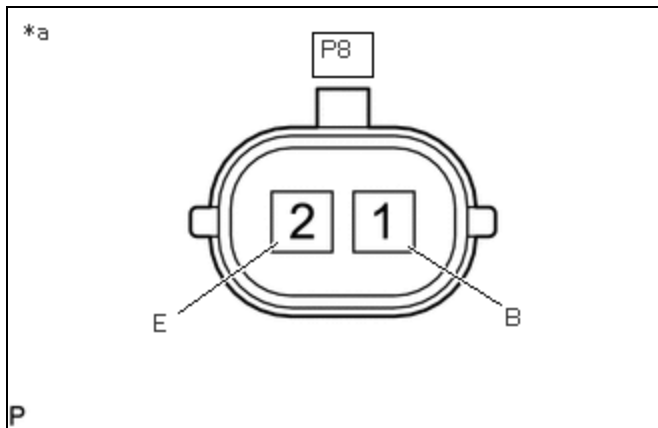

*a	Component without harness connected (License Plate Light Sub-assembly)
----	--

TESTER CONNECTION	SPECIFIED CONDITION
Auxiliary battery positive (+) - P8-1 (B)	License plate light comes on
Auxiliary battery negative (-) - P8-2 (E)	

If the result is not as specified, replace the license plate light sub-assembly.

#### 2. INSPECT LICENSE PLATE LIGHT SUB-ASSEMBLY (for RH Side)

(a) Illumination Inspection

(1) Apply auxiliary battery voltage to the license plate light sub-assembly and check that the light comes on.

OK:




[Click Location & Routing\(P7\)](#)

[Click Connector\(P7\)](#)

TESTER CONNECTION	SPECIFIED CONDITION
Auxiliary battery positive (+) - P7-1 (B)	License plate light comes on
Auxiliary battery negative (-) - P7-2 (E)	

If the result is not as specified, replace the license plate light sub-assembly.

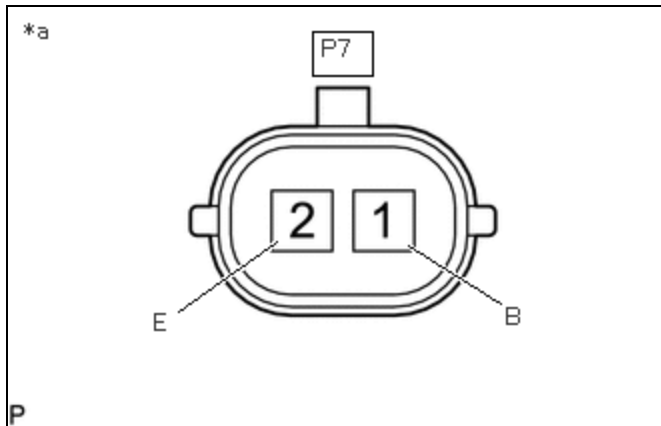

*a	Component without harness connected (License Plate Light Sub-assembly)
----	---

