

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000029X6G
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> WINDOW / GLASS: POWER WINDOW CONTROL SYSTEM: VEHICLE CONTROL HISTORY (RoB); 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## VEHICLE CONTROL HISTORY (RoB)

### NOTICE:

- If the vehicle or vehicle controls are operated (for example, during initial inspection when the vehicle is brought in for repair) before operation history has been read out and saved, the operation history information could be lost.
- The function "Vehicle Control History (RoB)" uses the current system time setting inside the GTS and the time counter inside the controlling ECU to calculate the timings shown in the operation history. For this reason, before reading out the operation history, first make sure that the GTS system clock is accurately set to the current time.
- The time counter in the control ECU may deviate by up to +/- 10% due to the characteristics of the time counter.
- The time counter in the control ECU is reset approximately 34 days before the "Current" value due to the characteristics of the time counter. Therefore, the time information stored before the 34th day may not be accurately displayed.

### VEHICLE CONTROL HISTORY (RoB)

#### HINT:

Vehicle Control History (RoB) : The main body ECU (multiplex network body ECU) records the power window control system operation history, which can be read out using the GTS.

(a) Check the Vehicle Control History (RoB) according to the display on the GTS.

#### Body Electrical > Main Body > Utility

TESTER DISPLAY
Vehicle Control History (RoB)

CODE	ITEM	ITEM DESCRIPTION	NOTE
X2306	Power Window Operation	Memorize the factors when the power window operated	Memorize operating means for power window operation
X2307	Power Window Status	Memorize power window operation history	Memorize if any window opens and closes while the ignition switch is off

### SYMPTOM SIMULATION

Click here 

