

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000002BXX
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> DOOR LOCK: DOOR CONTROL RECEIVER: REMOVAL; 2023 - 2024 MY Prius Prius Prime [03/2023 - ]		

## REMOVAL

### CAUTION / NOTICE / HINT

The necessary procedures (adjustment, calibration, initialization or registration) that must be performed after parts are removed and installed, or replaced during electrical key and tire pressure monitoring system receiver assembly removal/installation are shown below.

### CAUTION / NOTICE / HINT

#### **CAUTION:**

Be sure to read Precaution thoroughly before servicing.



[Click here](#) INFO

### CAUTION / NOTICE / HINT

#### **NOTICE:**

- When replacing the tire pressure warning ECU and receiver, read the transmitter IDs stored in the old ECU using the GTS and write them down before removal.

[Click here](#) INFO

- After the ignition switch is turned off, there may be a waiting time before disconnecting the negative (-) auxiliary battery terminal.

[Click here](#) INFO

### CAUTION / NOTICE / HINT

#### **HINT:**

- When the cable is disconnected / reconnected to the auxiliary battery terminal, systems temporarily stop operating. However, each system has a function that completes learning the first time the system is used.
  - Learning completes when vehicle is driven

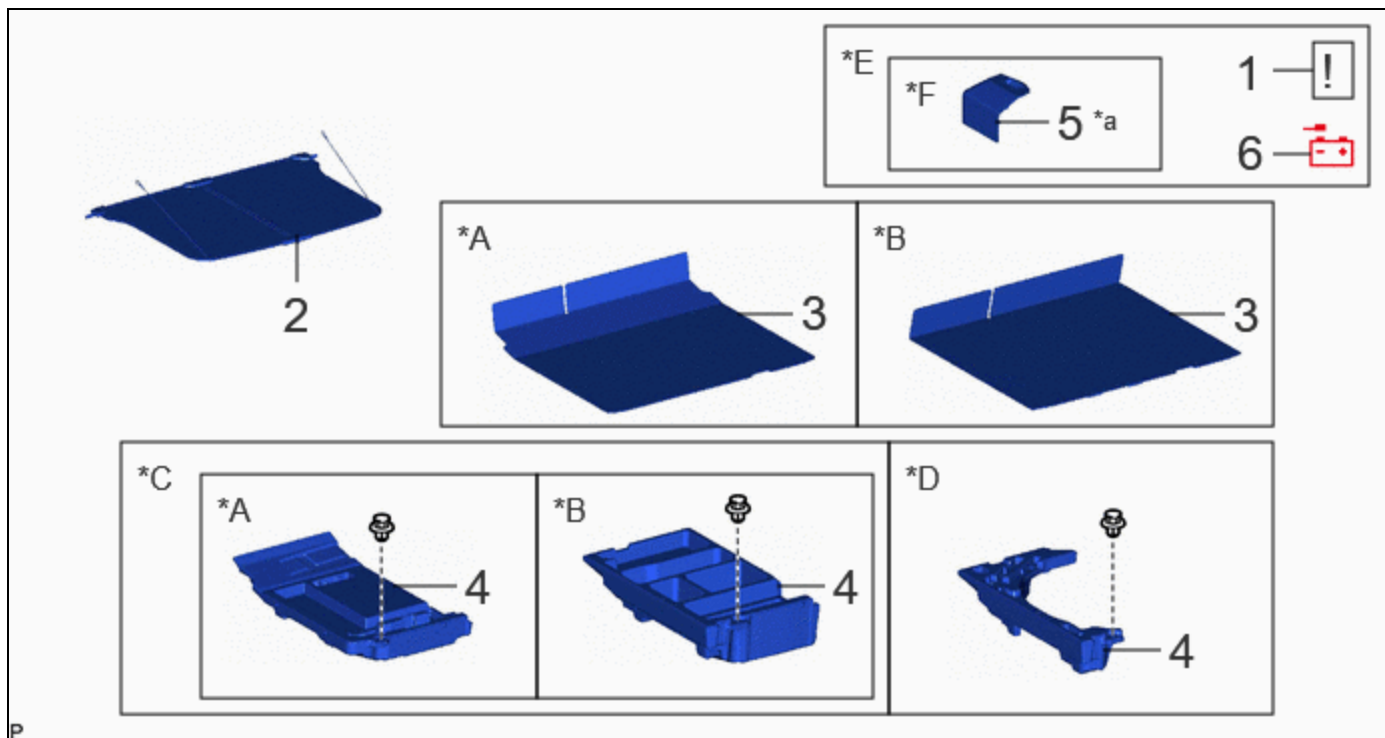
EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURES ARE NOT PERFORMED	NECESSARY PROCEDURES	LINK
Front Camera System	Drive the vehicle straight ahead at 35 km/h (22 mph) or more for 5 seconds or more.	<a href="#">INFO</a>




- Learning completes when vehicle is operated normally

EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURES ARE NOT PERFORMED	NECESSARY PROCEDURES	LINK
Power Door Lock Control System*1 <ul style="list-style-type: none"> <li>Back door opener</li> </ul>	Perform door unlock operation with door control switch or electrical key transmitter sub-assembly switch.	<a href="#">INFO</a>
Power Back Door System*2	Reset back door close position	<a href="#">INFO</a>
Air Conditioning System	<b>for HEV Model:</b> After the ignition switch is turned to ON, the servo motor standard position is recognized.  <b>for PHEV Model:</b> After the ignition switch is turned to ON, the servo motor and expansion valve standard position is recognized.	-
*1: w/o Power Back Door System *2: w/ Power Back Door System		

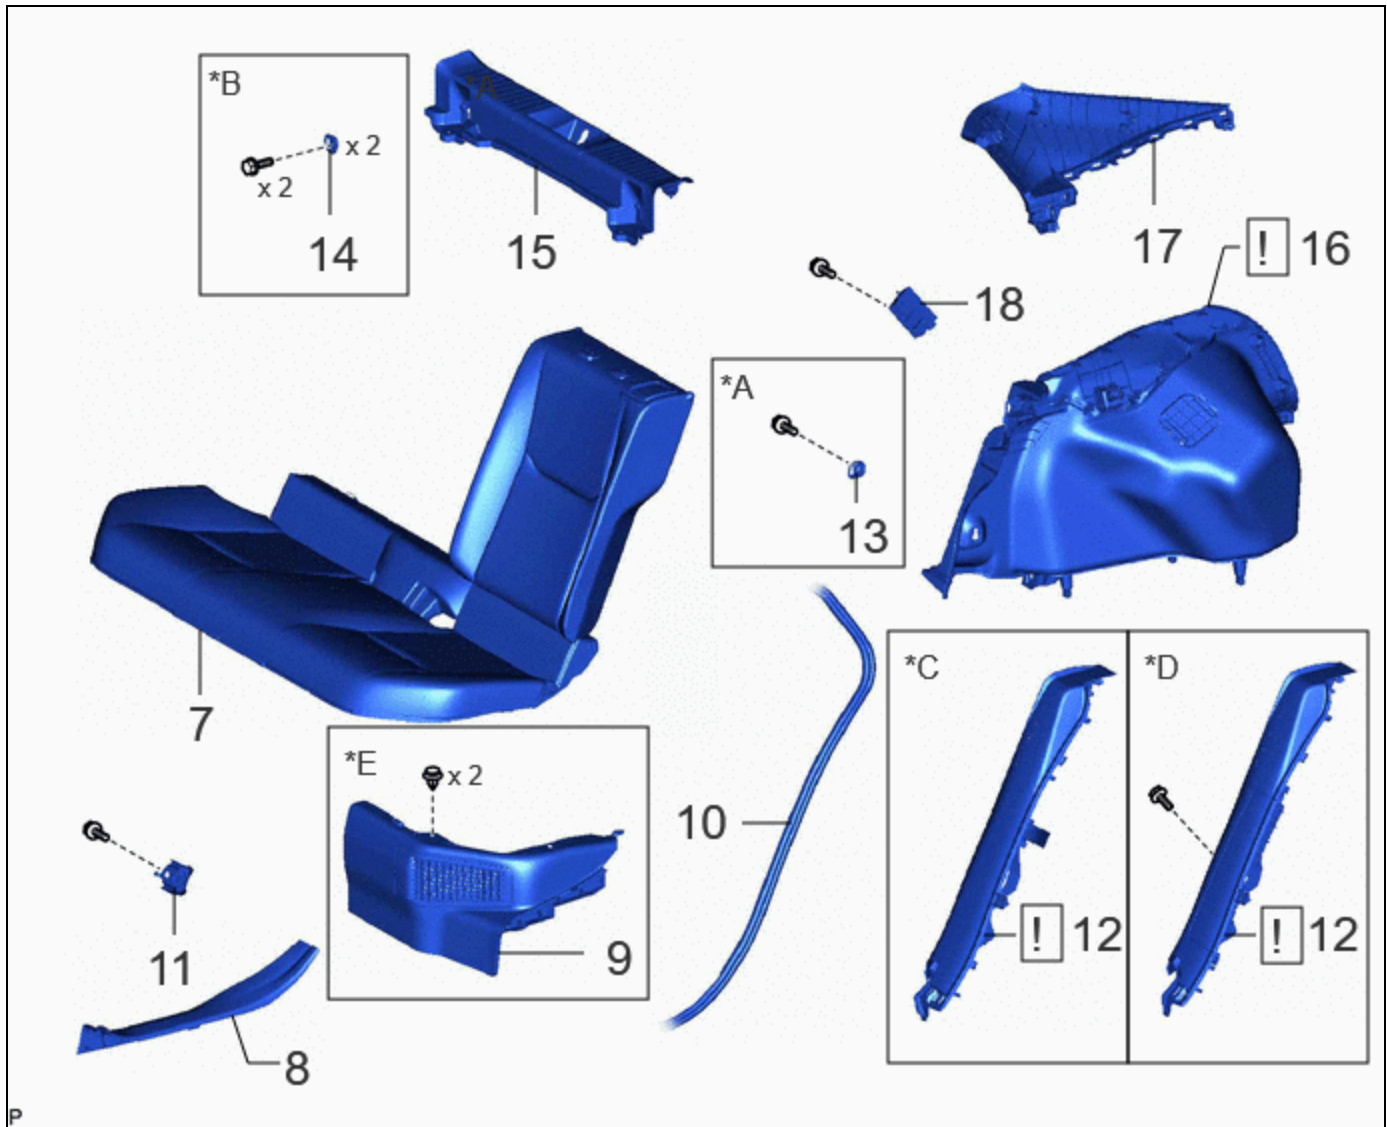
## CAUTION / NOTICE / HINT

### COMPONENTS (REMOVAL)






PROCEDURE		PART NAME CODE			
1	PRECAUTION	-	INFO	-	-
2	TONNEAU COVER ASSEMBLY	64910J	-	-	-
3	DECK BOARD ASSEMBLY	58410B	-	-	-
4	DECK FLOOR BOX LH	64997	-	-	-
5	BATTERY SERVICE HOLE COVER ASSEMBLY	58440	-	-	-
6	DISCONNECT CABLE FROM NEGATIVE AUXILIARY BATTERY TERMINAL	-	-	-	-

*A	for Type A	*B	for Type B
*C	w/o Spare Tire	*D	w/ Spare Tire
*E	w/ Rear Seat Side Airbag	*F	for M20A-FXS
*a	<p><b>HINT:</b> As the illustration shown is an example, the actual details may differ.</p>	-	-




PROCEDURE		PART NAME CODE			
7	REAR SEAT CUSHION ASSEMBLY	-	-	-	-
8	REAR DOOR SCUFF PLATE INSIDE LH	67918F	-	-	-
9	REAR UNDER SIDE COVER LH	76974E	-	-	-
10	REAR DOOR OPENING TRIM WEATHERSTRIP LH	62332A	-	-	-
11	REAR SEATBACK HINGE SUB-ASSEMBLY LH	71304C	-	-	-
12	REAR SEAT SIDE GARNISH LH	62552F	INFO	-	-
13	LUGGAGE HOLD BELT STRIKER ASSEMBLY	58460D	-	-	-
14	LUGGAGE HOLD BELT STRIKER ASSEMBLY	58460D	-	-	-
15	REAR DECK TRIM COVER	64716D	-	-	-
16	DECK TRIM SIDE PANEL ASSEMBLY LH	64740C	INFO	-	-

PROCEDURE		PART NAME CODE			
17	ROOF SIDE INNER GARNISH ASSEMBLY LH	62480A	-	-	-
18	ELECTRICAL KEY AND TIRE PRESSURE MONITORING SYSTEM RECEIVER ASSEMBLY	897B0A	-	-	-

*A	for LH Side	*B	for Rear Side
*C	w/o Rear Seat Side Airbag	*D	w/ Rear Seat Side Airbag
*E	for HEV Model	-	-

## PROCEDURE

### 1. PRECAUTION (w/ Rear Seat Side Airbag)

	<p><b>NOTICE:</b></p> <p>After the ignition switch is turned off, there may be a waiting time before disconnecting the negative (-) auxiliary battery terminal.</p> <p>Click here <a href="#">INFO</a></p>
---	--

### 2. REMOVE TONNEAU COVER ASSEMBLY

Click here [INFO](#)

### 3. REMOVE DECK BOARD ASSEMBLY

Click here [INFO](#)

### 4. REMOVE DECK FLOOR BOX LH

Click here [INFO](#)

### 5. REMOVE BATTERY SERVICE HOLE COVER ASSEMBLY (w/ Rear Seat Side Airbag)

(a) for M20A-FXS:

Click here [INFO](#)

### 6. DISCONNECT CABLE FROM NEGATIVE AUXILIARY BATTERY TERMINAL (w/ Rear Seat Side Airbag)

(a) for M20A-FXS:

Click here [INFO](#)

(b) for 2ZR-FXE:

Click here [INFO](#)

### 7. REMOVE REAR SEAT CUSHION ASSEMBLY

Click here [INFO](#)

### 8. REMOVE REAR DOOR SCUFF PLATE INSIDE LH

Click here [INFO](#)

### **9. REMOVE REAR UNDER SIDE COVER LH (for HEV Model)**

Click here [INFO](#)

### **10. DISCONNECT REAR DOOR OPENING TRIM WEATHERSTRIP LH**

Click here [INFO](#)

### **11. REMOVE REAR SEATBACK HINGE SUB-ASSEMBLY LH**

Click here [INFO](#)

### **12. REMOVE REAR SEAT SIDE GARNISH LH**

	Click here <a href="#">INFO</a>
---	---------------------------------

### **13. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for LH Side)**

Click here [INFO](#)

### **14. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for Rear Side)**

Click here [INFO](#)

### **15. REMOVE REAR DECK TRIM COVER**

Click here [INFO](#)

### **16. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH**

	Click here <a href="#">INFO</a>
---	---------------------------------

### **17. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY LH**

Click here [INFO](#)

### **18. REMOVE ELECTRICAL KEY AND TIRE PRESSURE MONITORING SYSTEM RECEIVER ASSEMBLY**

#### **HINT:**

The illustration shown is an example only. The illustration may differ from the actual parts according to the model.

