

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000029RBW
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> SEAT BELT: SEAT BELT WARNING SYSTEM (w/o Occupant Classification System): CUSTOMIZE PARAMETERS; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## CUSTOMIZE PARAMETERS

### CUSTOMIZE SEAT BELT WARNING SYSTEM

#### NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.
- These buzzers should be on for safe driving. Perform this procedure only if it is necessary to set the buzzer to off (disabled).

#### HINT:

The following items can be customized.

#### (a) Customizing with the GTS

- (1) Connect the GTS to the DLC3.
- (2) Turn the ignition switch to ON.
- (3) Turn the GTS on.
- (4) Enter the following menus: Customize Setting / Warning.
- (5) Select the setting by referring to the table below.

#### Warning

TESTER DISPLAY	DESCRIPTION	DEFAULT	SETTING	ECU
Driver Seatbelt Warning Buzzer Function	Enables sounding of the driver seat belt warning buzzer	ON	\$00:OFF,\$01:ON	Combination meter assembly
Passenger Seatbelt Warning Buzzer Function	Enables sounding of the front passenger seat belt warning buzzer	ON	\$00:OFF,\$01:ON	Combination meter assembly
Rear Right Seatbelt Warning Buzzer Function	Enables sounding of the rear RH seat belt warning buzzer	ON	\$00:OFF,\$01:ON	Combination meter assembly
Rear Left Seatbelt Warning Buzzer Function	Enables sounding of the rear LH seat belt warning buzzer	ON	\$00:OFF,\$01:ON	Combination meter assembly
Rear Center Seatbelt Warning Buzzer Function	Enables sounding of the rear center seat belt warning buzzer	ON	\$00:OFF,\$01:ON	Combination meter assembly

#### HINT:

These settings are only valid when the vehicle is driven at 20 km/h (12 mph) or more.

