


Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000028UXP
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: SUPPLEMENTAL RESTRAINT SYSTEMS: AIRBAG SYSTEM: TERMINALS OF ECU; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

TERMINALS OF ECU

AIRBAG ECU ASSEMBLY

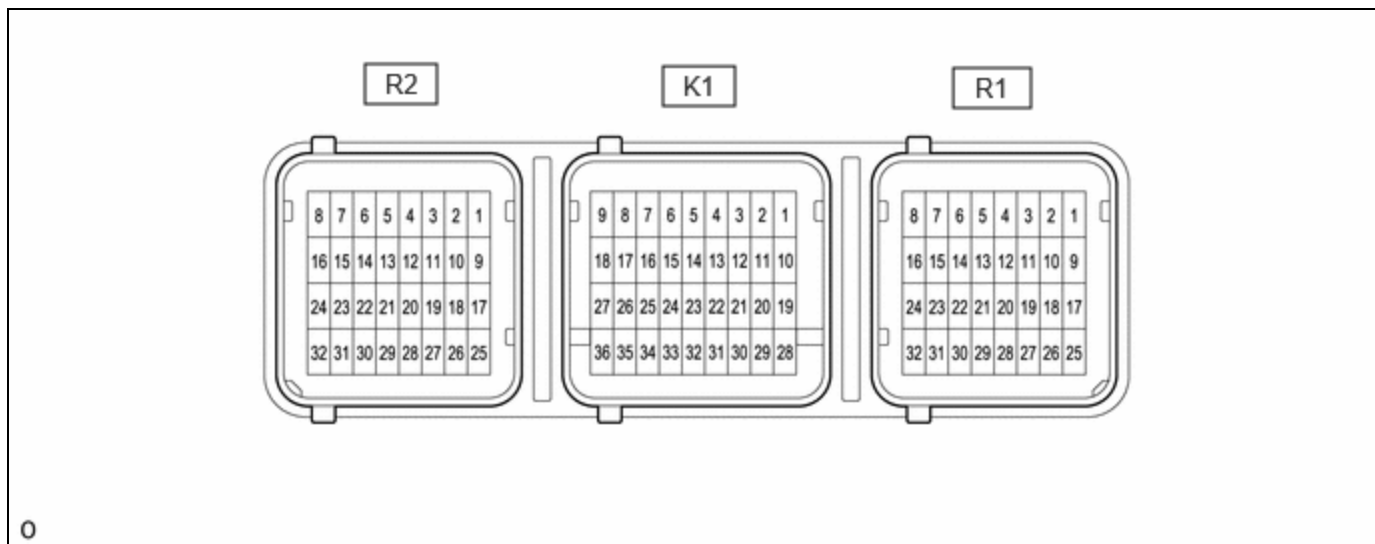

TERMINAL NO.	TERMINAL SYMBOL	DESTINATION
R2-3	PLR-	Rear seat outer belt assembly LH
R2-4	PLR+	
R2-5	PL+	Front seat outer belt assembly LH
R2-6	PL-	
R2-7	ICL-	Curtain shield airbag assembly LH
R2-8	ICL+	
R2-13*2	SRL+	Rear seat airbag assembly LH
R2-14*2	SRL-	
R2-15	SFL-	Front seat airbag assembly LH
R2-16	SFL+	
R2-28	BBL+	Floor side airbag sensor LH
R2-29	BBL-	
R2-31	BDL-	Side airbag pressure sensor LH

*1: w/ Manual (SOS) Switch

*2: w/ Occupant Classification System

*3: w/o Occupant Classification System

TERMINAL NO.	TERMINAL SYMBOL	DESTINATION
R2-32	BDL+	
K1-1*2	P2+	Front passenger squib 2nd step (Instrument panel passenger airbag assembly)
K1-2*2	P2-	
K1-3	P-	Front passenger squib (Instrument panel passenger airbag assembly)
K1-4	P+	
K1-6	D+	Driver squib (Horn button assembly)
K1-7	D-	
K1-8*2	D2-	Driver squib 2nd step (Horn button assembly)
K1-9*2	D2+	
K1-12*3	DK-	Lower No. 1 instrument panel airbag assembly
K1-13*3	DK+	
K1-23*1	GSW3	DCM (Telematics transceiver)
K1-24	GSW2	Hybrid vehicle control ECU
K1-25	GSW	Main body ECU (Multiplex network body ECU)
K1-26	CAFH	CAN communication line
K1-27	CAFL	
K1-28	-SR	Front airbag sensor RH
K1-29	+SR	
K1-30	+SL	Front airbag sensor LH
K1-31	-SL	
K1-32	E2	Ground
K1-33	E1	
K1-34*2	P-AB	Passenger airbag ON/OFF indicator (Map light assembly)
K1-35*2	PAON	
K1-36	IGR	A/BAG-IGR fuse
R1-1	ICR+	Curtain shield airbag assembly RH
R1-2	ICR-	
R1-3	PR-	Front seat outer belt assembly RH
R1-4	PR+	
R1-5	PRR+	Rear seat outer belt assembly RH
R1-6	PRR-	
*1: w/ Manual (SOS) Switch		
*2: w/ Occupant Classification System		
*3: w/o Occupant Classification System		

TERMINAL NO.	TERMINAL SYMBOL	DESTINATION
R1-9	SFR+	Front seat airbag assembly RH
R1-10	SFR-	
R1-11*2	SRR-	Rear seat airbag assembly RH
R1-12*2	SRR+	
R1-18*2	GNDR	Passenger seat buckle switch (Front seat inner belt assembly RH)
R1-25	BDR-	Side airbag pressure sensor RH
R1-26	BDR+	
R1-27*2	RBE+	Passenger seat buckle switch (Front seat inner belt assembly RH)
R1-28	BBR+	Floor side airbag sensor RH
R1-29	BBR-	
<p>*1: w/ Manual (SOS) Switch</p> <p>*2: w/ Occupant Classification System</p> <p>*3: w/o Occupant Classification System</p>		

