

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000028UXV
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> SUPPLEMENTAL RESTRAINT SYSTEMS: AIRBAG SYSTEM: VEHICLE CONTROL HISTORY (RoB); 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## VEHICLE CONTROL HISTORY (RoB)

### NOTICE:

Make sure to record any output Vehicle Control History codes before clearing them and checking the Vehicle Control History again.

### CHECK VEHICLE CONTROL HISTORY

(a) Following the instructions on the GTS, display the vehicle control history (RoB) check screen and read the codes.

#### Body Electrical > SRS Airbag > Utility

TESTER DISPLAY
Vehicle Control History (RoB)

### Vehicle Control History (RoB)

WARNING LIGHT	CODE	TESTER DISPLAY	MEASUREMENT ITEM	DIAGNOSTIC NOTE
SRS warning light illuminated	X210B	SRS Airbag ECU IG Voltage Drop	Recorded when the IGR terminal input voltage is continuously less than 8 V for 60 seconds.	If X210B is output, measure the voltage at terminal IGR. <a href="#">INFO</a>
-	X210C	Satellite Sensor During Reset	Recorded when satellite sensor communication stops and a reset is performed.	Refer to Diagnostic Trouble Code Chart for the airbag system. <a href="#">INFO</a>
SRS warning light illuminated	XF01B	ECU Security Key Not Registered	Incomplete registration of the ECU security key	<a href="#">INFO</a>
SRS warning light illuminated	XF021	Software Not Programmed	At the time of software non-writing	<a href="#">INFO</a>

