

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000029ZPW
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> LIGHTING (INT): AMBIENT LIGHT (for Front Passenger Side): INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSPECTION

### PROCEDURE

#### 1. INSPECT NO. 2 INSTRUMENT PANEL LIGHT ASSEMBLY (NO. 2 INSTRUMENT PANEL GARNISH SUB-ASSEMBLY) (for Center)


- (a) Apply auxiliary battery voltage to the No. 2 instrument panel light assembly (No. 2 instrument panel garnish sub-assembly) and check that the light illuminates.

OK:



[Click Location & Routing\(K95\)](#)

[Click Connector\(K95\)](#)

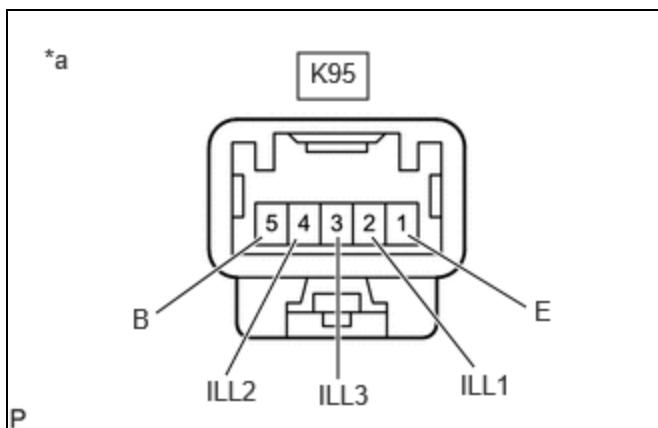

*a	Component without harness connected (No. 2 Instrument Panel Light Assembly (No. 2 Instrument Panel Garnish Sub-assembly))
----	---

TESTER CONNECTION	SPECIFIED CONDITION
K95-5 (+B) → Auxiliary battery positive(+) K95-2 (ILL1), 3 (ILL3), 4 (ILL2) and 1 (E) → Auxiliary battery negative (-)	Ambient light illuminates

If the result is not as specified, replace the No. 2 instrument panel light assembly (No. 2 instrument panel garnish sub-assembly).

#### 2. INSPECT NO. 2 INSTRUMENT PANEL LIGHT ASSEMBLY (NO. 2 INSTRUMENT PANEL GARNISH SUB-ASSEMBLY) (for Front Passenger Side)


- (a) Apply auxiliary battery voltage to the No. 2 instrument panel light assembly (No. 2 instrument panel garnish sub-assembly) and check that the light illuminates.

OK:



[Click Location & Routing\(K51\)](#)

[Click Connector\(K51\)](#)

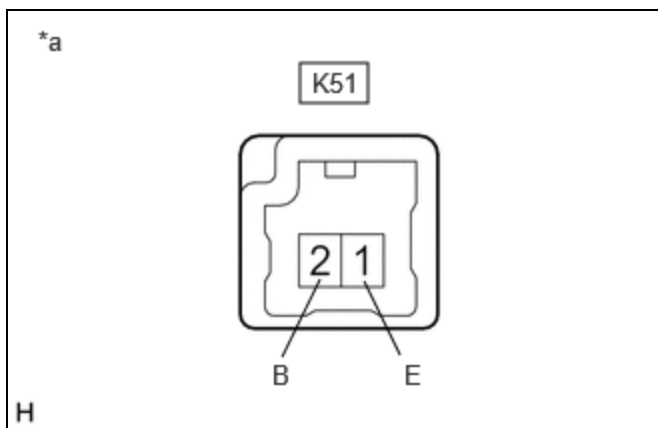

TESTER CONNECTION	SPECIFIED CONDITION
K51-2 (B) → Auxiliary battery positive (+) K51-1 (E) → Auxiliary battery negative (-)	Ambient light illuminates

*a	Component without harness connected (No. 2 Instrument Panel Light Assembly (No. 2 Instrument Panel Garnish Sub-assembly))
----	--

If the result is not as specified, replace the No. 2 instrument panel light assembly (No. 2 instrument panel garnish sub-assembly).

