

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029IMT
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> LIGHTING (INT): LIGHTING SYSTEM: DIAGNOSIS SYSTEM; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## **DIAGNOSIS SYSTEM**

### **DESCRIPTION**

- (a) Lighting system data can be read from the Data Link Connector 3 (DLC3) of the vehicle. When the system seems to be malfunctioning, use the GTS to check for malfunctions and perform repairs.

### **CHECK DLC3**

- (a) Check the DLC3.

Click here [INFO](#)

### **INSPECT AUXILIARY BATTERY VOLTAGE**

- (a) Measure the auxiliary battery voltage with the ignition switch off.

Standard Voltage:

11 to 14 V

If the voltage is below 11 V, recharge or replace the auxiliary battery.

