

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029ZPL
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> LIGHTING (INT): LUGGAGE COMPARTMENT ROOM LIGHT: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSPECTION

## PROCEDURE

### 1. INSPECT NO. 1 LUGGAGE COMPARTMENT LIGHT ASSEMBLY

- (a) Apply auxiliary battery voltage to the No. 1 luggage compartment light assembly and check that the light illuminates.

OK:




[Click Location & Routing\(R38\)](#)

[Click Connector\(R38\)](#)

TESTER CONNECTION	SPECIFIED CONDITION
R38-2 (B) - Auxiliary battery positive (+) R38-1 (L) - Auxiliary battery negative (-)	Luggage compartment light illuminates

If the result is not as specified, replace the No. 1 luggage compartment light assembly.

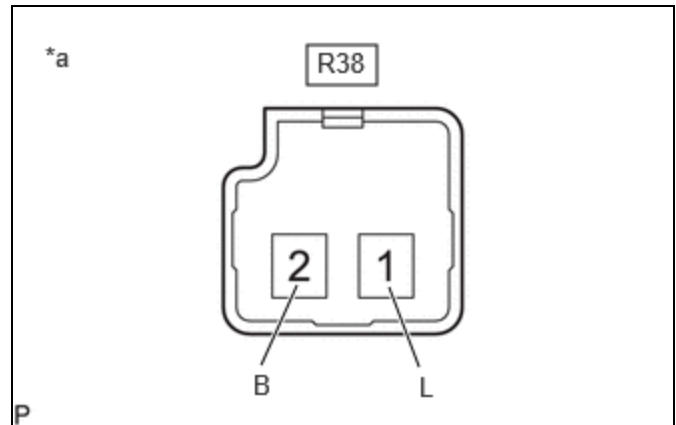

*a	Component without harness connected (No. 1 Luggage Compartment Light Assembly)
----	--

