

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000002BJER
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: METER / GAUGE / DISPLAY: METER / GAUGE SYSTEM: PROBLEM SYMPTOMS TABLE; 2023 - 2024 MY Prius Prius Prime [03/2023 -]		

PROBLEM SYMPTOMS TABLE

NOTICE:

- When replacing the combination meter assembly, always replace it with a new one. If a combination meter assembly which was installed to another vehicle is used, the information stored in it will not match the information from the vehicle and a DTC may be stored.
- When replacing the combination meter assembly, update the ECU security key.

Click here [INFO](#)

HINT:

- The following problem symptoms table is based on the assumption that each system related to the combination meter assembly is normal.
- Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.
- Inspect the fuses and relays related to this system before inspecting the suspected areas below.

Meter/Gauge

SYMPTOM	SUSPECTED AREA	LINK
Speedometer malfunction	Refer to "Speedometer Malfunction"	INFO
Fuel receiver gauge malfunction	Refer to "Fuel Receiver Gauge Malfunction"	INFO
Hybrid system indicator malfunction	Refer to "Hybrid System Indicator Malfunction"	INFO
SOC gauge malfunction*	Refer to "SOC Gauge Malfunction"	INFO

*: for PHEV Model

Warning/Indicator Light

SYMPTOM	SUSPECTED AREA	LINK
Warning/indicator light malfunction	Combination meter assembly	INFO

Multi-information Display

SYMPTOM	SUSPECTED AREA	LINK
Operation message display malfunction*:	Refer to "Engine oil pressure switch circuit"	INFO

SYMPTOM	SUSPECTED AREA	LINK
"Oil Pressure Low Stop in a Safe Place See Owner's Manual"		
Operation message display malfunction: "Engine Oil Level Low Add or Replace"	Refer to "Engine Oil Level Sensor Circuit"	INFO
Operation message display malfunction: "Ready to Refuel"	Refer to "Fuel Lid Opener System Operation Message Display Malfunction"	INFO
Operation message display malfunction: "Close Fuel Lid"	Refer to "Fuel Lid Opener System Operation Message Display Malfunction"	INFO
Operating steering pad switch does not change multi-information display	Refer to "Steering Pad Switch Circuit"	INFO
Operating ODO/TRIP switch does not change odometer/TRIP A/B	Refer to "Odo/Trip Switch Malfunction"	INFO
Malfunction other than above	Combination meter assembly	INFO

*: for 2ZR-FXE

Buzzer

SYMPTOM	SUSPECTED AREA	LINK
Buzzer malfunction	Combination meter assembly	INFO

Others

SYMPTOM	SUSPECTED AREA	LINK
Entire combination meter does not operate	Refer to "Power Source Circuit"	INFO
Operating light control rheostat switch does not change light brightness	Refer to "Operating Light Control Rheostat does not Change Light Brightness"	INFO
Other systems that use the speed signal do not operate normally	Refer to "Speed Signal Circuit"	INFO
Malfunction other than above	Combination meter assembly	INFO

