

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029DJS
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> MIRROR (INT): INNER REAR VIEW MIRROR (w/ EC Mirror): REMOVAL; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## REMOVAL

### CAUTION / NOTICE / HINT


The necessary procedures (adjustment, calibration, initialization or registration) that must be performed after parts are removed and installed, or replaced during inner rear view mirror assembly removal/installation are shown below.

#### Necessary Procedure After Parts Removed/Installed/Replaced




REPLACED PART OR PERFORMED PROCEDURE	NECESSARY PROCEDURE	EFFECT/INOPERATIVE FUNCTION WHEN NECESSARY PROCEDURES ARE NOT PERFORMED	LINK
Inner rear view mirror assembly	Register codes in the garage door opener system	Garage Door Opener System (for EC Inner Mirror)	<a href="#">INFO</a>

### CAUTION / NOTICE / HINT
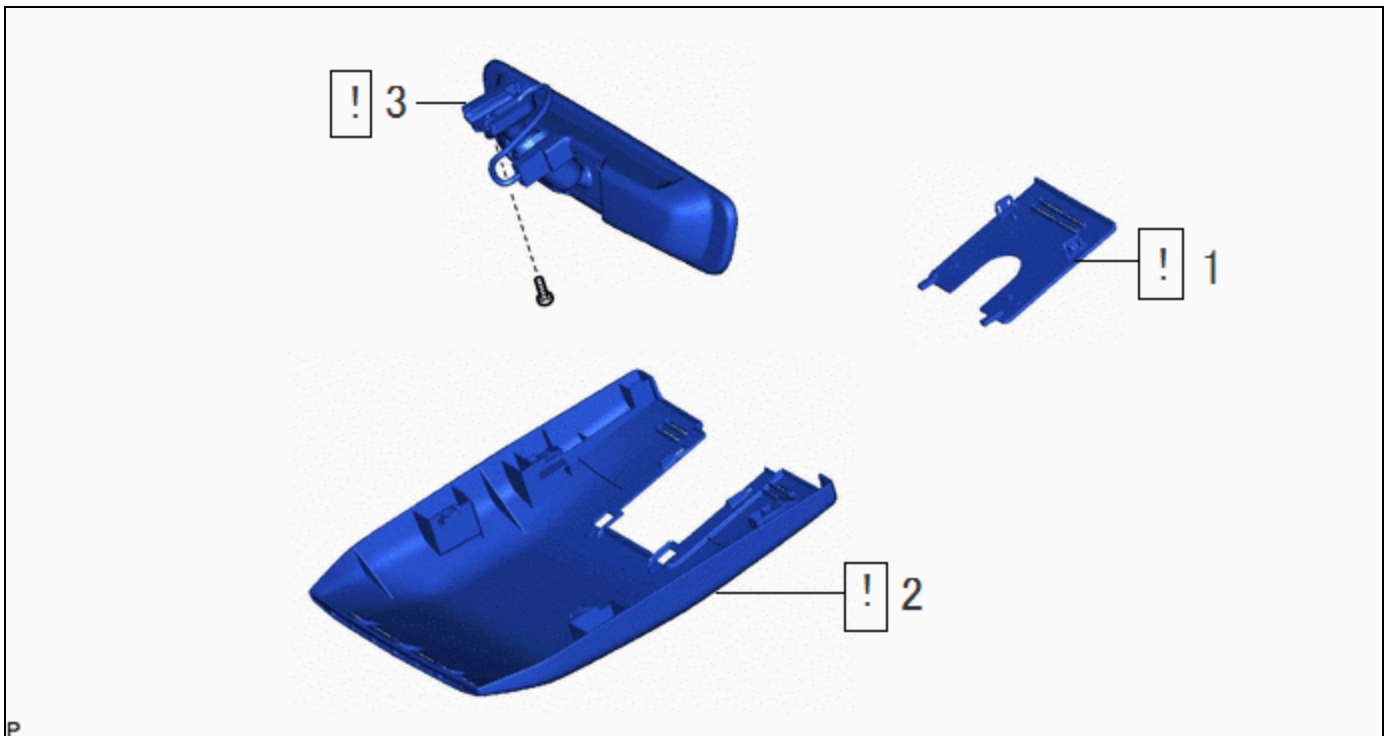
#### COMPONENTS (REMOVAL)




	PROCEDURE	PART NAME CODE			
1	NO. 2 FORWARD RECOGNITION COVER	86466E	<a href="#">INFO</a>	-	-


	PROCEDURE	PART NAME CODE			
2	NO. 1 FORWARD RECOGNITION COVER	86466D	<a href="#">INFO</a>	-	-
3	INNER REAR VIEW MIRROR ASSEMBLY	87810	<a href="#">INFO</a>	-	-

## PROCEDURE


### 1. REMOVE NO. 2 FORWARD RECOGNITION COVER


	Click here <a href="#">INFO</a>
---	---------------------------------

### 2. REMOVE NO. 1 FORWARD RECOGNITION COVER

	Click here <a href="#">INFO</a>
---	---------------------------------

### 3. REMOVE INNER REAR VIEW MIRROR ASSEMBLY

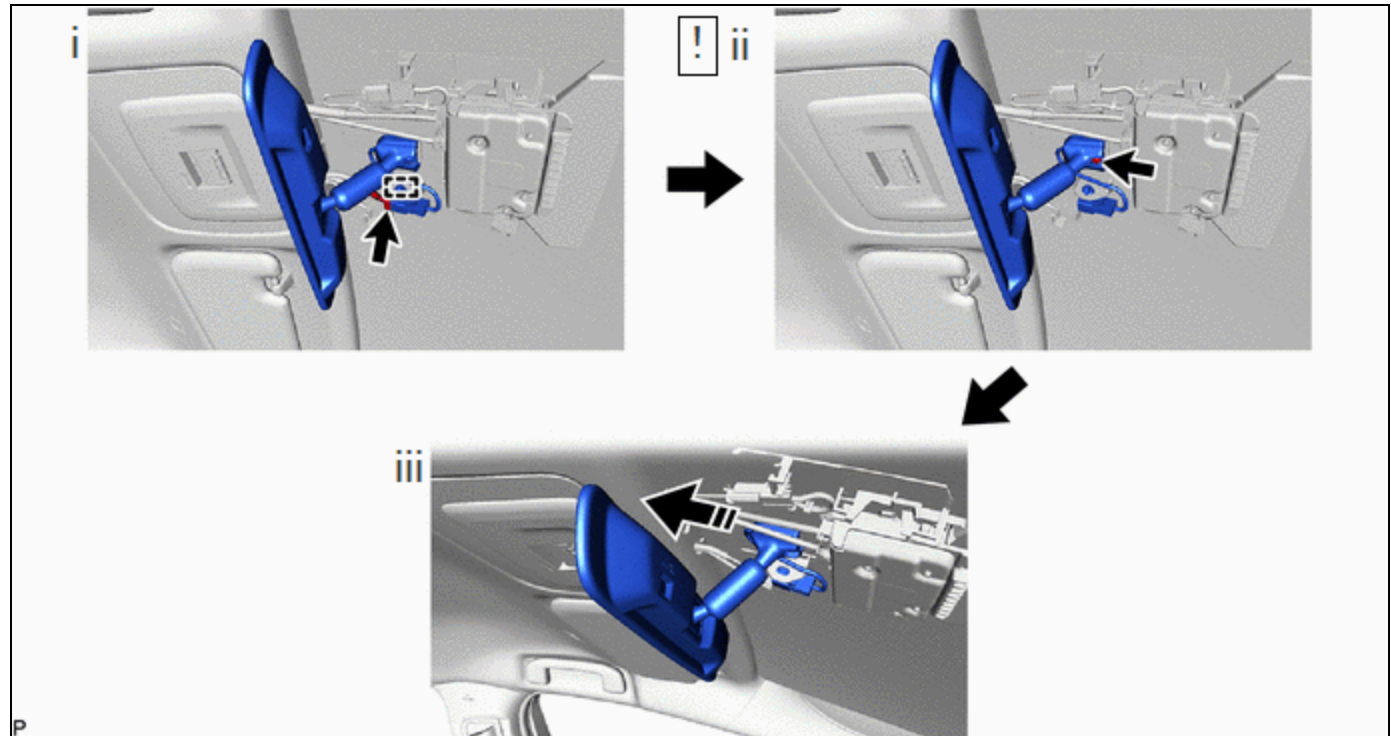

	Remove in this Direction	-	-
---	--------------------------	---	---

- (1) Disengage the clamp and disconnect the connector.
- (2) Using a T20 "TORX" socket wrench, remove the screw.

(3) Slide the inner rear view mirror assembly as shown in the illustration to remove it.

