

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. REMOVE RADIATOR ASSEMBLY

(a) Remove the radiator (see page [CO-29](#)).

DISASSEMBLY

1. REMOVE FAN

(a) Remove the 2 nuts and 2 fans.

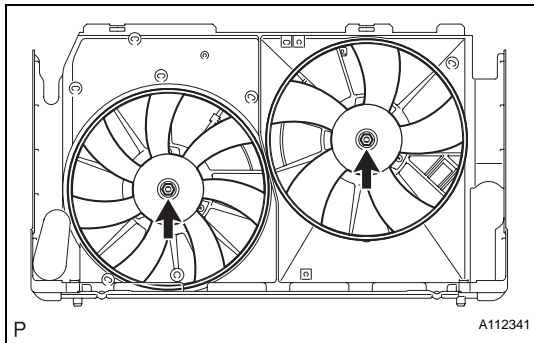


2. REMOVE NO. 1 COOLING FAN MOTOR

(a) Remove the 3 screws and fan motor.

3. REMOVE NO. 2 COOLING FAN MOTOR

(a) Remove the 3 screws and fan motor.

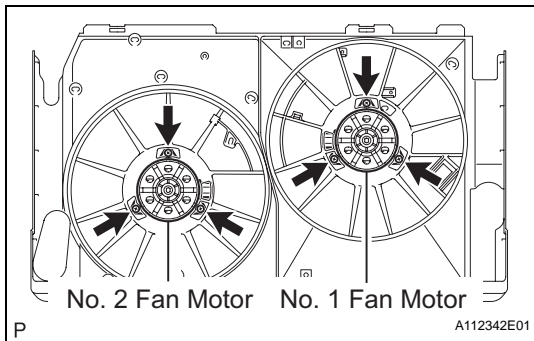

REASSEMBLY

1. INSTALL NO. 2 COOLING FAN MOTOR


(a) Install the fan motor with the 3 screws.

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

2. INSTALL NO. 1 COOLING FAN MOTOR

(a) Install the fan motor with the 3 screws.

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

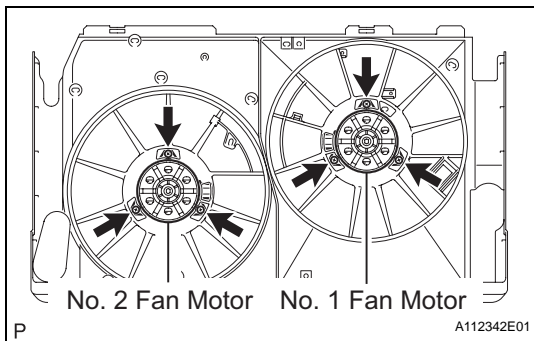


3. INSTALL FAN

(a) Install the 2 fans with the 2 nuts.

Torque: 6.3 N*m (64 kgf*cm, 55 in.*lbf)

(b) Check the fan motor operation.

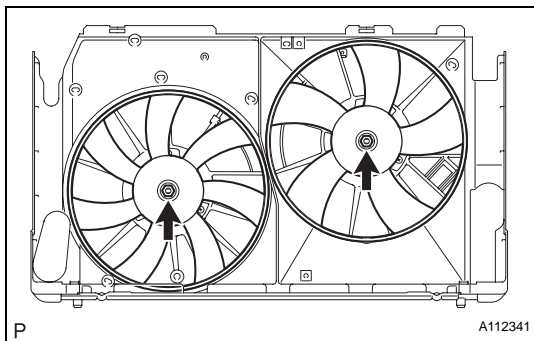

INSTALLATION

1. **INSTALL RADIATOR ASSEMBLY**
 - (a) Install the radiator (see page [CO-32](#)).
2. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
3. **ADD ENGINE COOLANT (See page [CO-6](#))**
4. **CHECK FOR ENGINE COOLANT LEAKS (See page [CO-1](#))**