

IG2 RELAY

ON-VEHICLE INSPECTION

1. DISCONNECT CABLE FROM NEGATIVE BATTERY
TERMINAL
- CAUTION:
- Wait at least 90 seconds after disconnecting the
cable from the negative (-) battery terminal to
prevent airbag and seat belt pretensioner activation.

2. REMOVE IG2 RELAY
- (a) Remove the No. 1 engine room relay block cover.
- (b) Remove the IG2 relay from the engine room relay
block.

3. INSPECT IG2 RELAY
- (a) Measure the resistance of the IG2 relay.
- Standard resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

4. INSTALL IG2 RELAY
5. CONNECT CABLE TO NEGATIVE BATTERY
TERMINAL

ES

