



SYSTEM DIAGRAM

ES

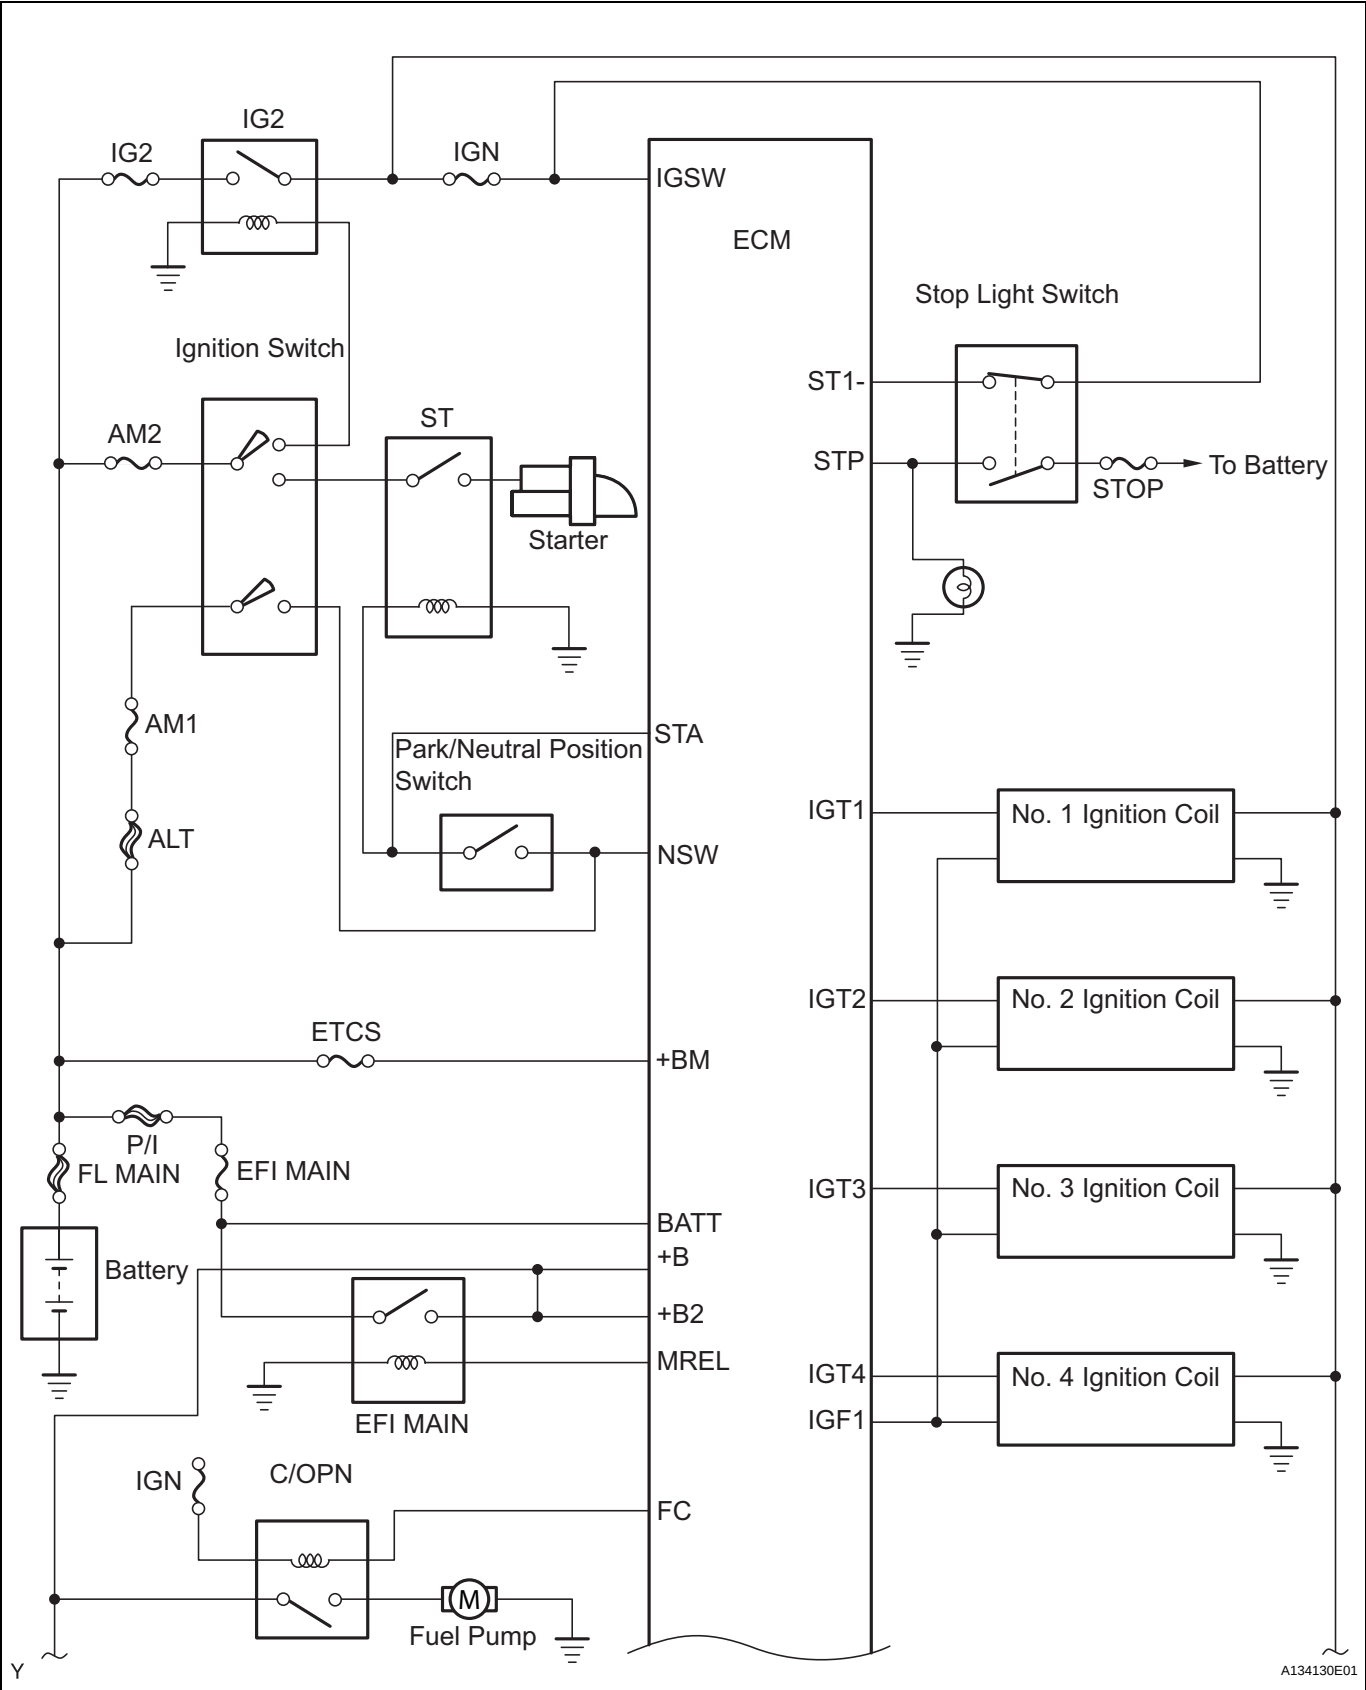


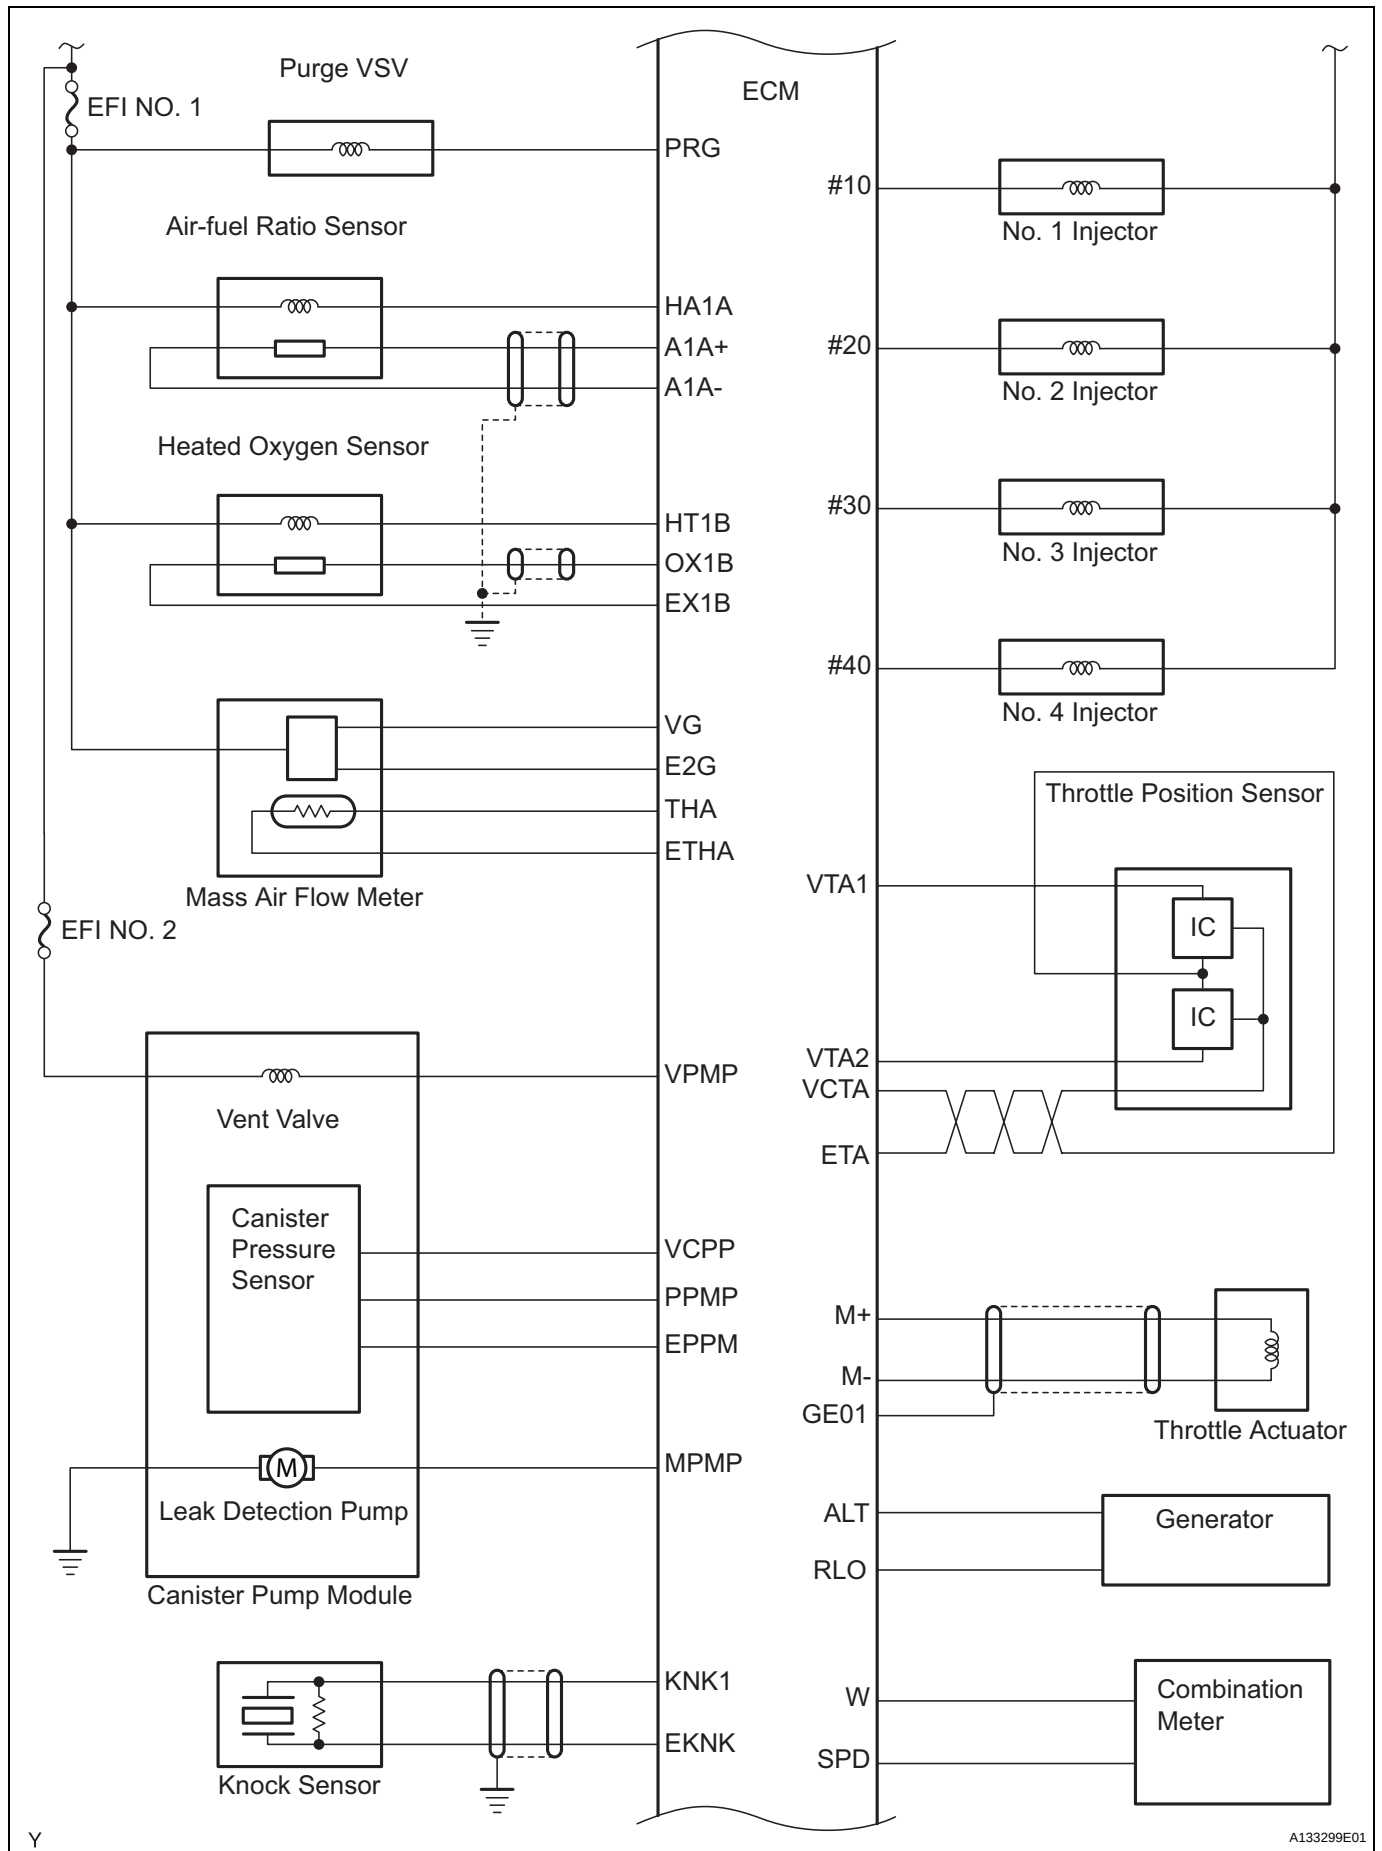


ES

ES


Accelerator Pedal Position Sensor

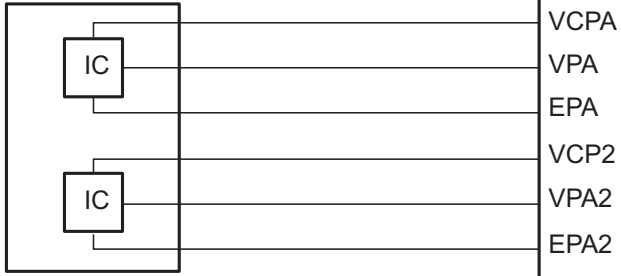


Crankshaft Position Sensor

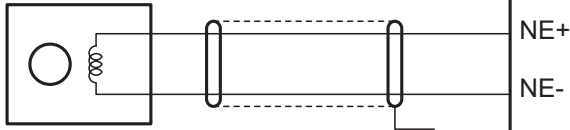

Camshaft Position Sensor

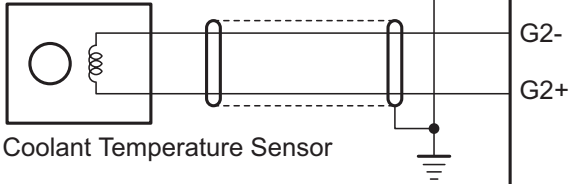


Engine Coolant Temperature Sensor

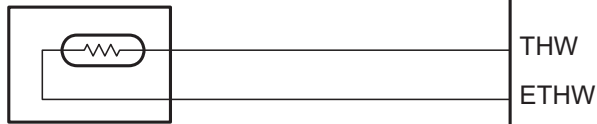

From TAIL Fuse → ELS3

From MIR HTR Fuse → ELS1

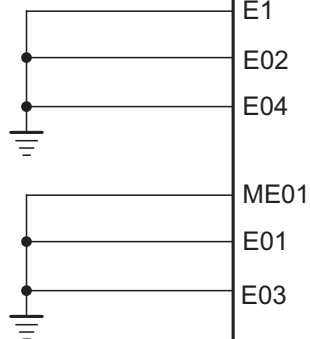

ECM

