



# CYLINDER HEAD

## COMPONENTS

EM

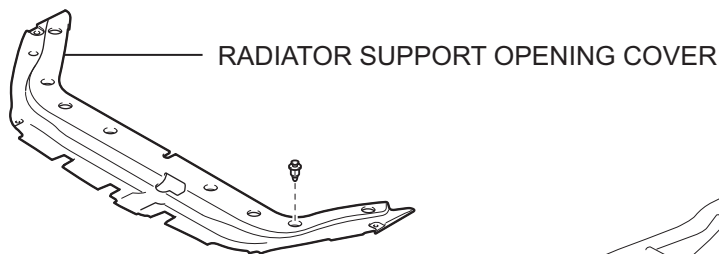


RADIATOR SUPPORT OPENING COVER

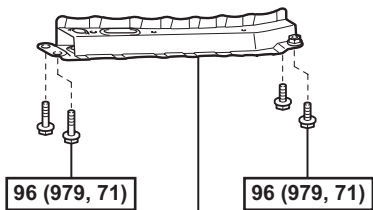

96 (979, 71)

96 (979, 71)


FRONT SUSPENSION MEMBER REINFORCEMENT RH

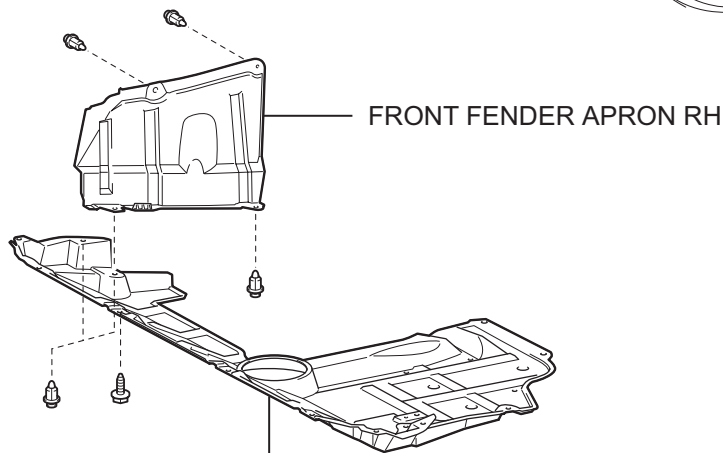

FRONT FENDER APRON RH

NO. 1 ENGINE UNDER COVER

**N\*m (kgf\*cm, ft.\*lbf)** : Specified torque

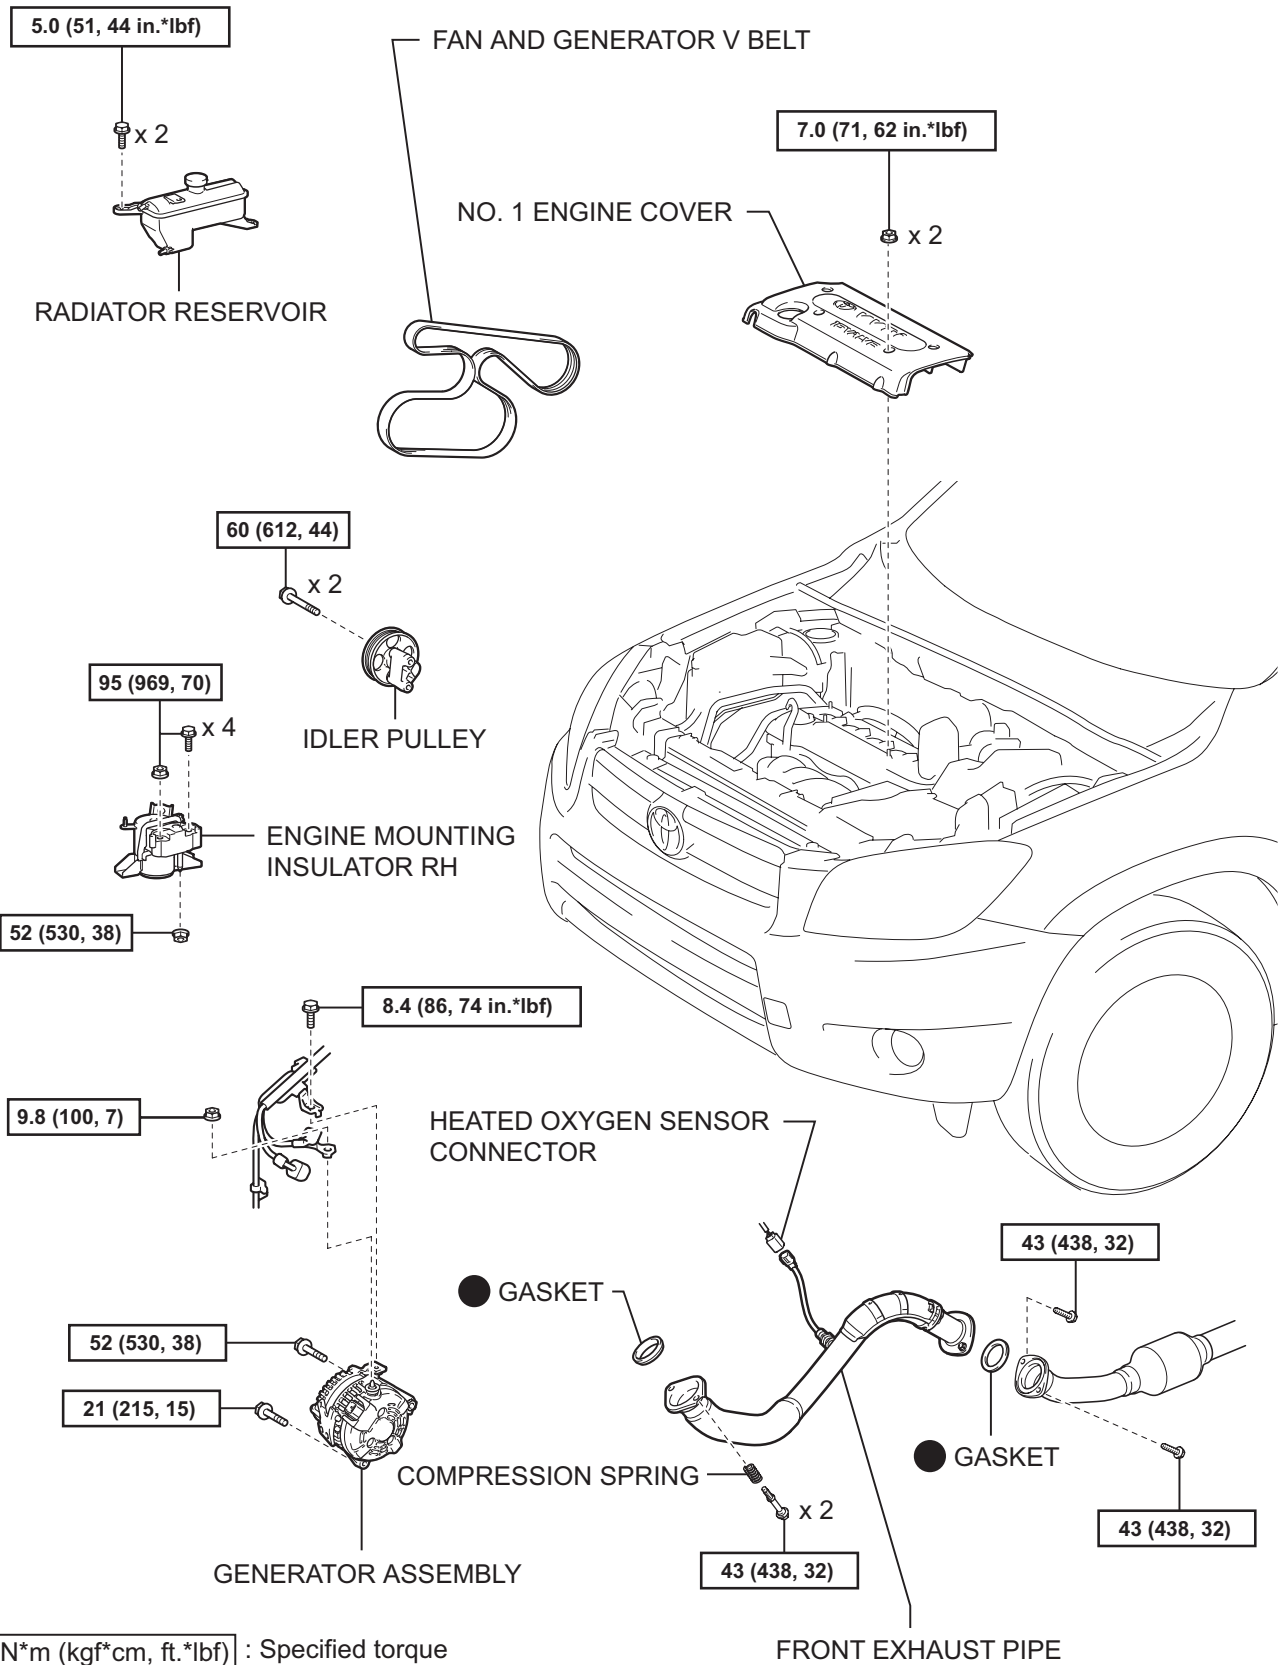



N\*m (kgf\*cm, ft.\*lbf) : Specified torque

● Non-reusable part

EM


EM

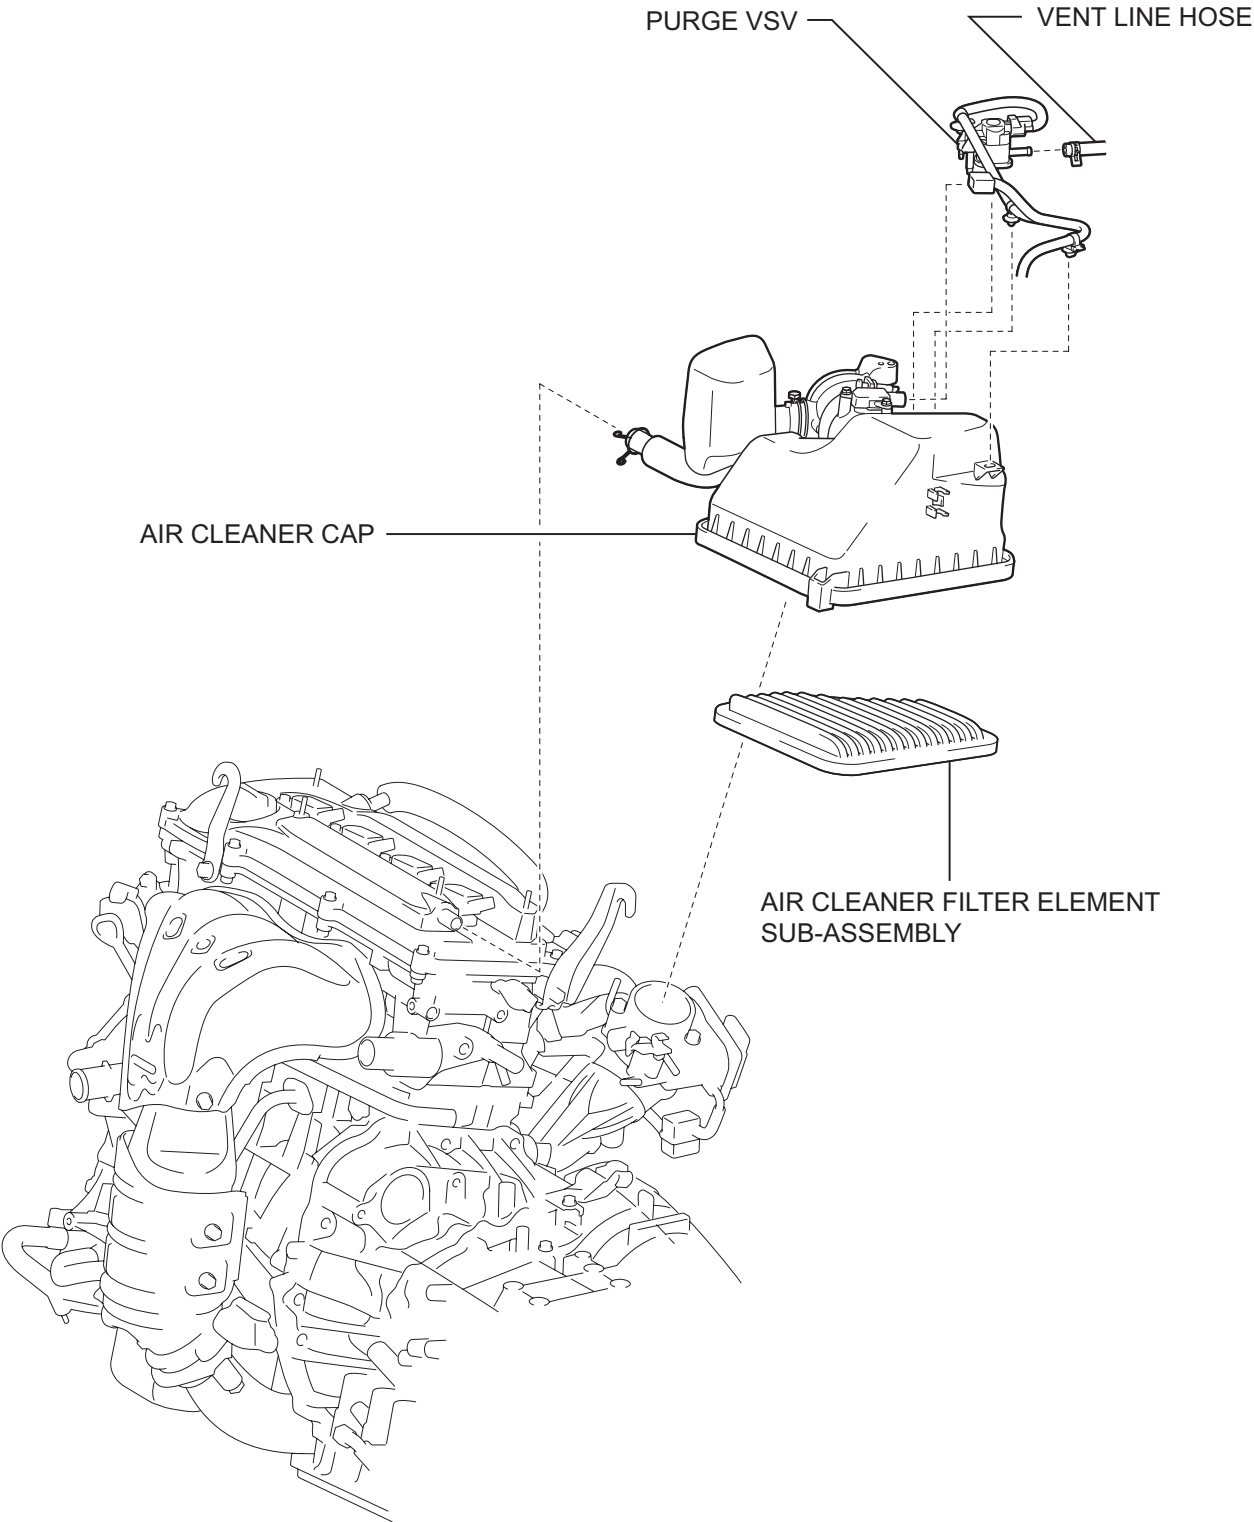

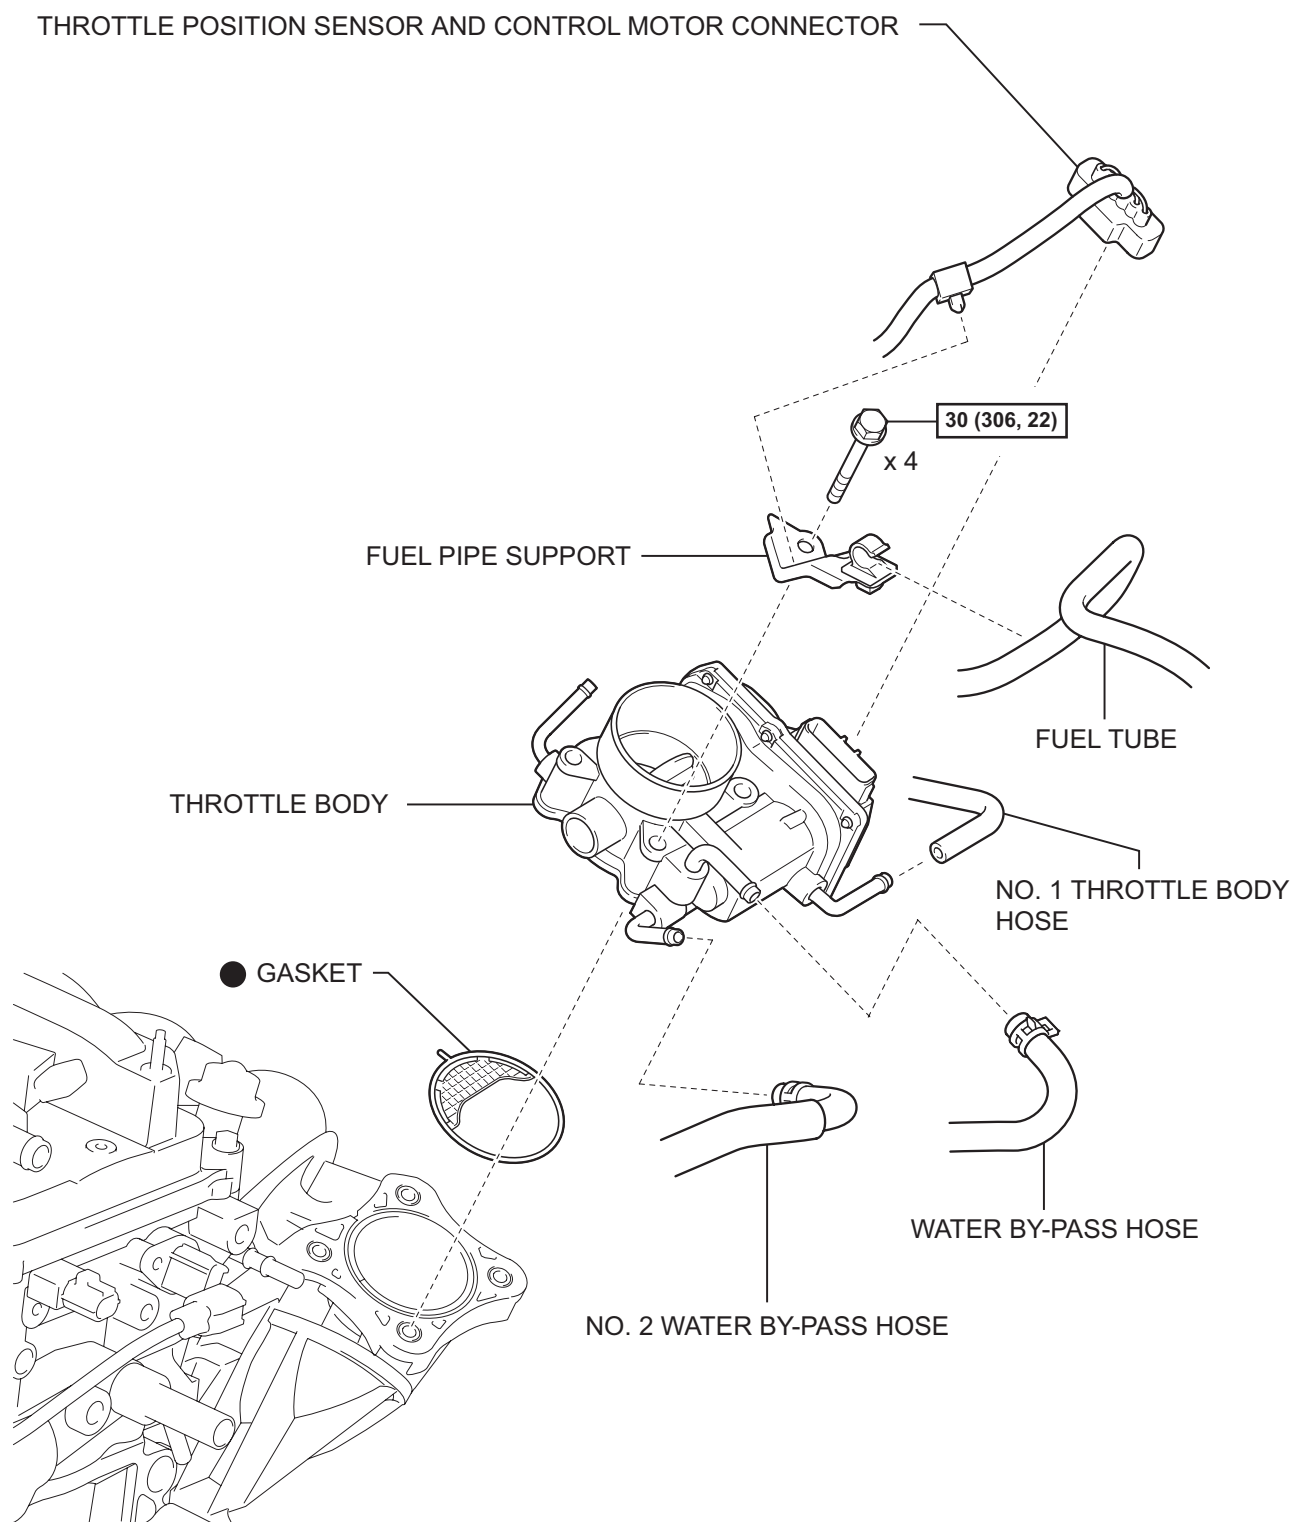

**N\*m (kgf\*cm, ft.\*lbf) : Specified torque**


● Non-reusable part

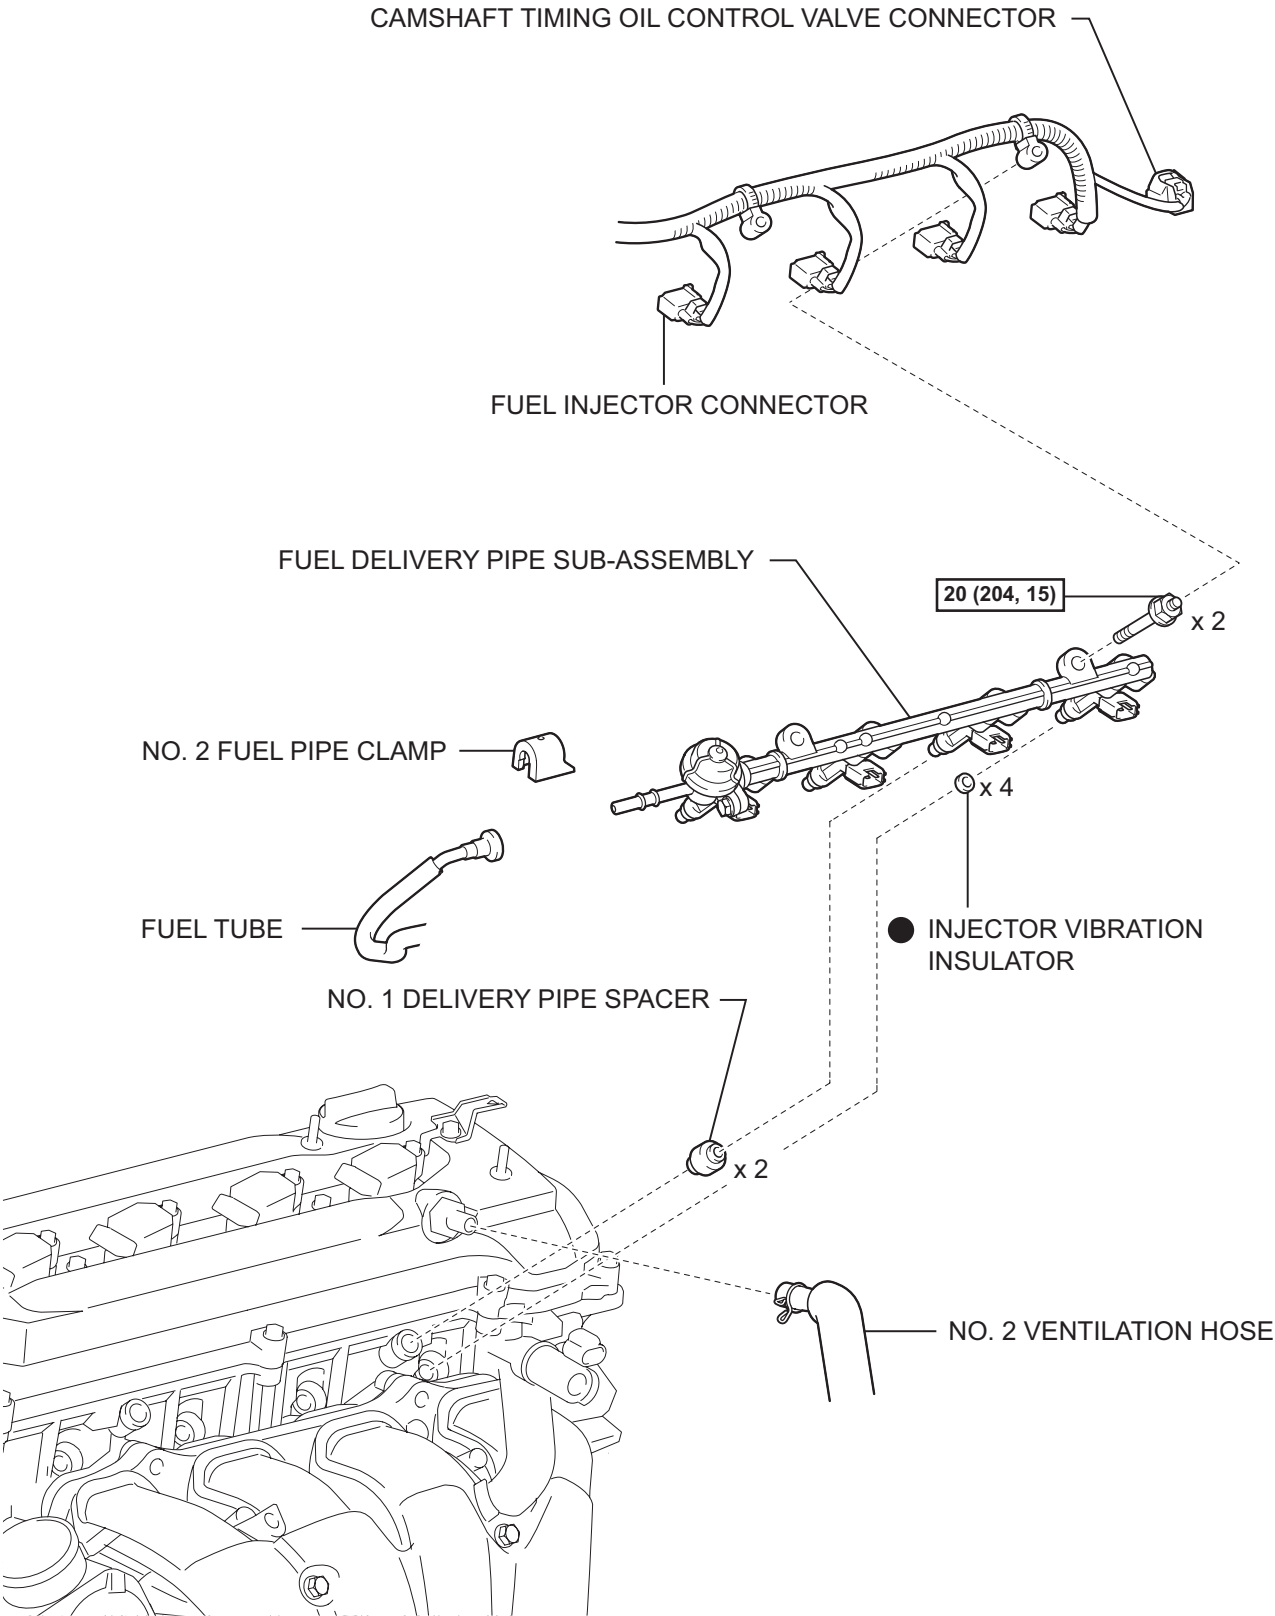

**N\*m (kgf\*cm, ft.\*lbf)** : Specified torque



● Non-reusable part

EM

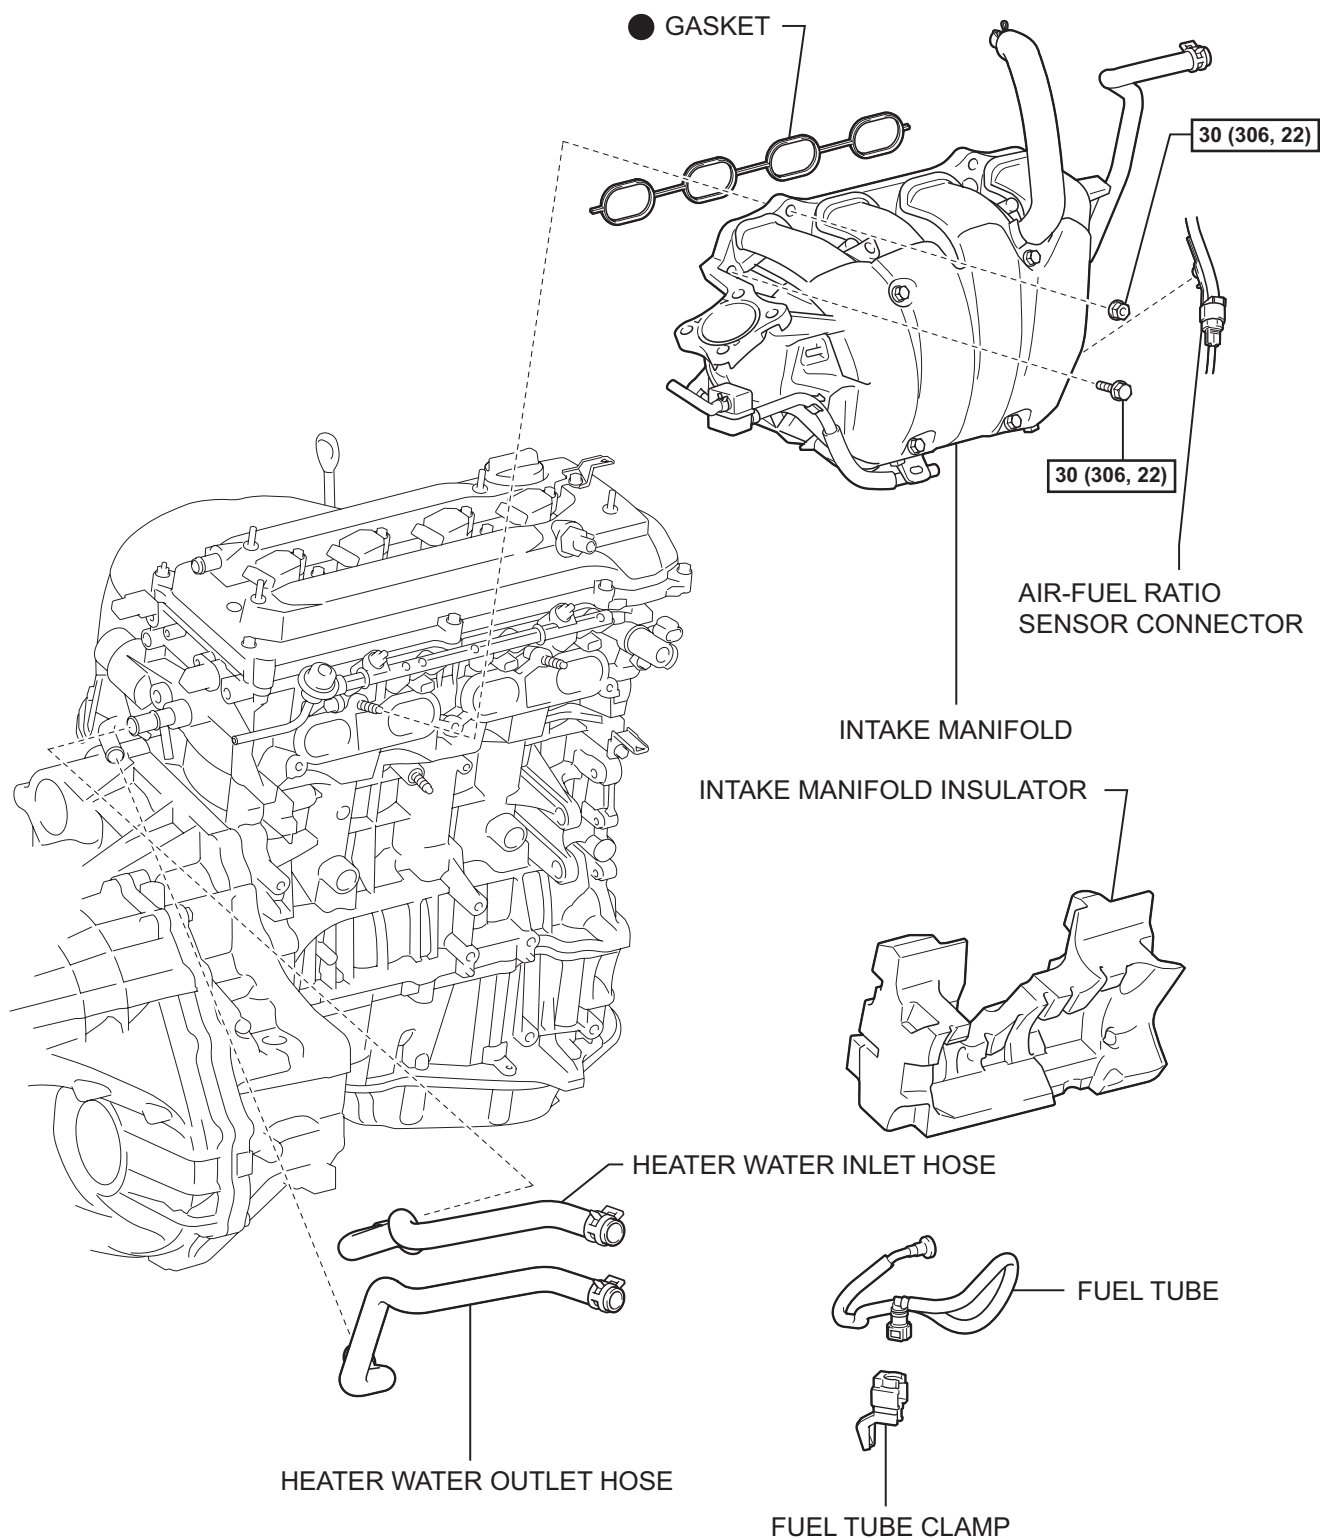


N\*m (kgf\*cm, ft.\*lbf) : Specified torque

● Non-reusable part

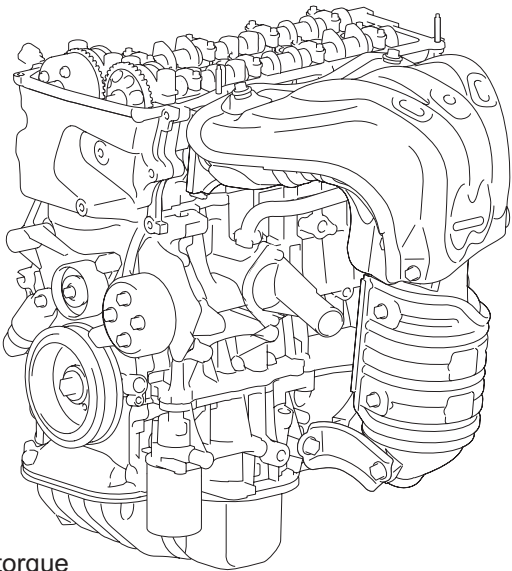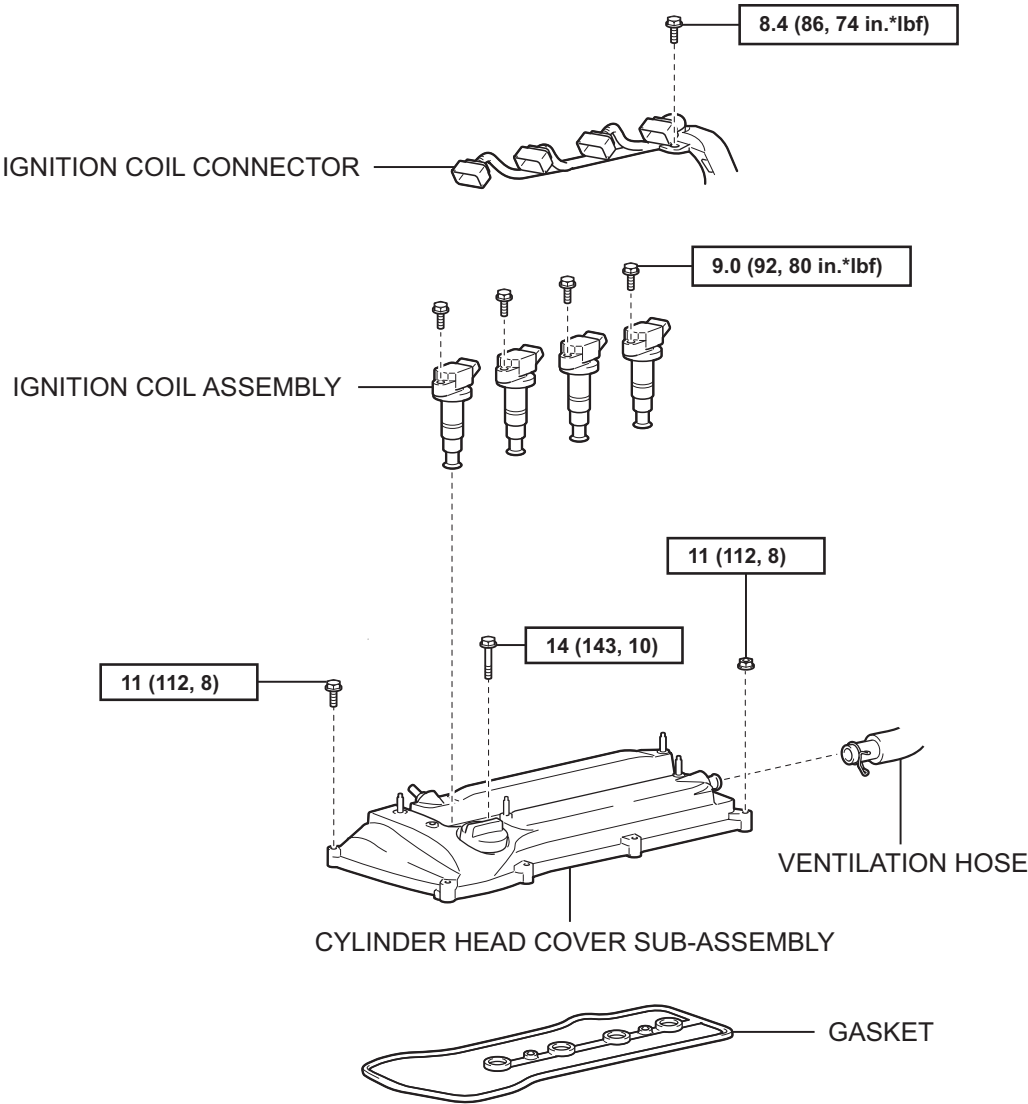


N\*m (kgf\*cm, ft.\*lbf) : Specified torque


EM

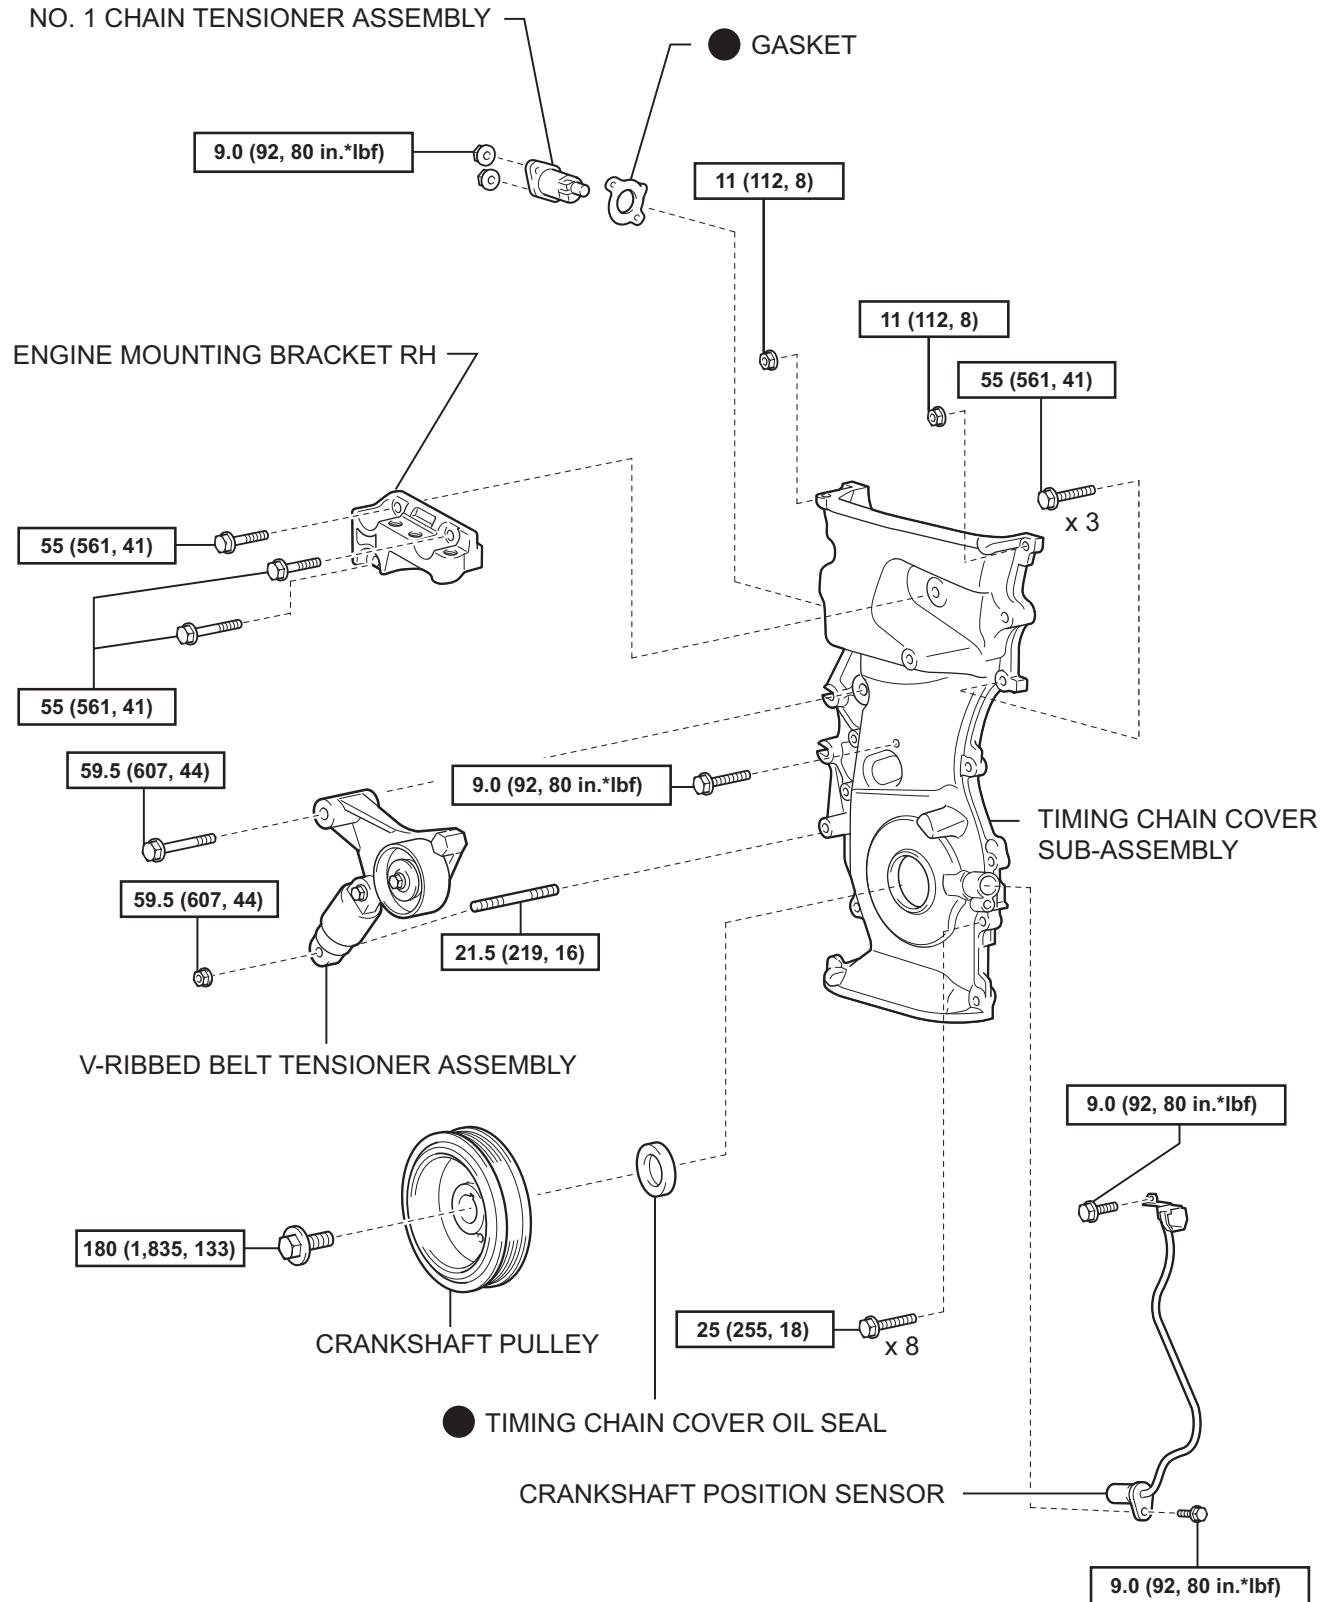


EM




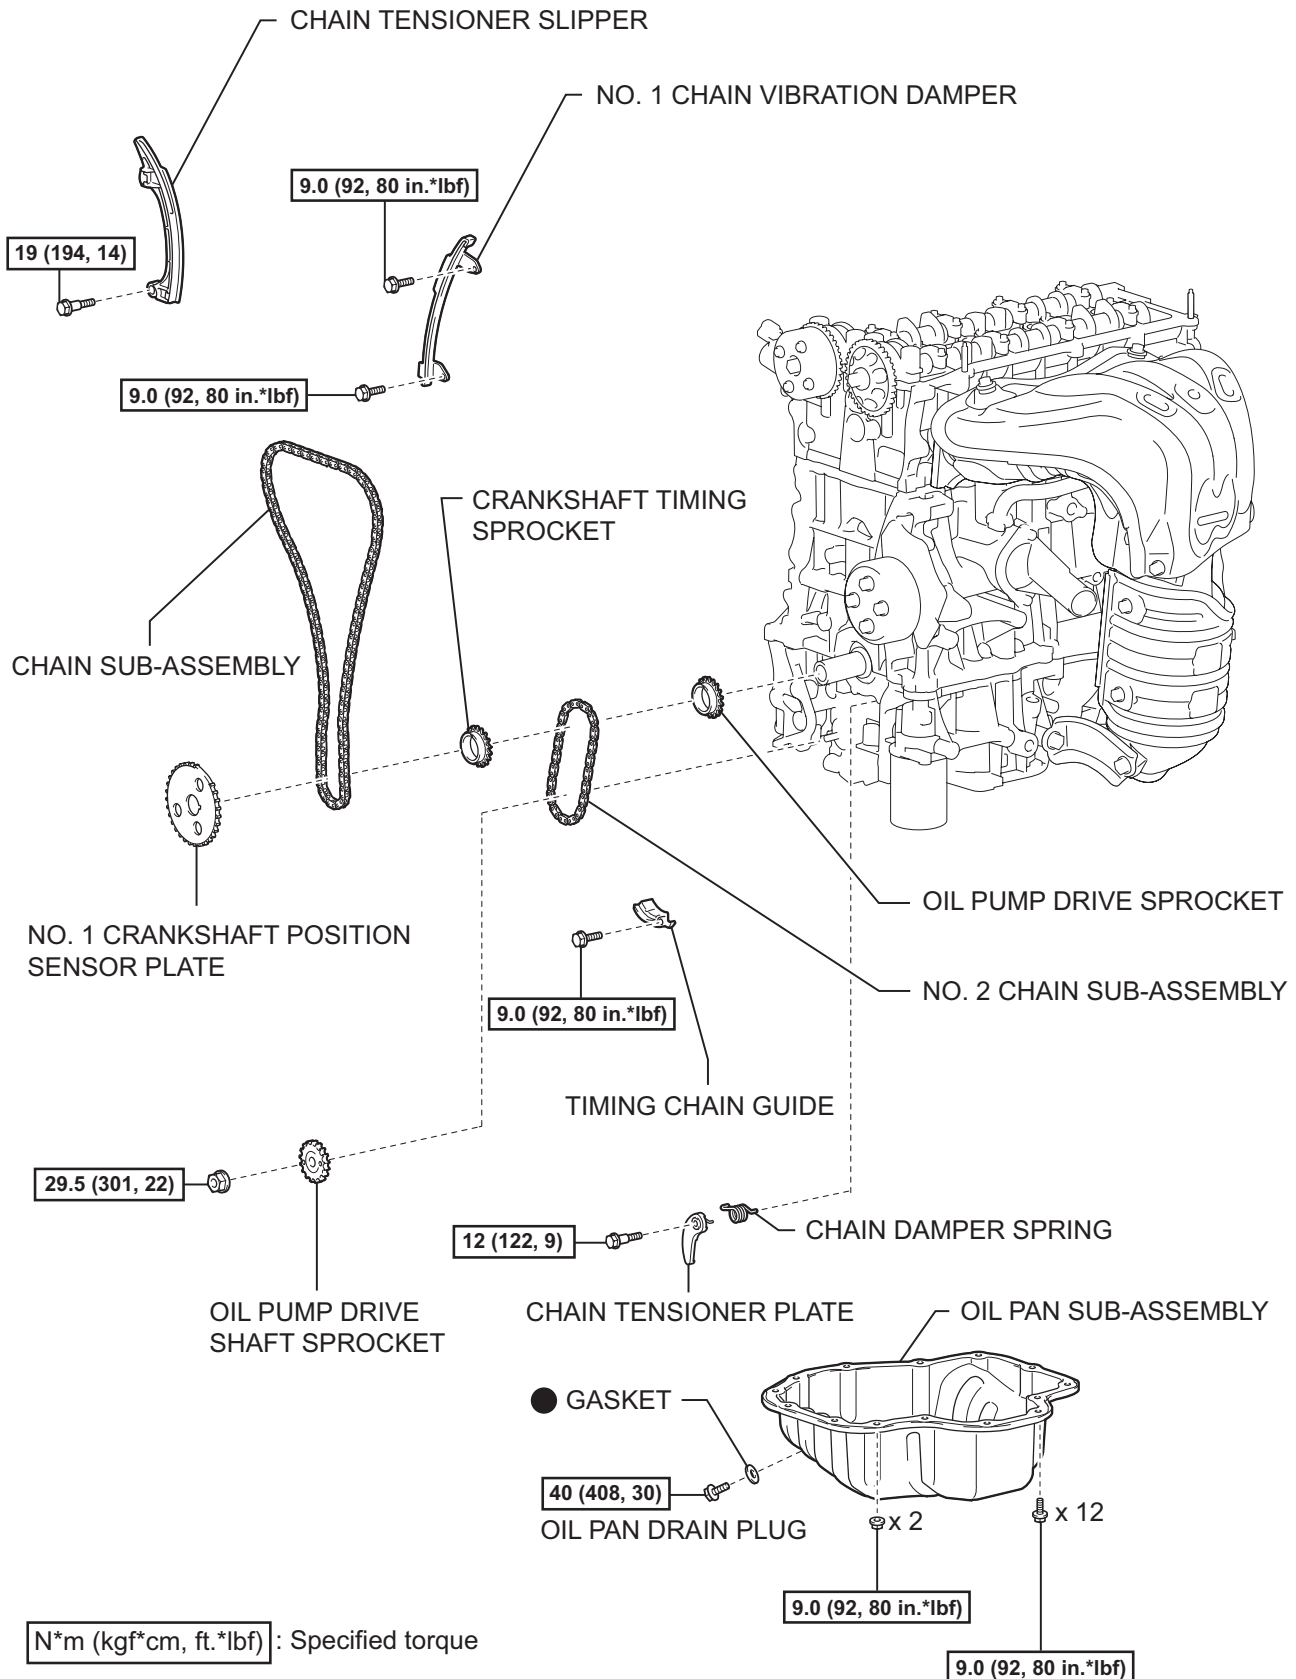

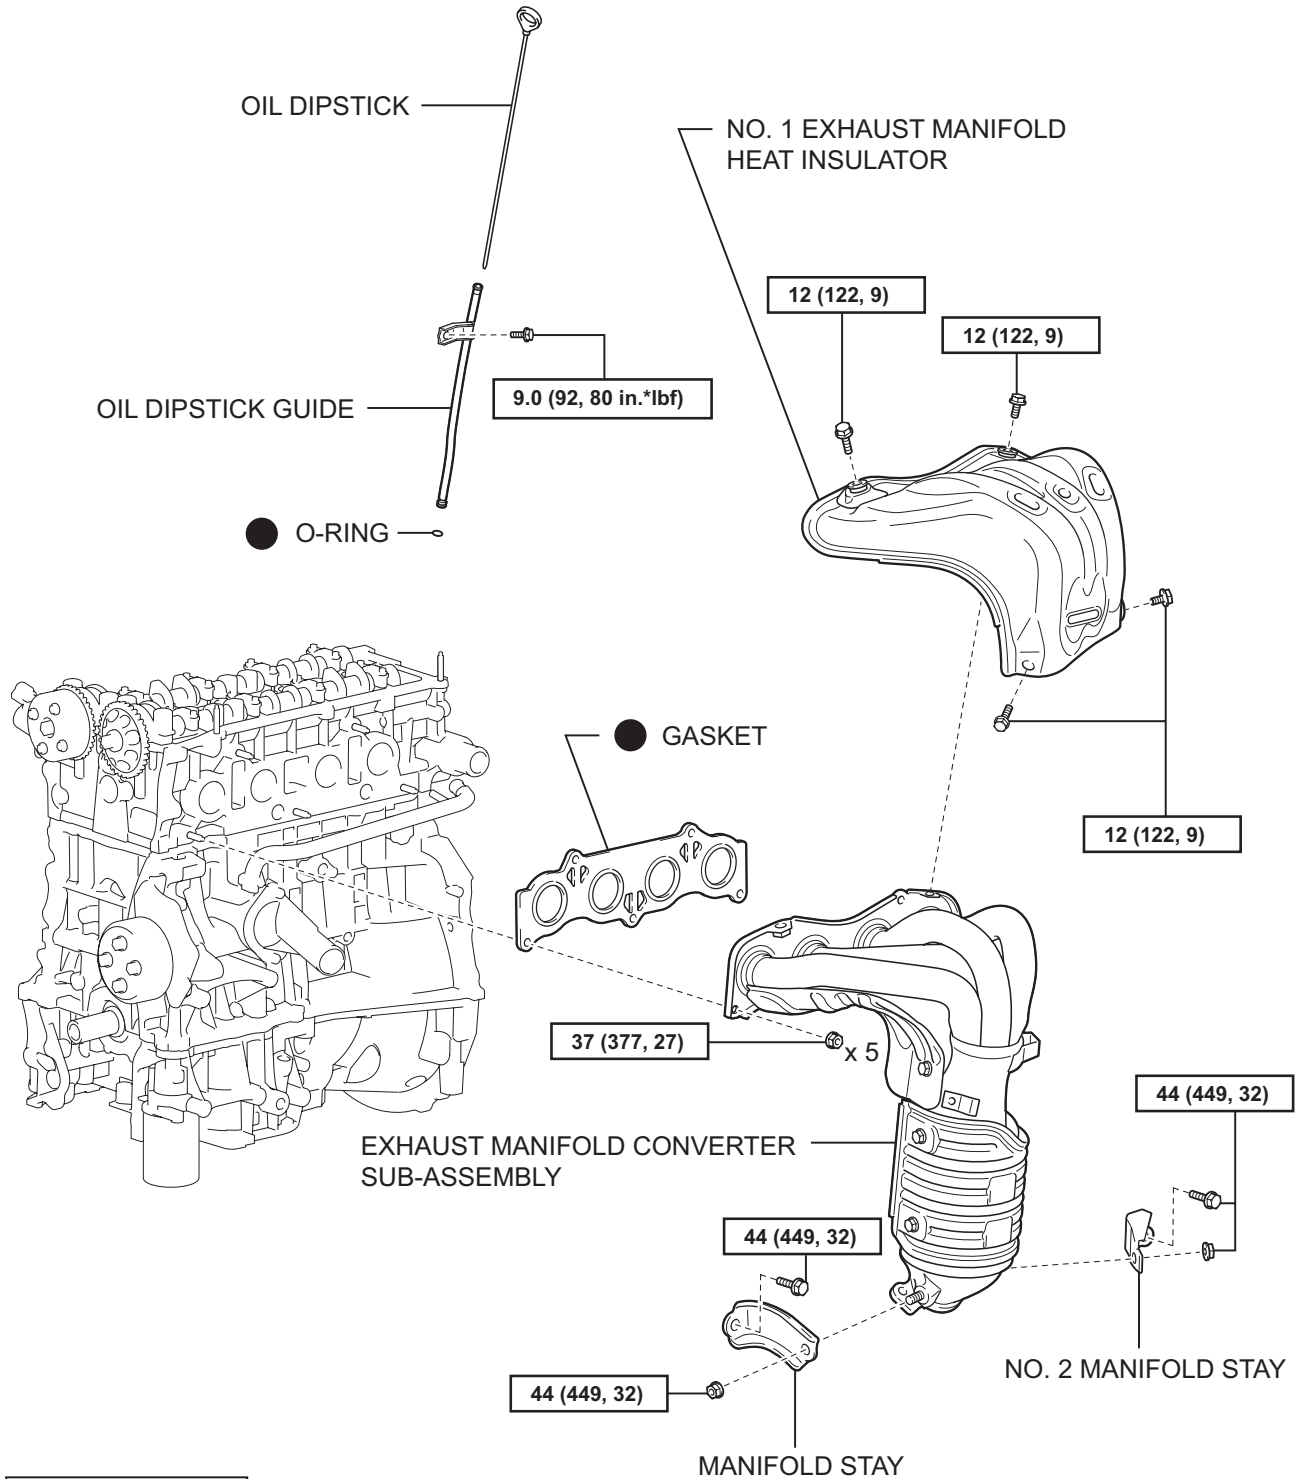


EM

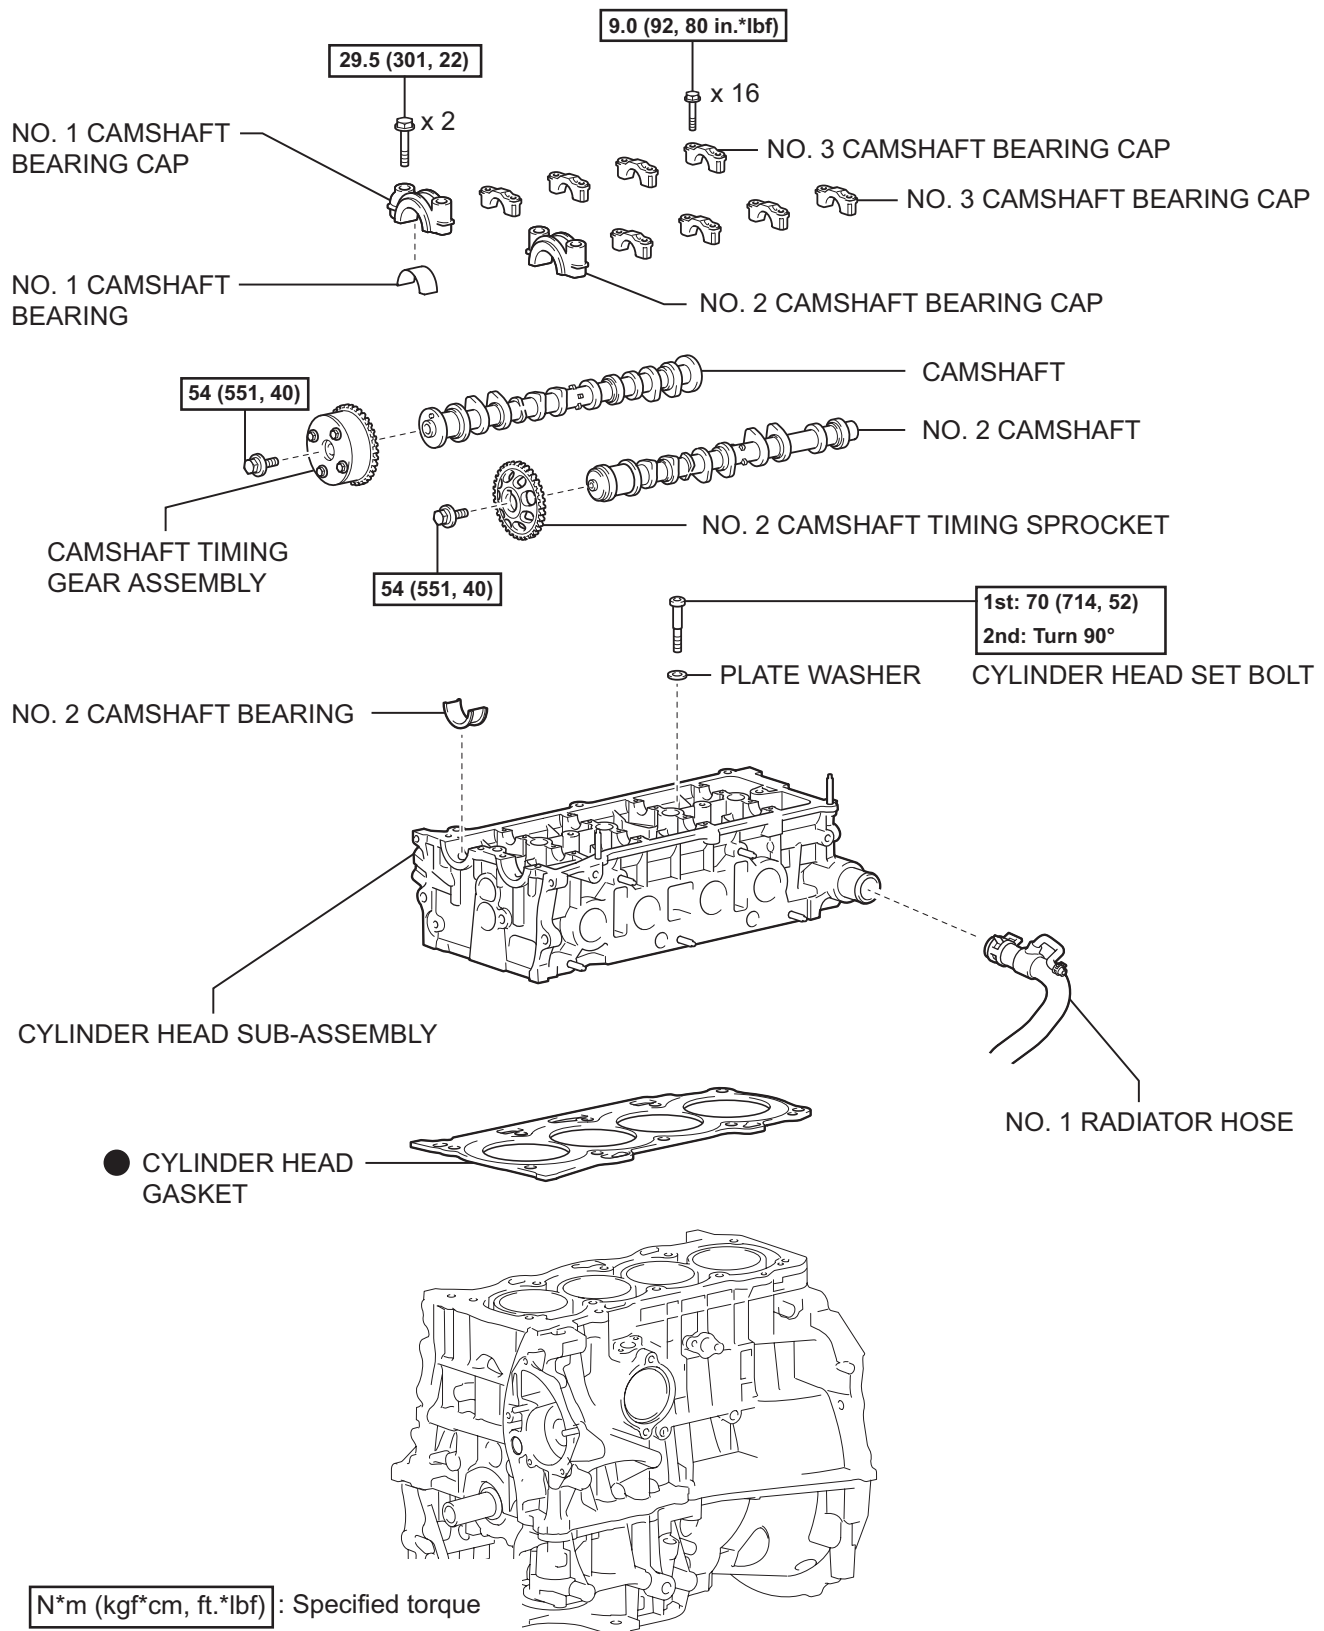

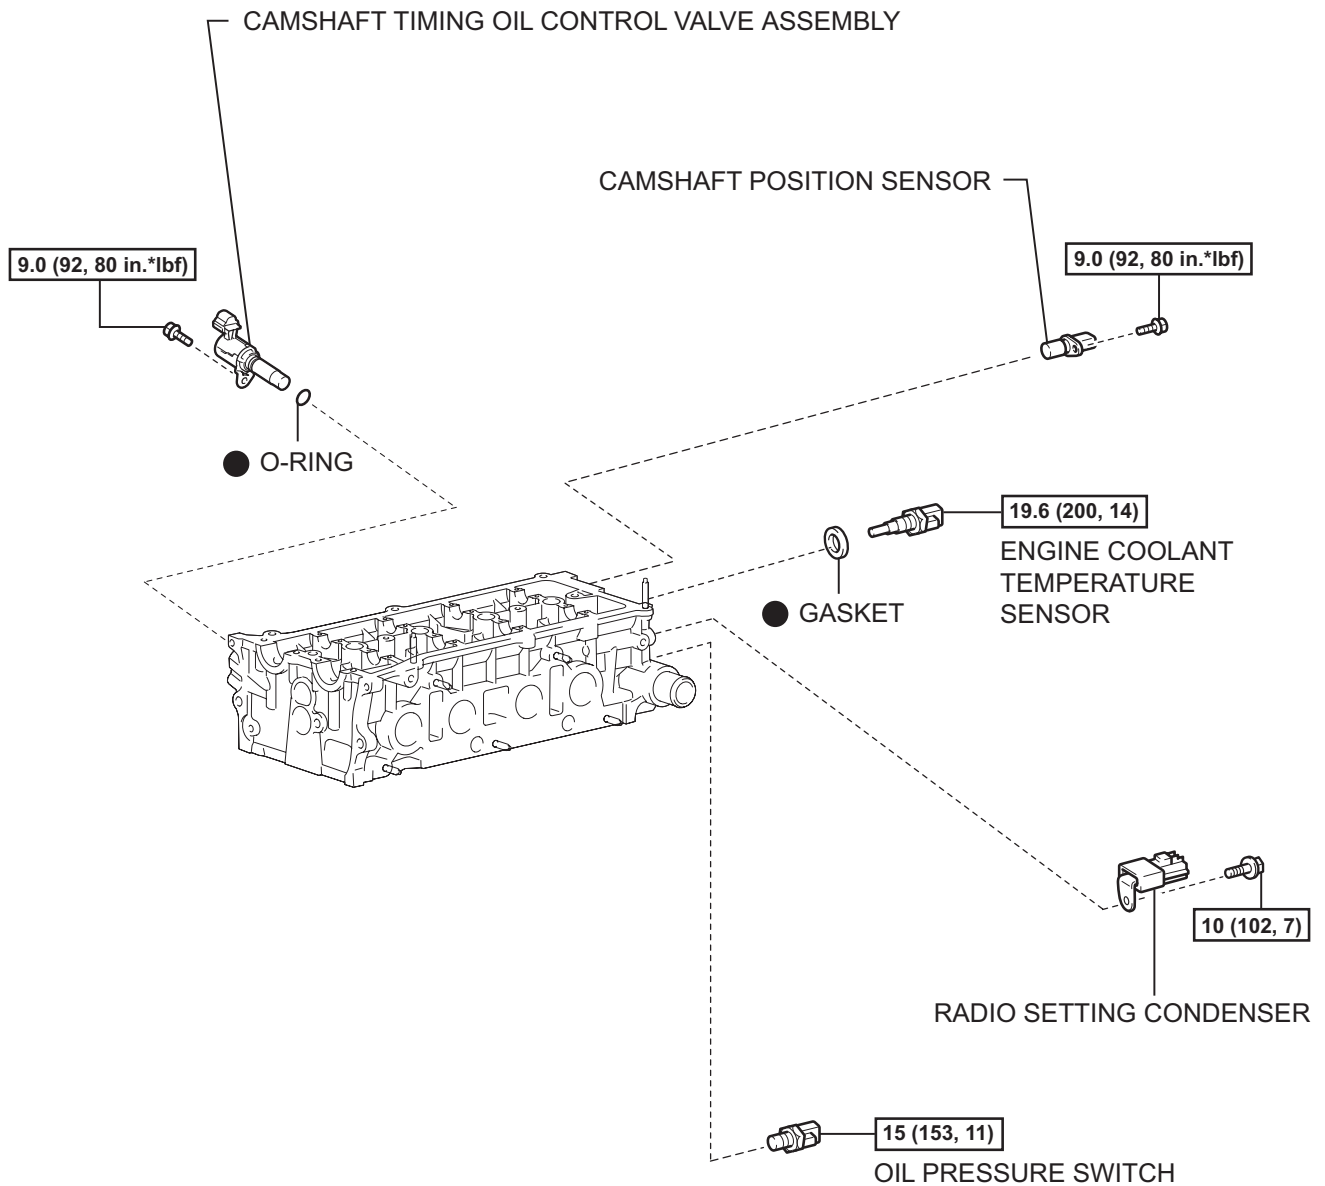

N\*m (kgf\*cm, ft.\*lbf) : Specified torque

● Non-reusable part

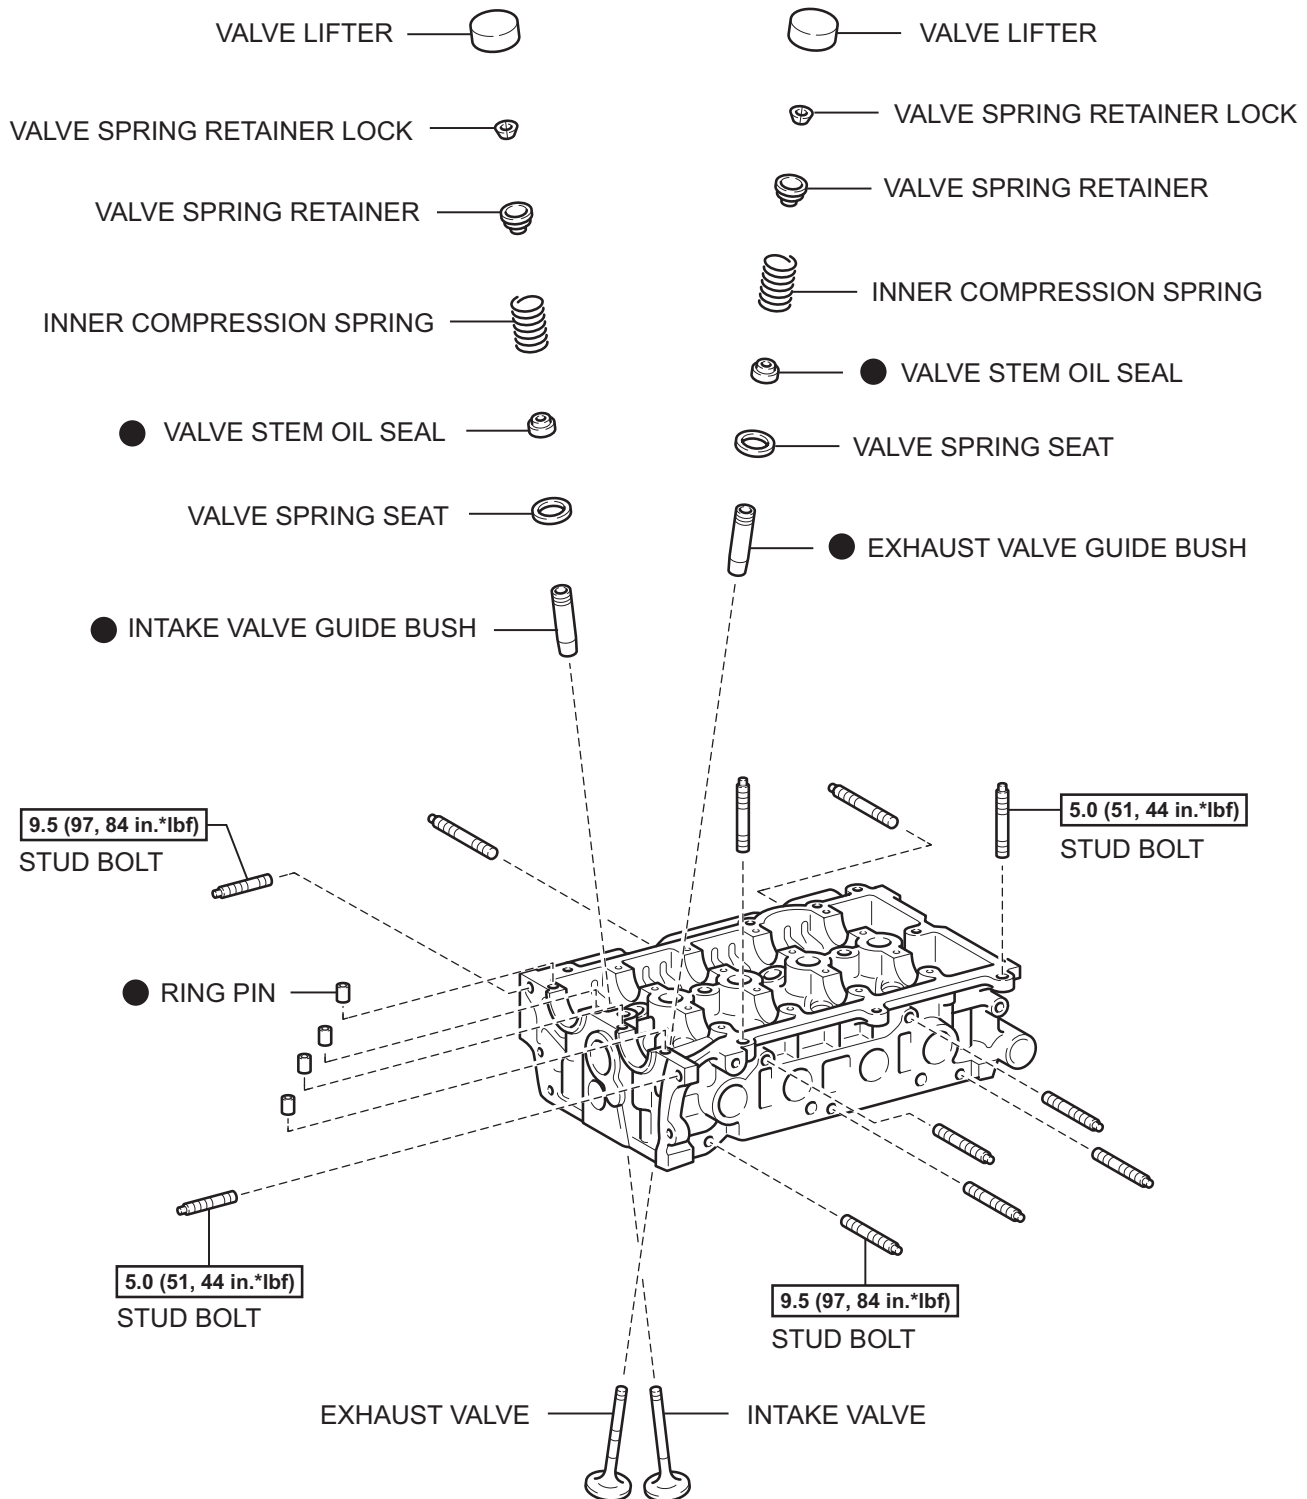

N\*m (kgf\*cm, ft.\*lbf) : Specified torque

● Non-reusable part