





ENGINE ASSEMBLY
COMPONENTS

EM

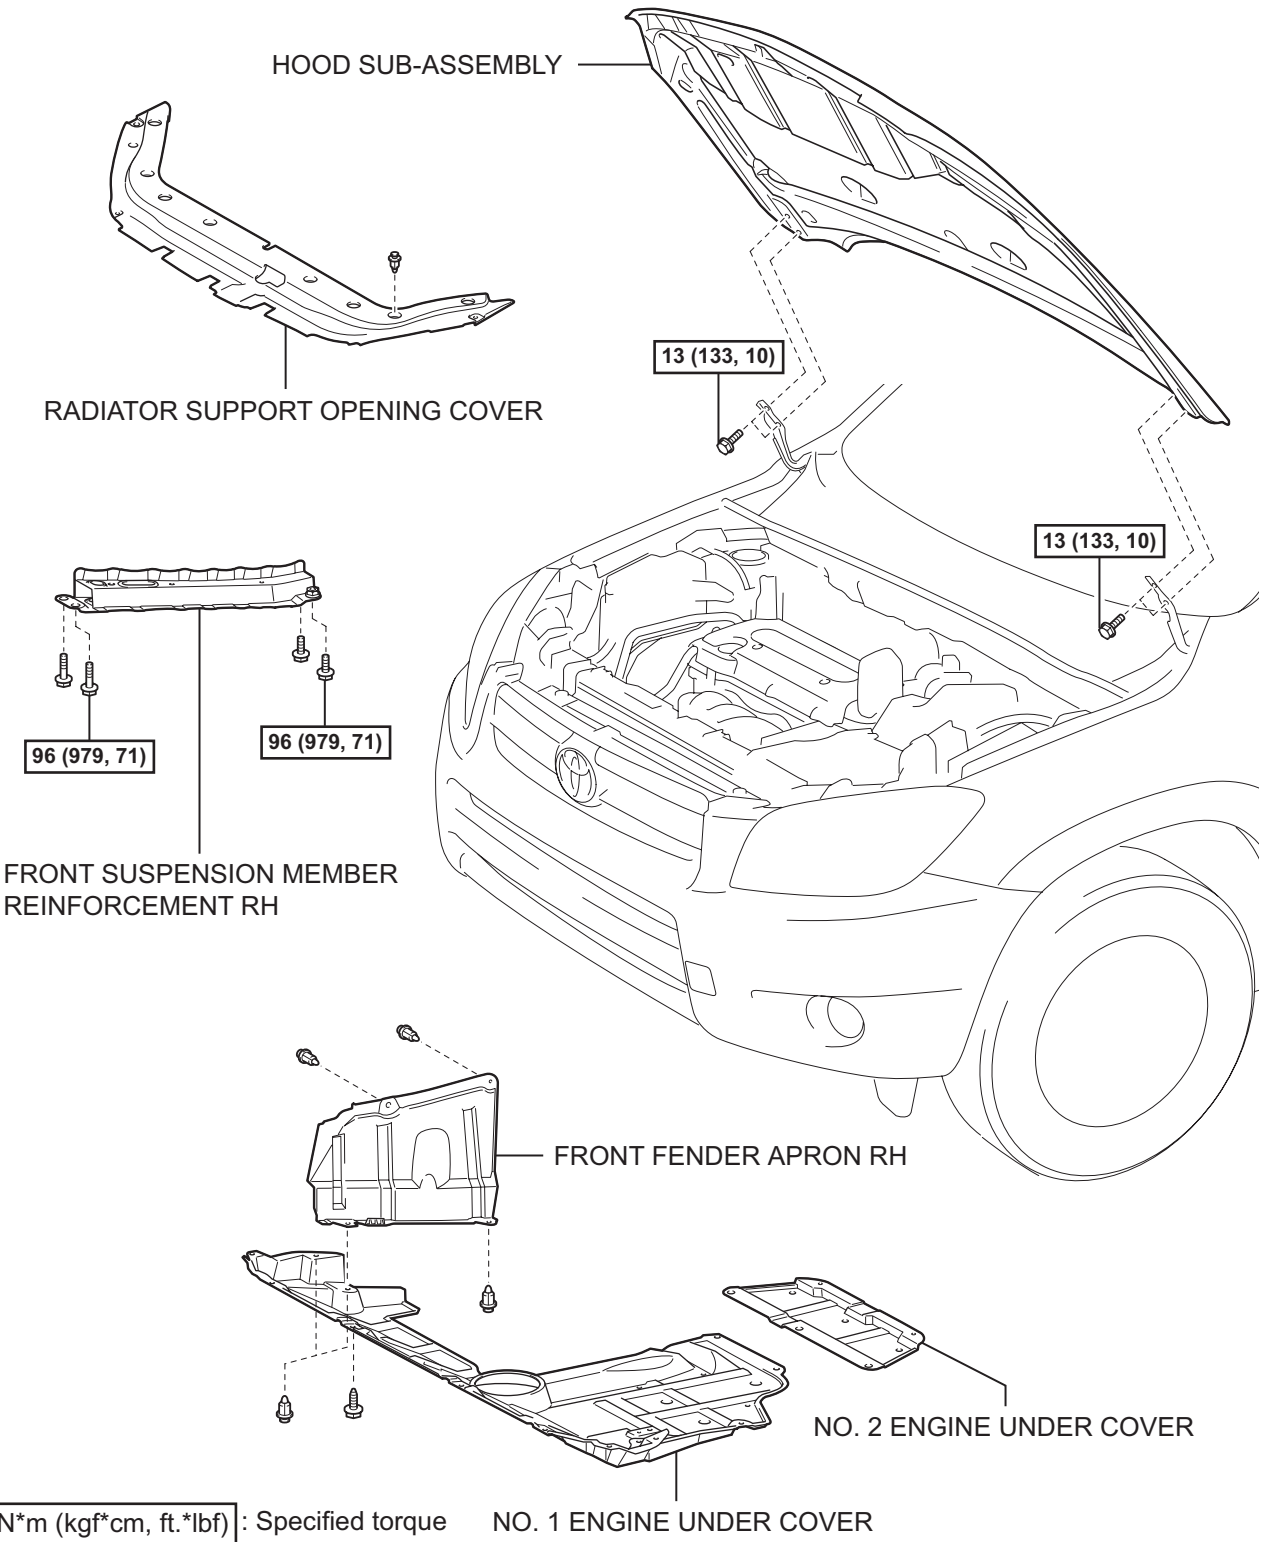

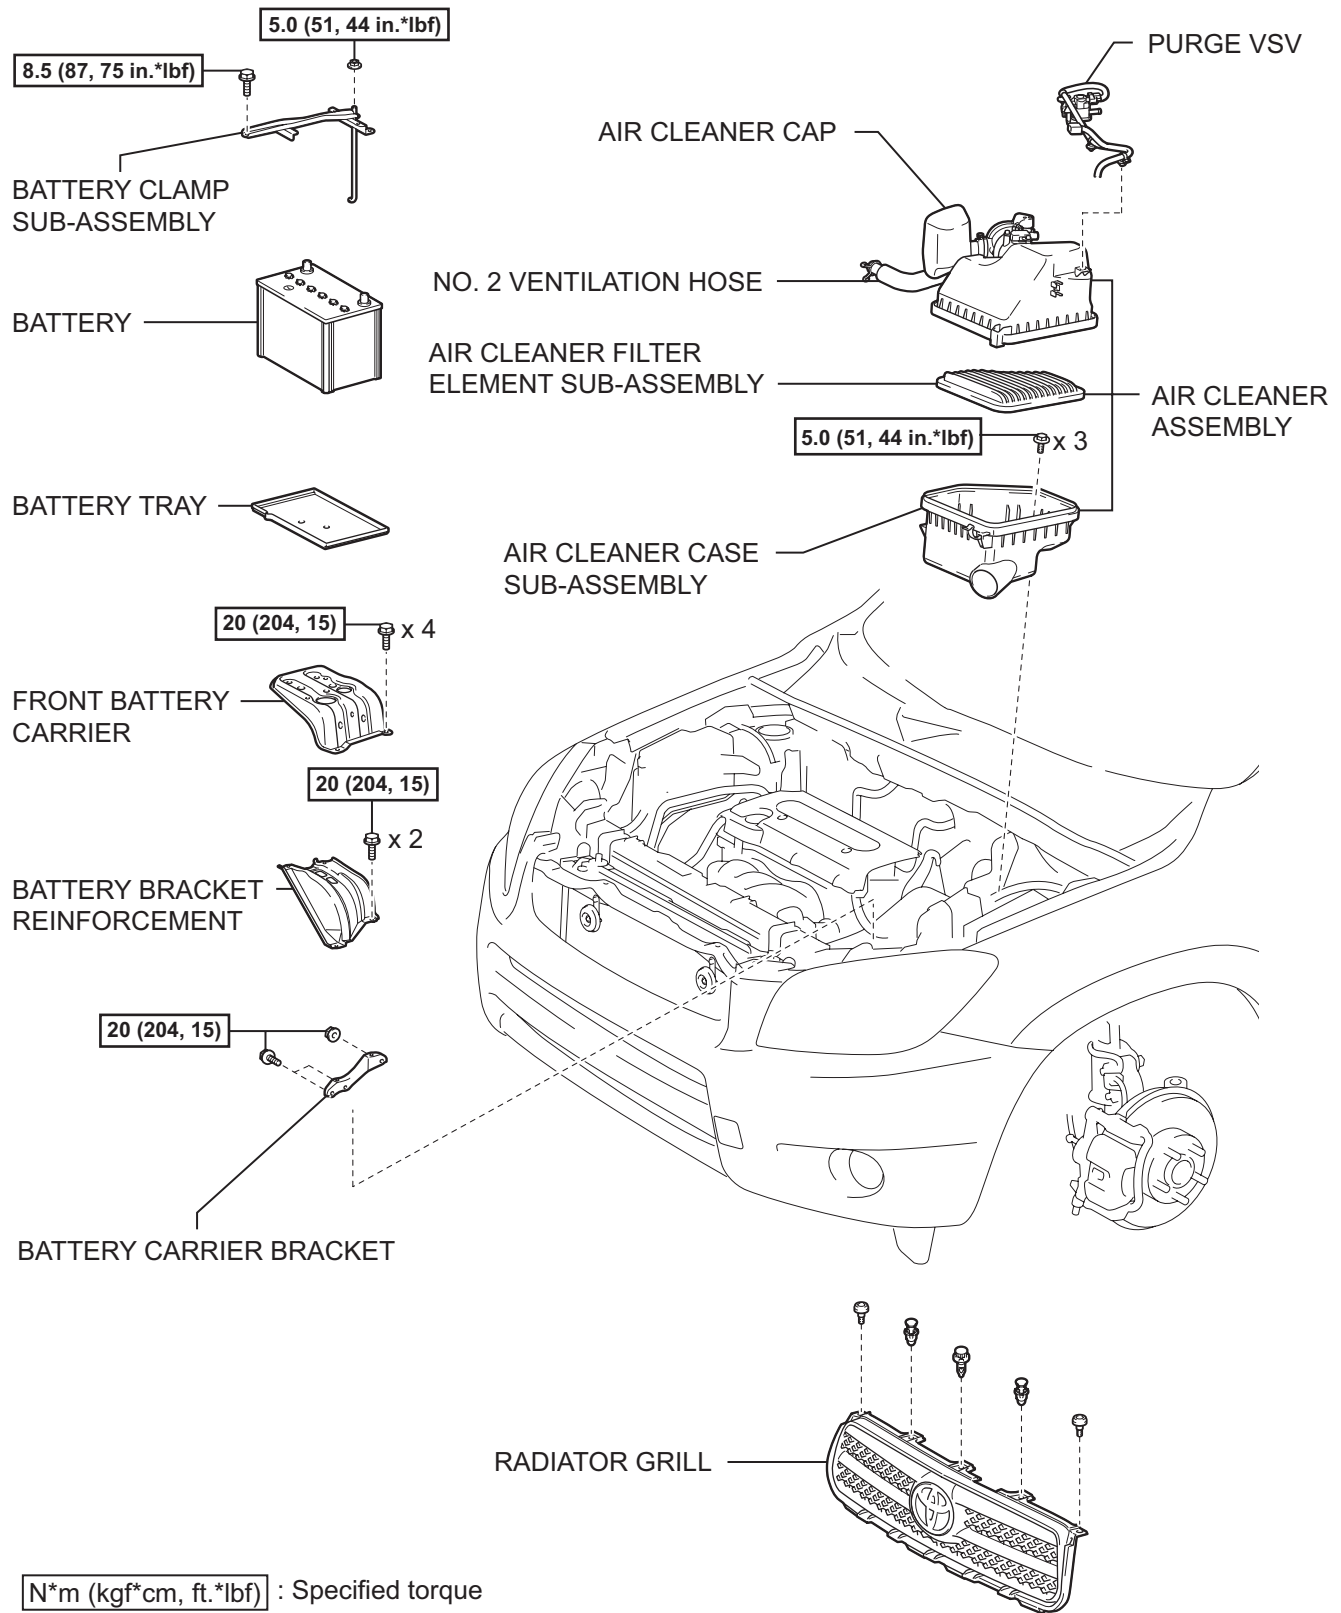

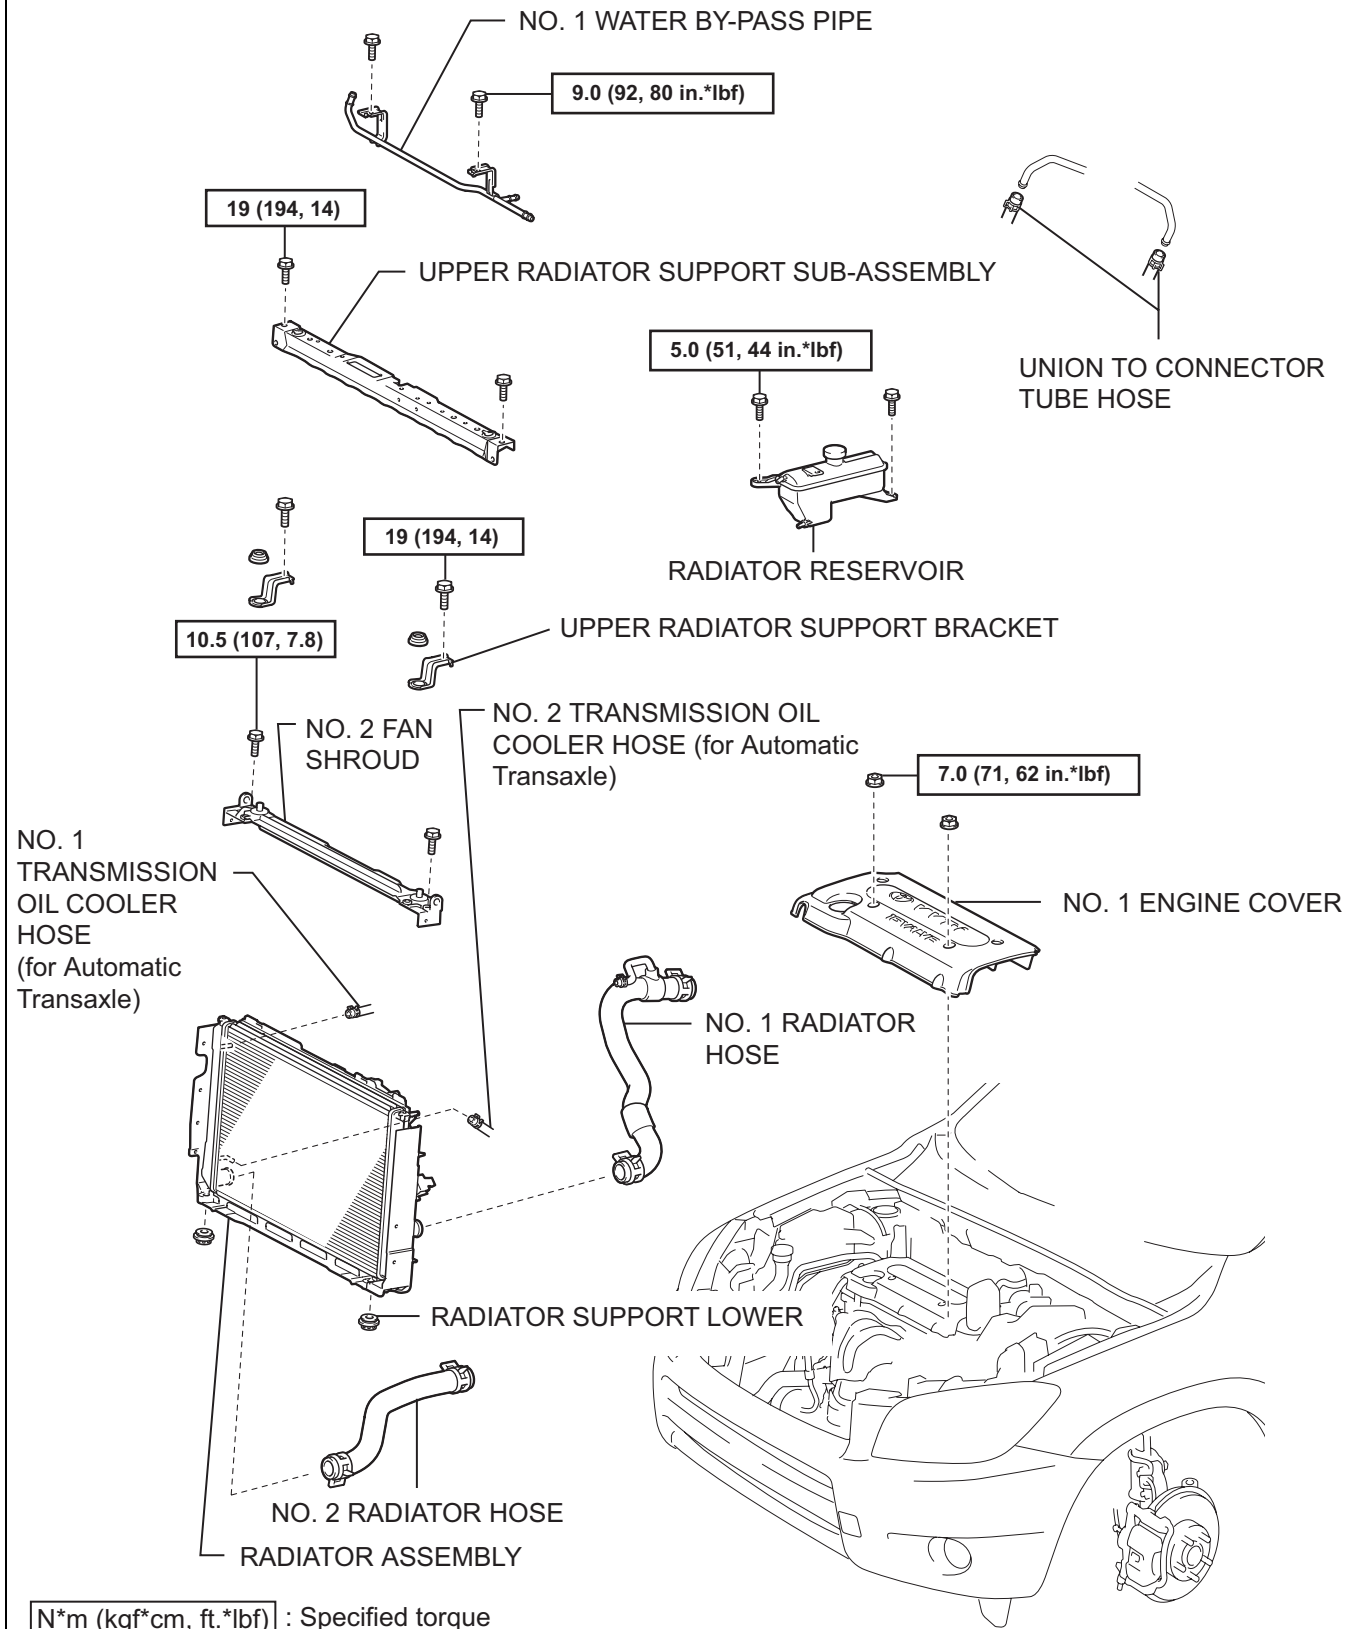

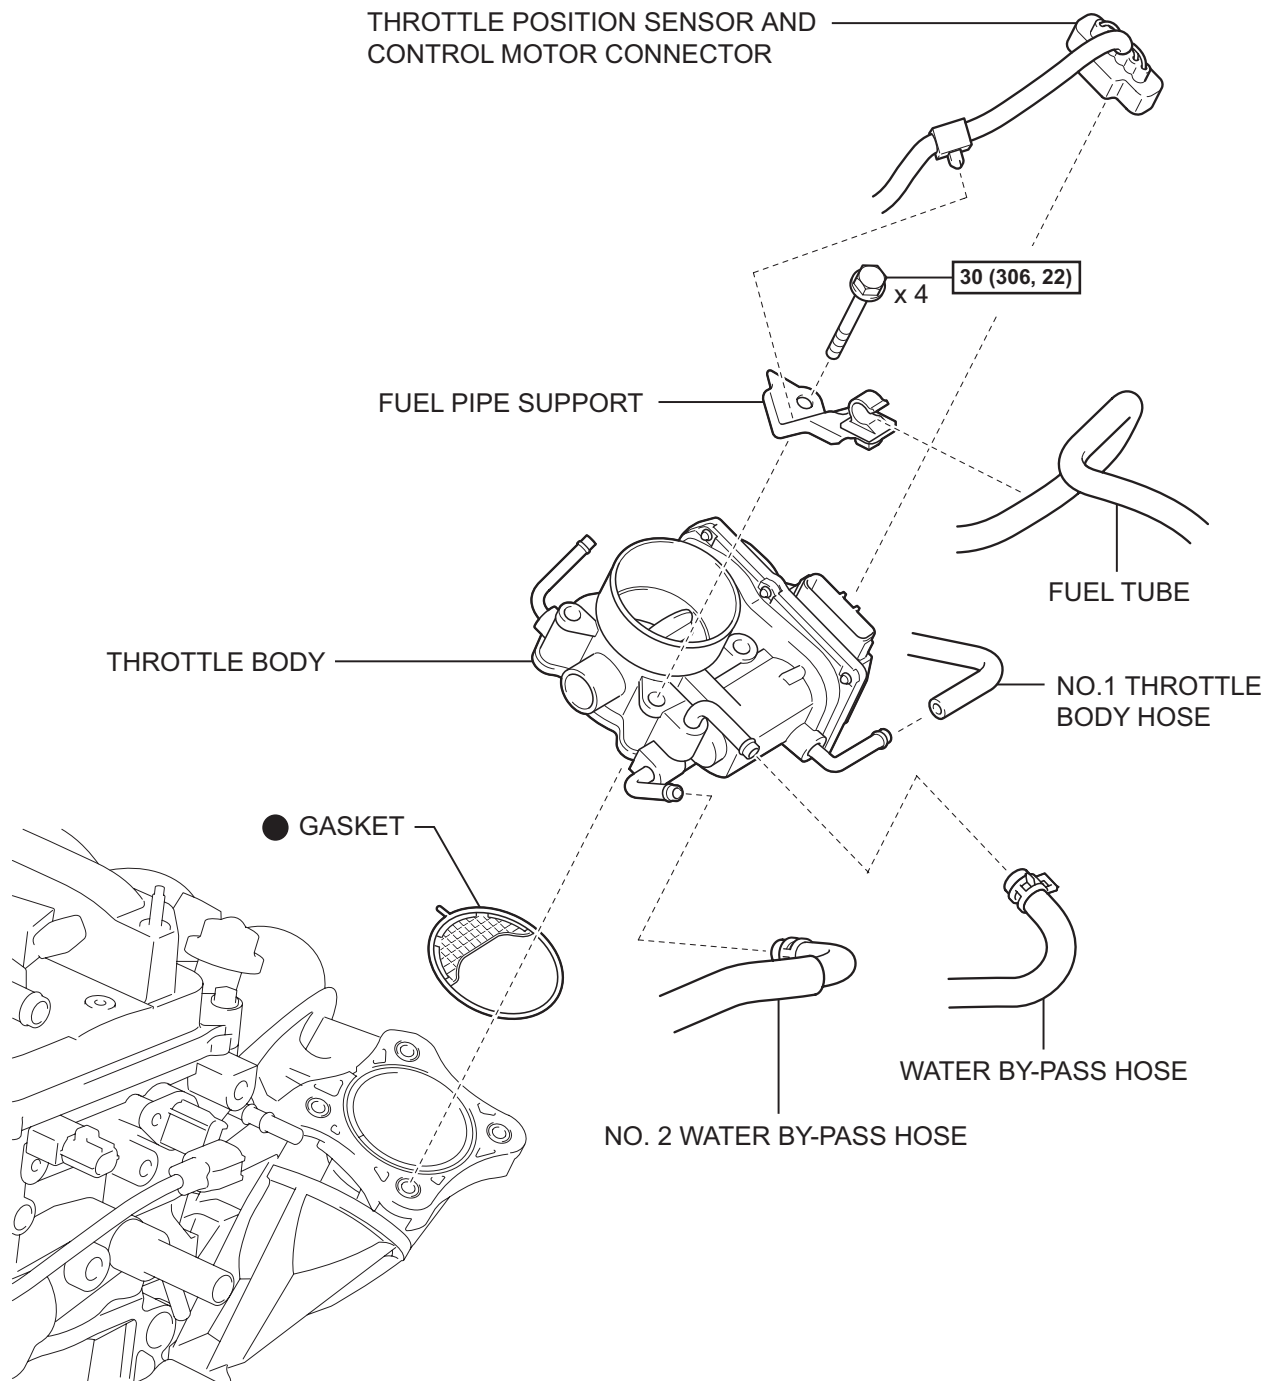

EM

CAMSHAFT TIMING OIL CONTROL VALVE CONNECTOR

FUEL INJECTOR CONNECTOR

FUEL DELIVERY PIPE SUB-ASSEMBLY

20 (204, 15)

x 2

FUEL TUBE

x 4

● INJECTOR VIBRATION INSULATOR

FUEL TUBE CLAMP


x 2

NO. 1 DELIVERY PIPE SPACER

NO. 2 VENTILATION HOSE

N*m (kgf*cm, ft.*lbf) : Specified torque


● Non-reusable part

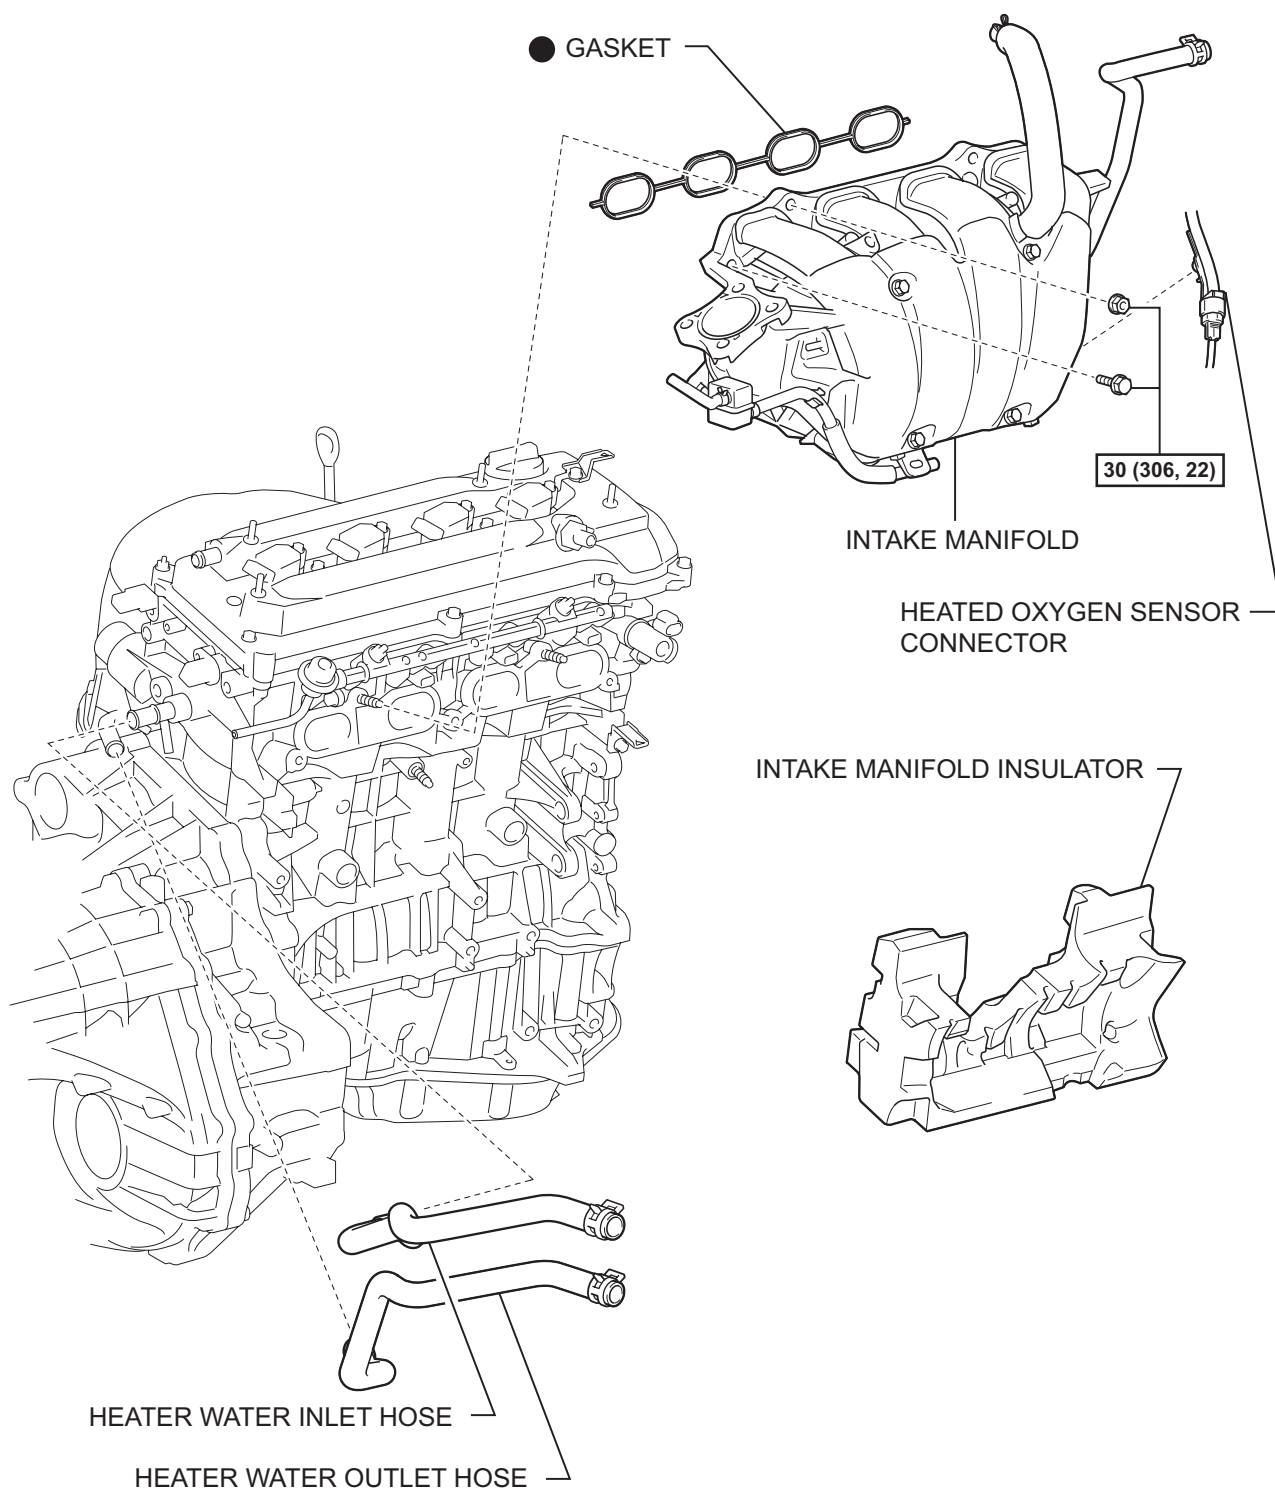


N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

EM

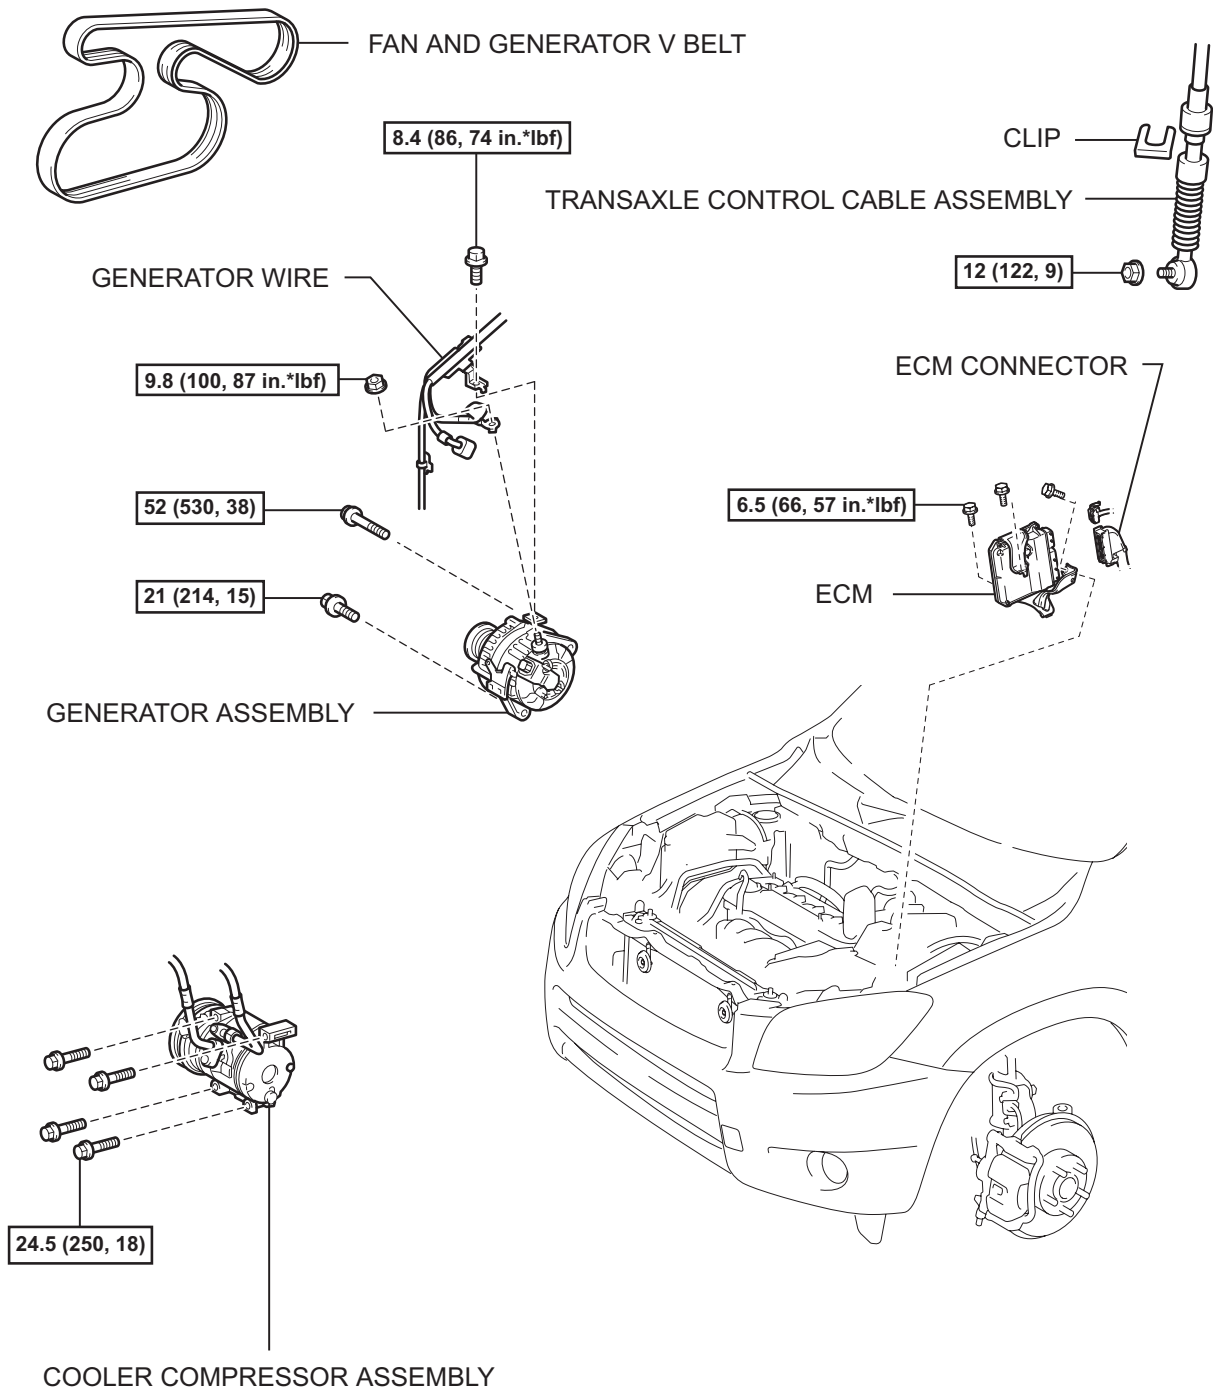




N*m (kgf*cm, ft.*lbf) : Specified torque

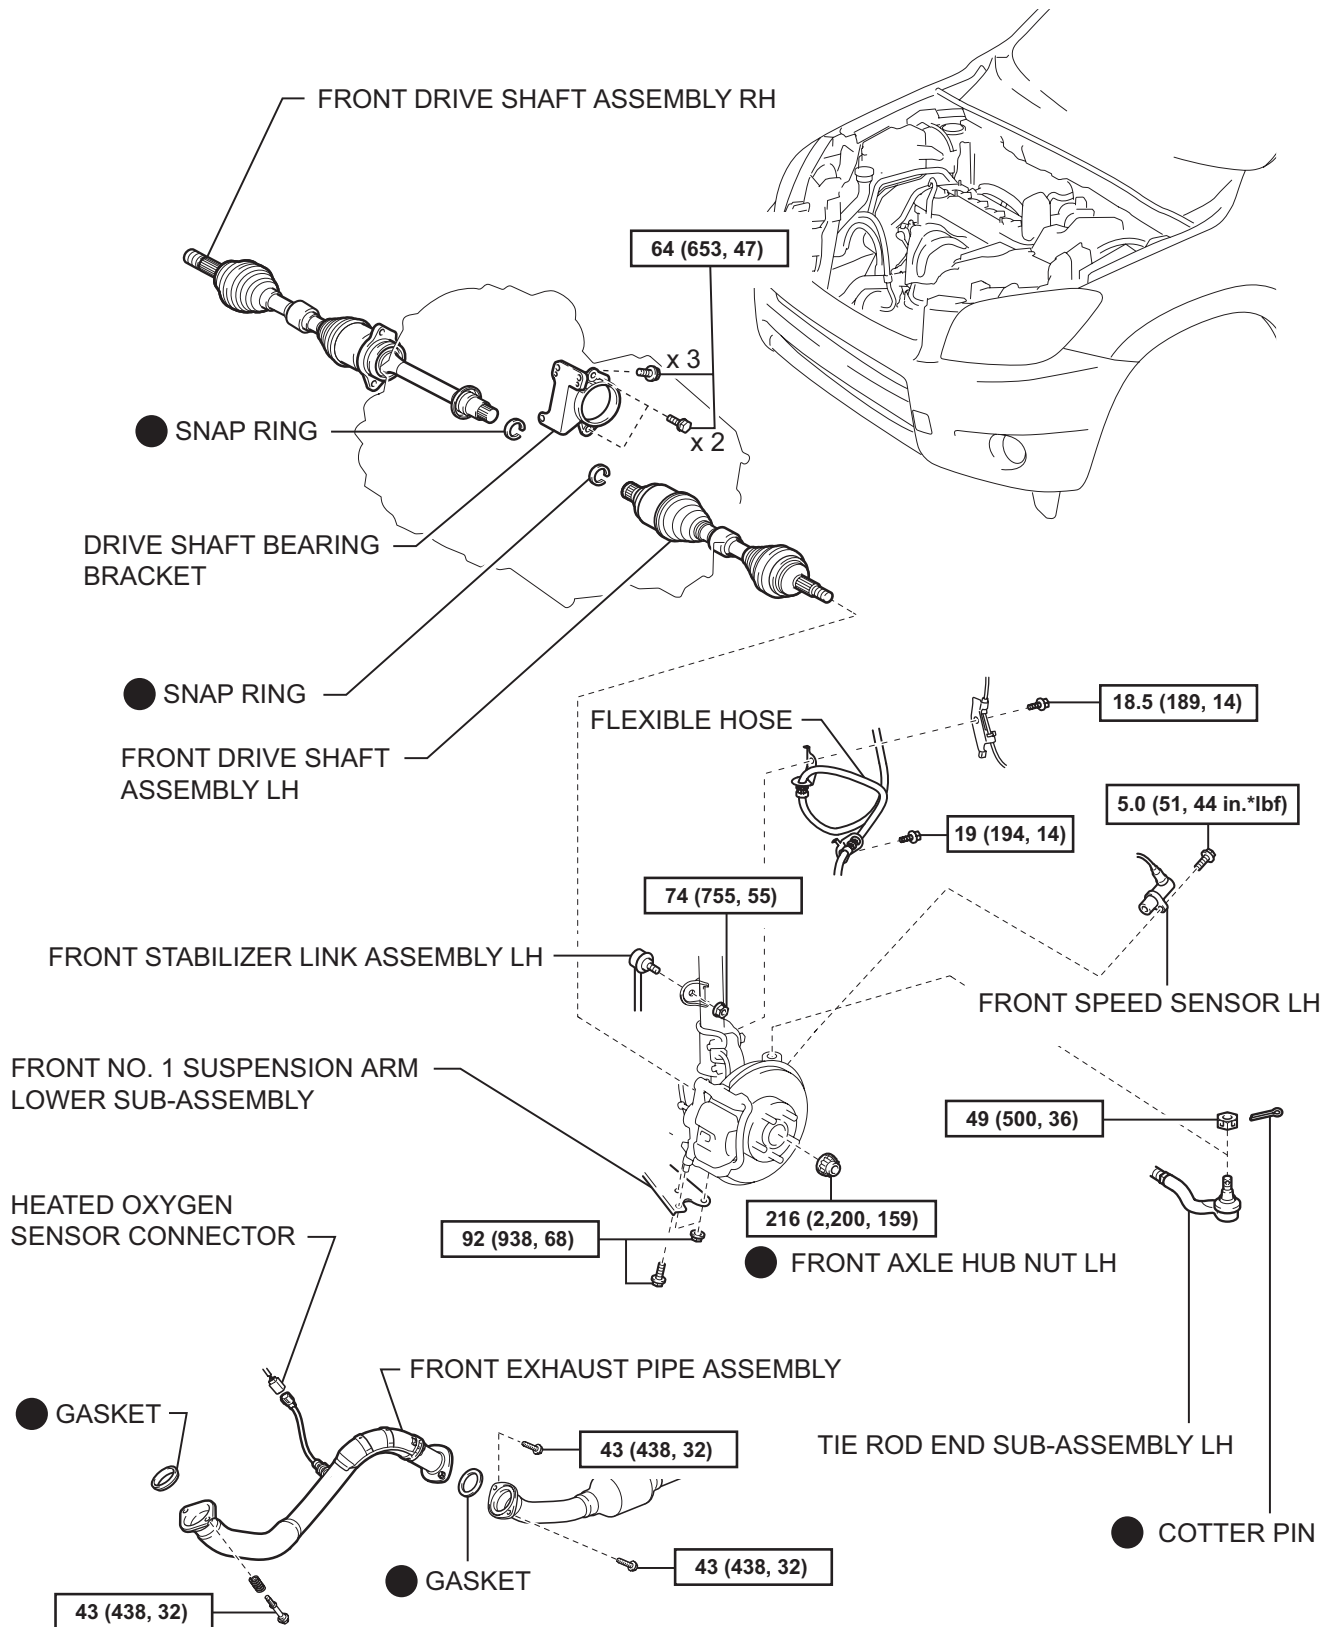


N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

for 4WD

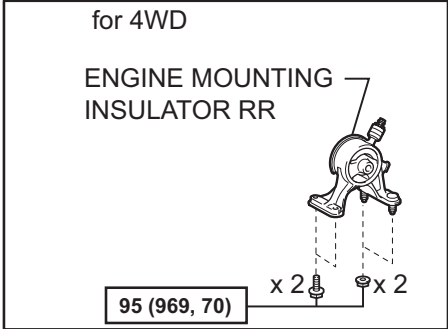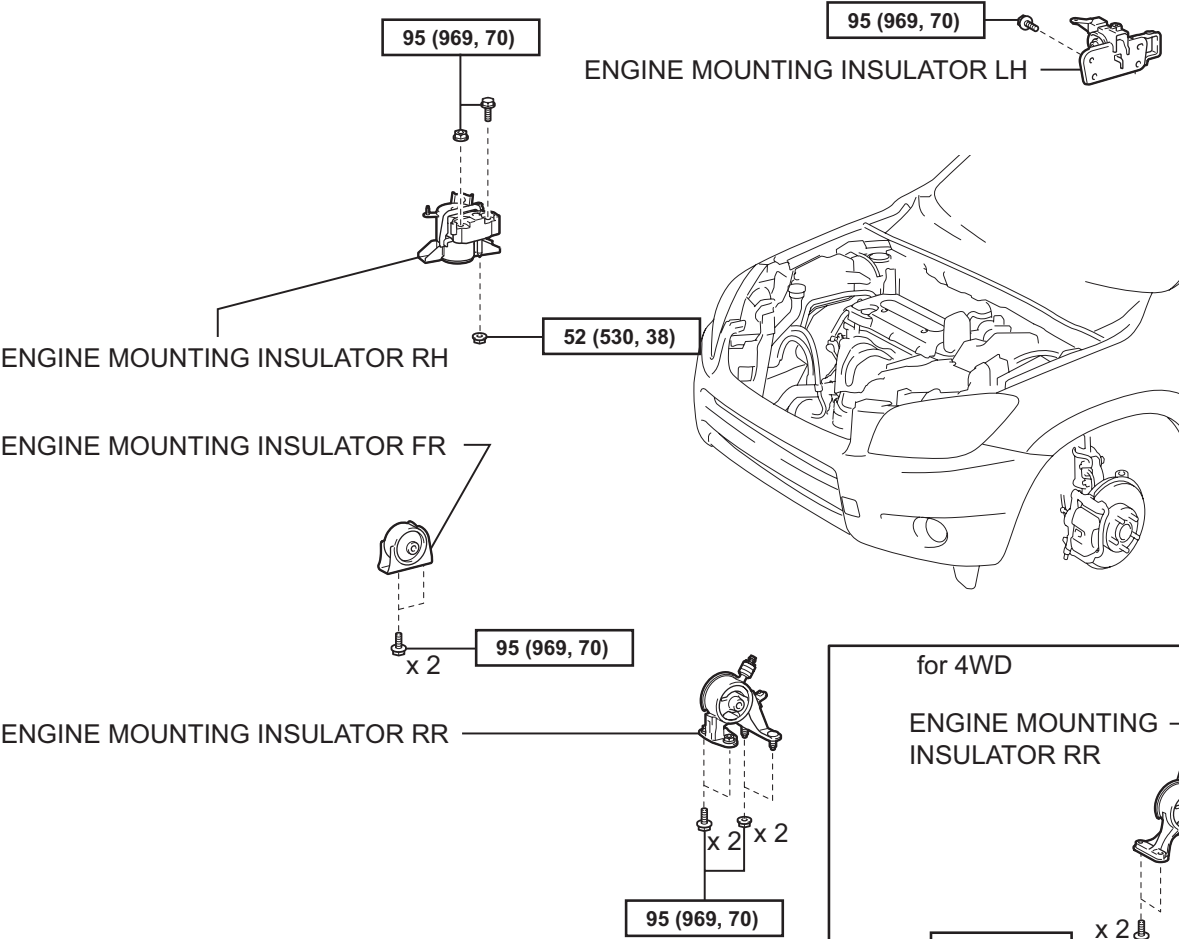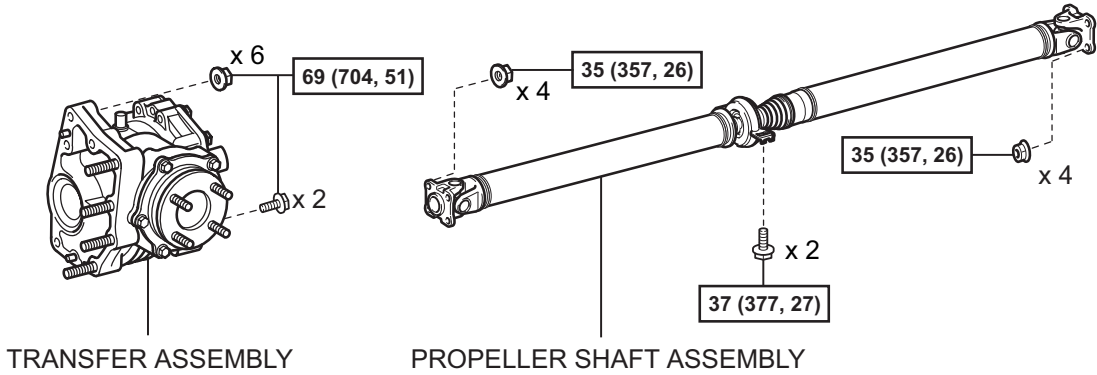

N*m (kgf*cm, ft.*lbf) : Specified torque

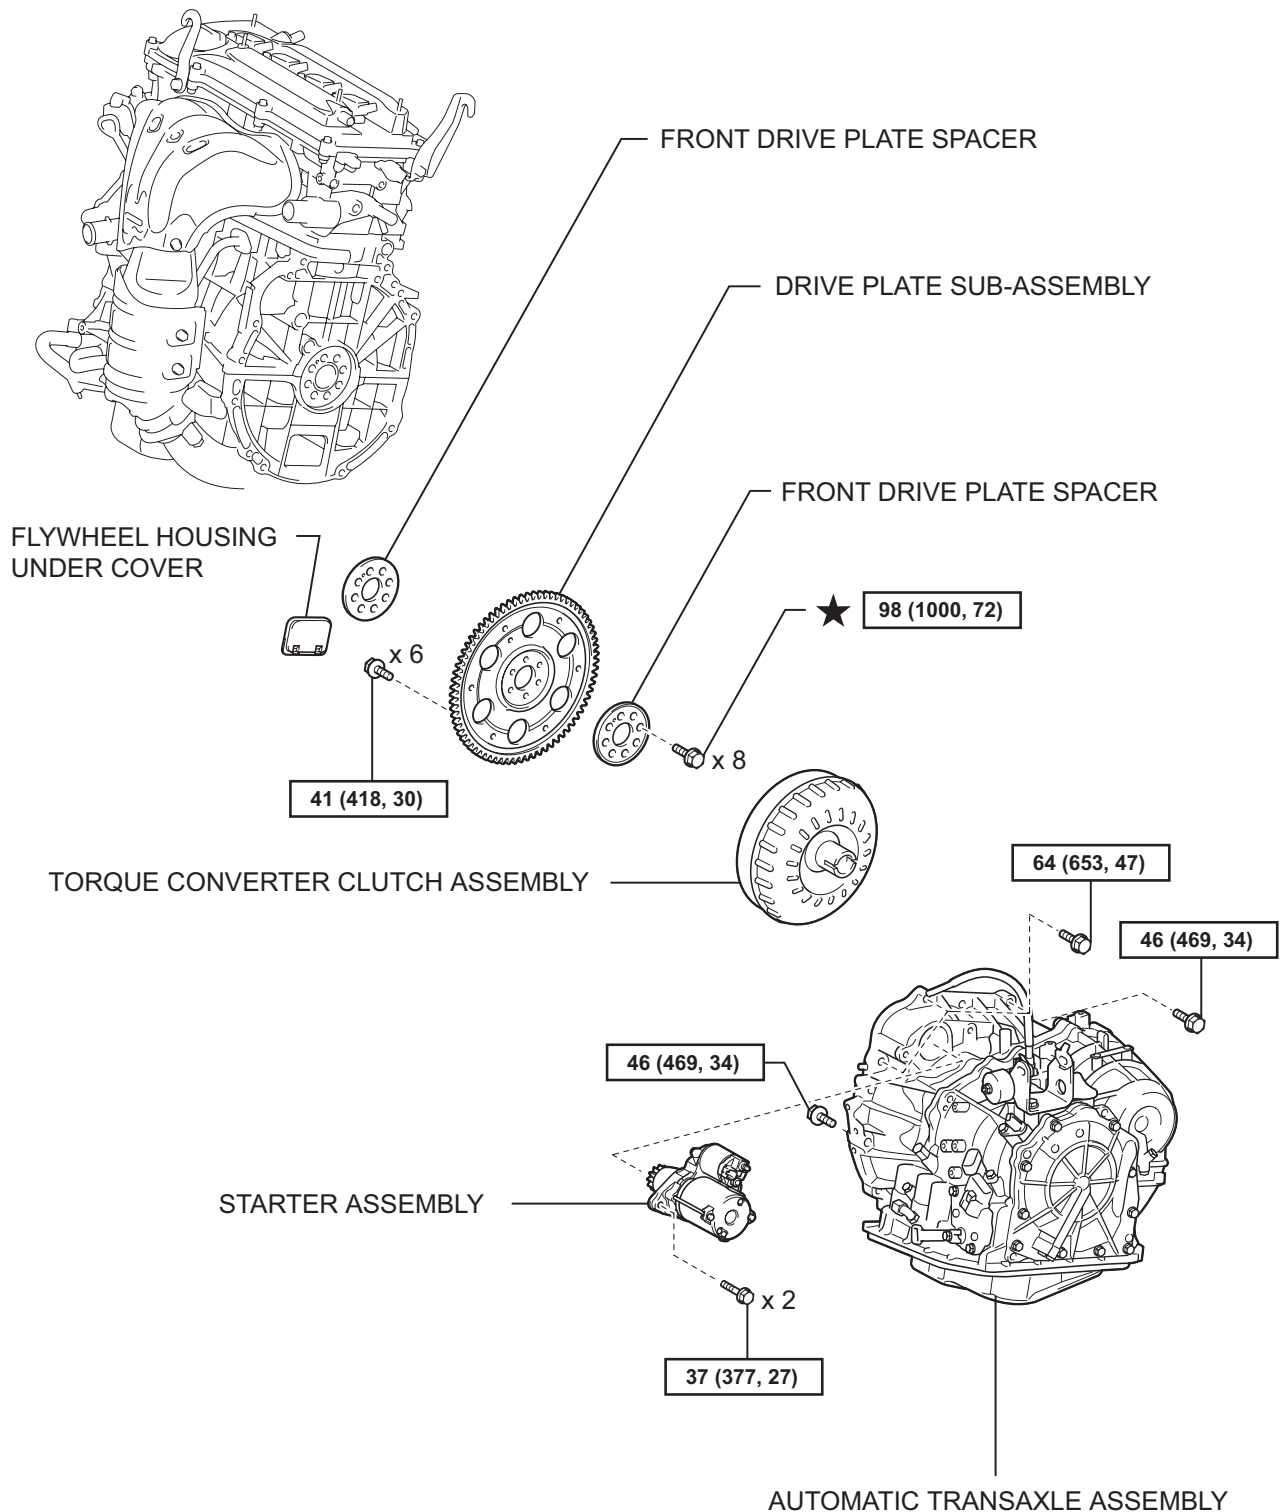

N*m (kgf*cm, ft.*lbf) : Specified torque

★ Precoated part