




ENGINE ASSEMBLY

COMPONENTS

EM

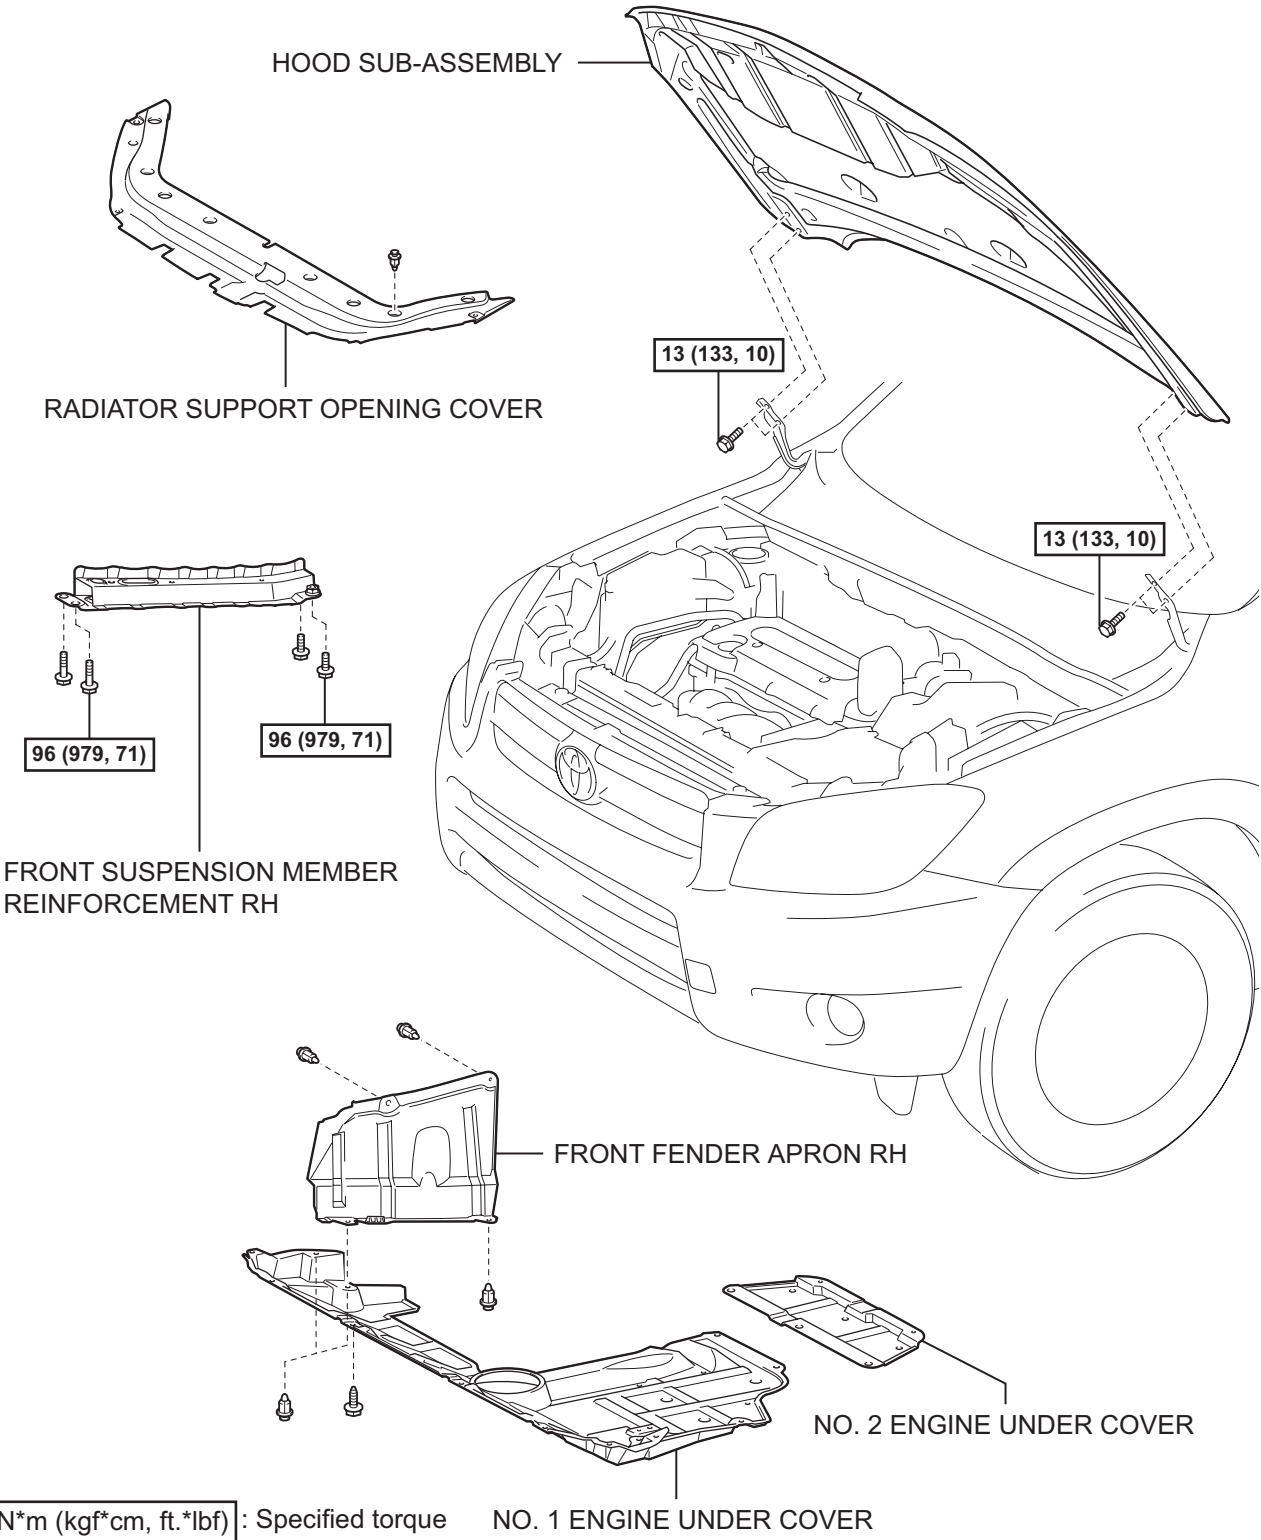

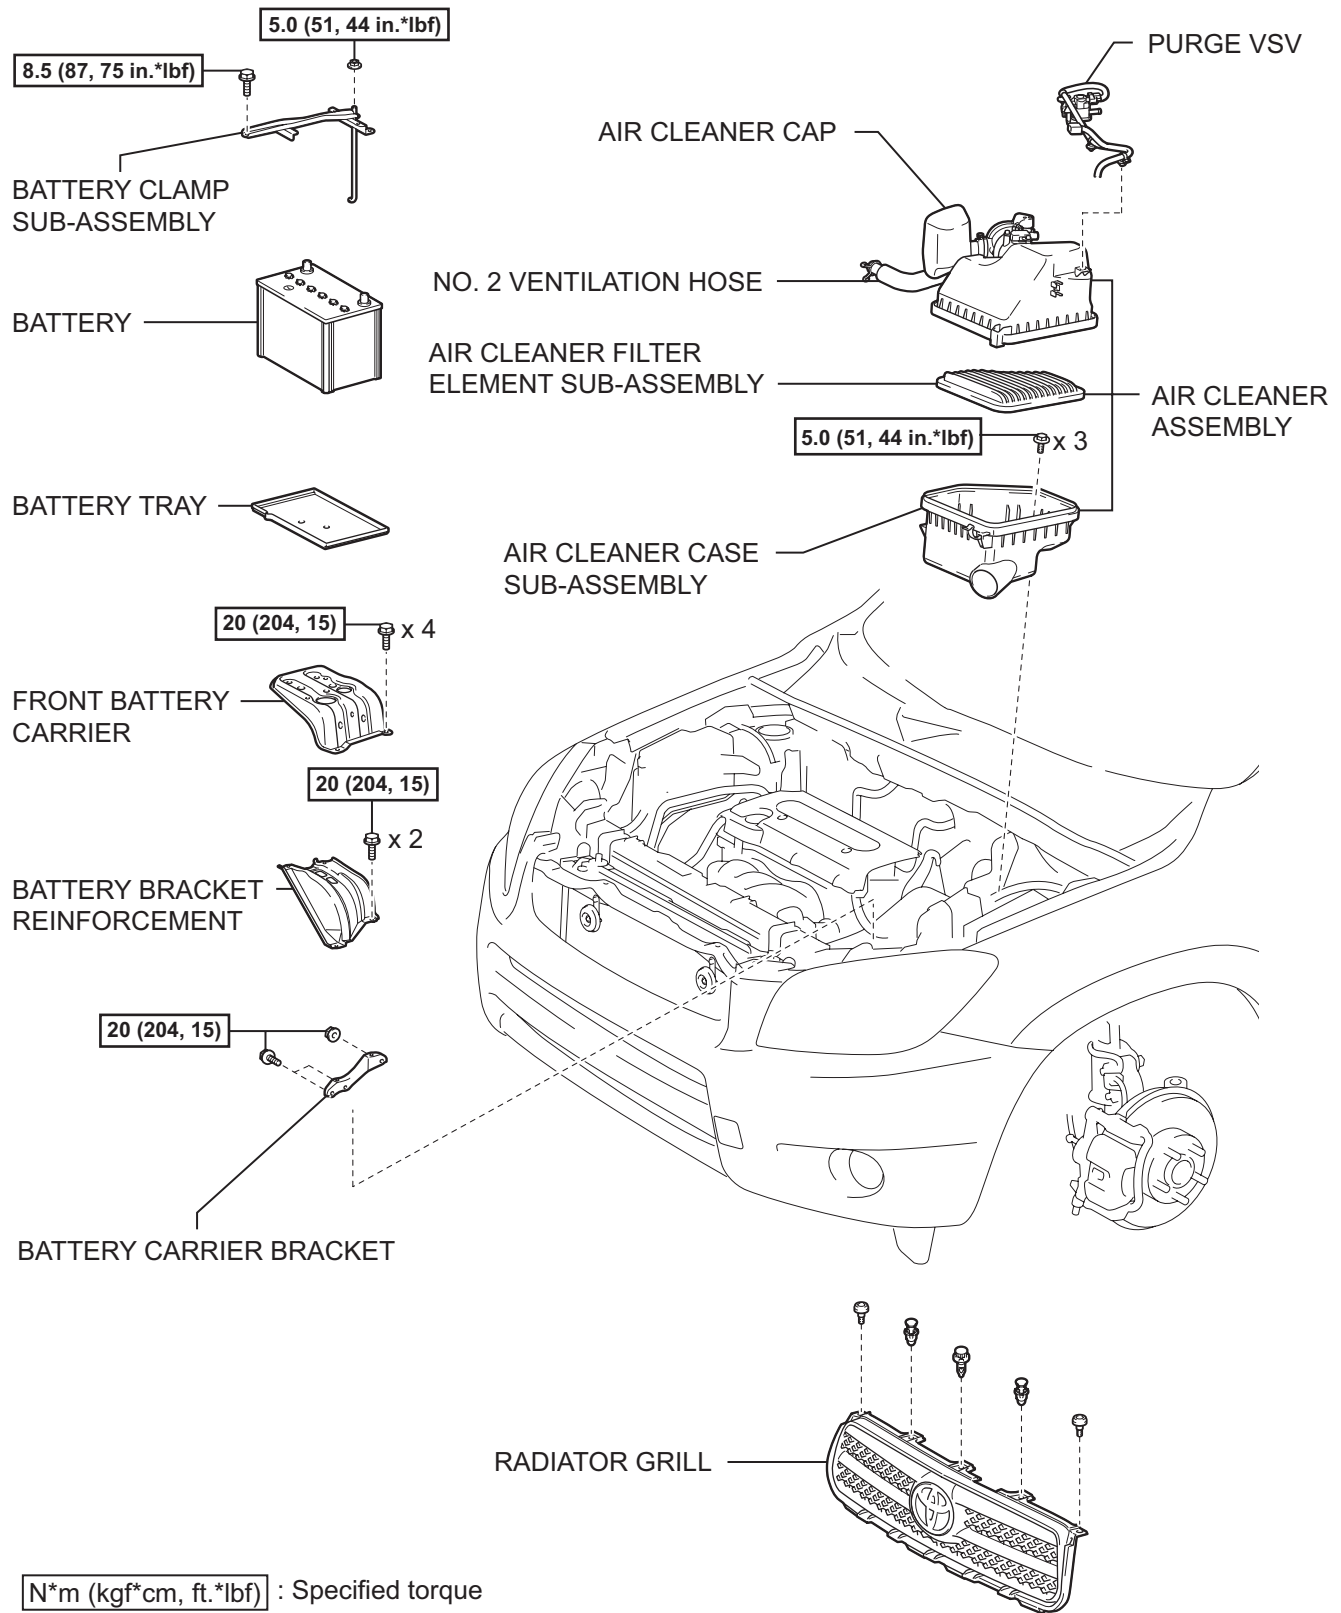

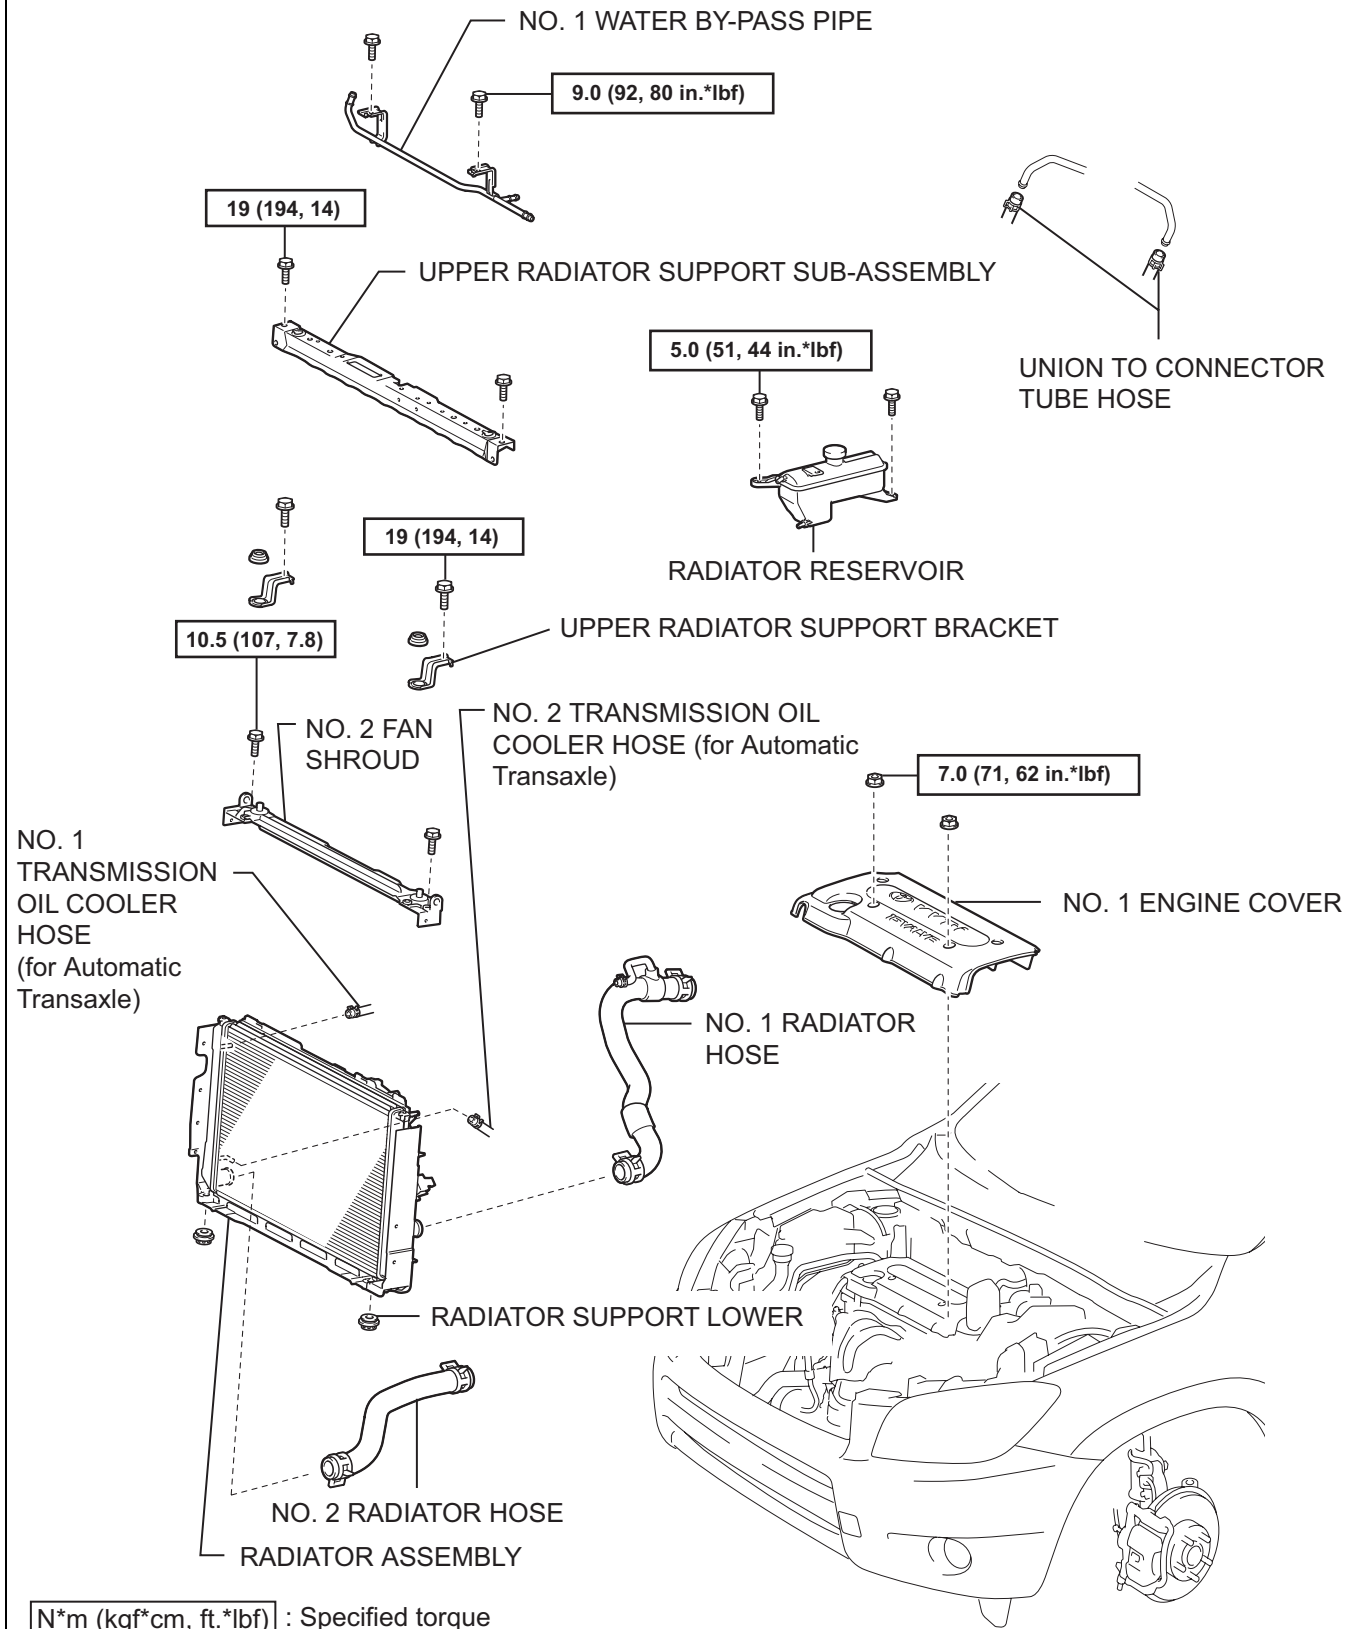



- Non-reusable part

CAMSHAFT TIMING OIL CONTROL VALVE CONNECTOR

FUEL INJECTOR CONNECTOR

FUEL DELIVERY PIPE SUB-ASSEMBLY

20 (204, 15)

x 2

FUEL TUBE

x 4

● INJECTOR VIBRATION INSULATOR

FUEL TUBE CLAMP


x 2

NO. 1 DELIVERY PIPE SPACER

NO. 2 VENTILATION HOSE


N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

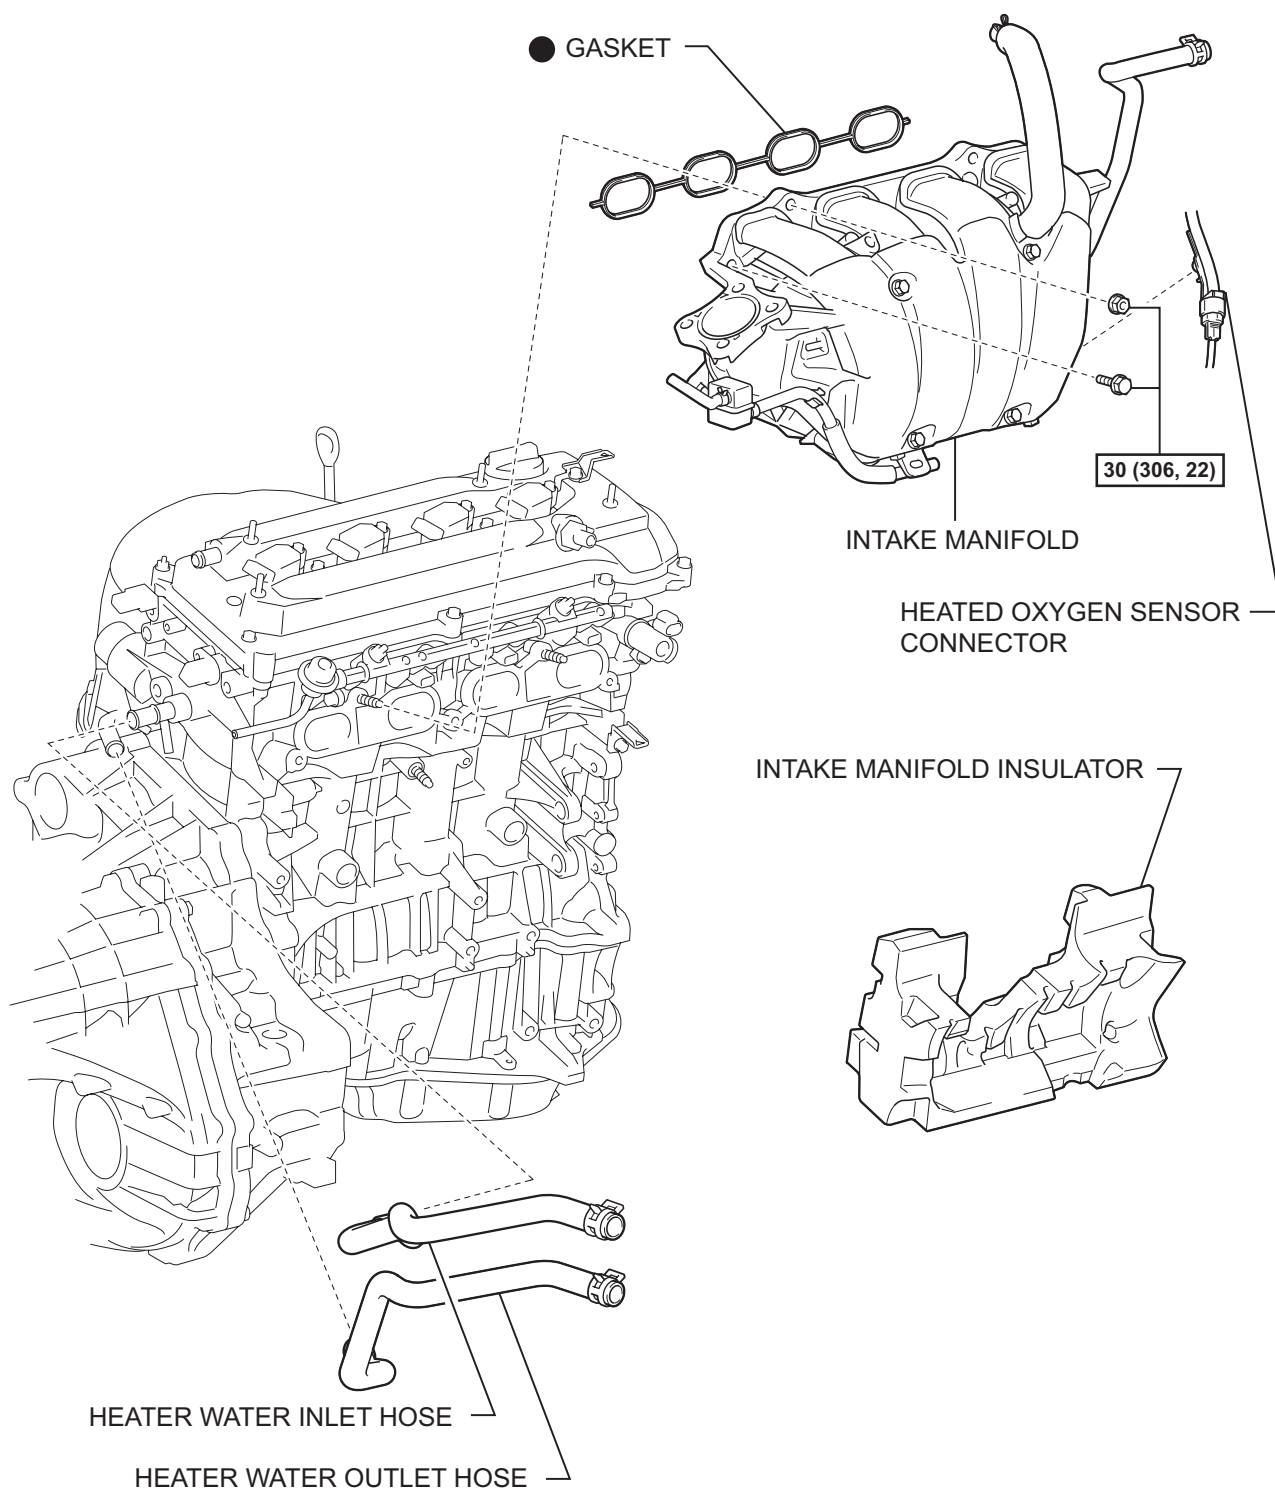


N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

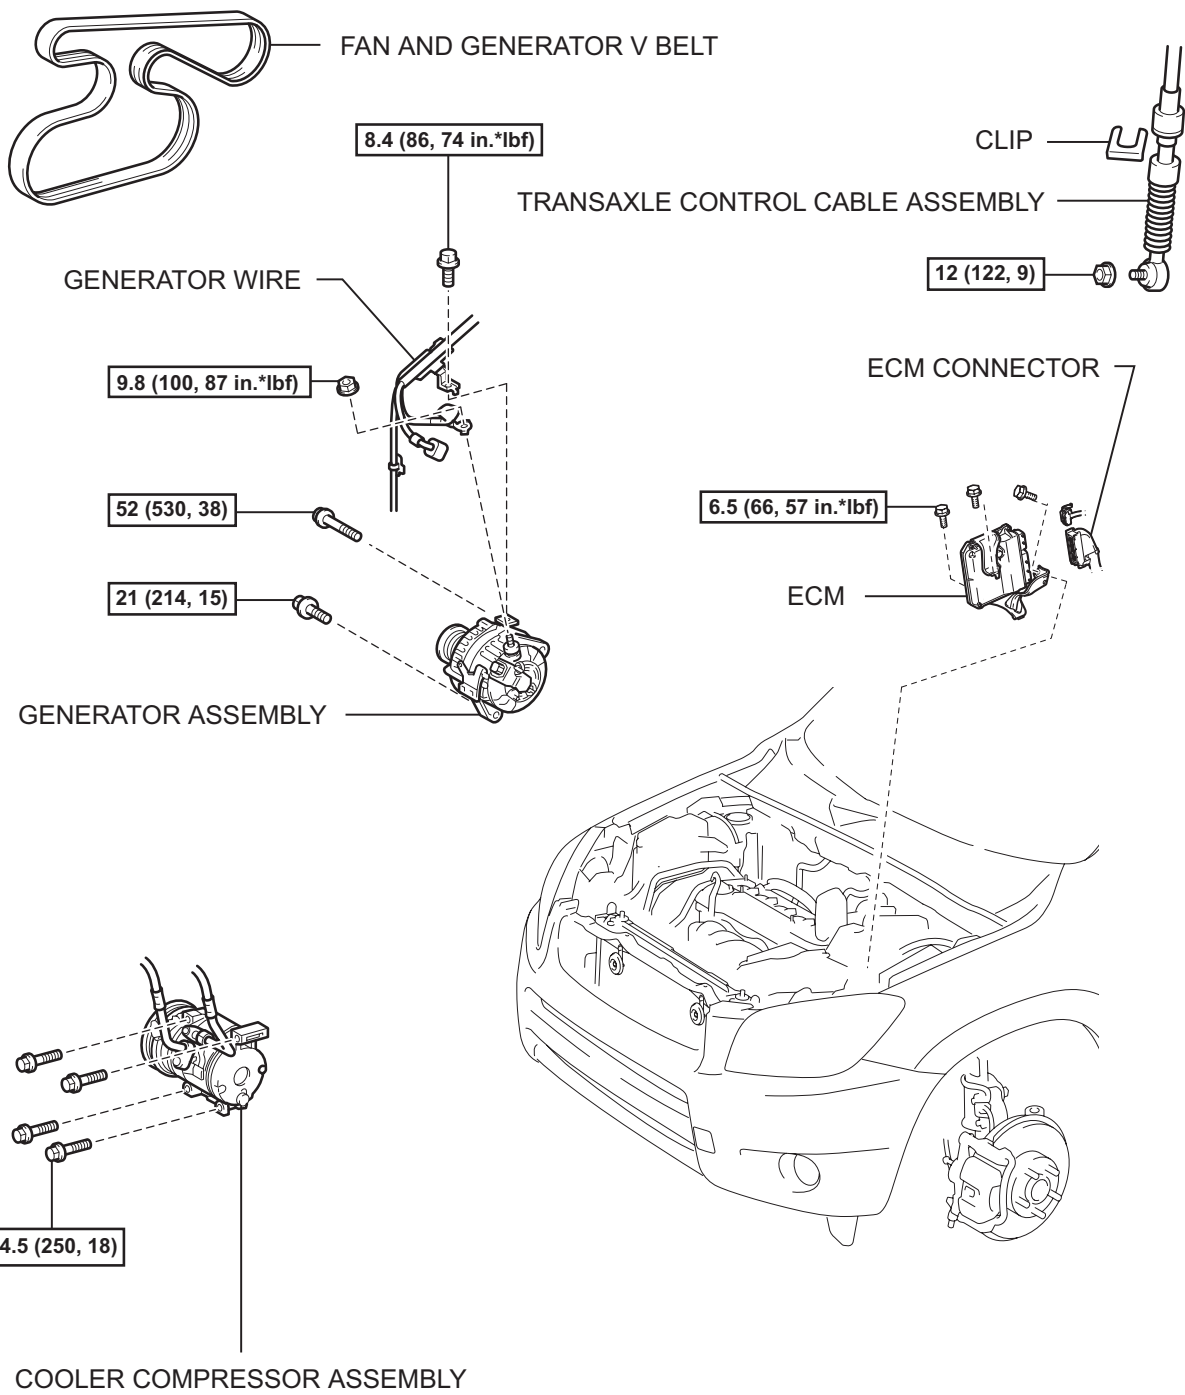



N*m (kgf*cm, ft.*lbf) : Specified torque

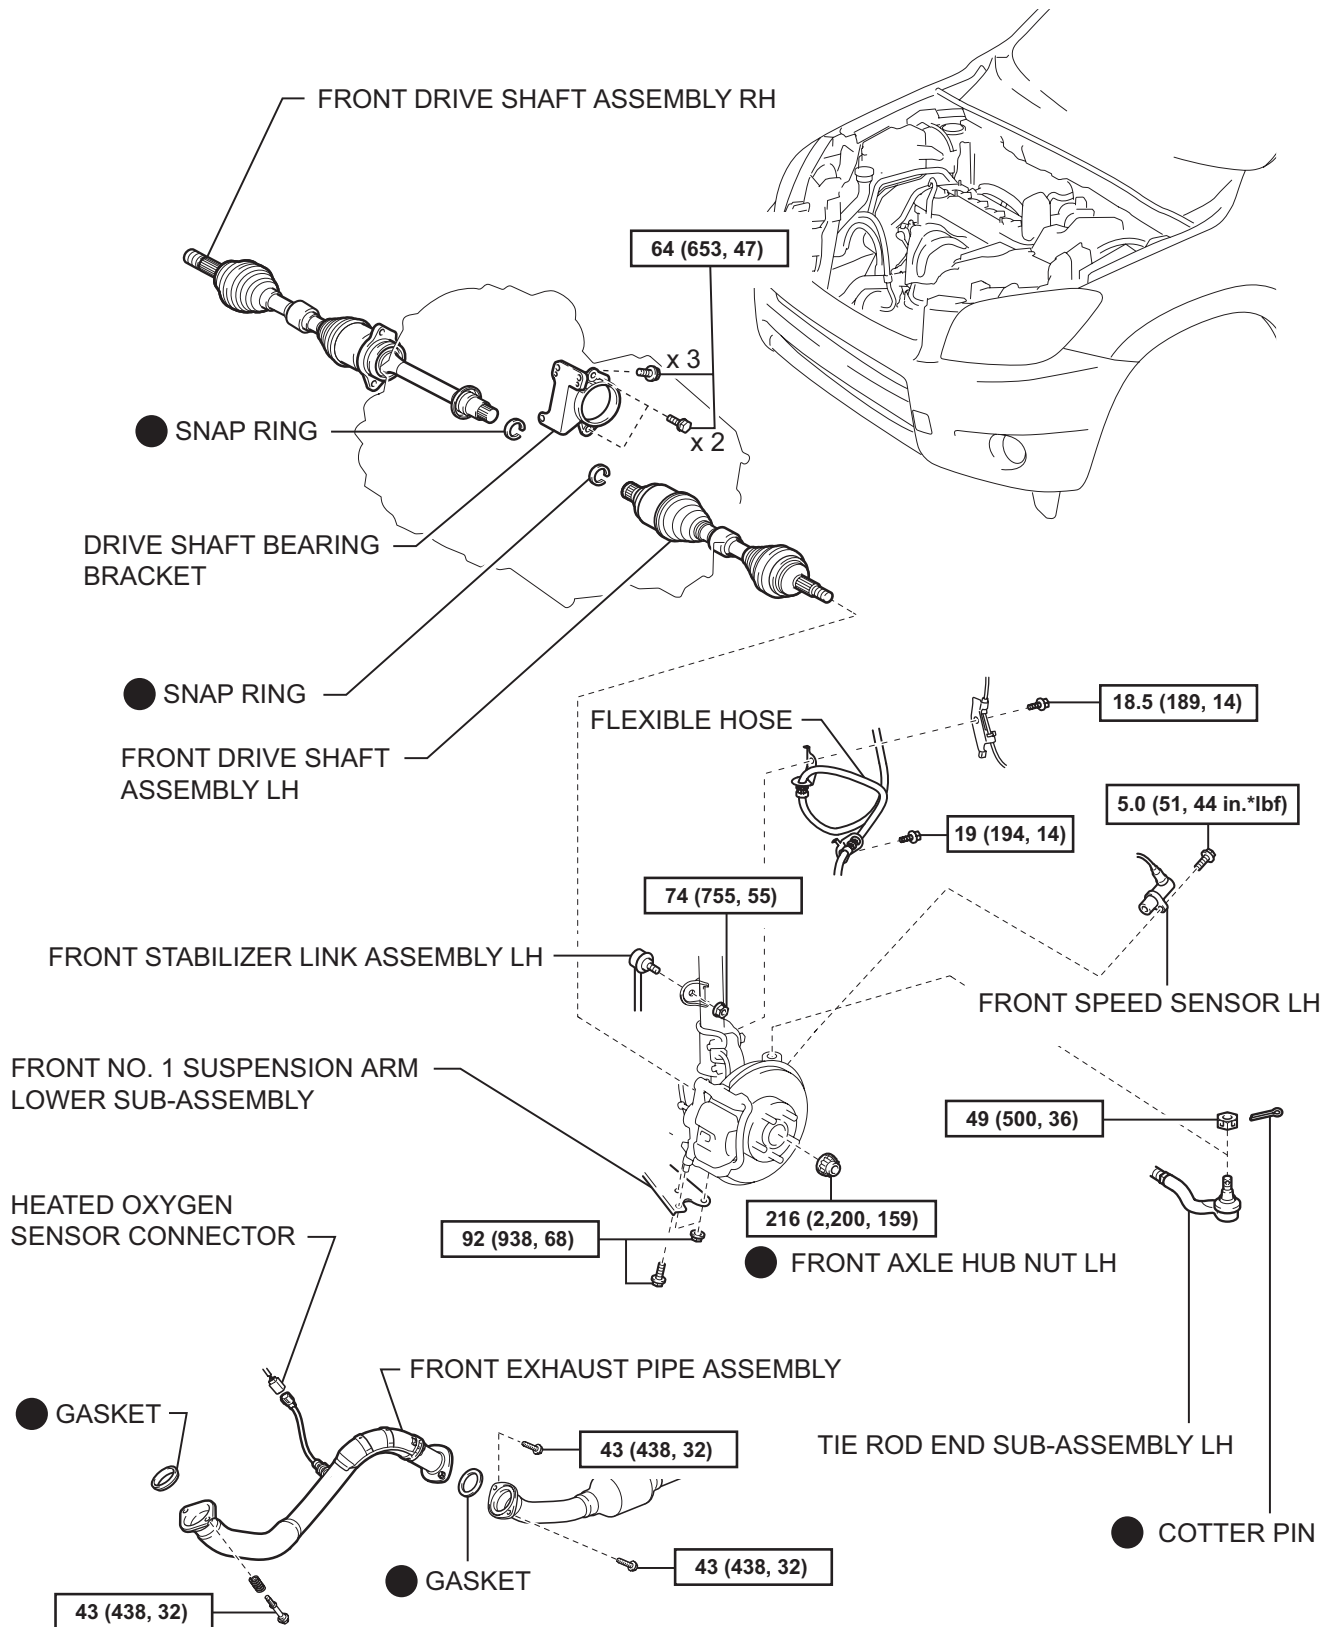

N*m (kgf*cm, ft.*lbf) : Specified torque


● Non-reusable part

for 4WD

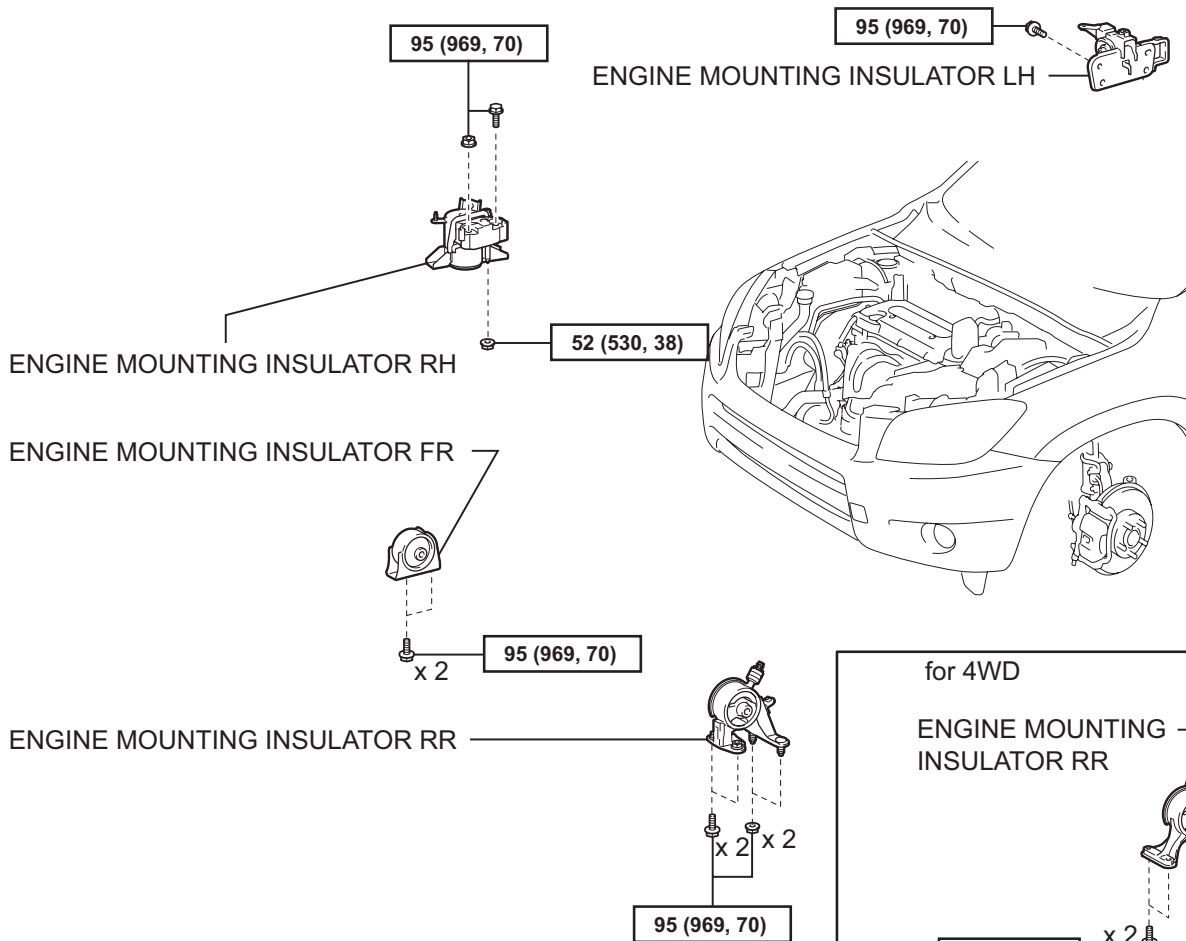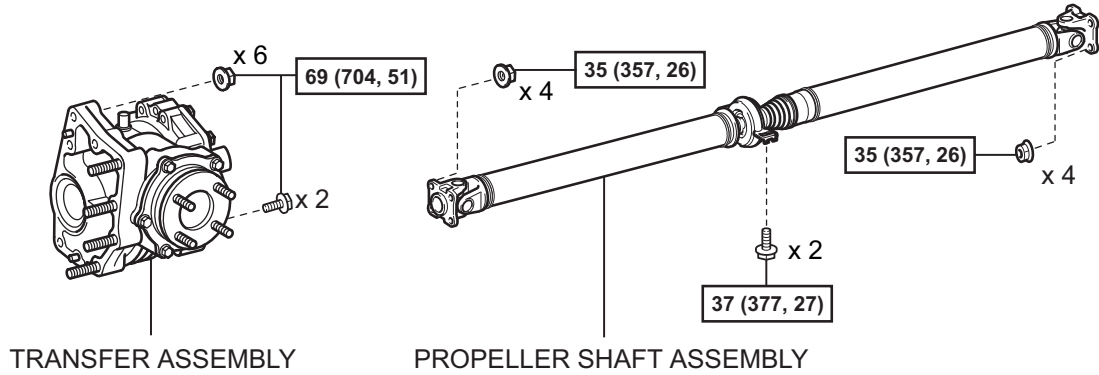


for 4WD

ENGINE MOUNTING INSULATOR RR

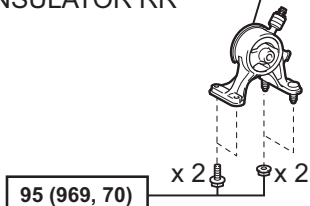

$\boxed{\text{N}\cdot\text{m (kgf}\cdot\text{cm, ft.}\cdot\text{lbf)}}$: Specified torque

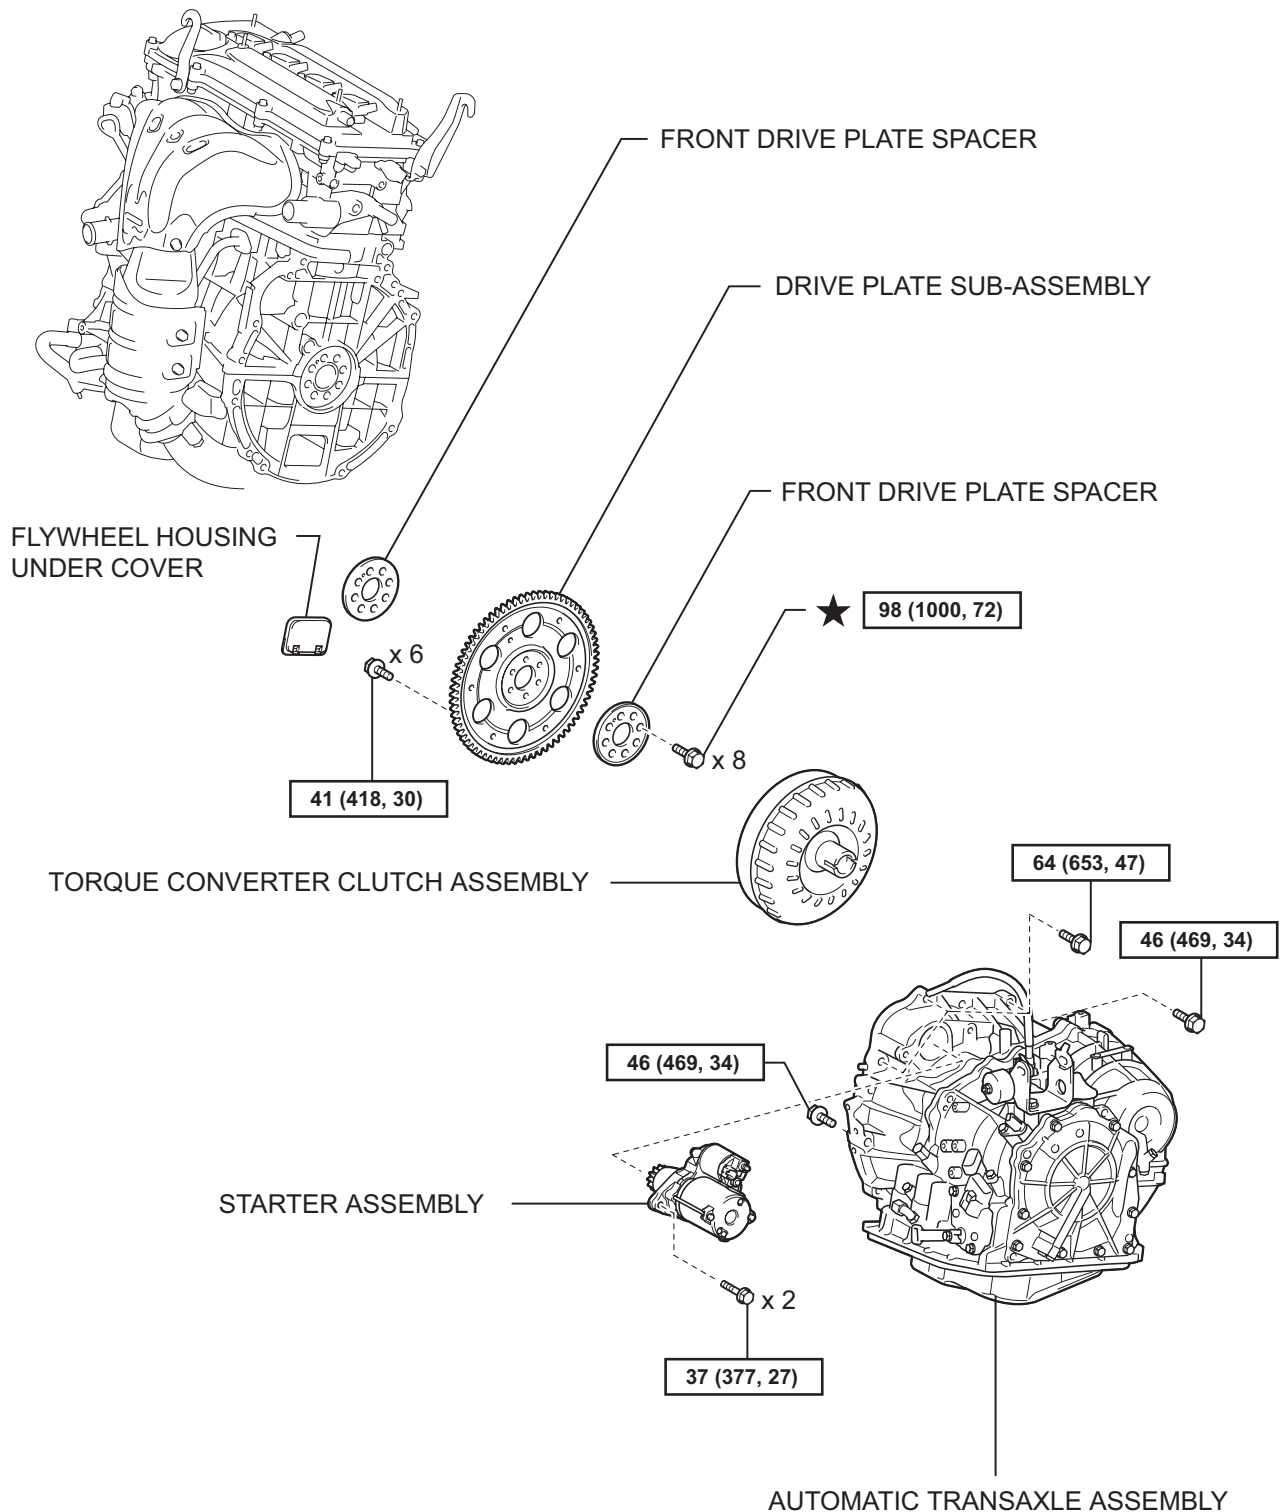

N*m (kgf*cm, ft.*lbf) : Specified torque

★ Precoated part