


# EXHAUST PIPE

## COMPONENTS

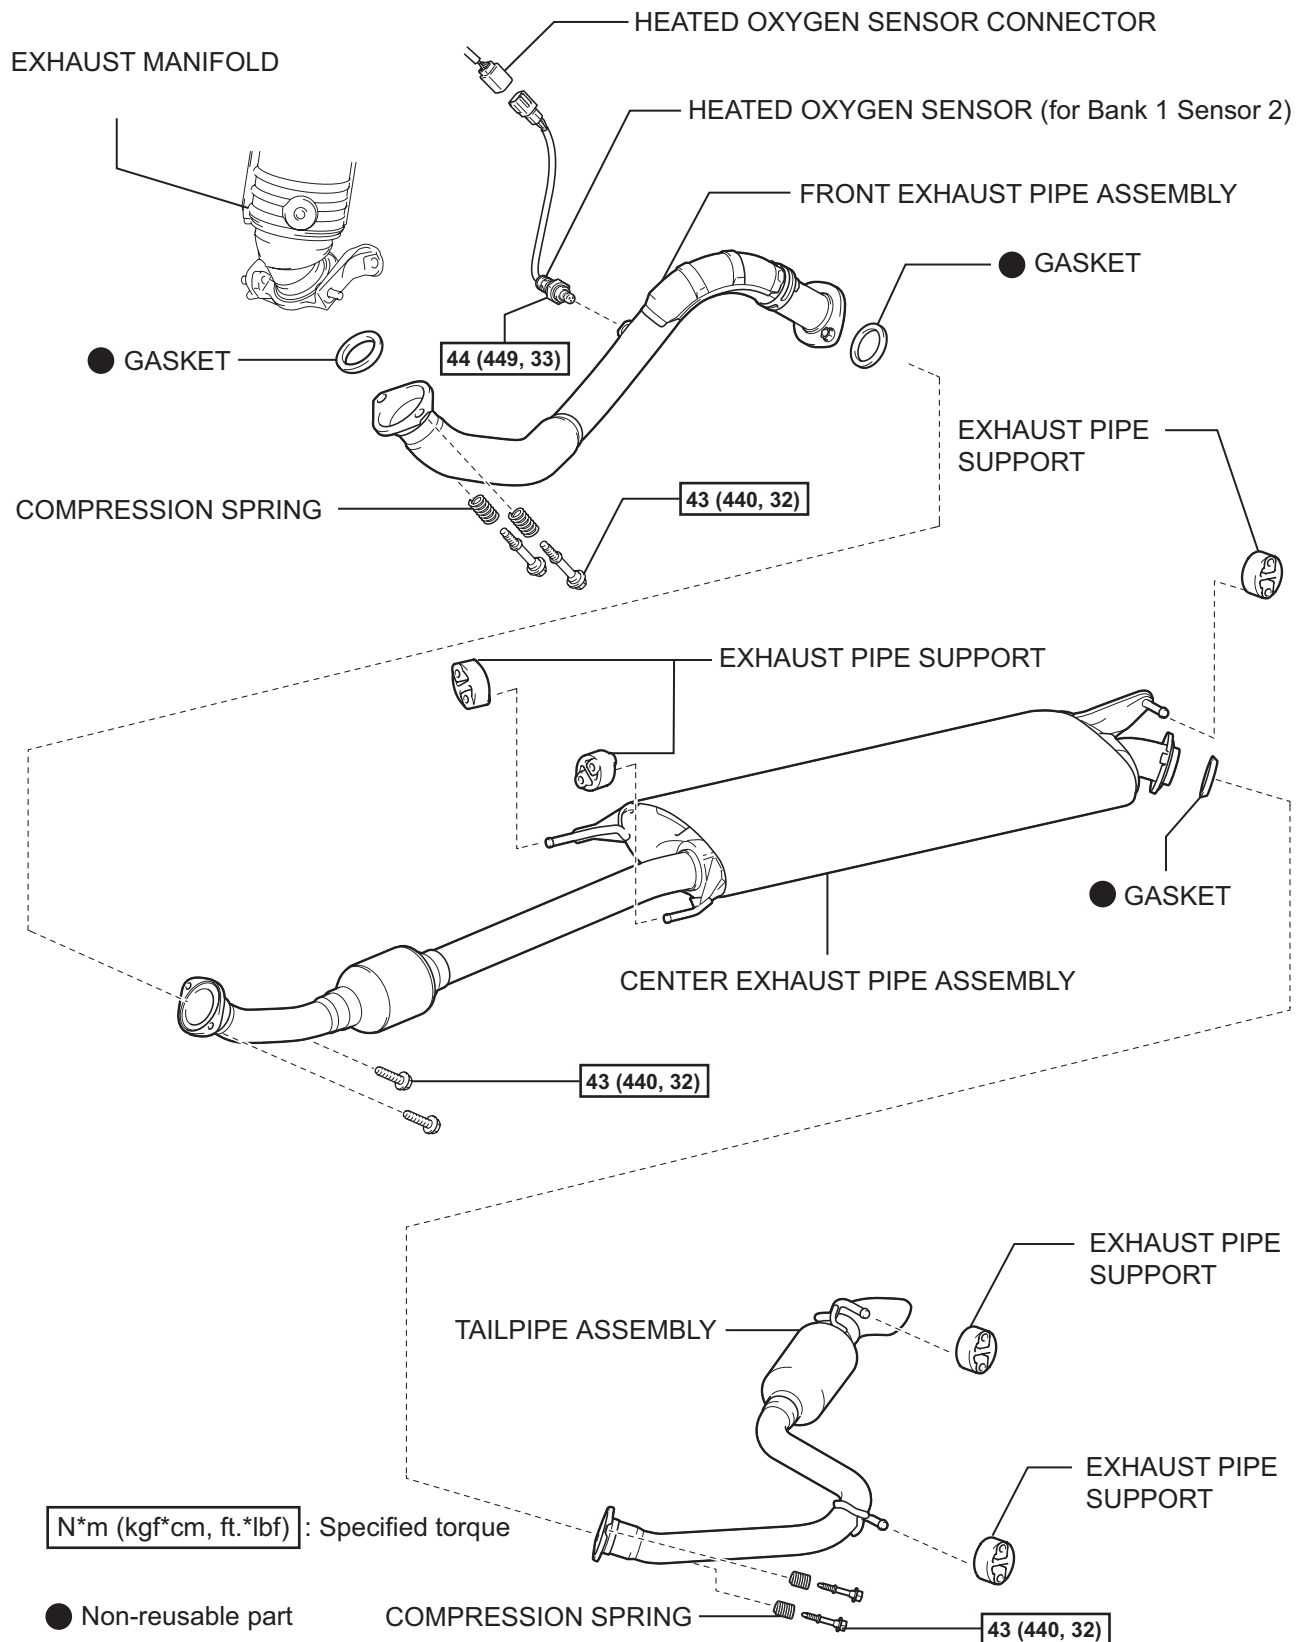

EX

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**


**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE HEATED OXYGEN SENSOR (for Bank 1 Sensor 2) (See page [EC-24](#))**

3. **REMOVE TAILPIPE ASSEMBLY**


- (a) Remove the 2 bolts and 2 compression springs.
- (b) Disconnect the 2 exhaust pipe supports, and remove the tailpipe.
- (c) Remove the gasket from the center exhaust pipe.

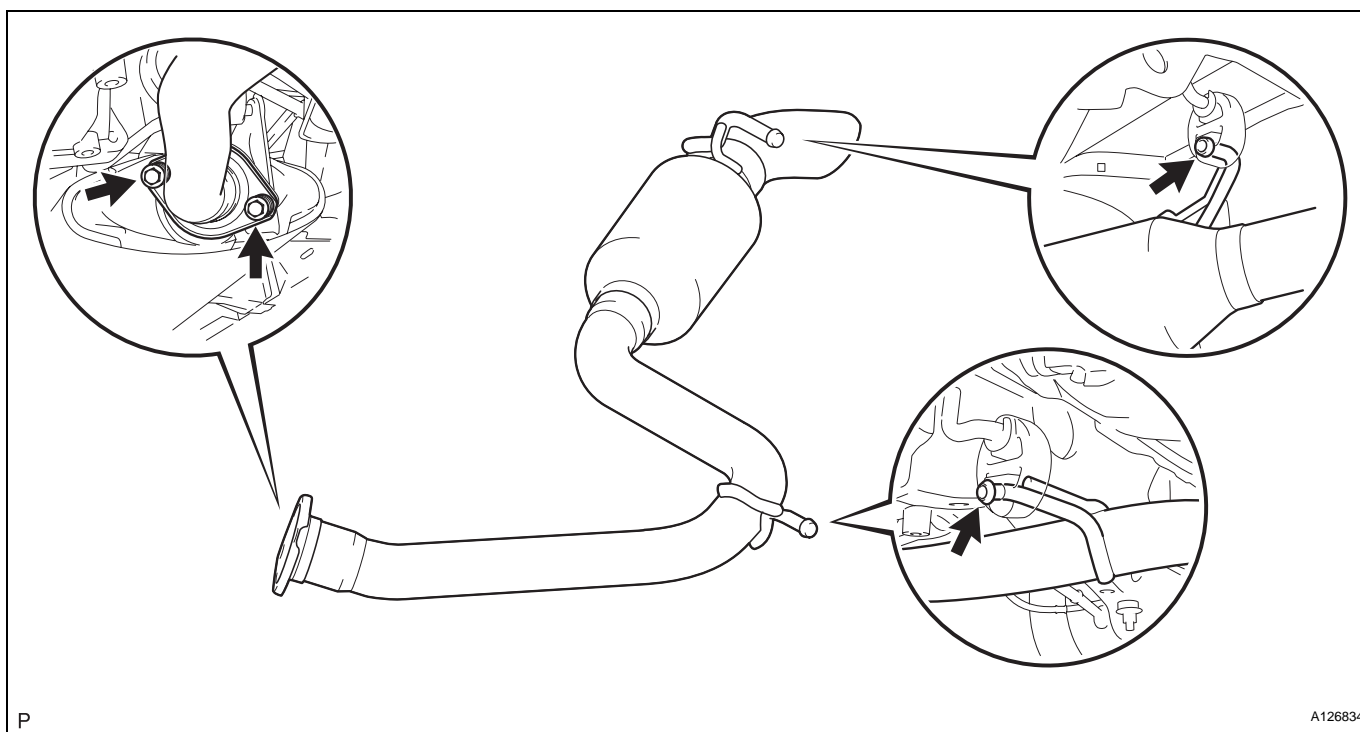

4. **REMOVE CENTER EXHAUST PIPE ASSEMBLY**

- (a) Remove the 2 bolts.

- (b) Disconnect the 3 exhaust pipe supports, and remove the center exhaust pipe.

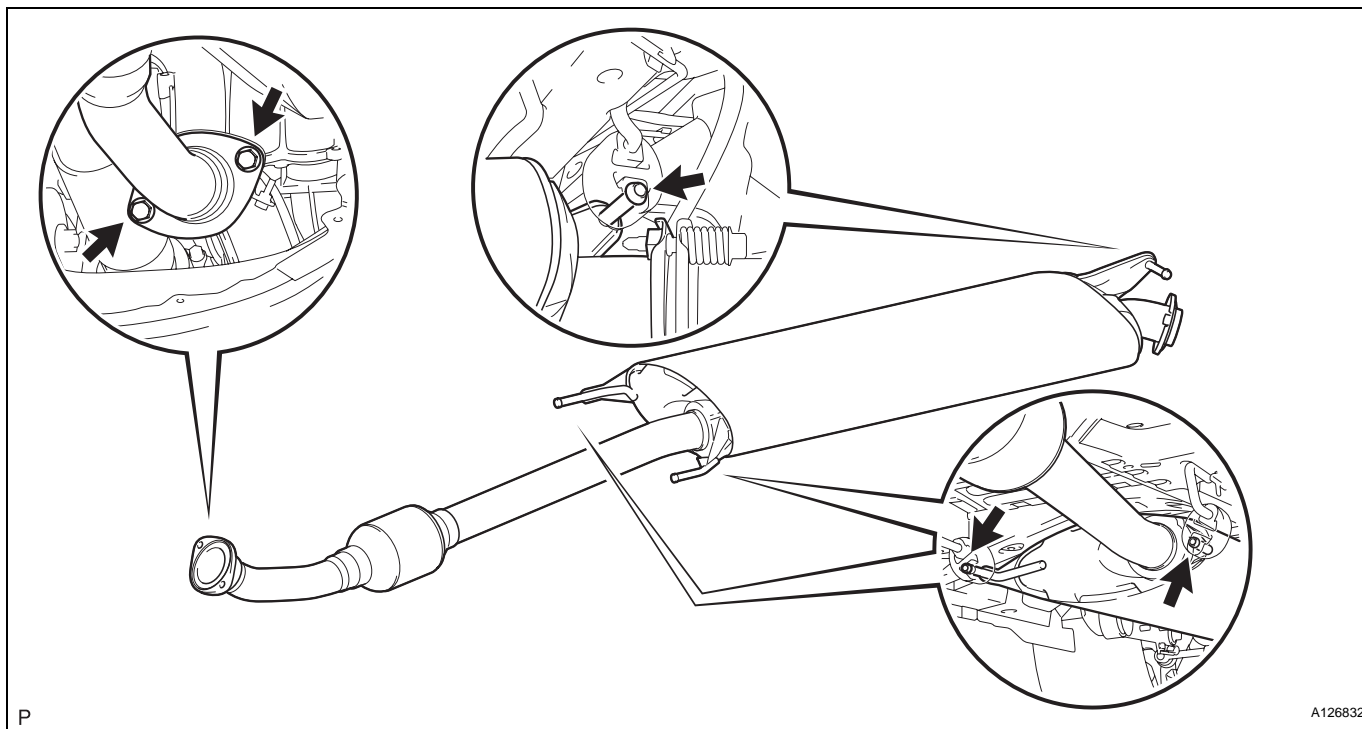

- (c) Remove the gasket from the front exhaust pipe.

**5. REMOVE FRONT EXHAUST PIPE ASSEMBLY**

- (a) Remove the 2 bolts, 2 compression springs and front exhaust pipe.

