

## INSTALLATION



### 1. INSTALL FUEL TANK ASSEMBLY

- Set the fuel tank on a mission jack.
- Lift up the mission jack.
- Fold back the 2 cushion rubbers.
- Connect the fuel pump connector and sender gauge connector to the fuel tank.

**NOTICE:**

**Be careful not to cut the wirings.**


- Attach the wire harness to the 4 clamps.

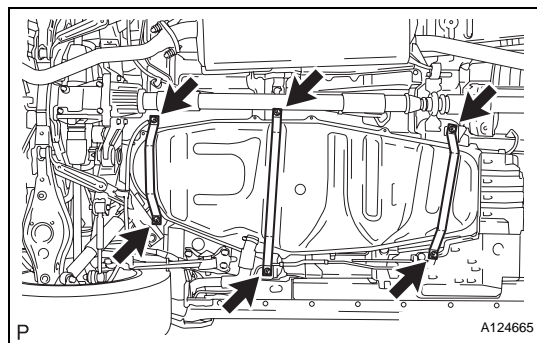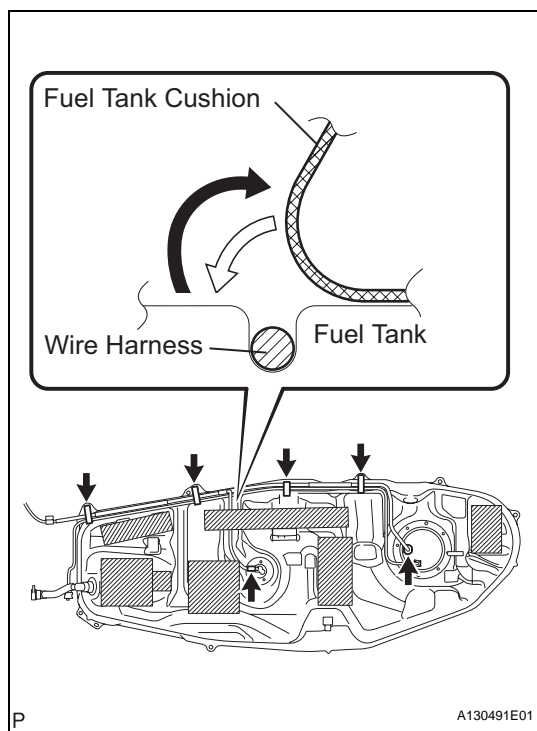

- Install the 3 fuel tank bands with the 6 bolts.  
**Torque: 40 N\*m (408 kgf\*cm, 30 ft.\*lbf)**


### 2. INSTALL FUEL TANK FILLER PIPE

- Install the filler pipe with the 2 bolts.  
**Torque: 23.5 N\*m (240 kgf\*cm, 17 ft.\*lbf)**
- Install the filler pipe protector with the 3 bolts.

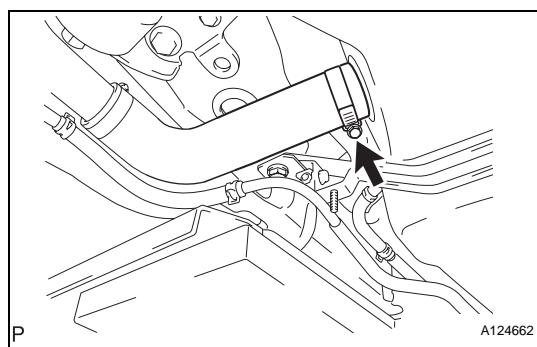

### 3. CONNECT FUEL TANK TO FILLER PIPE HOSE

- Connect the filler pipe hose to the fuel tank.

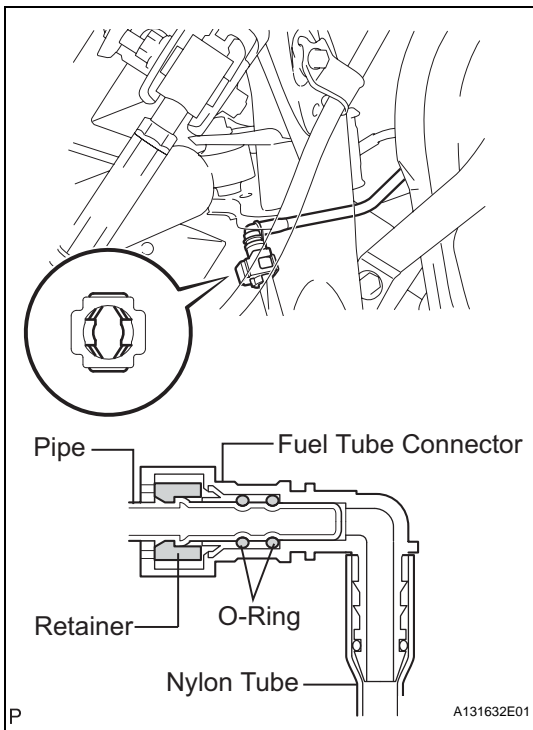

#### 4. CONNECT FUEL TANK BREATHER HOSE

- (a) Connect the fuel tank breather hose to the fuel tank.


**NOTICE:**

- Before installing the tube connector to the pipe, check the connector for damage and foreign matter.
- Check that the connector and pipe is securely connected by trying to pull them apart.

#### 5. CONNECT FUEL TANK MAIN TUBE SUB-ASSEMBLY

**NOTICE:**

Before installing the tube connector to the pipe, check the connector for damage and foreign matter.

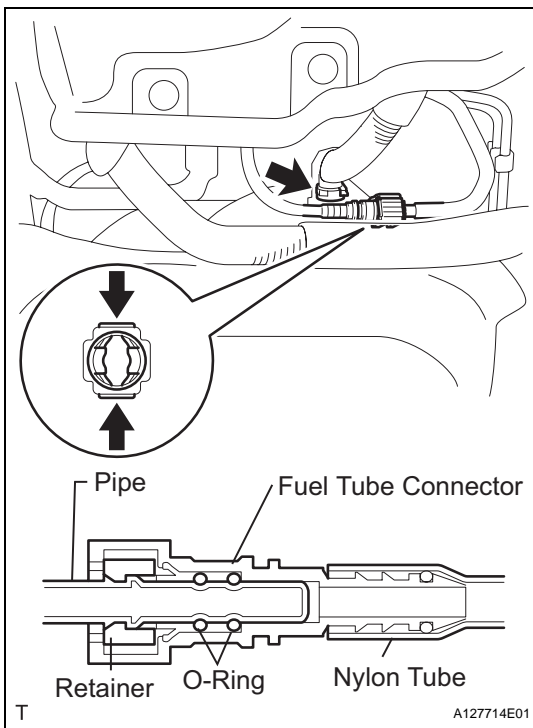

- (a) Connect the main tube connector to the pipe. Push the 2 parts together firmly until a "click" sound is heard.

**NOTICE:**

Check that the connector and pipe are securely connected by trying to pull them apart.


- (b) Connect the EVAP hose to the fuel tank.


#### 6. INSTALL NO. 1 FLOOR UNDER COVER

- (a) Install the floor cover with the clip and 2 nuts.

#### 7. INSTALL FRONT FLOOR COVER

- (a) Install the floor under cover with the 3 clips, bolt and nut.

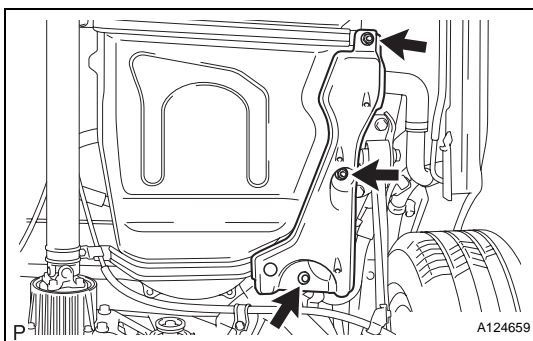

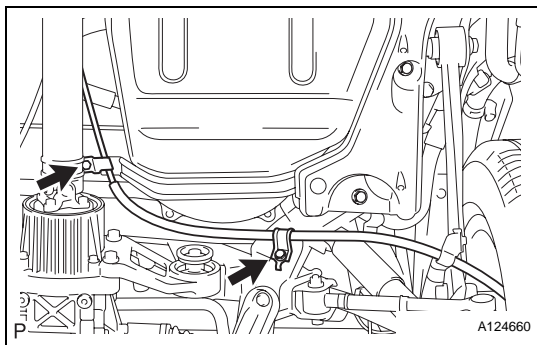

8. **INSTALL NO. 2 PARKING BRAKE CABLE ASSEMBLY**  
(a) Install the parking brake cable with the 2 bolts.
9. **INSTALL FUEL TANK CAP**
10. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
11. **CHECK FOR FUEL LEAKS (See page [FU-14](#))**