


If the result is not as specified, replace the switch assembly.

INSTALLATION


1. INSTALL IGNITION SWITCH ASSEMBLY

(a) Install the ignition switch with the 2 screws.

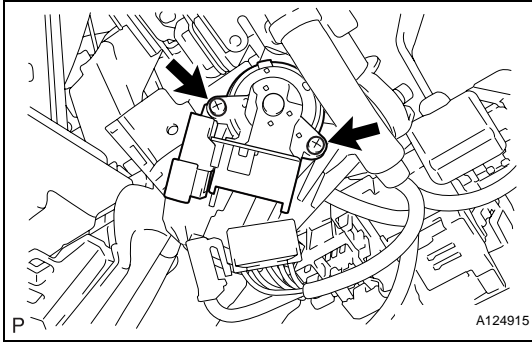

(b) Install the ignition key cylinder light connector.

(c) Install the ignition switch connector.

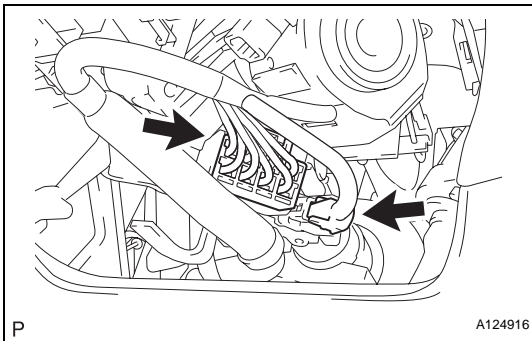

2. INSTALL STEERING COLUMN COVER LOWER

(a) Attach the 4 claws to install the steering column lower cover.

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

