

# STARTER RELAY

## ON-VEHICLE INSPECTION

1. DISCONNECT CABLE FROM NEGATIVE BATTERY  
TERMINAL
- CAUTION:  
Wait at least 90 seconds after disconnecting the  
cable from the negative (-) battery terminal to  
prevent airbag and seat belt pretensioner activation.
2. REMOVE STARTER RELAY
- (a) Remove the starter relay from the No. 7 relay block.
3. INSPECT STARTER RELAY
- (a) Measure the resistance of the relay.

Standard resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the resistance is not as specified, replace the  
relay.

4. INSTALL STARTER RELAY
5. CONNECT CABLE TO NEGATIVE BATTERY  
TERMINAL

