







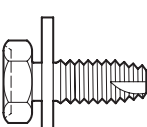
INSTRUMENT PANEL SAFETY PAD










PRECAUTION










1. PRECAUTION FOR VEHICLE WITH SRS AIRBAG AND SEAT BELT PRETENSIONER




- (a) Some operations in this section may affect the SRS airbags. Prior to performing the corresponding operations, read the SRS airbag NOTICE.

2. TABLE OF BOLT, SCREW AND NUT

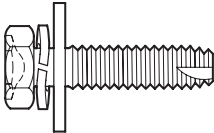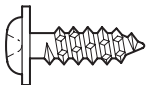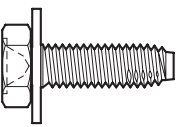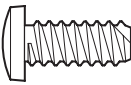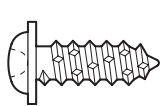Code	Shape	Size	Parts No.
<A>		φ=6 mm (0.24 in.) Length=20 mm (0.79 in.)	90119-06166
		φ=5 mm (0.20 in.) Length=16 mm (0.63 in.)	93567-55016
<C>		φ=6 mm (0.24 in.) Length=20 mm (0.79 in.)	90159-60610
<D>		φ=5 mm (0.20 in.) Length=15 mm (0.59 in.)	90164-50034
<E>		φ=5 mm (0.20 in.) Length=20 mm (0.79 in.)	93567-15020
<F>		φ=5 mm (0.20 in.) Length=16 mm (0.63 in.)	93567-15016
<G>		φ=6 mm (0.24 in.) Length=16 mm (0.63 in.)	90119-06480

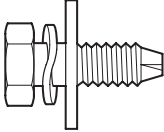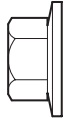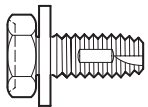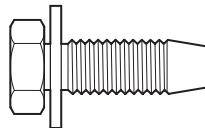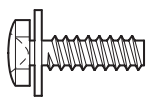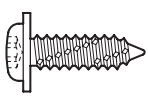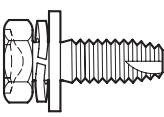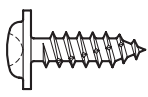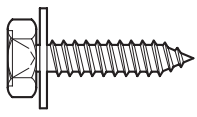Code	Shape	Size	Parts No.
<H>		$\phi=6$ mm (0.24 in.) Length=18 mm (0.71 in.)	90119-06428
<I>		$\phi=6$ mm (0.24 in.)	90179-06206
<J>		$\phi=6$ mm (0.24 in.) Length=15 mm (0.59 in.)	90119-06915
<K>		$\phi=8$ mm (0.31 in.) Length=20 mm (0.79 in.)	91633-60820
<L>		$\phi=5$ mm (0.20 in.) Length=16 mm (0.63 in.)	90159-50305
<M>		$\phi=5$ mm (0.20 in.) Length=16 mm (0.63 in.)	93565-15016
<N>		$\phi=6$ mm (0.24 in.) Length=18 mm (0.71 in.)	90080-11664
<O>		$\phi=5$ mm (0.20 in.) Length=16 mm (0.63 in.)	90080-16097
<P>		$\phi=5$ mm (0.20 in.) Length=22 mm (0.87 in.)	90159-A0006

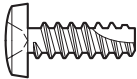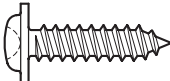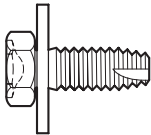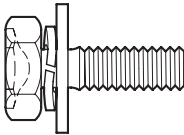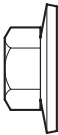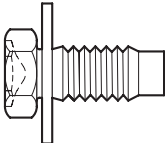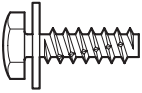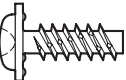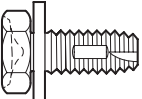Code	Shape	Size	Parts No.
<Q>		φ=5 mm (0.20 in.) Length=15 mm (0.59 in.)	90080-16106
<R>		φ=5 mm (0.20 in.) Length=20 mm (0.79 in.)	90167-A0001
<S>		φ=6 mm (0.24 in.) Length=16 mm (0.63 in.)	90080-11717
<T>		φ=6 mm (0.24 in.) Length=16 mm (0.63 in.)	90080-11736
<U>		φ=6 mm (0.24 in.)	90080-18071
<V>		φ=8 mm (0.31 in.) Length=20 mm (0.79 in.)	90119-A0011
<W>		φ=5 mm (0.20 in.) Length=16 mm (0.63 in.)	90159-A0021
<X>		φ=5 mm (0.20 in.) Length=14 mm (0.55 in.)	90167-A0005
<Y>		φ=6 mm (0.24 in.) Length=15 mm (0.59 in.)	90080-11545


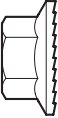
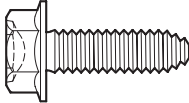
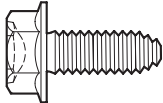
Code	Shape	Size	Parts No.
<z>		$\phi=6$ mm (0.24 in.)	90179-06115
<a>		$\phi=6$ mm (0.24 in.) Length=20 mm (0.79 in.)	90084-10051
		$\phi=6$ mm (0.24 in.) Length=16 mm (0.63 in.)	90080-10171

IP

COMPONENTS



IP

for TMC Made:

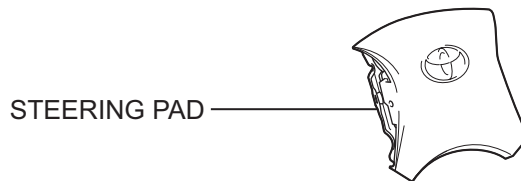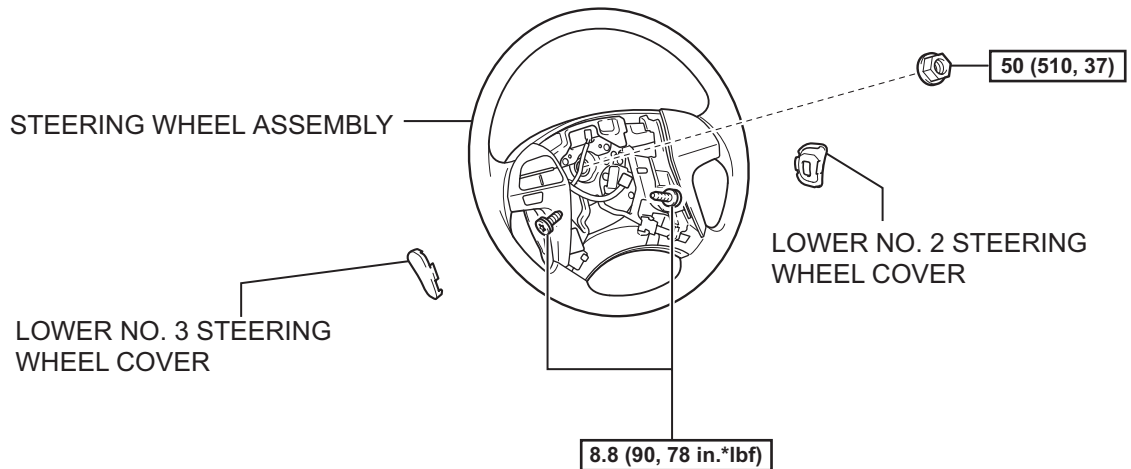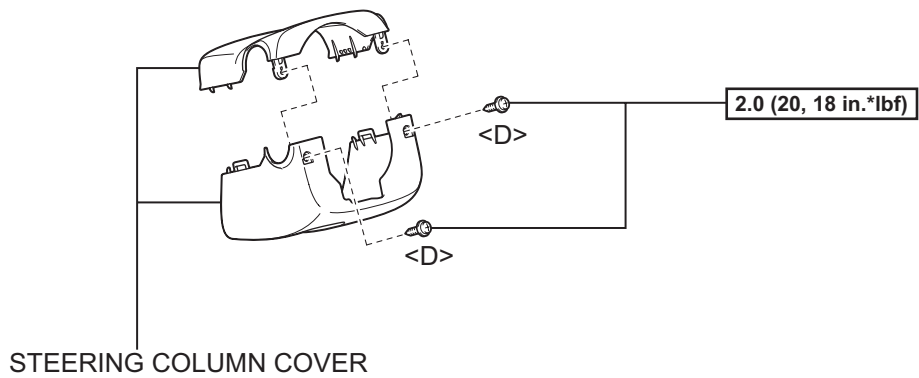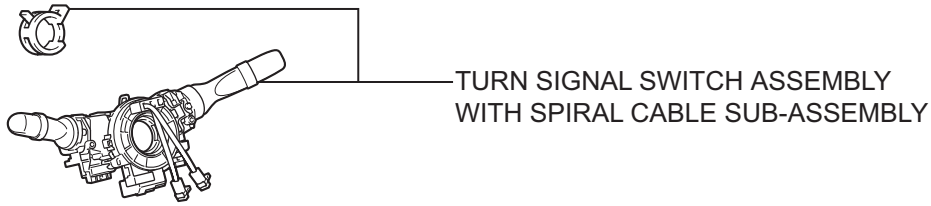


N*m (kgf*cm, ft.*lbf) : Specified torque

for TMMK Made:

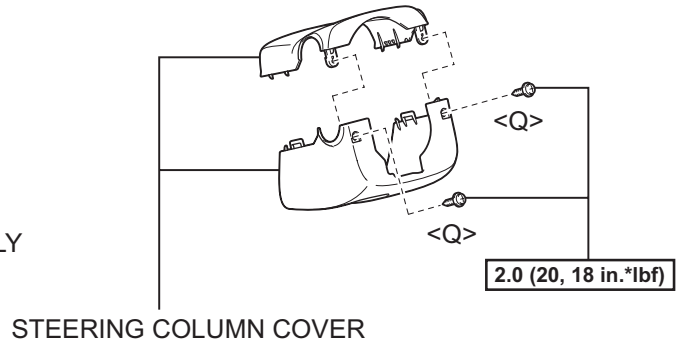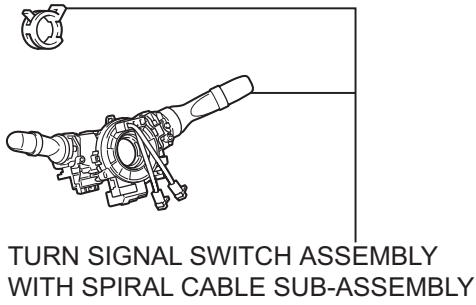


IP

for 4 Spoke:



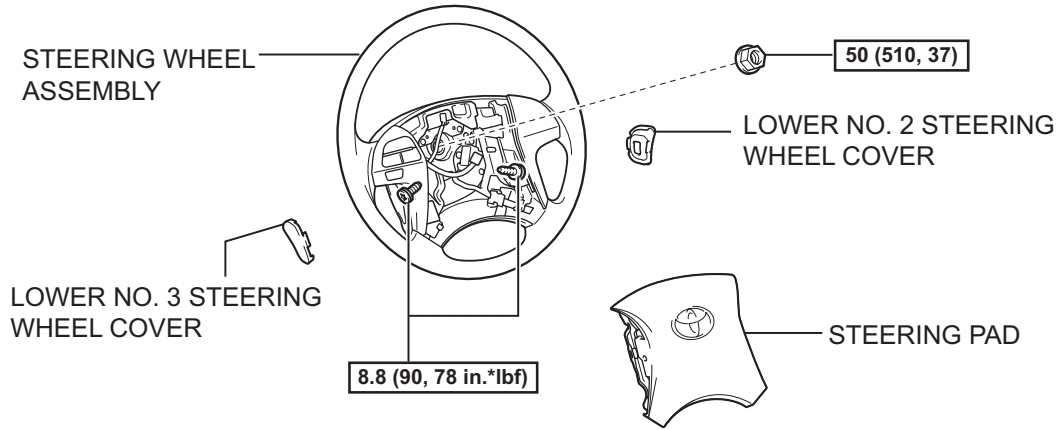


for 3 Spoke:

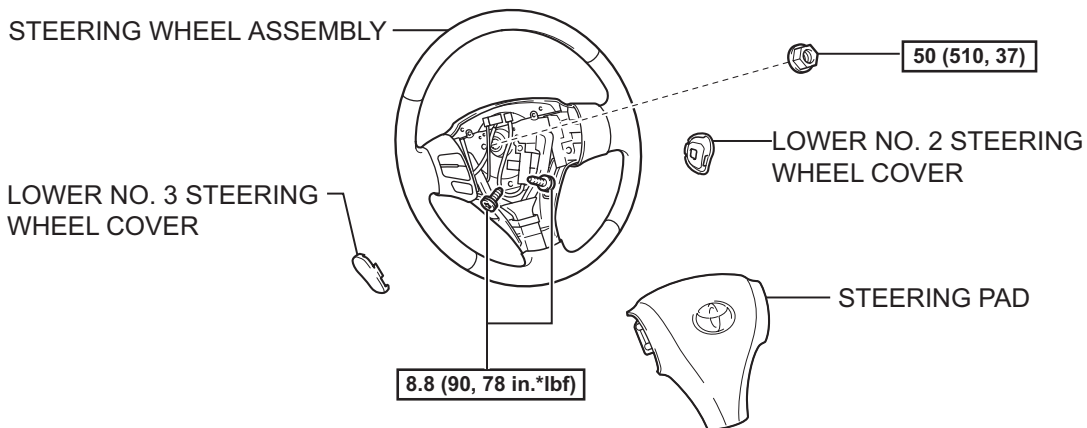

N*m (kgf*cm, ft.*lbf) : Specified torque

 for TMC Made:

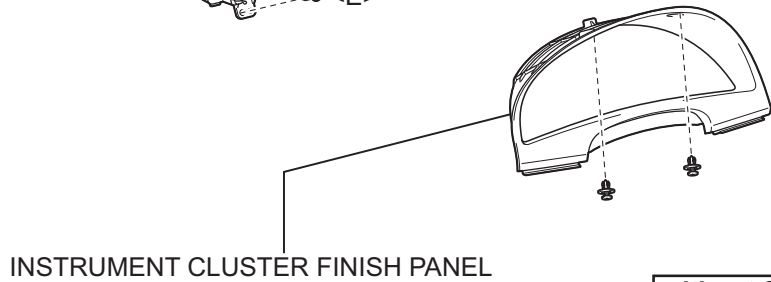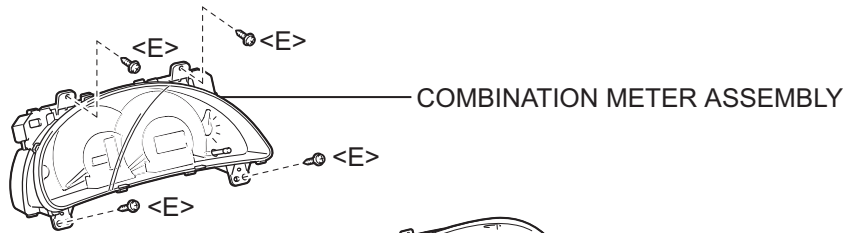




NO. 1 INSTRUMENT PANEL SUB-ASSEMBLY

without Smart Key System:




LOWER INSTRUMENT PANEL FINISH PANEL

with Smart Key System:

LOWER INSTRUMENT PANEL FINISH PANEL

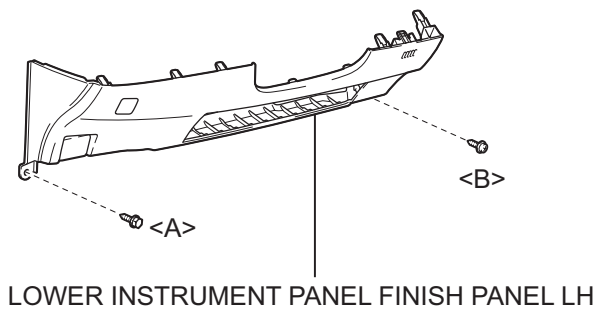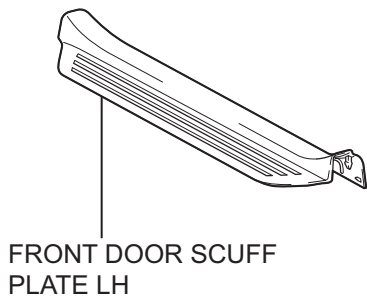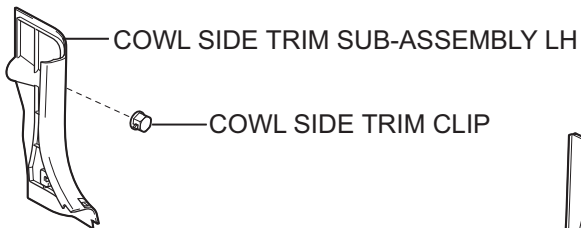


for TMMK Made:

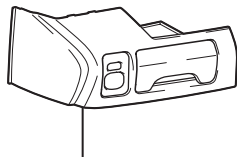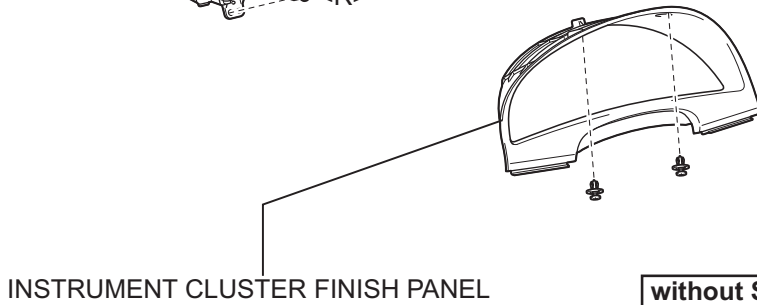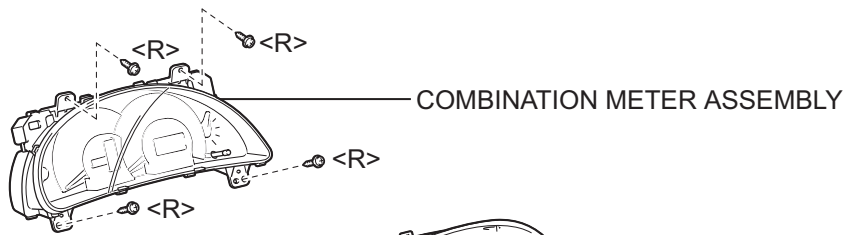


NO. 1 INSTRUMENT PANEL SUB-ASSEMBLY

 without Smart Key System:





LOWER INSTRUMENT PANEL FINISH PANEL

 
with Smart Key System:






LOWER INSTRUMENT PANEL FINISH PANEL

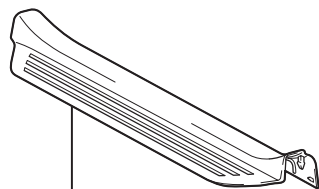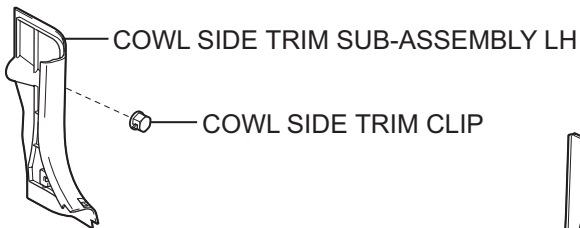

FRONT DOOR SCUFF PLATE LH



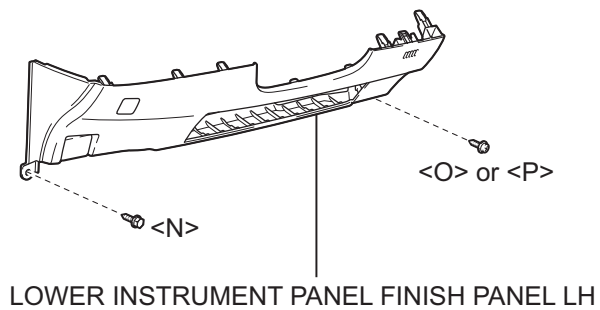



for TMC Made:

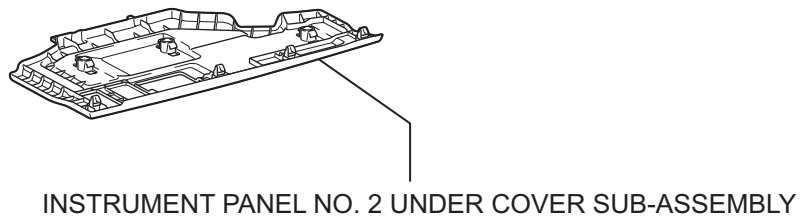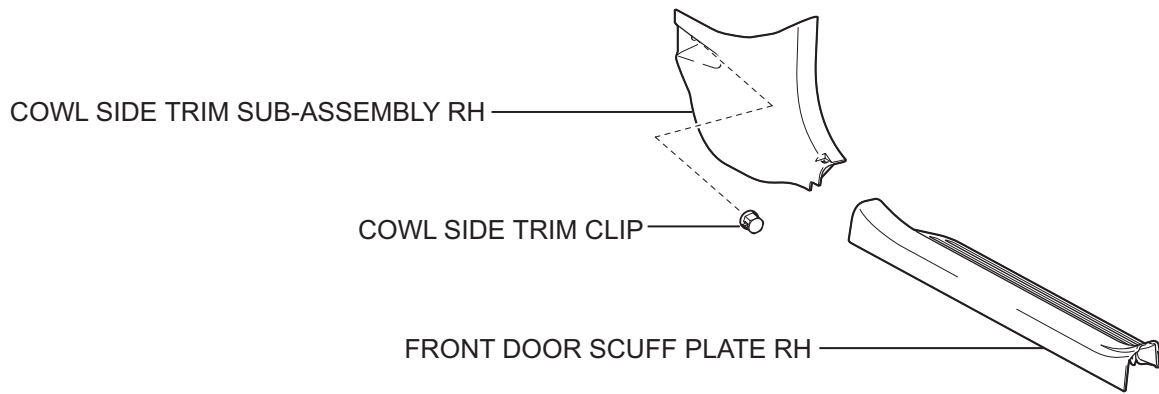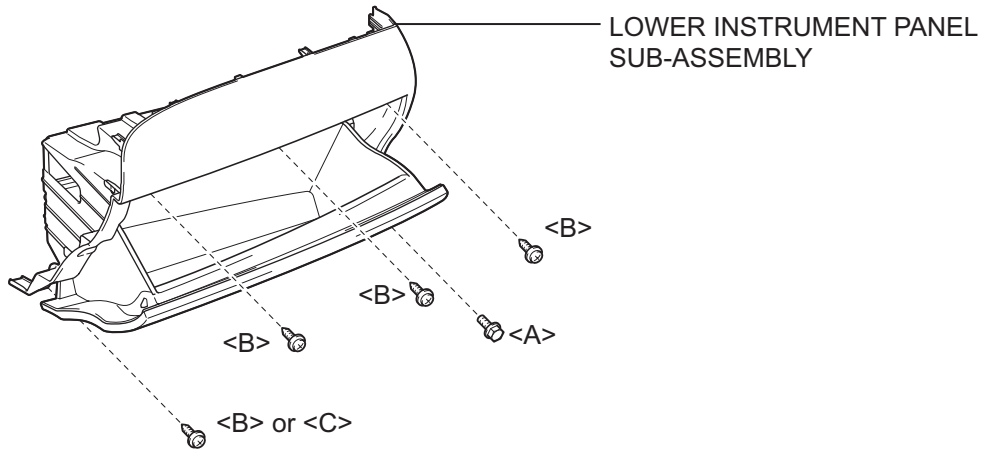


IP

for TMMK Made:

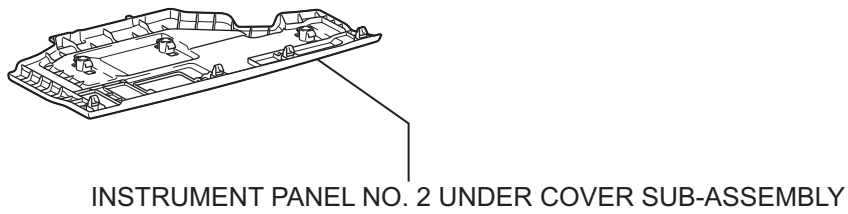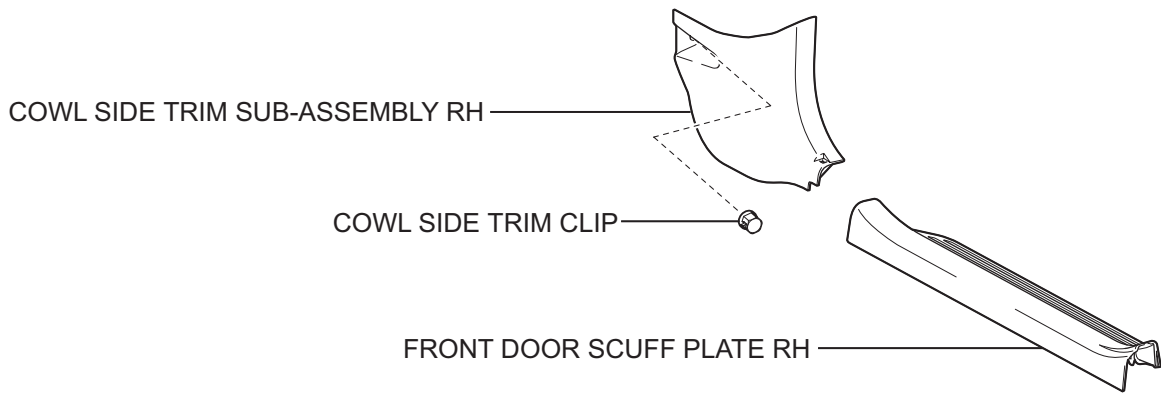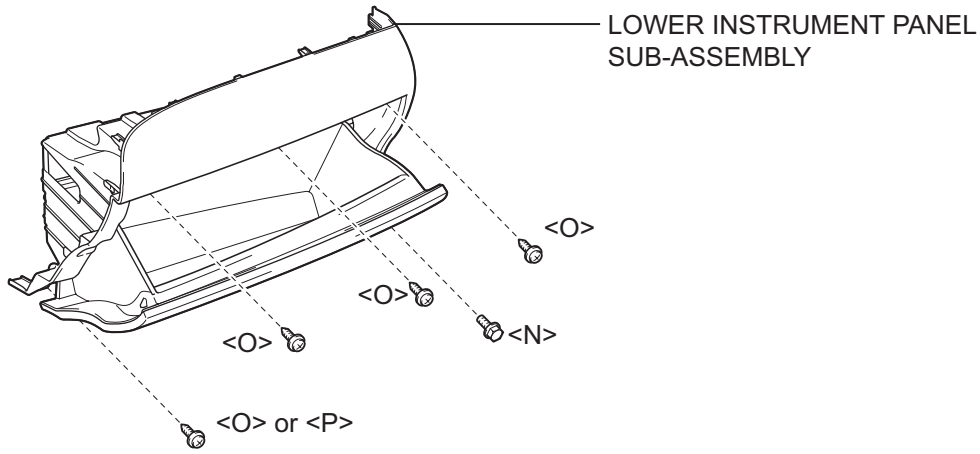


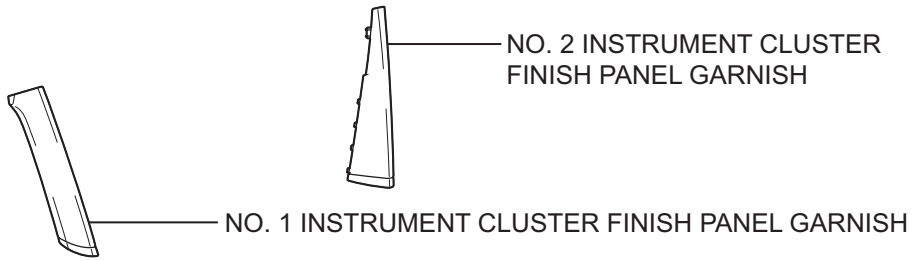

for Automatic Transaxle:

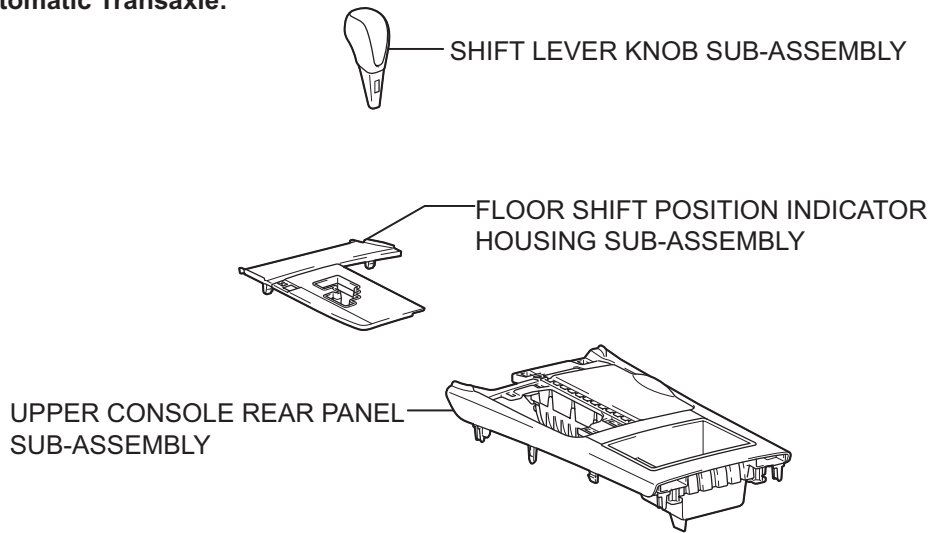


for Manual Transaxle:

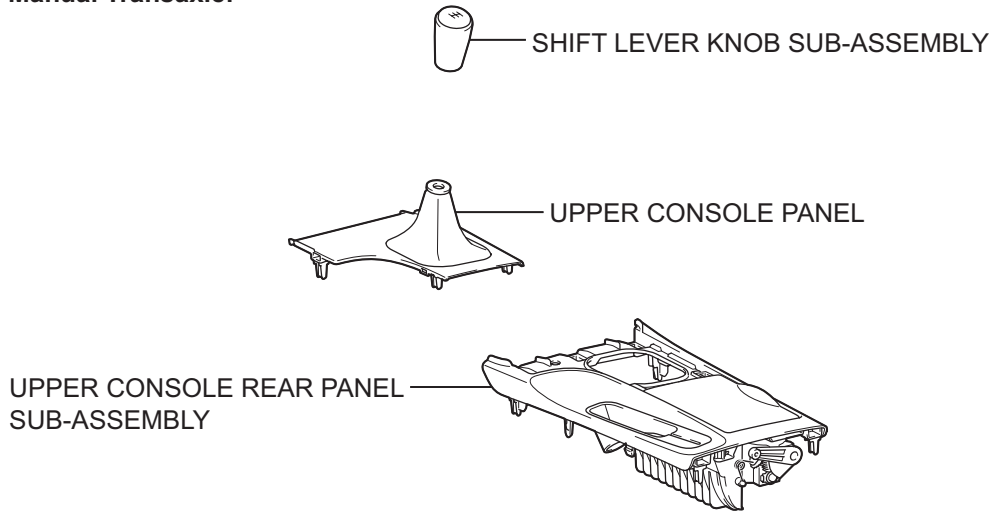

IP



for TMC Made:

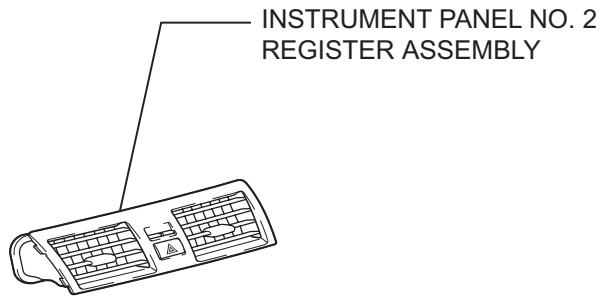


without Navigation System:




with Navigation System:

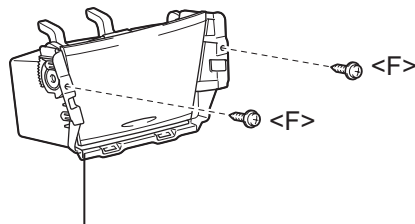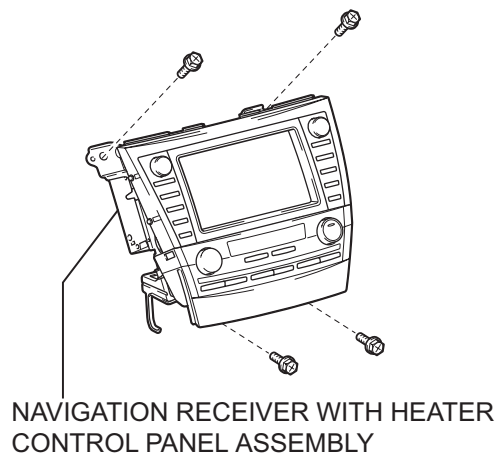



for TMMK Made:

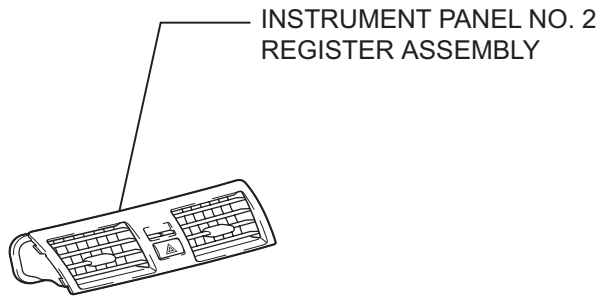

without Navigation System:



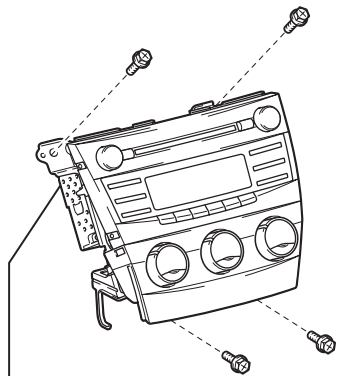


with Navigation System:

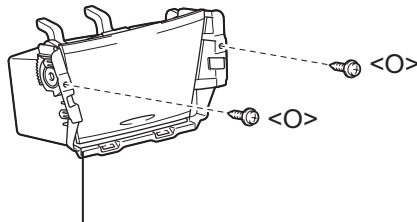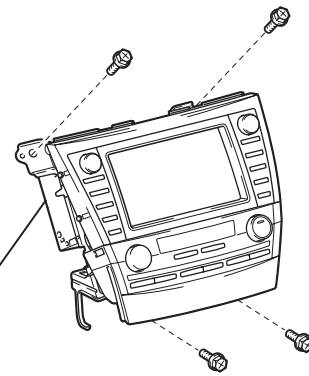

IP




for TMC Made:

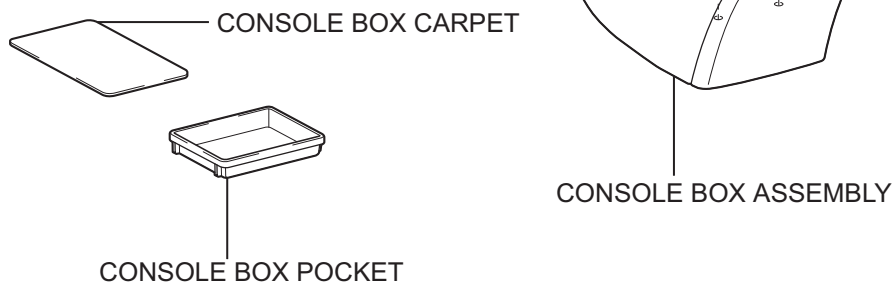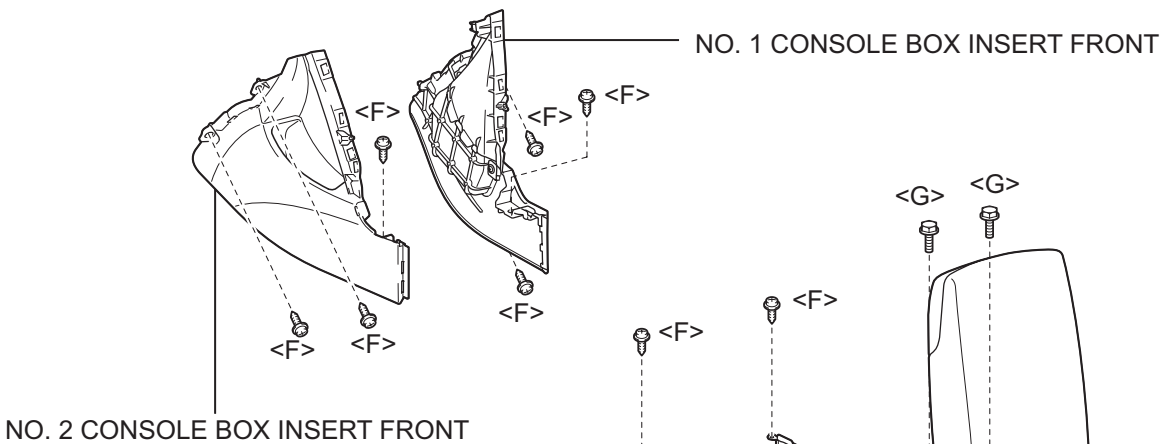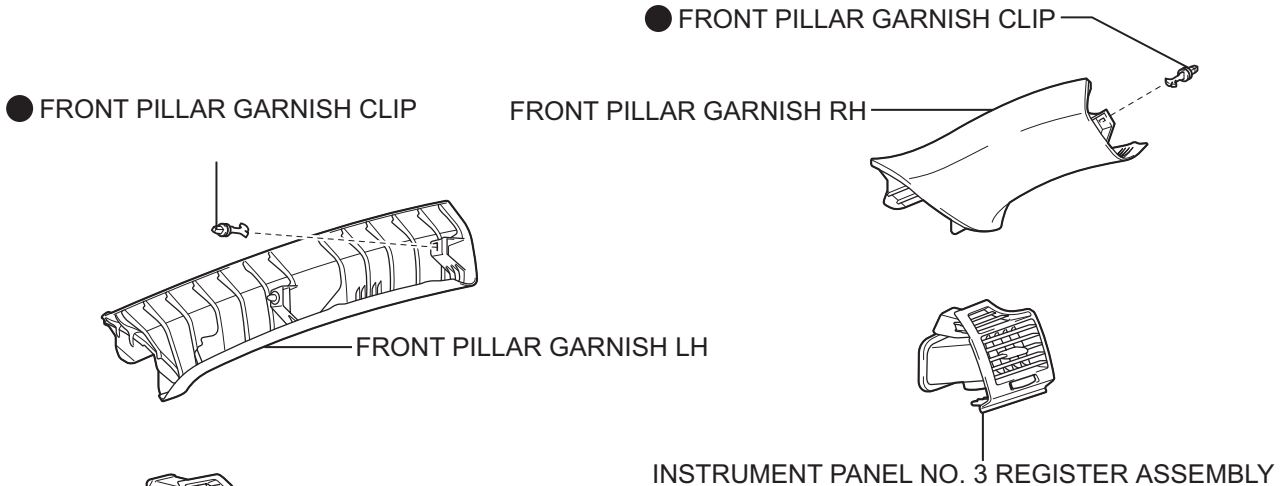

● Non-reusable part

IP



for TMMK Made:

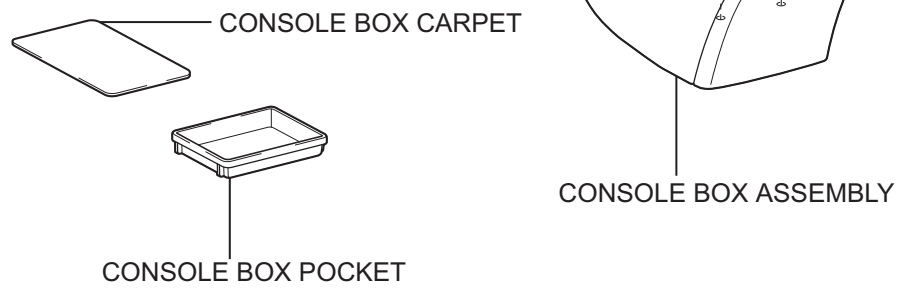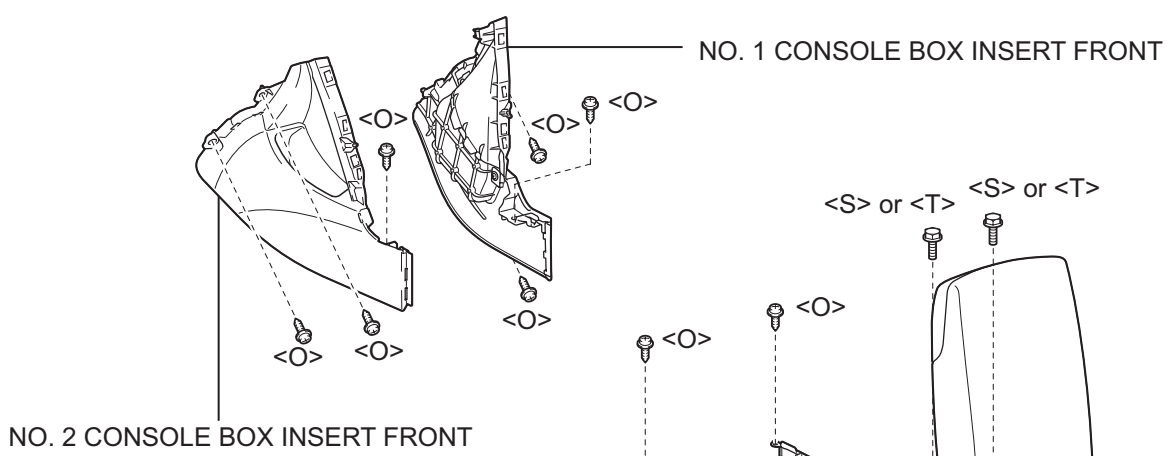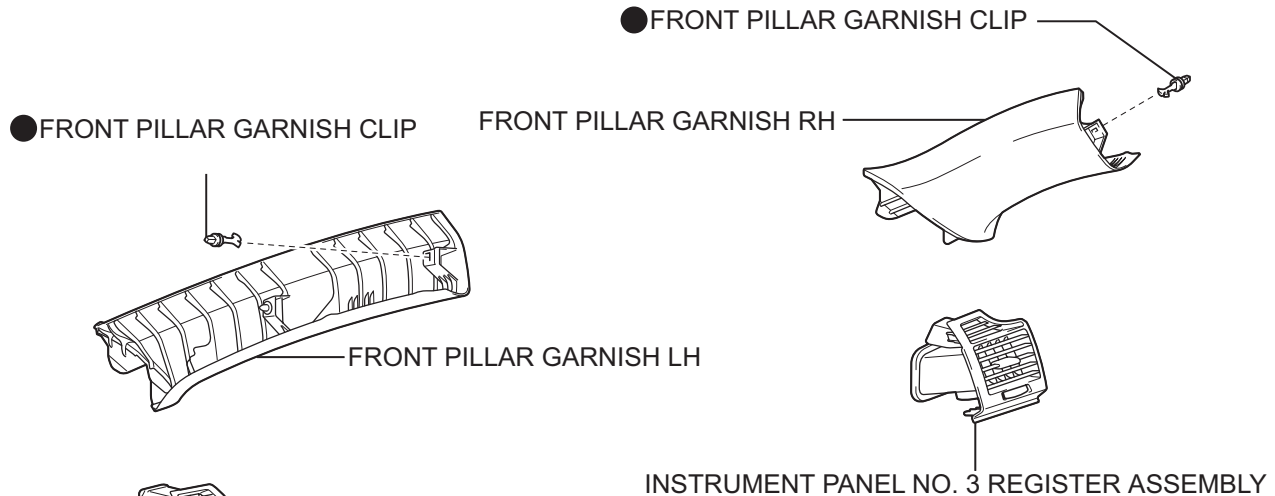


● Non-reusable part

IP

 

for TMC Made:

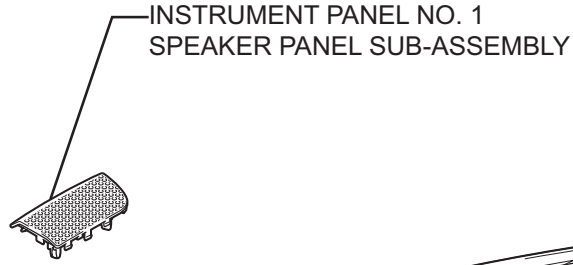

for LH Side:

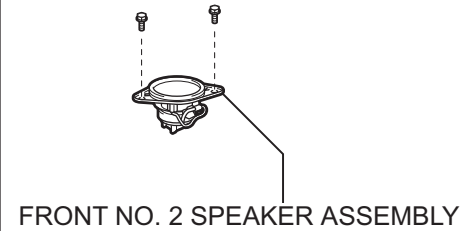



for RH Side:

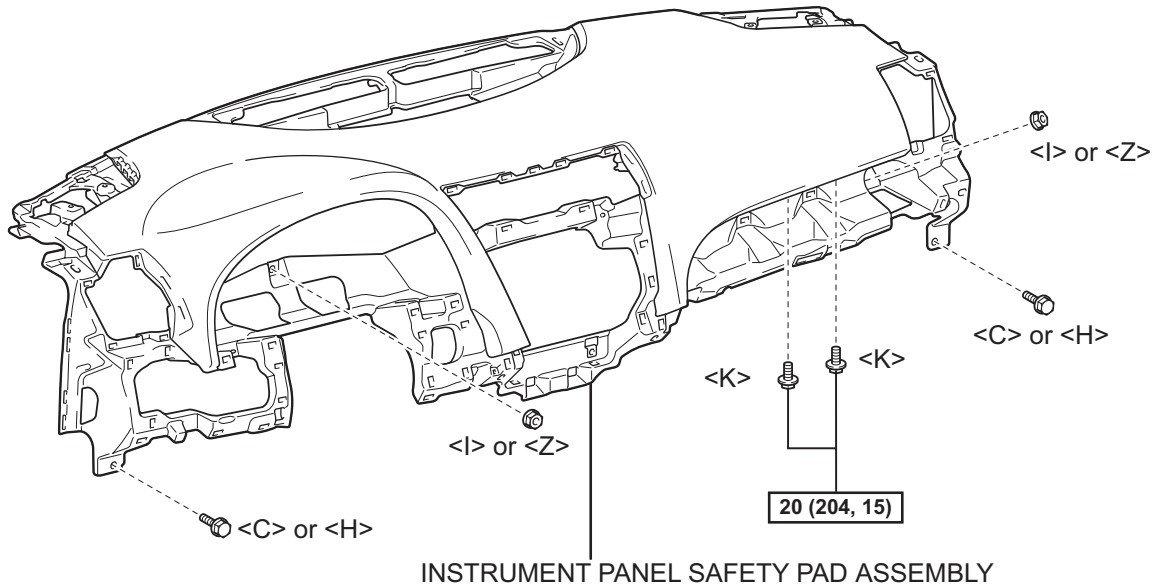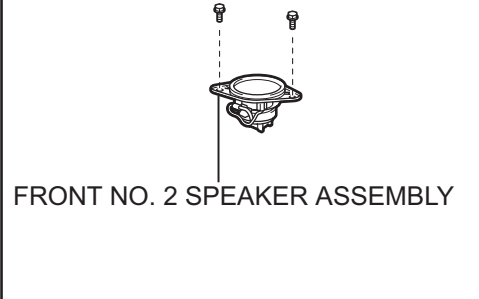


N*m (kgf*cm, ft.*lbf) : Specified torque



 

for TMMK Made:

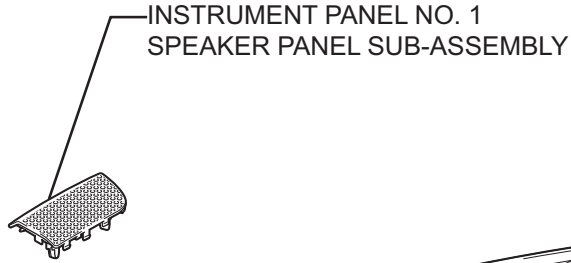

for LH Side:

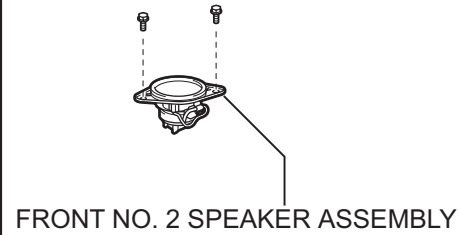



for RH Side:

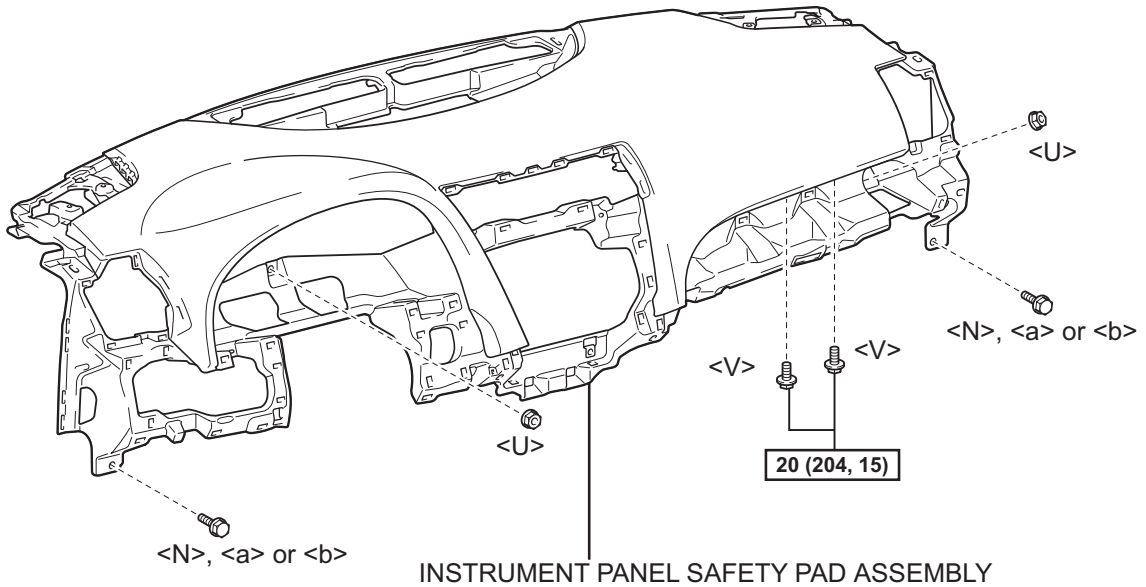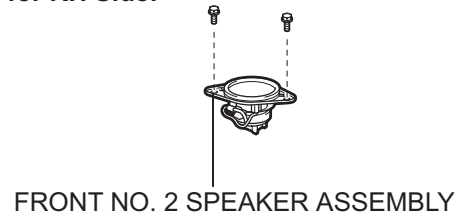







N*m (kgf*cm, ft.*lbf) : Specified torque

IP

 

for TMC Made:

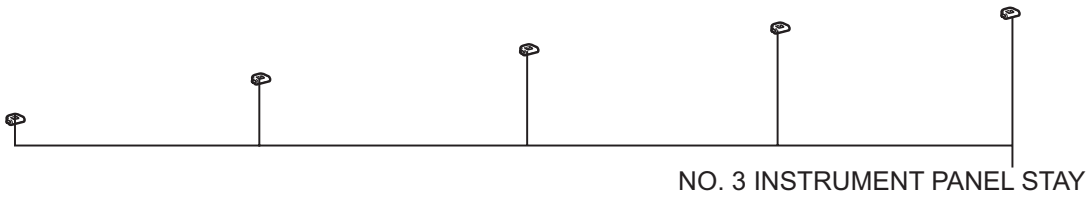

with Plasmacluster:

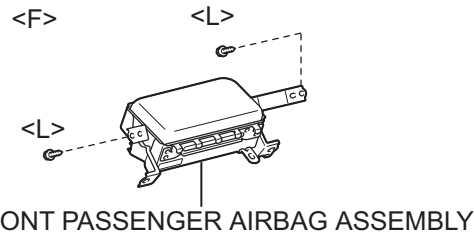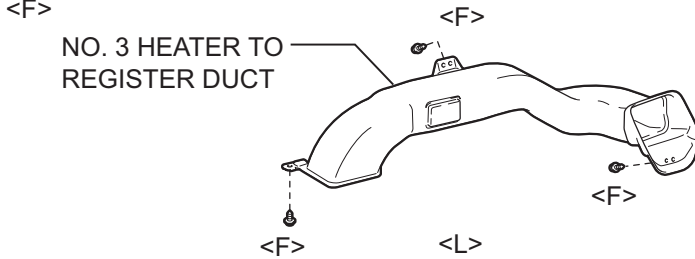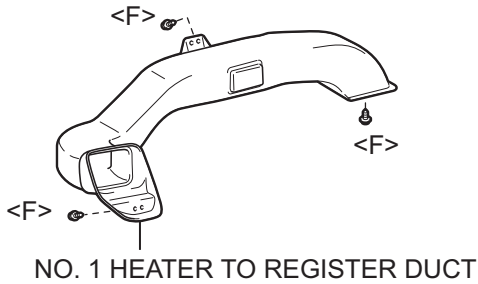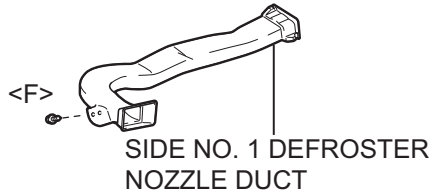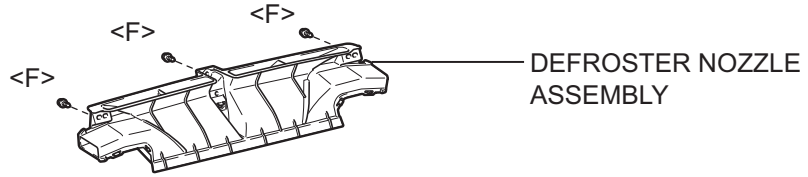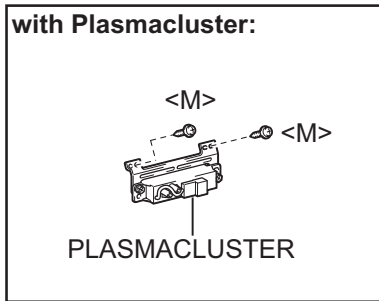













with Navigation System:

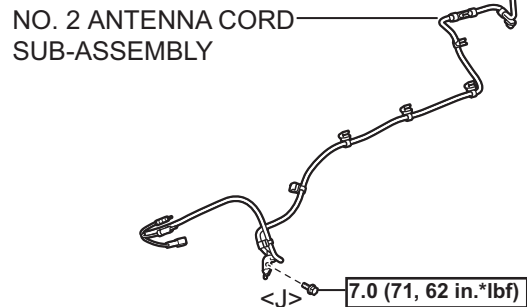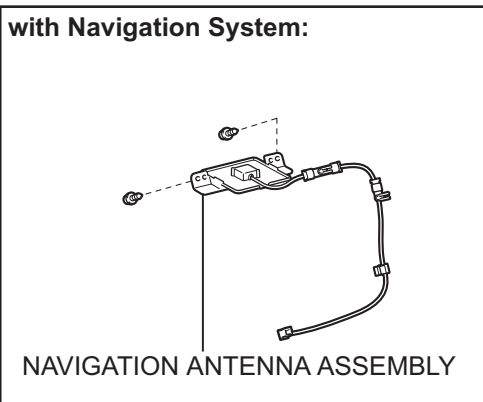

N*m (kgf*cm, ft.*lbf) : Specified torque

7.0 (71, 62 in.*lbf)


for TMMK Made:

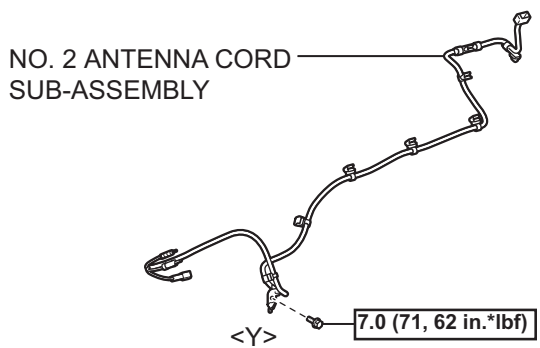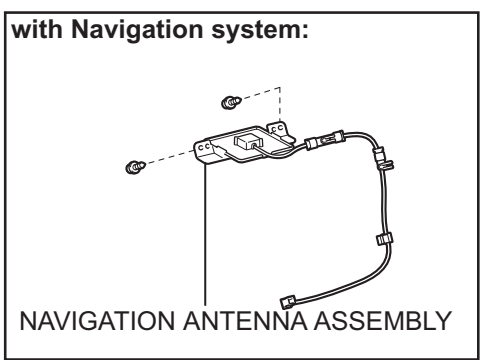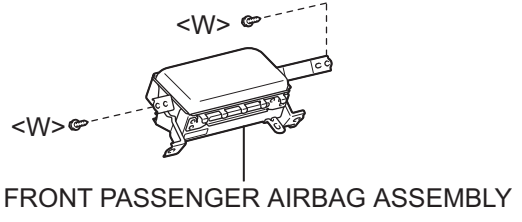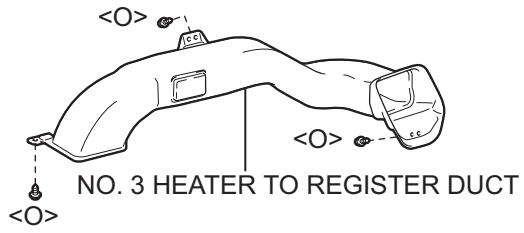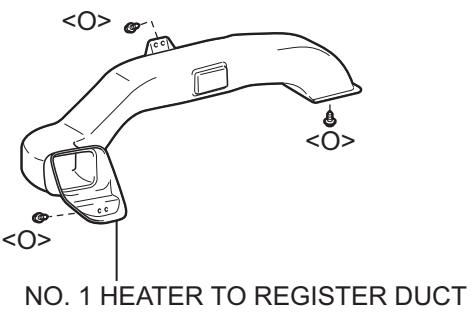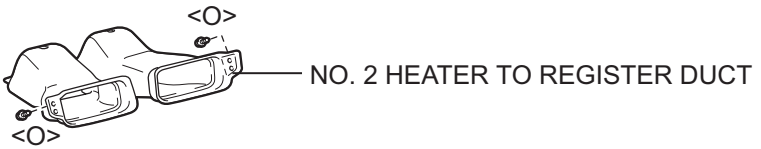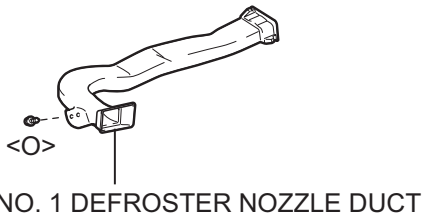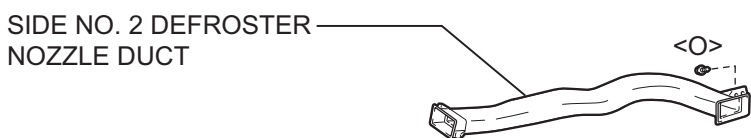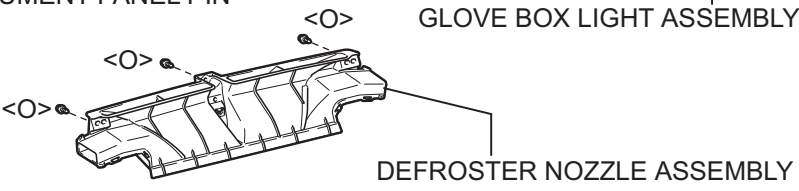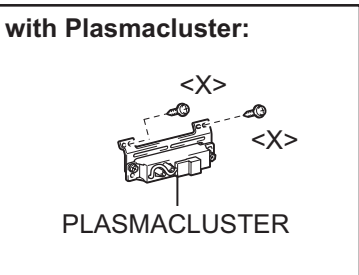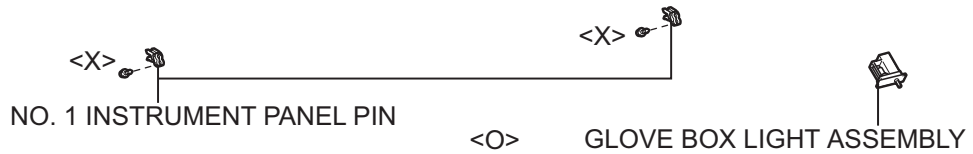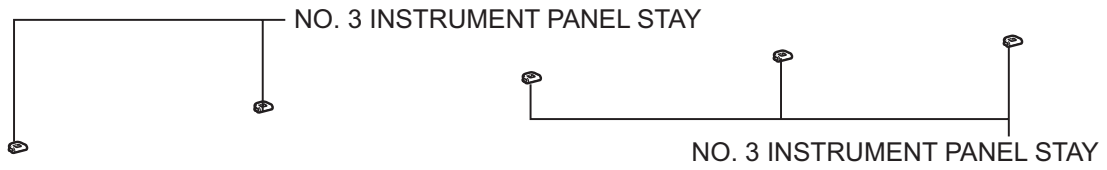


N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL


1. **PRECAUTION**
(See page [IP-1](#))
2. **ALIGN FRONT WHEELS FACING STRAIGHT AHEAD**
3. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
Wait for 90 seconds after disconnecting the cable to prevent airbag deployment (See page [RS-1](#)).
4. **REMOVE LOWER NO. 3 STEERING WHEEL COVER**
(See page [RS-349](#))
5. **REMOVE LOWER NO. 2 STEERING WHEEL COVER**
(See page [RS-349](#))
6. **REMOVE STEERING PAD** (See page [RS-350](#))
7. **REMOVE STEERING WHEEL ASSEMBLY** (See page [SR-38](#))
8. **REMOVE FRONT DOOR SCUFF PLATE LH** (See page [IR-24](#))
9. **REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH** (See page [IR-25](#))
10. **REMOVE LOWER INSTRUMENT PANEL FINISH PANEL LH (for TMC Made)**
 - (a) Remove the bolt <A> and the screw .
 - (b) Disconnect the hood lock control cable assembly.
 - (c) Disengage the claw and the 9 clips.
 - (d) Remove the air hose, disconnect the connector, and then remove the lower instrument panel finish panel LH.

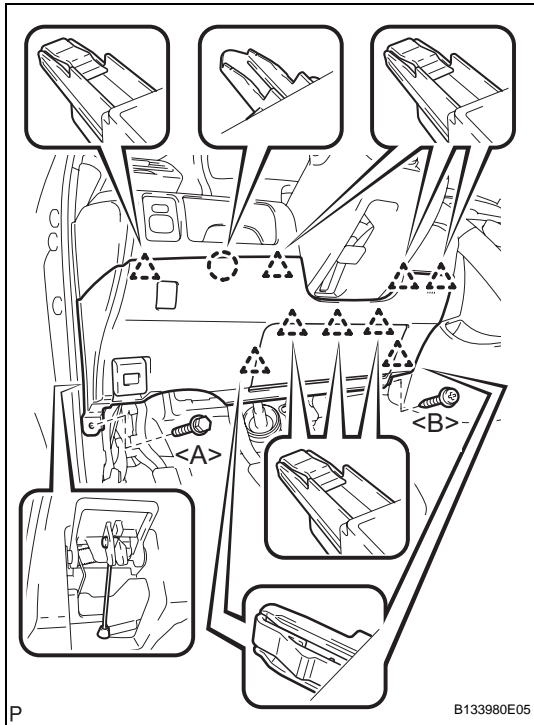

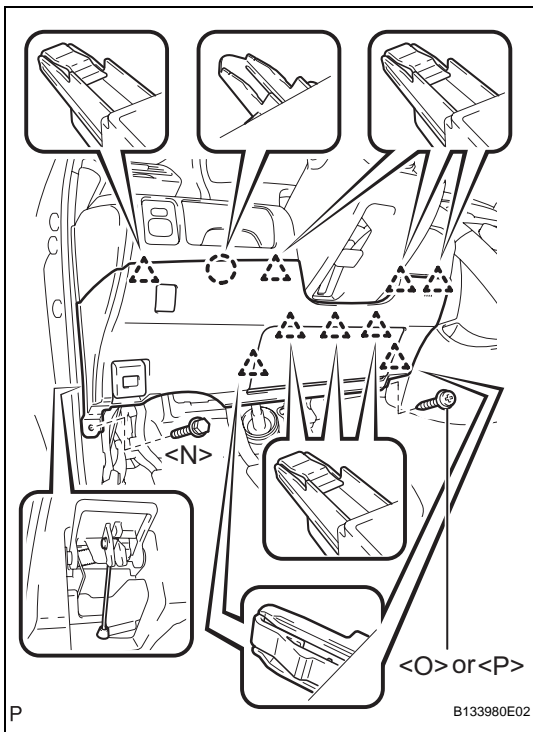


11. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL LH (for TMMK Made)

- (a) Remove the bolt <N> and the screw <O> or <P>.
- (b) Disconnect the hood lock control cable assembly.
- (c) Disengage the claw and the 9 clips.
- (d) Remove the air hose, disconnect the connector, and then remove the lower instrument panel finish panel LH.

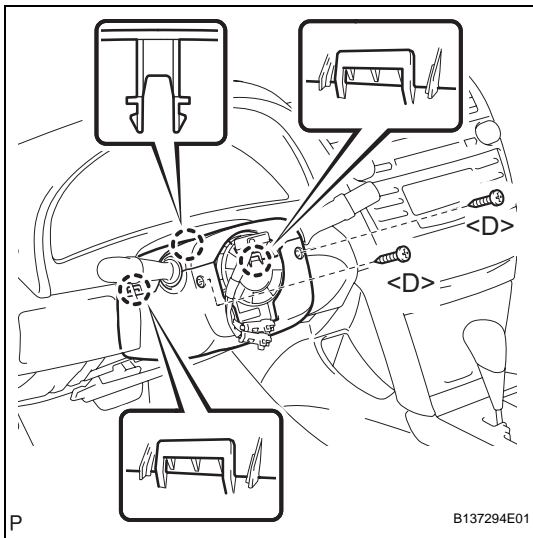

12. REMOVE STEERING COLUMN COVER (for TMC Made)


- (a) Remove the 2 screws <D>.
- (b) Disengage the 2 claws and remove the lower steering column cover.
- (c) Disengage the claw and remove the upper steering column cover.

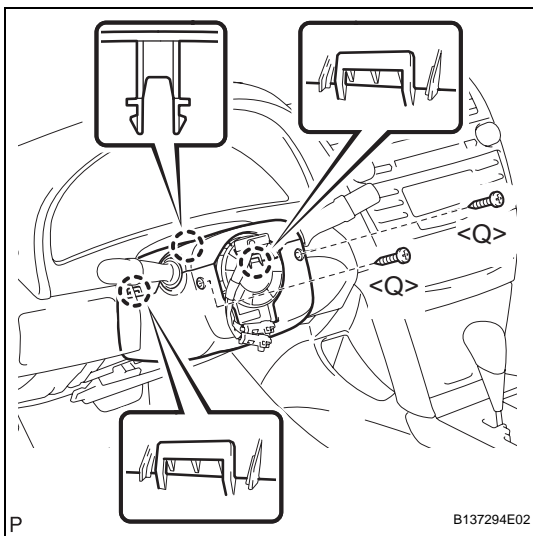

13. REMOVE STEERING COLUMN COVER (for TMMK Made)


- (a) Remove the 2 screws <Q>.
- (b) Disengage the 2 claws and remove the lower steering column cover.
- (c) Disengage the claw and remove the upper steering column cover.

14. REMOVE TURN SIGNAL SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (See page SR-39)

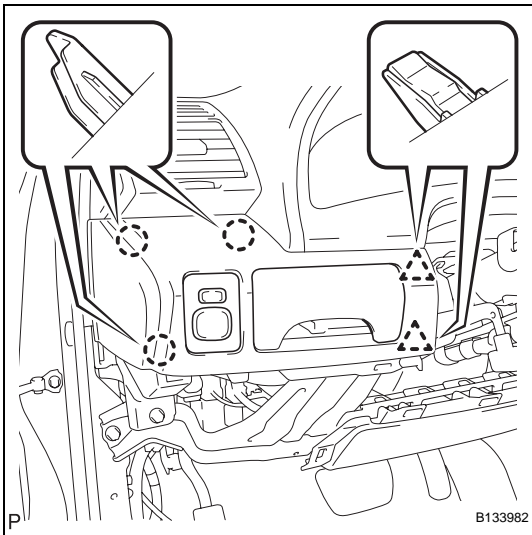


15. REMOVE NO. 1 INSTRUMENT PANEL SUB-ASSEMBLY

- (a) Disengage the 3 claws and the 2 clips.
- (b) Disconnect the connector and remove the instrument panel sub-assembly.

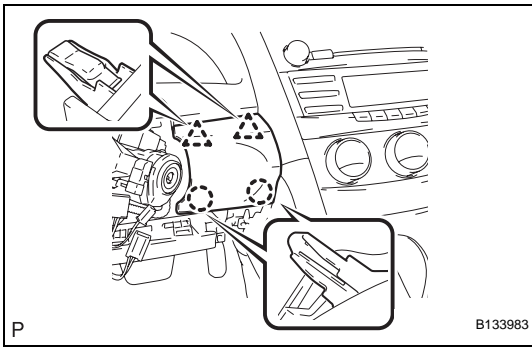


16. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL (w/o Smart Key System)

- (a) Disengage the 2 claws and 2 clips, and then remove the lower instrument panel finish panel.

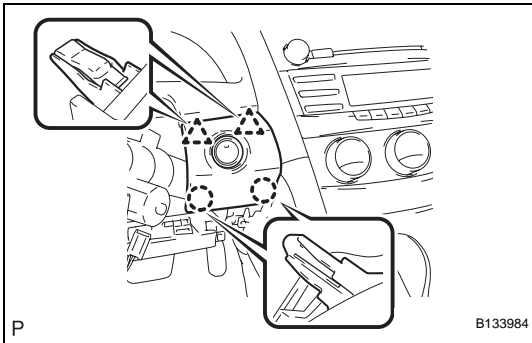


17. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL (w/ Smart Key System)

- (a) Disengage the 2 claws and 2 clips.
- (b) Disconnect the connector and remove the lower instrument panel finish panel.

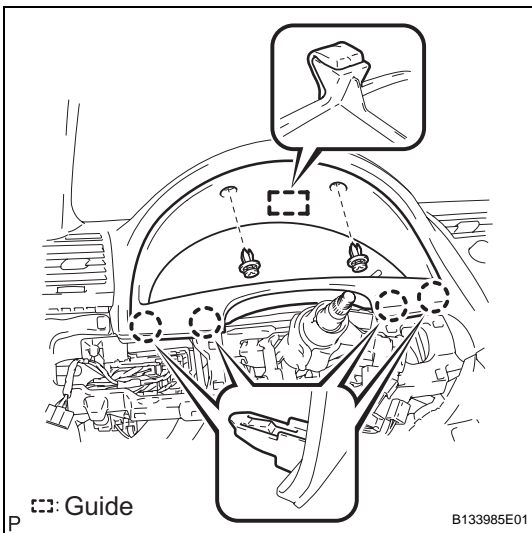


18. REMOVE INSTRUMENT CLUSTER FINISH PANEL

- (a) Remove the 2 clips.
- (b) Disengage the guide and 4 claws, and then remove the instrument cluster finish panel.

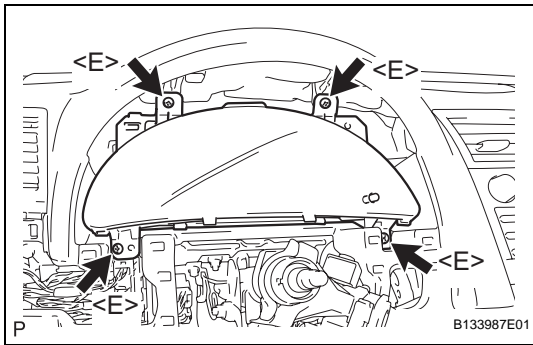

19. REMOVE COMBINATION METER ASSEMBLY (for TMC Made)

- (a) Remove the 4 screws <E>.
- (b) Disconnect each connector and remove the combination meter assembly.

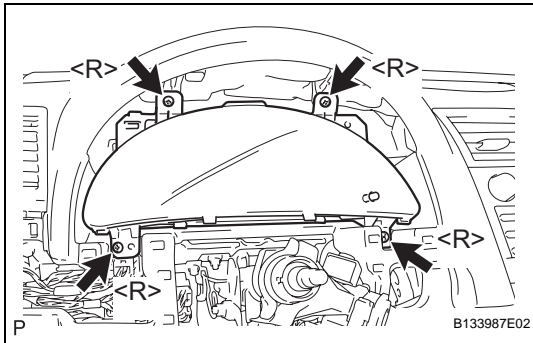


20. REMOVE COMBINATION METER ASSEMBLY (for TMMK Made)

- (a) Remove the 4 screws <R>.
- (b) Disconnect each connector and remove the combination meter assembly.


21. REMOVE FRONT DOOR SCUFF PLATE RH (See page IR-26)

22. REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH (See page IR-26)

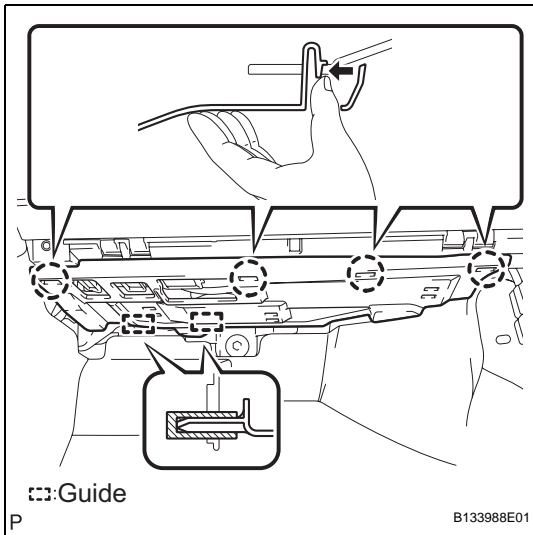


23. REMOVE INSTRUMENT PANEL NO. 2 UNDER COVER SUB-ASSEMBLY

- (a) Disengage the 4 claws.
- (b) Disengage the 2 guides and remove the No. 2 under cover sub-assembly.

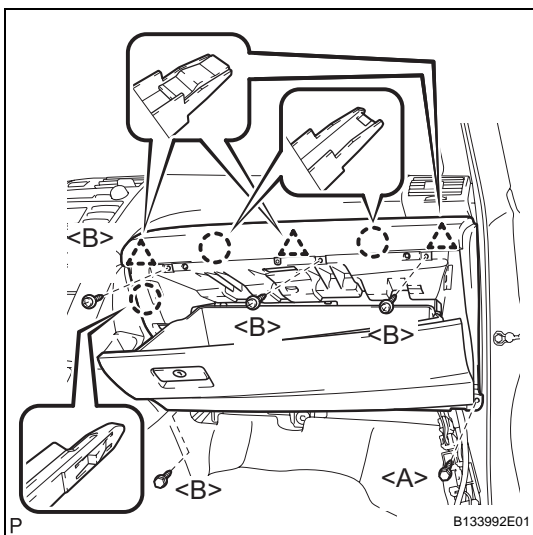


24. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY (for TMC Made)

- (a) Remove the bolt <A>.
- (b) Remove the 4 screws .
- (c) Disengage the 3 claws and the 3 clips.
- (d) Disconnect the connector and remove the lower instrument panel sub-assembly.

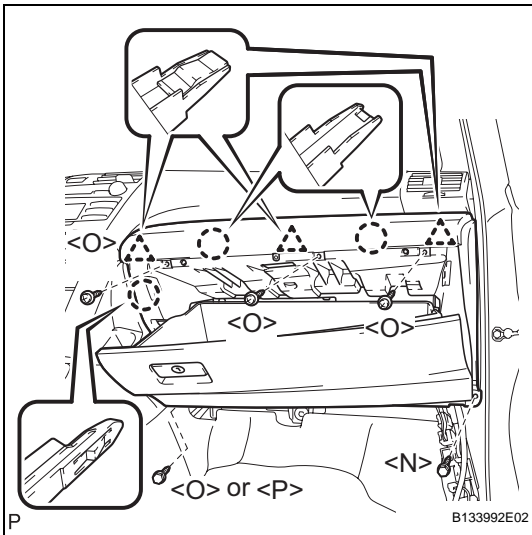


25. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY (for TMMK Made)

- (a) Remove the bolt <N>.
- (b) Remove the screw <O> or <P> and the 3 screws <O>.
- (c) Disengage the 3 claws and the 3 clips.
- (d) Disconnect the connector and remove the lower instrument panel sub-assembly.

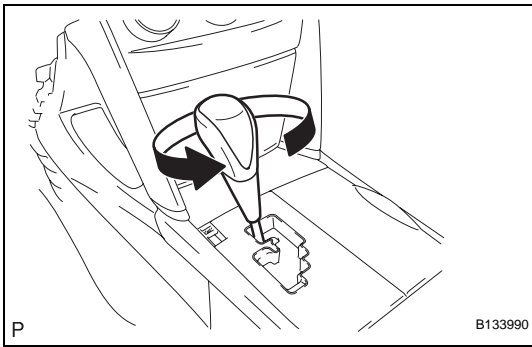


26. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for Automatic Transaxle)

- (a) Turn the shift lever knob counterclockwise and remove the shift lever knob sub-assembly.

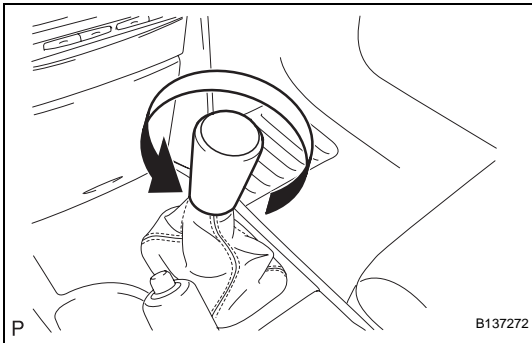


27. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transaxle)

- (a) Turn the shift lever knob counterclockwise and remove the shift lever knob sub-assembly.

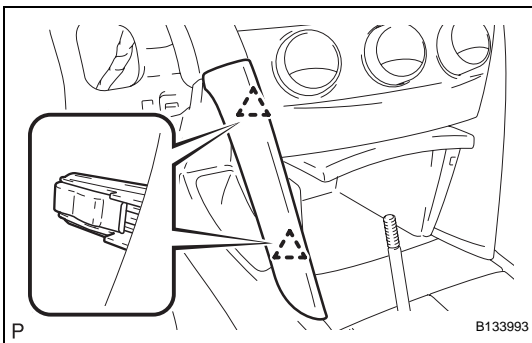


28. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

- (a) Disengage the 2 clips and remove the No. 1 instrument cluster finish panel garnish.

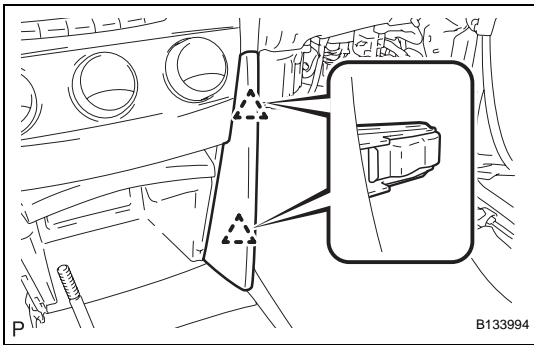


29. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

- (a) Disengage the 2 clips and remove the No. 2 instrument cluster finish panel garnish.

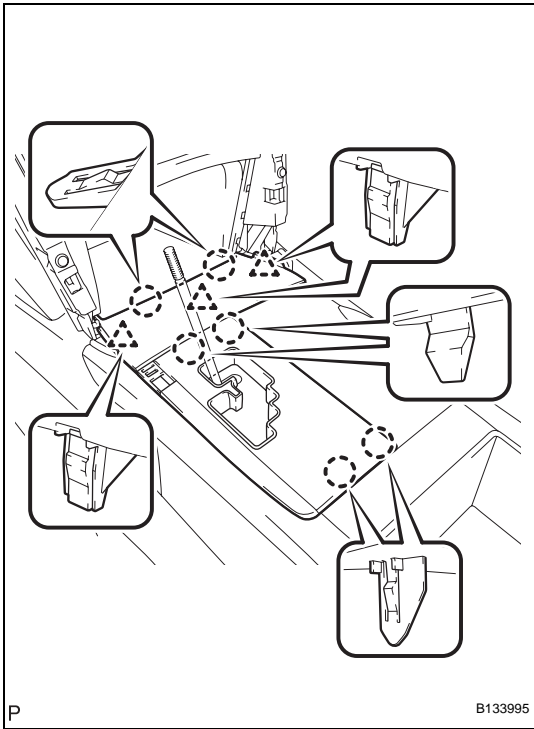


30. REMOVE FLOOR SHIFT POSITION INDICATOR HOUSING SUB-ASSEMBLY (for Automatic Transaxle)

- (a) Disengage the 6 claws and the 3 clips, and then remove the floor shift position indicator housing sub-assembly.
- (b) with Seat Heater System:
 - (1) Disconnect each connector.

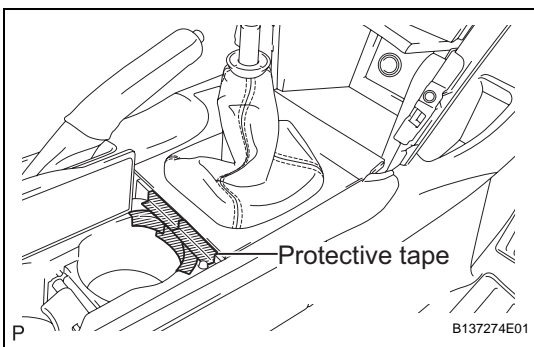


31. REMOVE UPPER CONSOLE PANEL (for Manual Transaxle)

- (a) Open the lid of the upper console panel.
- (b) Apply protective tape to the area shown in the illustration.

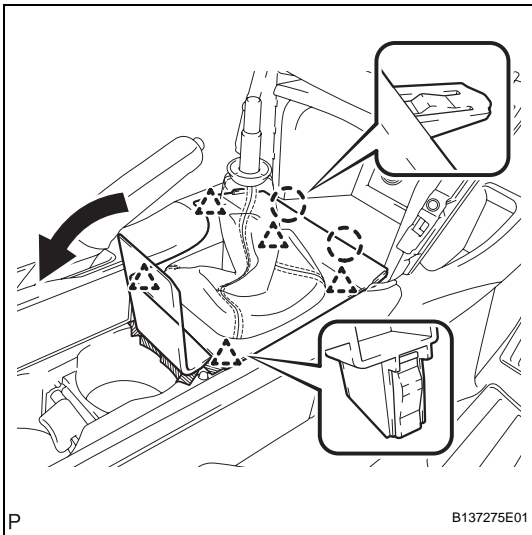


- (c) Using a moulding remover, disengage the 2 claws and the 5 clips, and then remove the upper console panel as shown in the illustration.

IP

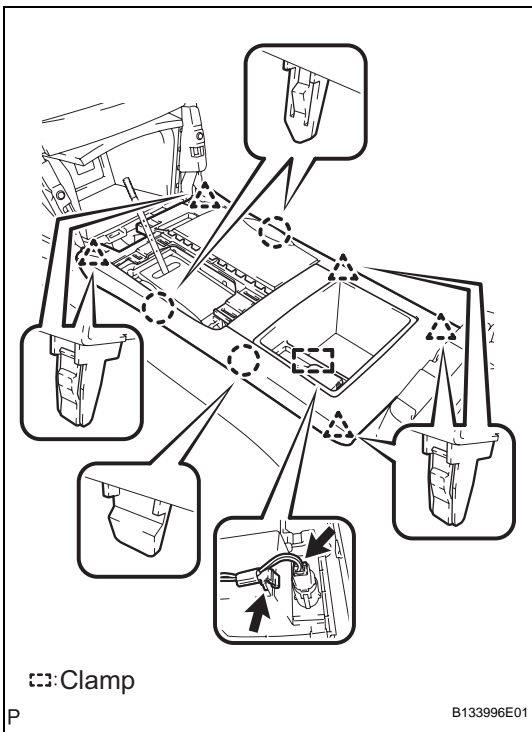


32. REMOVE UPPER CONSOLE REAR PANEL SUB-ASSEMBLY (for Automatic Transaxle)

- Disengage the 3 claws and the 5 clips.
- Disengage the clamp.
- Disconnect the connector and remove the upper console rear panel sub-assembly.

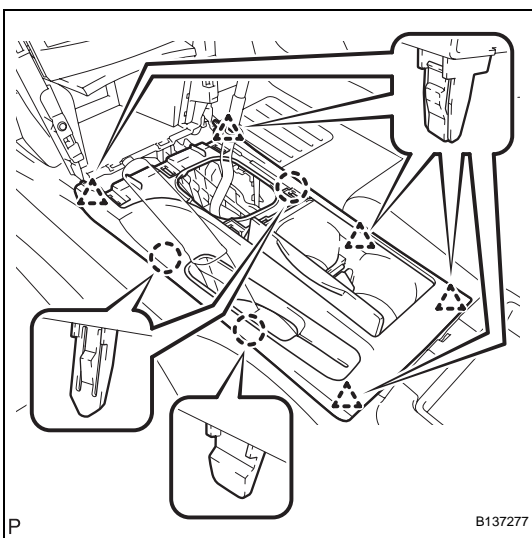


33. REMOVE UPPER CONSOLE REAR PANEL SUB-ASSEMBLY (for Manual Transaxle)

- Disengage the 3 claws and the 5 clips.
- Disconnect the connector and remove the upper console rear panel sub-assembly.

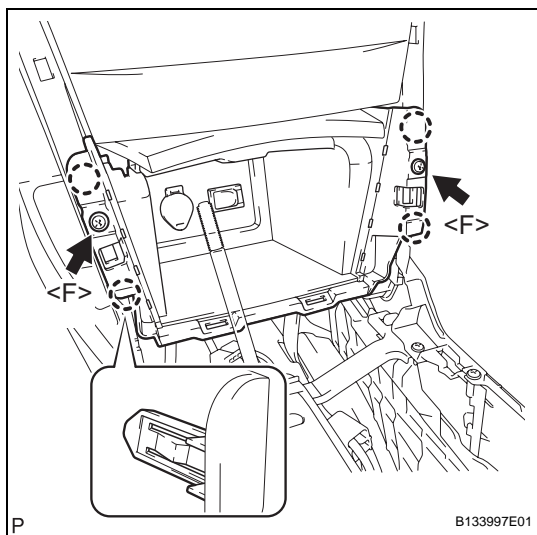


34. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY (for TMC Made)

- Remove the 2 screws <F>.
- Disengage the 4 claws.
- Disconnect each connector and remove the upper console panel sub-assembly.

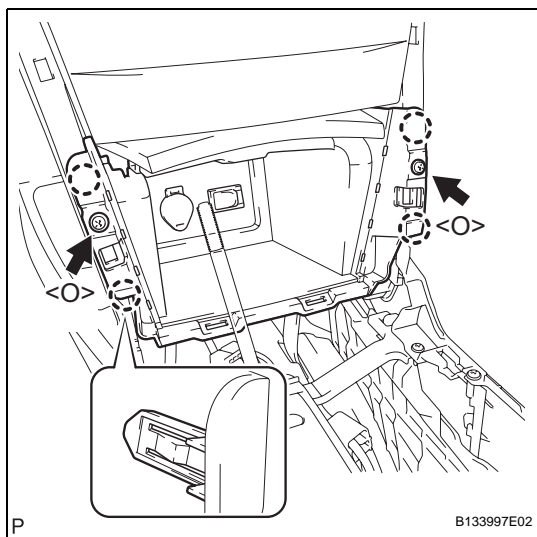


35. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY (for TMMK Made)

- Remove the 2 screws <O>.
- Disengage the 4 claws.
- Disconnect each connector and remove the upper console panel sub-assembly.

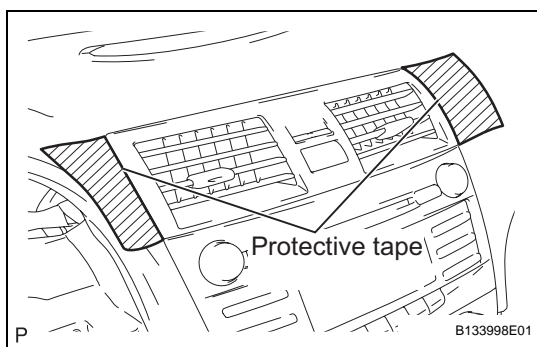


36. REMOVE INSTRUMENT PANEL NO. 2 REGISTER ASSEMBLY

- Apply protective tape to the areas shown in the illustration.

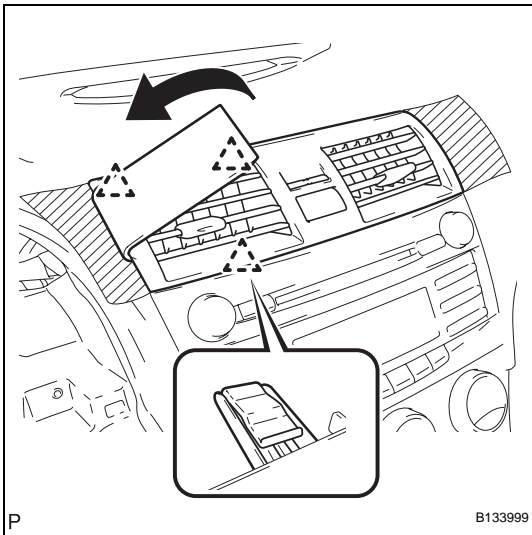

(b) Using a moulding remover, disengage the 3 clips.

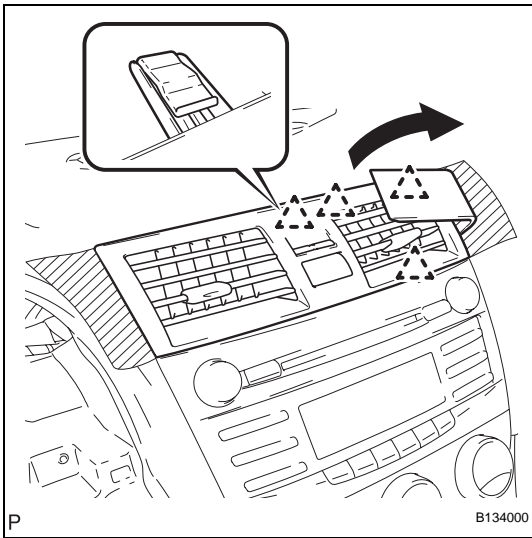


(c) Using a moulding remover, disengage the 4 clips.

(d) Disconnect the connector and remove the instrument panel No. 2 register assembly.


37. REMOVE RADIO RECEIVER WITH HEATER CONTROL PANEL ASSEMBLY (w/o Navigation System) (See page [AV-146](#))

38. REMOVE NAVIGATION RECEIVER WITH HEATER CONTROL PANEL ASSEMBLY (See page [NS-195](#))

39. REMOVE CONSOLE BOX POCKET
(a) Remove the console box pocket.

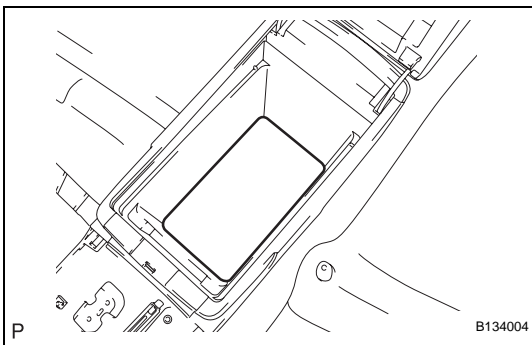


40. REMOVE CONSOLE BOX CARPET
(a) Remove the console box carpet.

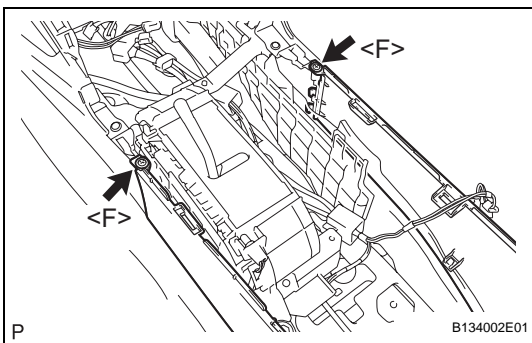


41. REMOVE CONSOLE BOX ASSEMBLY (for TMC Made)

(a) Remove the 2 screws <F>.

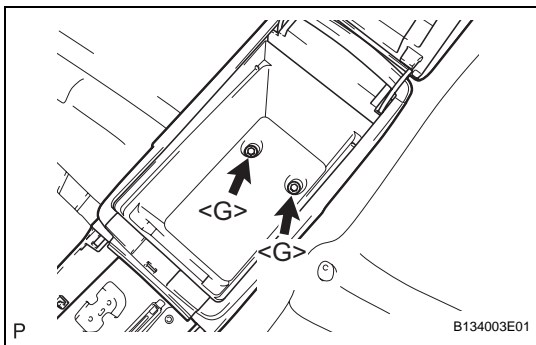


- (b) Remove the 2 bolts <G> and the console box assembly.

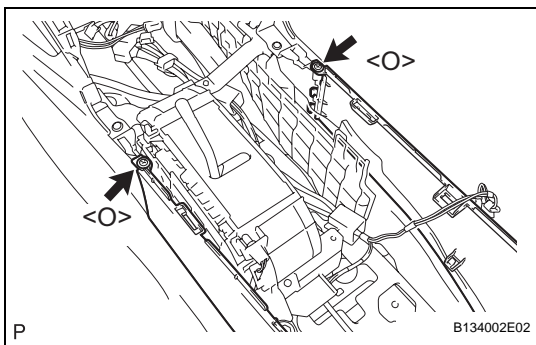


42. REMOVE CONSOLE BOX ASSEMBLY (for TMMK Made)

- (a) Remove the 2 screws <O>.

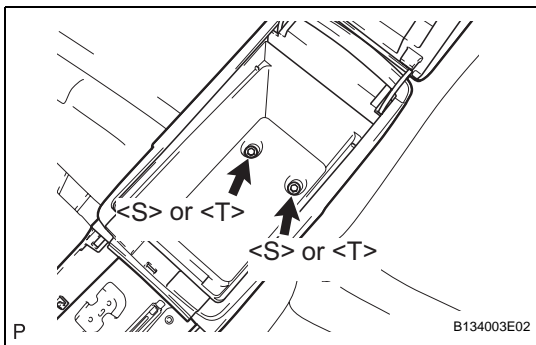


- (b) Remove the 2 bolts <S> or <T> and the console box assembly.

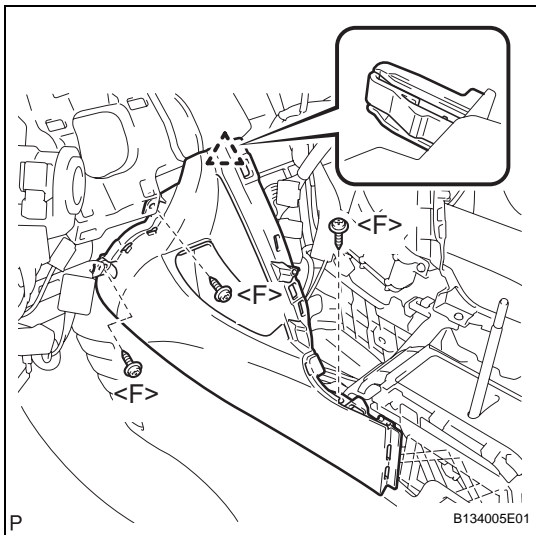

43. REMOVE NO. 2 CONSOLE BOX INSERT FRONT (for TMC Made)


- (a) Remove the 3 screws <F>.
- (b) Disengage the clip and remove the No. 2 console box insert front.



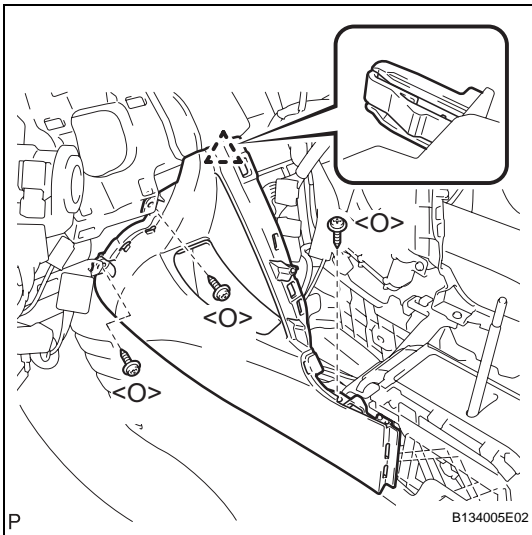


44. REMOVE NO. 2 CONSOLE BOX INSERT FRONT (for TMMK Made)

- (a) Remove the 3 screws <O>.
- (b) Disengage the clip and remove the No. 2 console box insert front.

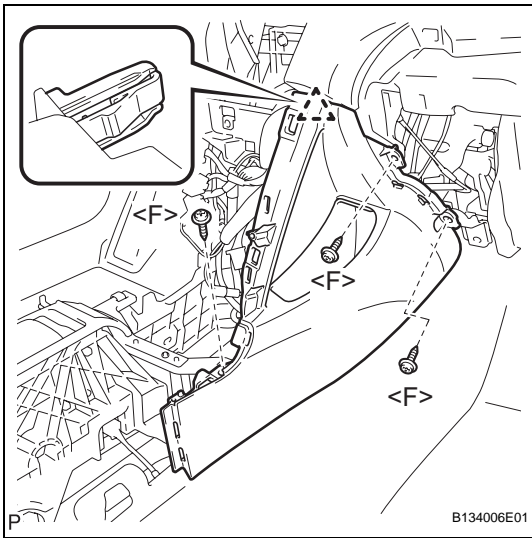

45. REMOVE NO. 1 CONSOLE BOX INSERT FRONT (for TMC Made)


- (a) Remove the 3 screws <F>.
- (b) Disengage the clip and remove the No. 1 console box insert front.

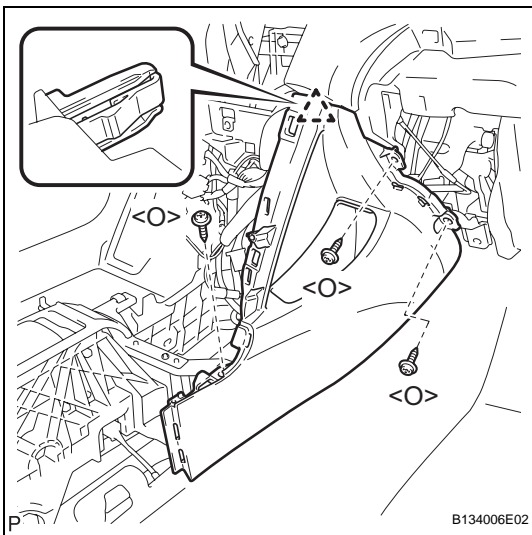

46. REMOVE NO. 1 CONSOLE BOX INSERT FRONT (for TMMK Made)


- (a) Remove the 3 screws <O>.
- (b) Disengage the clip and remove the No. 1 console box insert front.

47. REMOVE FRONT PILLAR GARNISH LH (See page [IR-27](#))

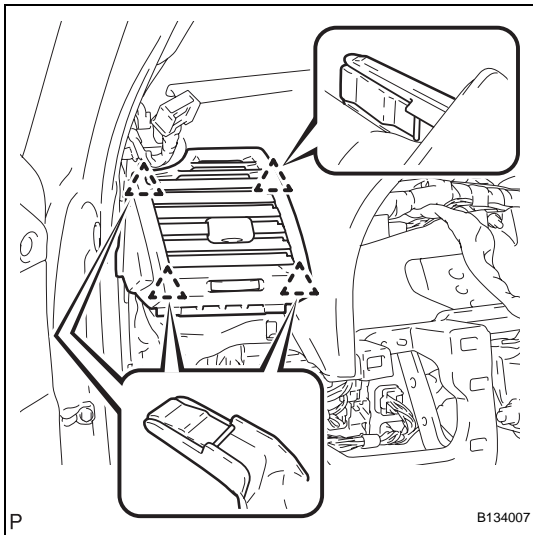

48. REMOVE INSTRUMENT PANEL NO. 1 REGISTER ASSEMBLY

- (a) Disengage the 4 clips and remove the instrument panel No. 1 register assembly.

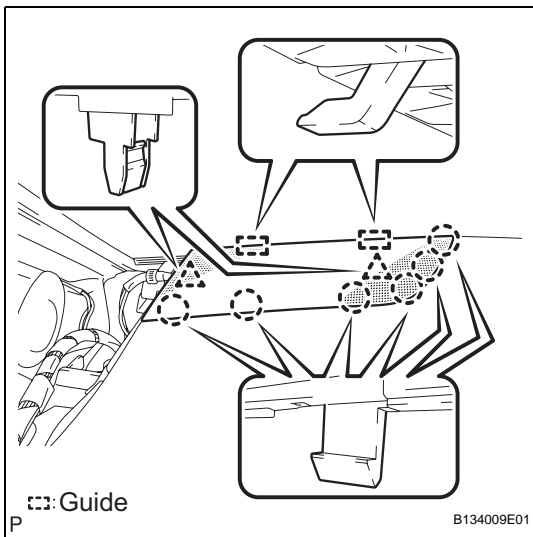


49. REMOVE INSTRUMENT PANEL NO. 1 SPEAKER PANEL SUB-ASSEMBLY

- (a) Disengage the 6 claws and the 2 clips.
 (b) Disengage the 2 guides and remove the instrument panel No. 1 speaker panel sub-assembly.


50. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (for LH Side) (See page [AV-156](#))

51. REMOVE FRONT PILLAR GARNISH RH (See page [IR-27](#))

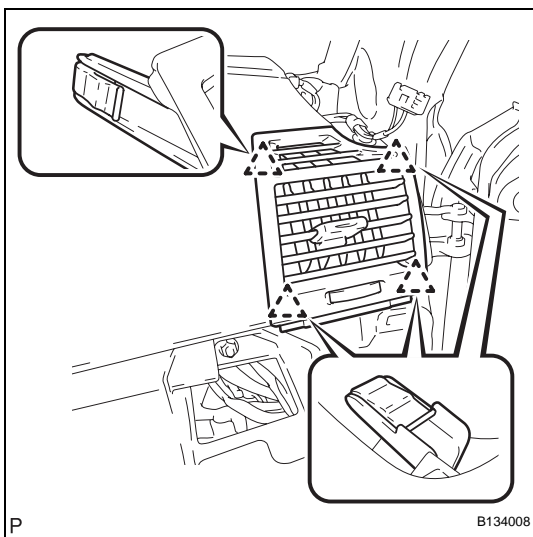

52. REMOVE INSTRUMENT PANEL NO. 3 REGISTER ASSEMBLY

- (a) Disengage the 4 clips and remove the instrument panel No. 3 register assembly.

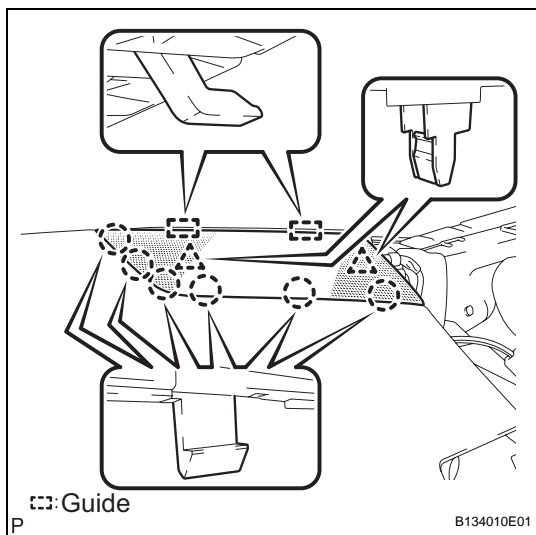


53. REMOVE INSTRUMENT PANEL NO. 2 SPEAKER PANEL SUB-ASSEMBLY

- Disengage the 6 claws and the 2 clips.
- Disengage the 2 guides and remove the instrument panel No. 2 speaker panel sub-assembly.

54. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (for RH Side)

HINT:

Use the same procedures for the RH side and the LH side (See page [AV-156](#)).

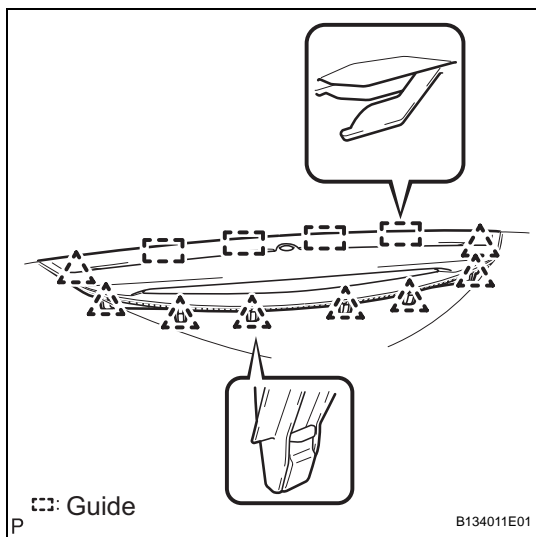

55. REMOVE NO. 1 DEFROSTER NOZZLE GARNISH


- Disengage the 8 clips and the 4 guides.
- Disconnect each connector and remove the No. 1 defroster nozzle garnish.

56. DISCONNECT INSTRUMENT PANEL WIRE ASSEMBLY (See page [RS-393](#))

57. REMOVE INSTRUMENT PANEL SAFETY PAD ASSEMBLY (for TMC Made)

- Disengage each clamp.
- Disconnect each connector.
- Remove the bolt <J>.
- Remove the 2 passenger airbag bolts <K>.


- (e) with "Plasmacluster":
 - (1) Disconnect the connector.

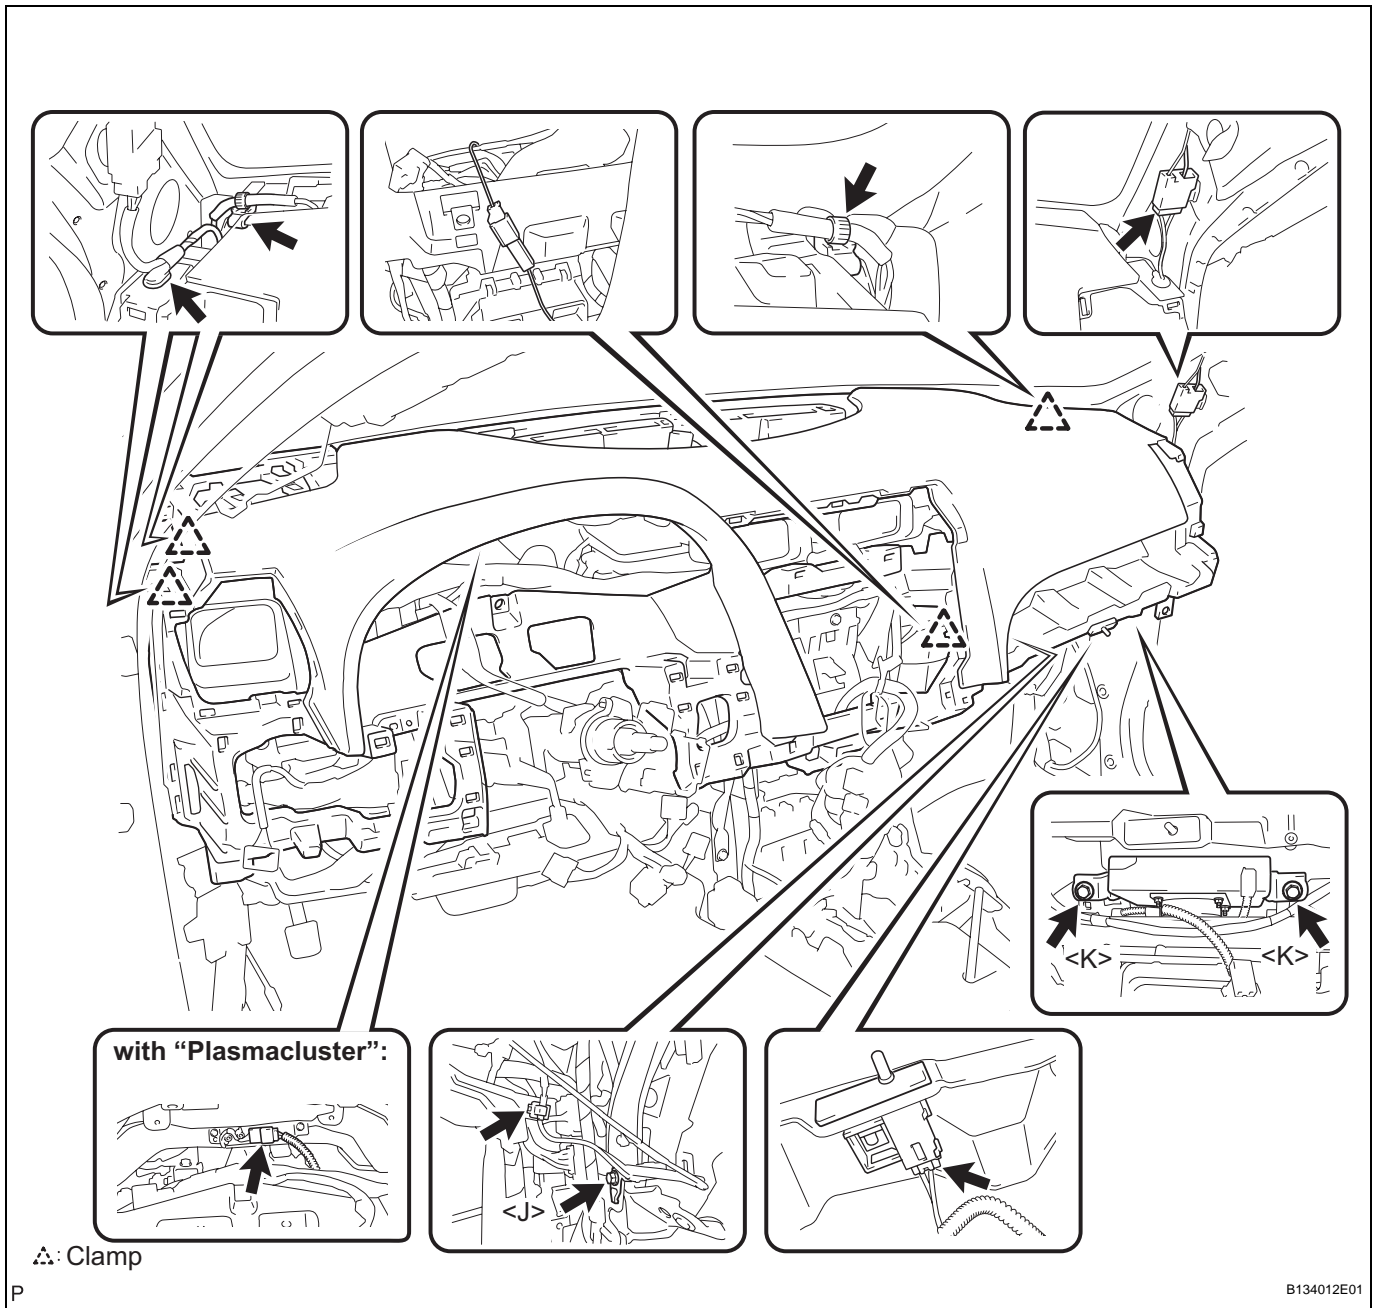

IP

- (f) Remove the 2 bolts <C> or <H>.
- (g) Remove the 2 nuts <I> or <Z>.


- (h) Disengage the 5 claws and remove the instrument panel safety pad assembly.

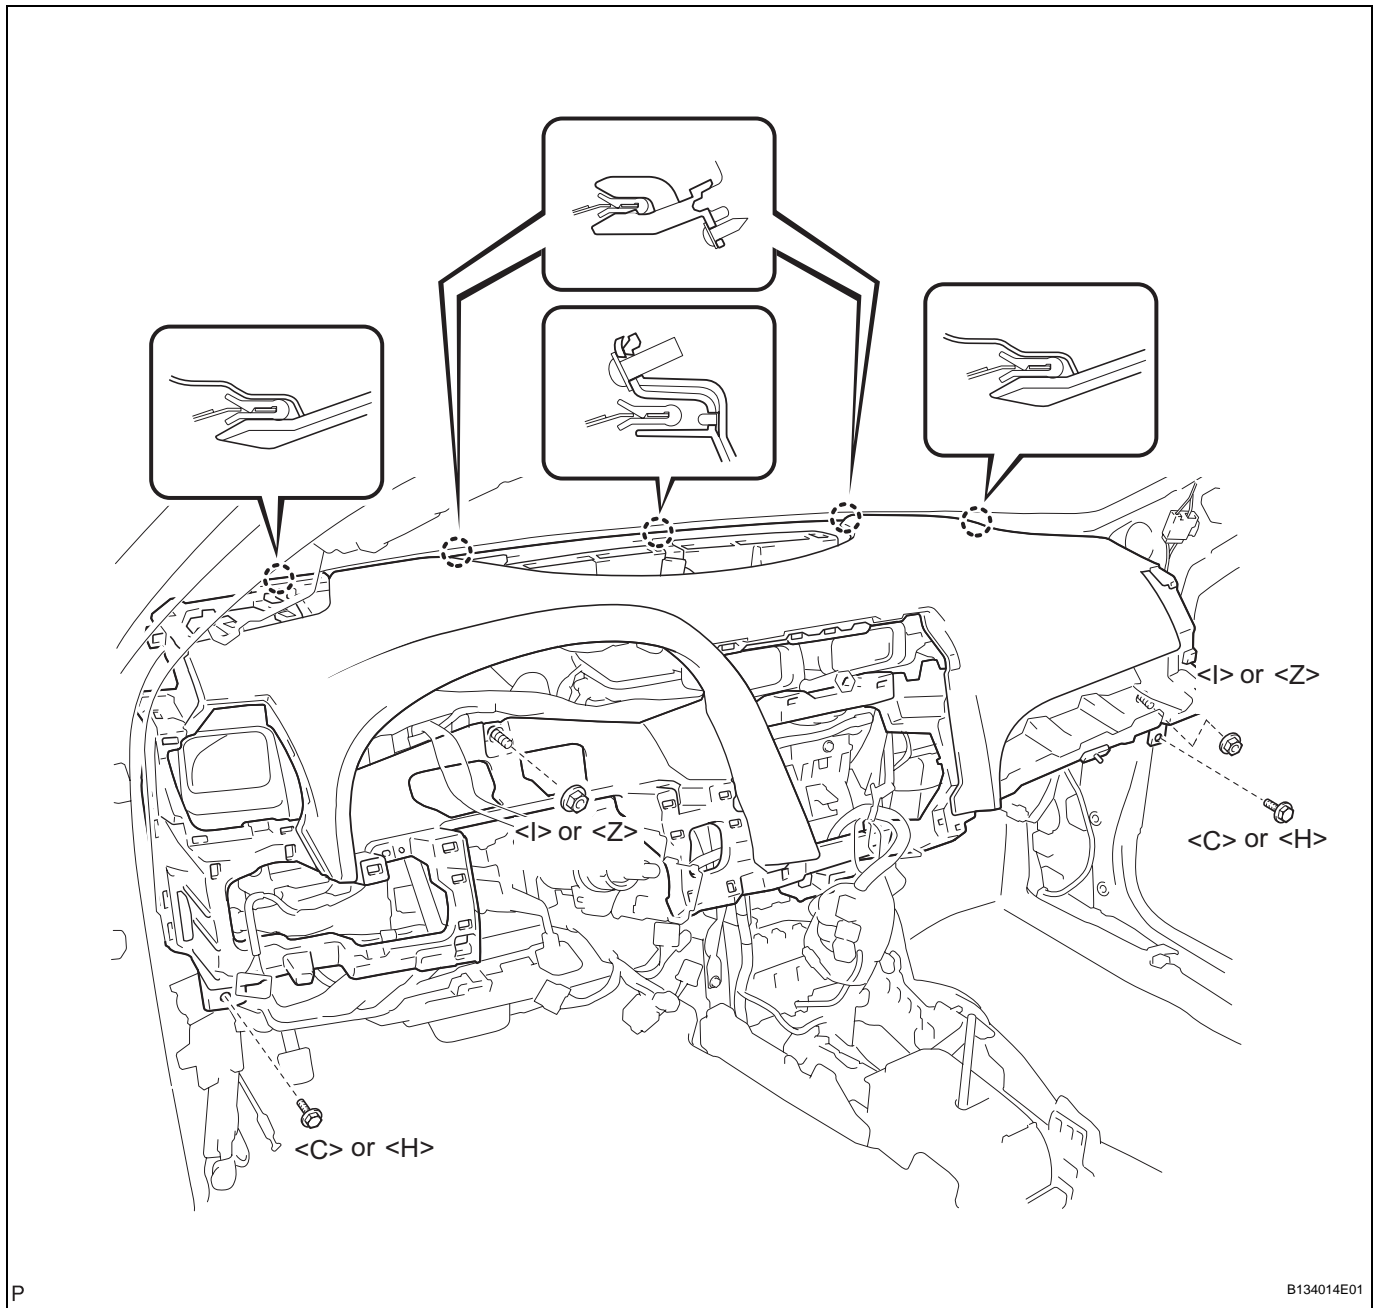

58. REMOVE INSTRUMENT PANEL SAFETY PAD ASSEMBLY (for TMMK Made)

- Disengage each clamp.
- Disconnect each connector.
- Remove the bolt <Y>.
- Remove the 2 passenger airbag bolts <V>.


- (e) with "Plasmacluster":
 - (1) Disconnect the connector.

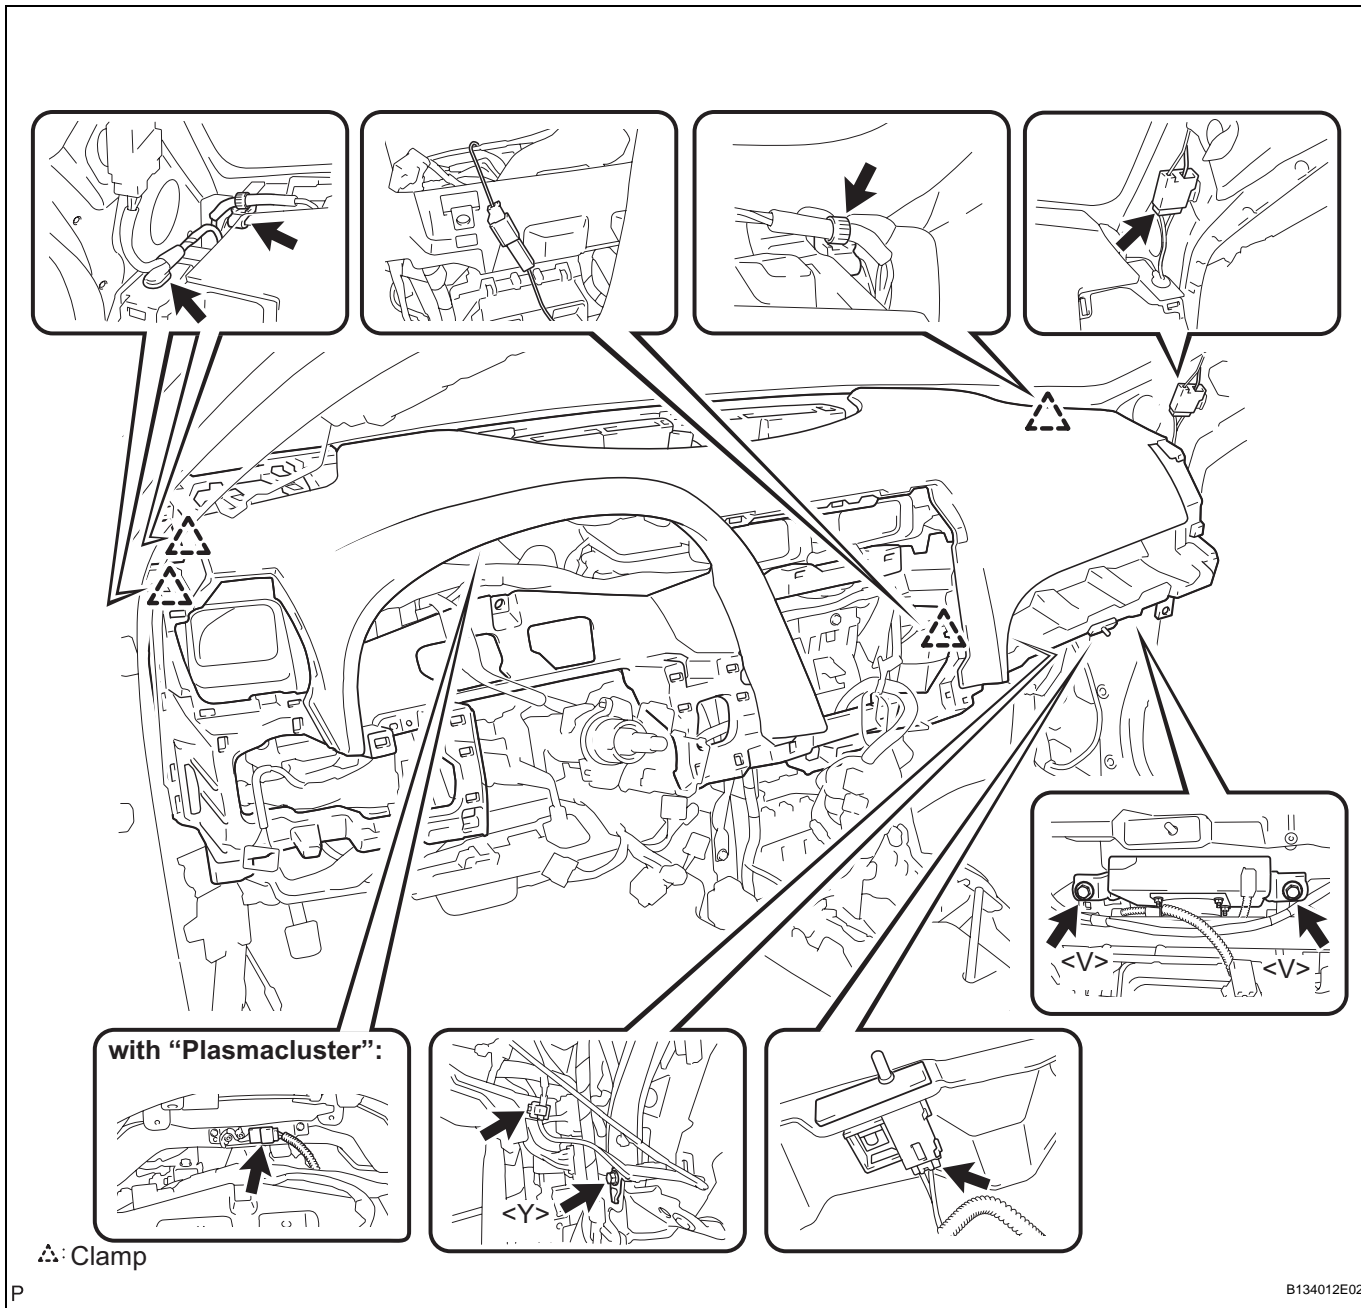

- (f) Remove the 2 bolts <N>, <a> or .
- (g) Remove the 2 nuts <U>.


IP

(h) Disengage the 5 claws and remove the instrument panel safety pad assembly.

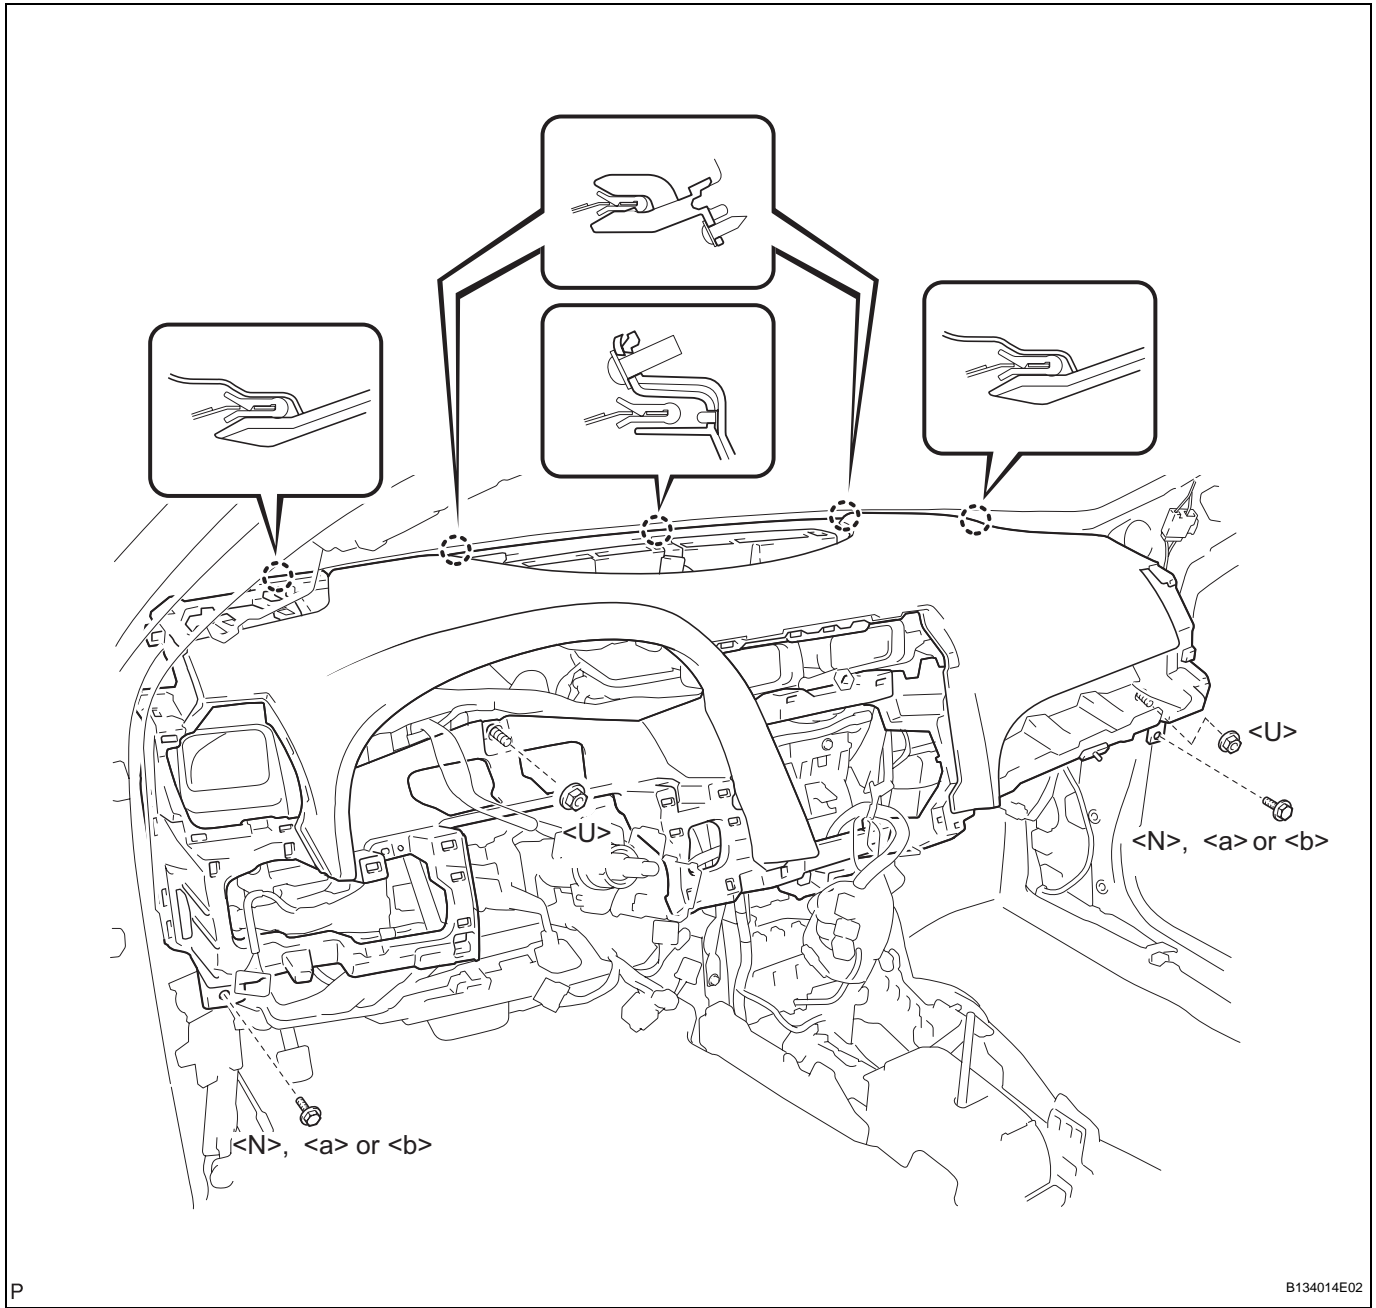

59. REMOVE NO. 3 INSTRUMENT PANEL STAY


- (a) Disengage the claw and remove the 5 No. 3 instrument panel stays.

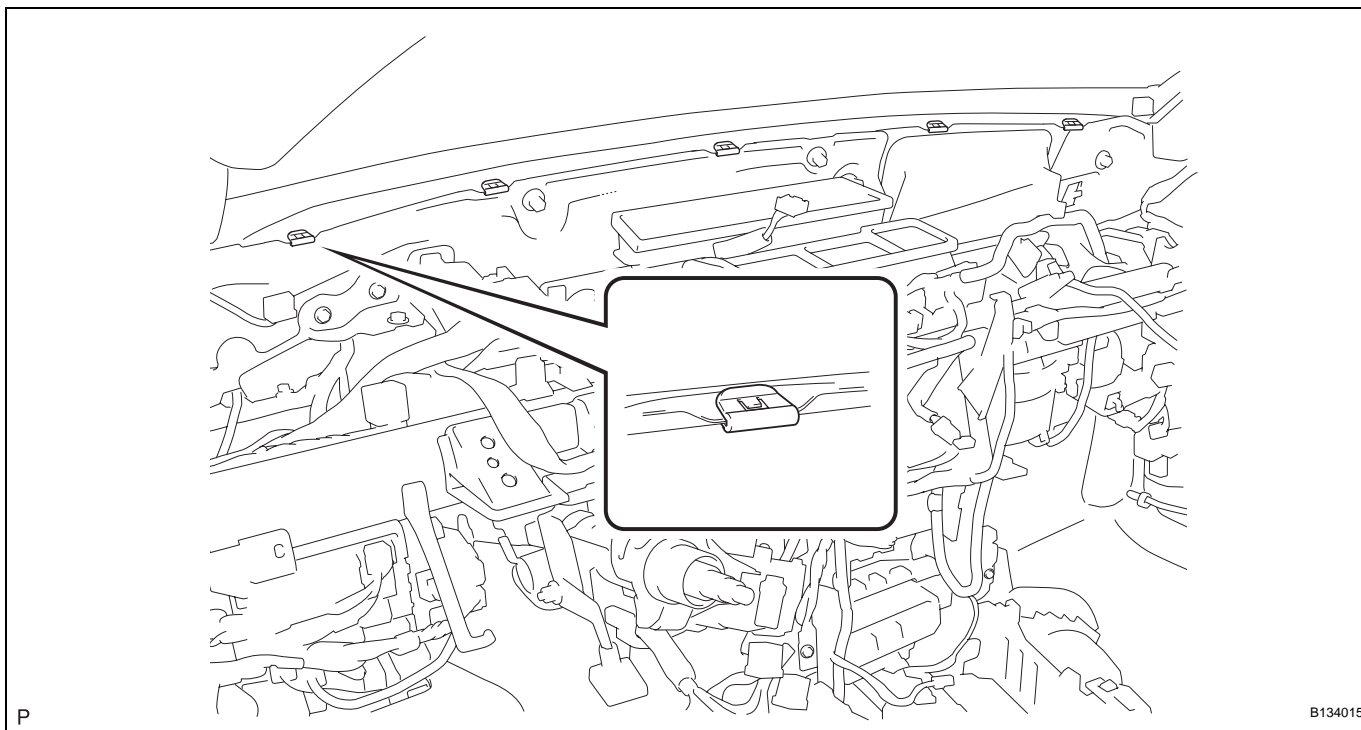


IP


DISASSEMBLY**1. REMOVE SIDE NO. 1 DEFROSTER NOZZLE DUCT (for TMC Made)**

- (a) Remove the screw <F> and the side No. 1 defroster nozzle duct.

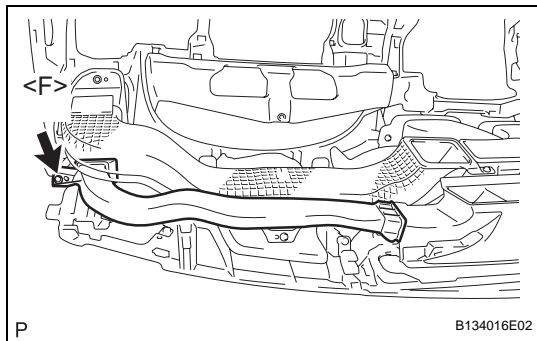**2. REMOVE SIDE NO. 1 DEFROSTER NOZZLE DUCT (for TMMK Made)**


- (a) Remove the screw <O> and the side No. 1 defroster nozzle duct.

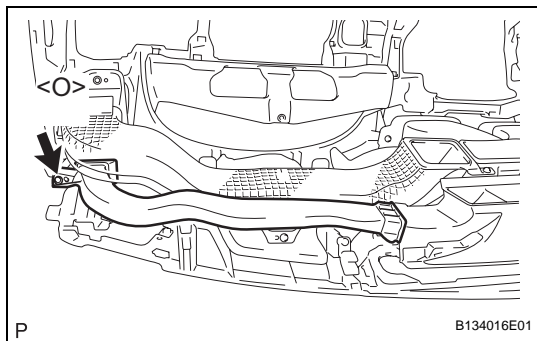

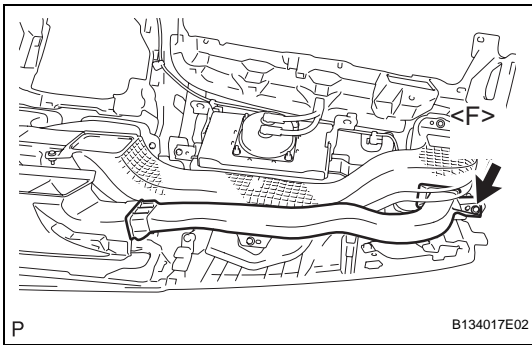


3. REMOVE SIDE NO. 2 DEFROSTER NOZZLE DUCT (for TMC Made)

- (a) Remove the screw <F> and the side No. 2 defroster nozzle duct.

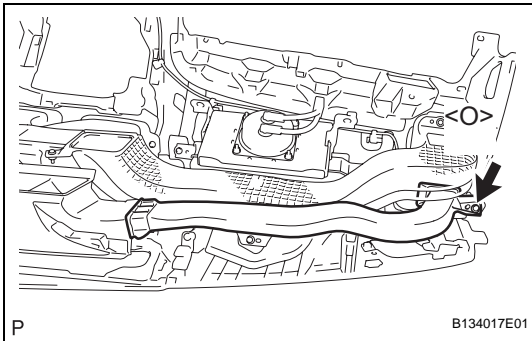


4. REMOVE SIDE NO. 2 DEFROSTER NOZZLE DUCT (for TMMK Made)

- (a) Remove the screw <O> and the side No. 2 defroster nozzle duct.

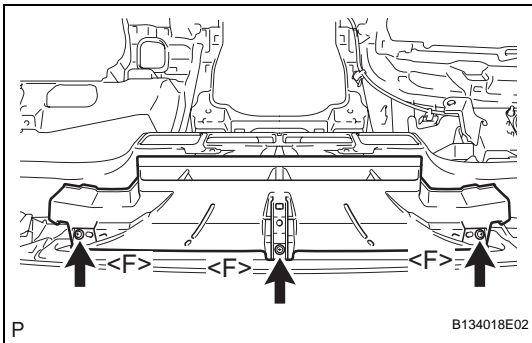


5. REMOVE DEFROSTER NOZZLE ASSEMBLY (for TMC Made)

- (a) Remove the 3 screws <F> and the defroster nozzle assembly.

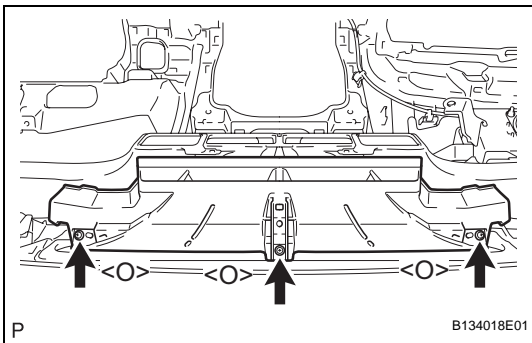


6. REMOVE DEFROSTER NOZZLE ASSEMBLY (for TMMK Made)

- (a) Remove the 3 screws <O> and the defroster nozzle assembly.

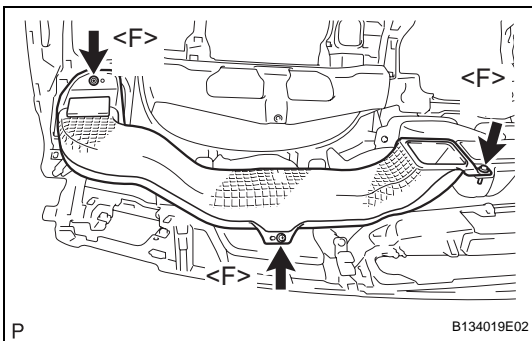


7. REMOVE NO. 1 HEATER TO REGISTER DUCT (for TMC Made)


- (a) Remove the 3 screws <F> and the No. 1 heater to register duct.

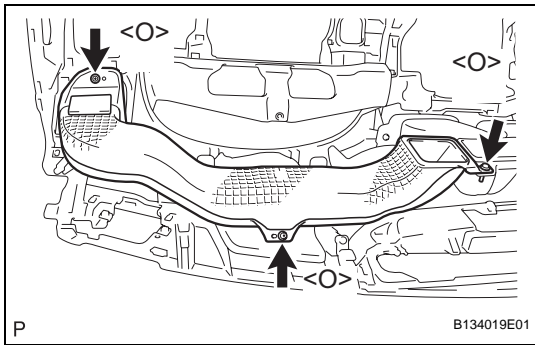


- 8. REMOVE NO. 1 HEATER TO REGISTER DUCT (for TMMK Made)**
 (a) Remove the 3 screws <O> and the No. 1 heater to register duct.

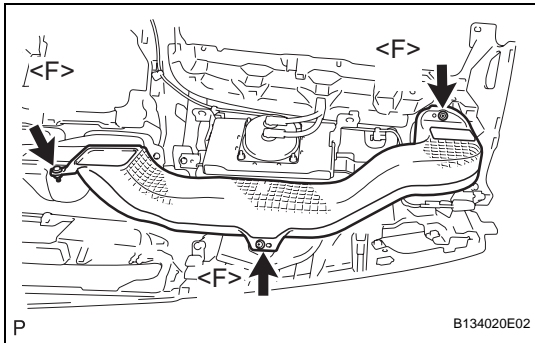


- 9. REMOVE NO. 3 HEATER TO REGISTER DUCT (for TMC Made)**
 (a) Remove the 3 screws <F> and the No. 3 heater to register duct.

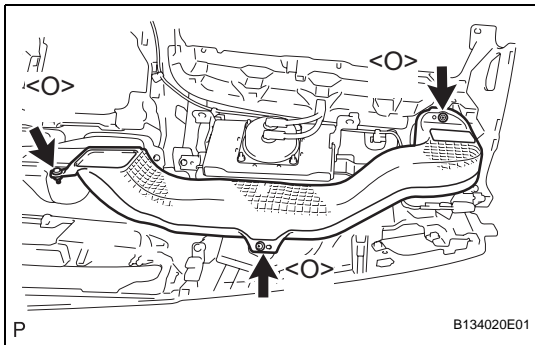


- 10. REMOVE NO. 3 HEATER TO REGISTER DUCT (for TMMK Made)**
 (a) Remove the 3 screws <O> and the No. 3 heater to register duct.

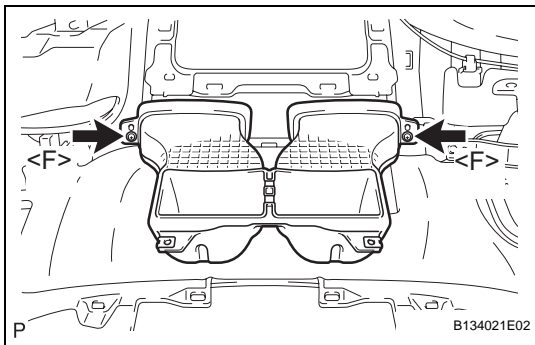

- 11. REMOVE NO. 2 HEATER TO REGISTER DUCT (for TMC Made)**
 (a) Remove the 2 screws <F> and the No. 2 heater to register duct.

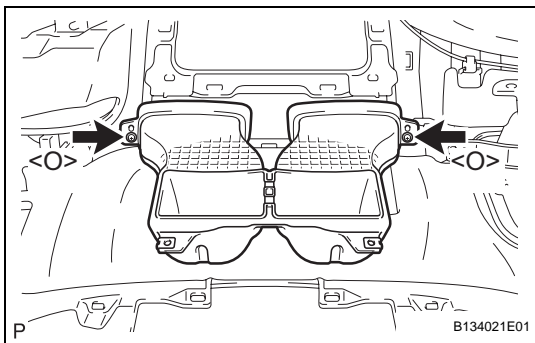

- 12. REMOVE NO. 2 HEATER TO REGISTER DUCT (for TMMK Made)**
 (a) Remove the 2 screws <O> and the No. 2 heater to register duct.
- 13. REMOVE NO. 2 ANTENNA CORD SUB-ASSEMBLY (See page AV-196)**
- 14. REMOVE NAVIGATION ANTENNA ASSEMBLY (See page NS-214)**

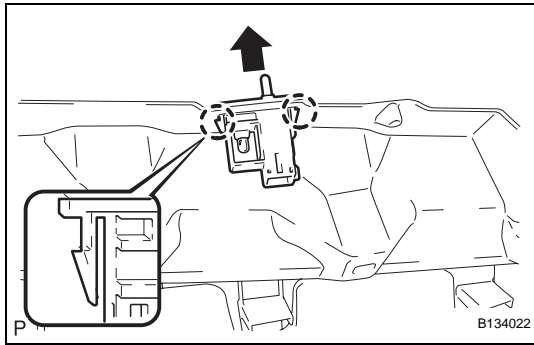


15. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY
(See page [RS-395](#))

16. REMOVE GLOVE BOX LIGHT ASSEMBLY


- (a) Disengage the 2 claws and remove the glove box light assembly.

17. REMOVE PLASMACLUSTER (w/ Plasmacluster) (See page [AC-276](#))

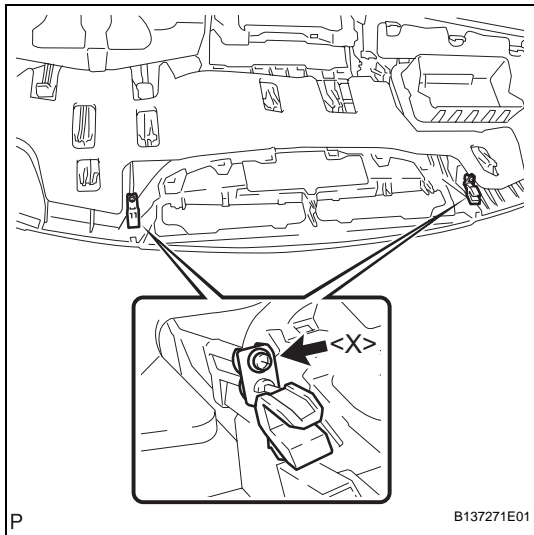

18. REMOVE NO. 1 INSTRUMENT PANEL PIN (for TMMK Made)

- (a) Remove the 2 screws <X> and 2 No. 1 instrument panel pins.

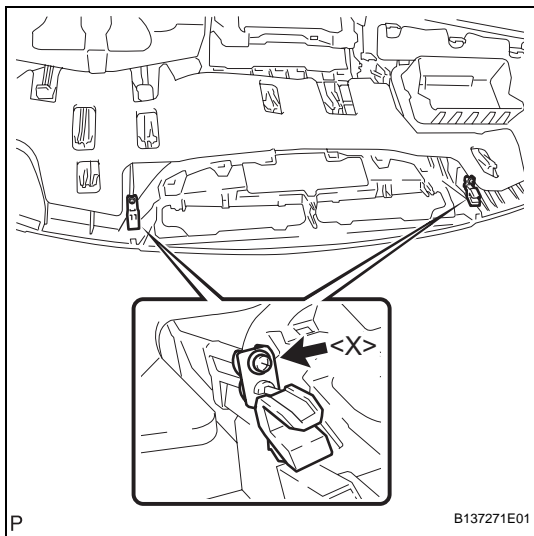


REASSEMBLY


1. INSTALL NO. 1 INSTRUMENT PANEL PIN (for TMMK Made)

- (a) Install the 2 No. 1 instrument panel pins with the 2 screws <X>.


2. INSTALL PLASMACLUSTER (w/ Plasmacluster) (See page [AC-276](#))

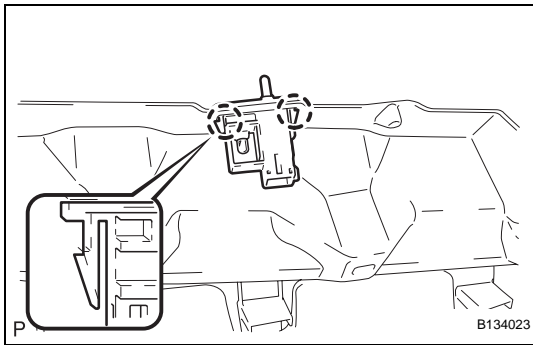


3. **INSTALL GLOVE BOX LIGHT ASSEMBLY**
(a) Engage the 2 claws and install the glove box light.
4. **INSTALL NAVIGATION ANTENNA ASSEMBLY** (See page [NS-214](#))
5. **INSTALL NO. 2 ANTENNA CORD SUB-ASSEMBLY** (See page [AV-210](#))

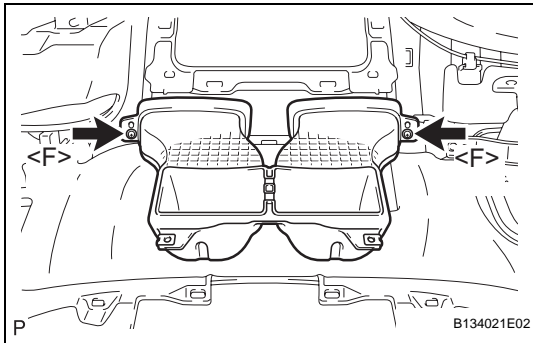


6. **INSTALL NO. 2 HEATER TO REGISTER DUCT (for TMC Made)**
(a) Install the No. 2 heater to register duct with the 2 screws <F>.

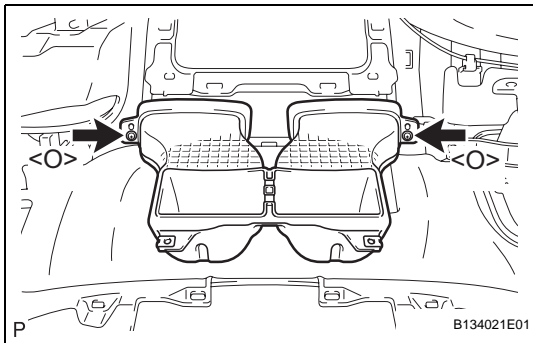


7. **INSTALL NO. 2 HEATER TO REGISTER DUCT (for TMMK Made)**
(a) Install the No. 2 heater to register duct with the 2 screws <O>.

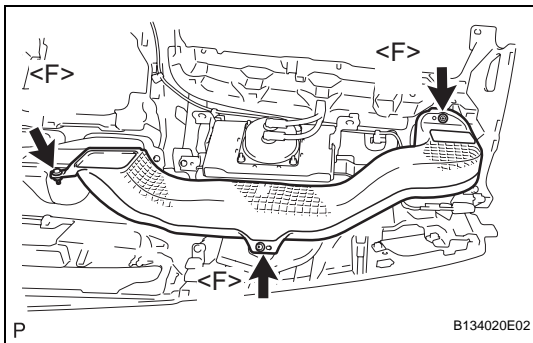

8. **INSTALL NO. 3 HEATER TO REGISTER DUCT (for TMC Made)**
(a) Install the No. 3 heater to register duct with the 3 screws <F>.

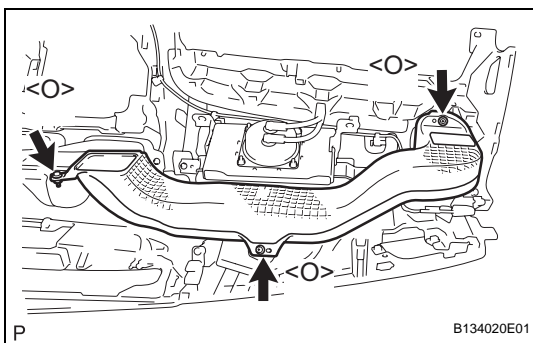


9. **INSTALL NO. 3 HEATER TO REGISTER DUCT (for TMMK Made)**
(a) Install the No. 3 heater to register duct with the 3 screws <O>.

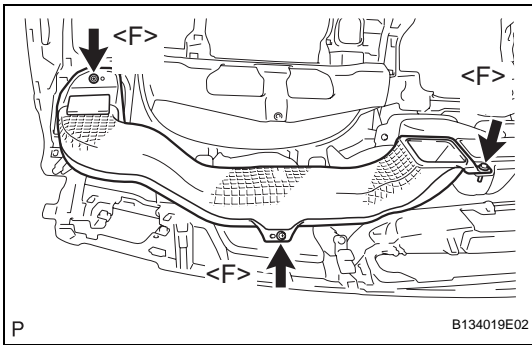


10. INSTALL NO. 1 HEATER TO REGISTER DUCT (for TMC Made)

- (a) Install the No. 1 heater to register duct with the 3 screws <F>.

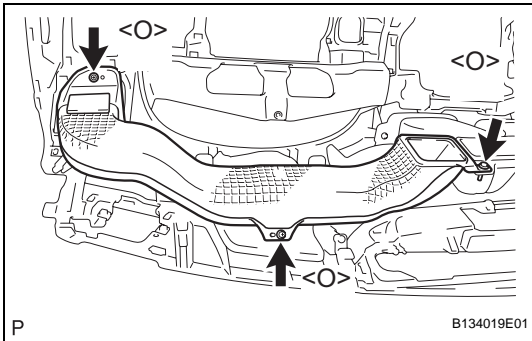


11. INSTALL NO. 1 HEATER TO REGISTER DUCT (for TMMK Made)

- (a) Install the No. 1 heater to register duct with the 3 screws <O>.

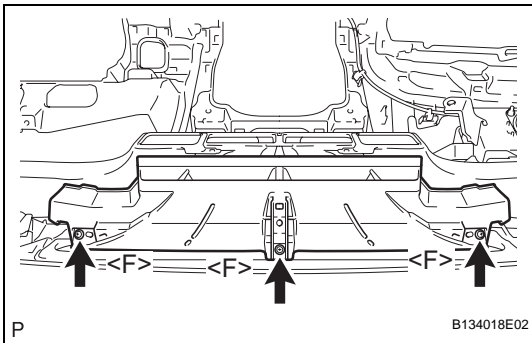


12. INSTALL DEFROSTER NOZZLE ASSEMBLY (for TMC Made)

- (a) Install the defroster nozzle assembly with the 3 screws <F>.

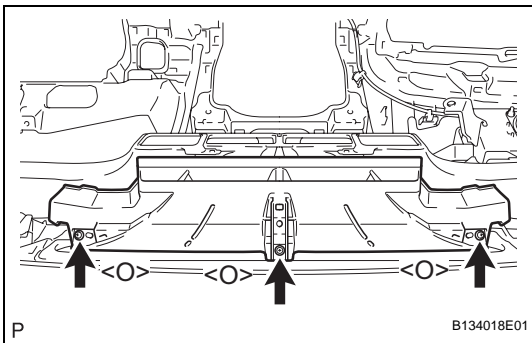


13. INSTALL DEFROSTER NOZZLE ASSEMBLY (for TMMK Made)

- (a) Install the defroster nozzle assembly with the 3 screws <O>.

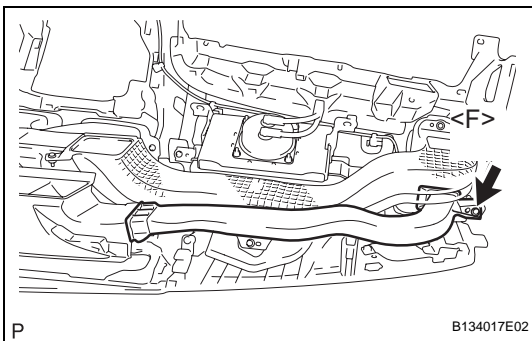


14. INSTALL SIDE NO. 2 DEFROSTER NOZZLE DUCT (for TMC Made)


- (a) Install the side No. 2 defroster nozzle duct with the screw <F>.

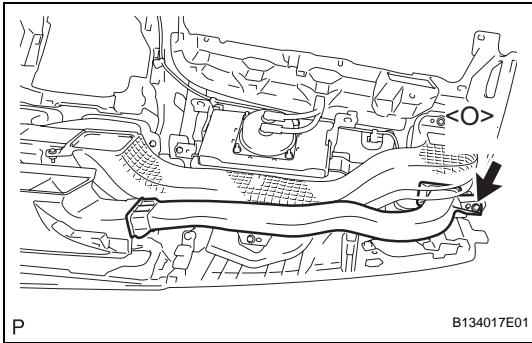**15. INSTALL SIDE NO. 2 DEFROSTER NOZZLE DUCT
(for TMMK Made)**

- (a) Install the side No. 2 defroster nozzle duct with the screw <O>.

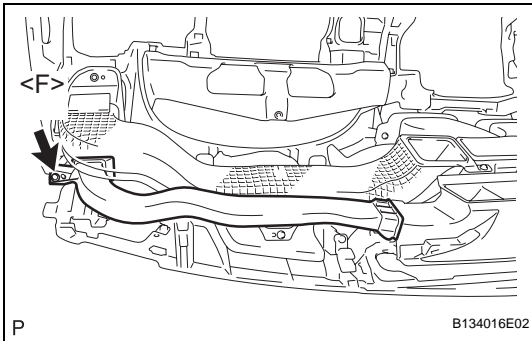**16. INSTALL SIDE NO. 1 DEFROSTER NOZZLE DUCT
(for TMC Made)**

- (a) Install the side No. 1 defroster nozzle duct with the screw <F>.

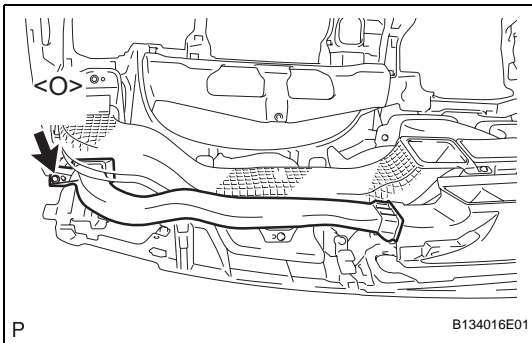
**17. INSTALL SIDE NO. 1 DEFROSTER NOZZLE DUCT
(for TMMK Made)**

- (a) Install the side No. 1 defroster nozzle duct with the screw <O>.

INSTALLATION

1. INSTALL NO. 3 INSTRUMENT PANEL STAY

- (a) Engage the claw and install the 5 No. 3 instrument panel stays.

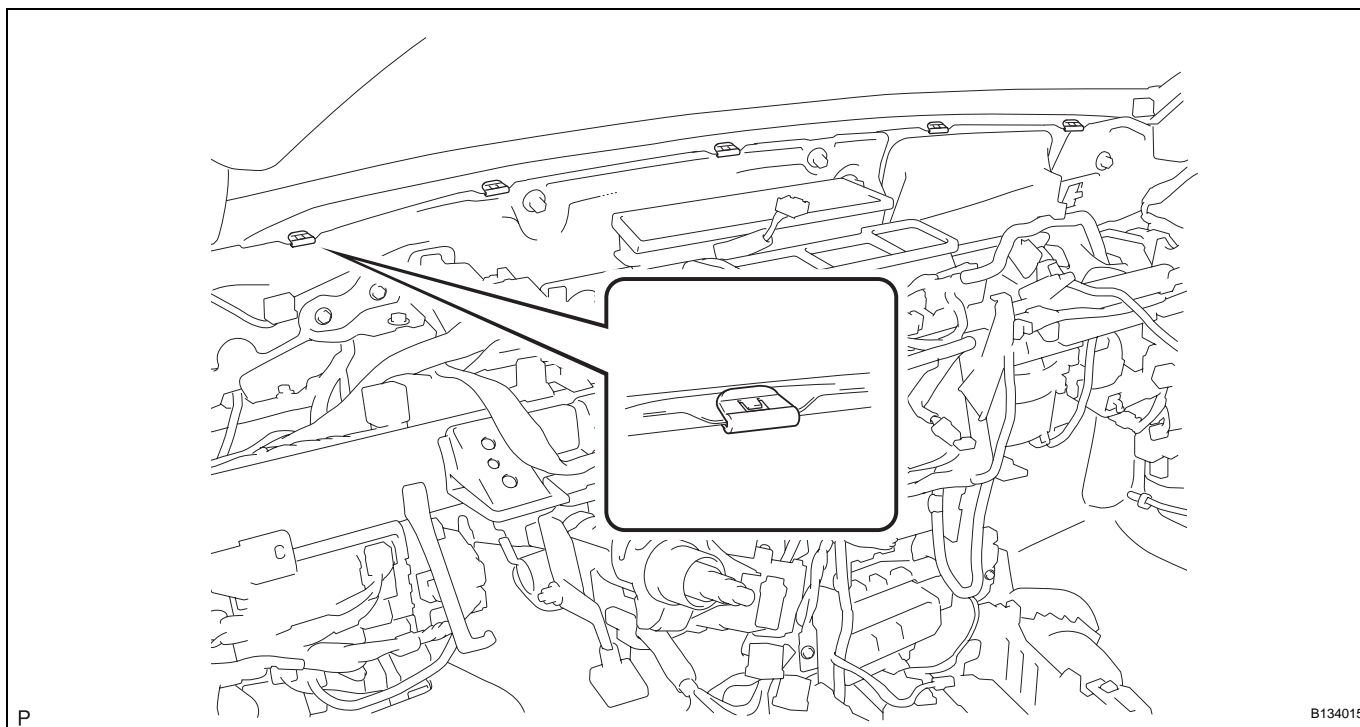


2. INSTALL INSTRUMENT PANEL SAFETY PAD ASSEMBLY (for TMC Made)

- (a) Engage the 5 claws.

NOTICE:


Do not allow the wire harness to get caught in the claws.

(b) Install the 2 bolts <C> or <H> and 2 nuts <I> or <Z>.

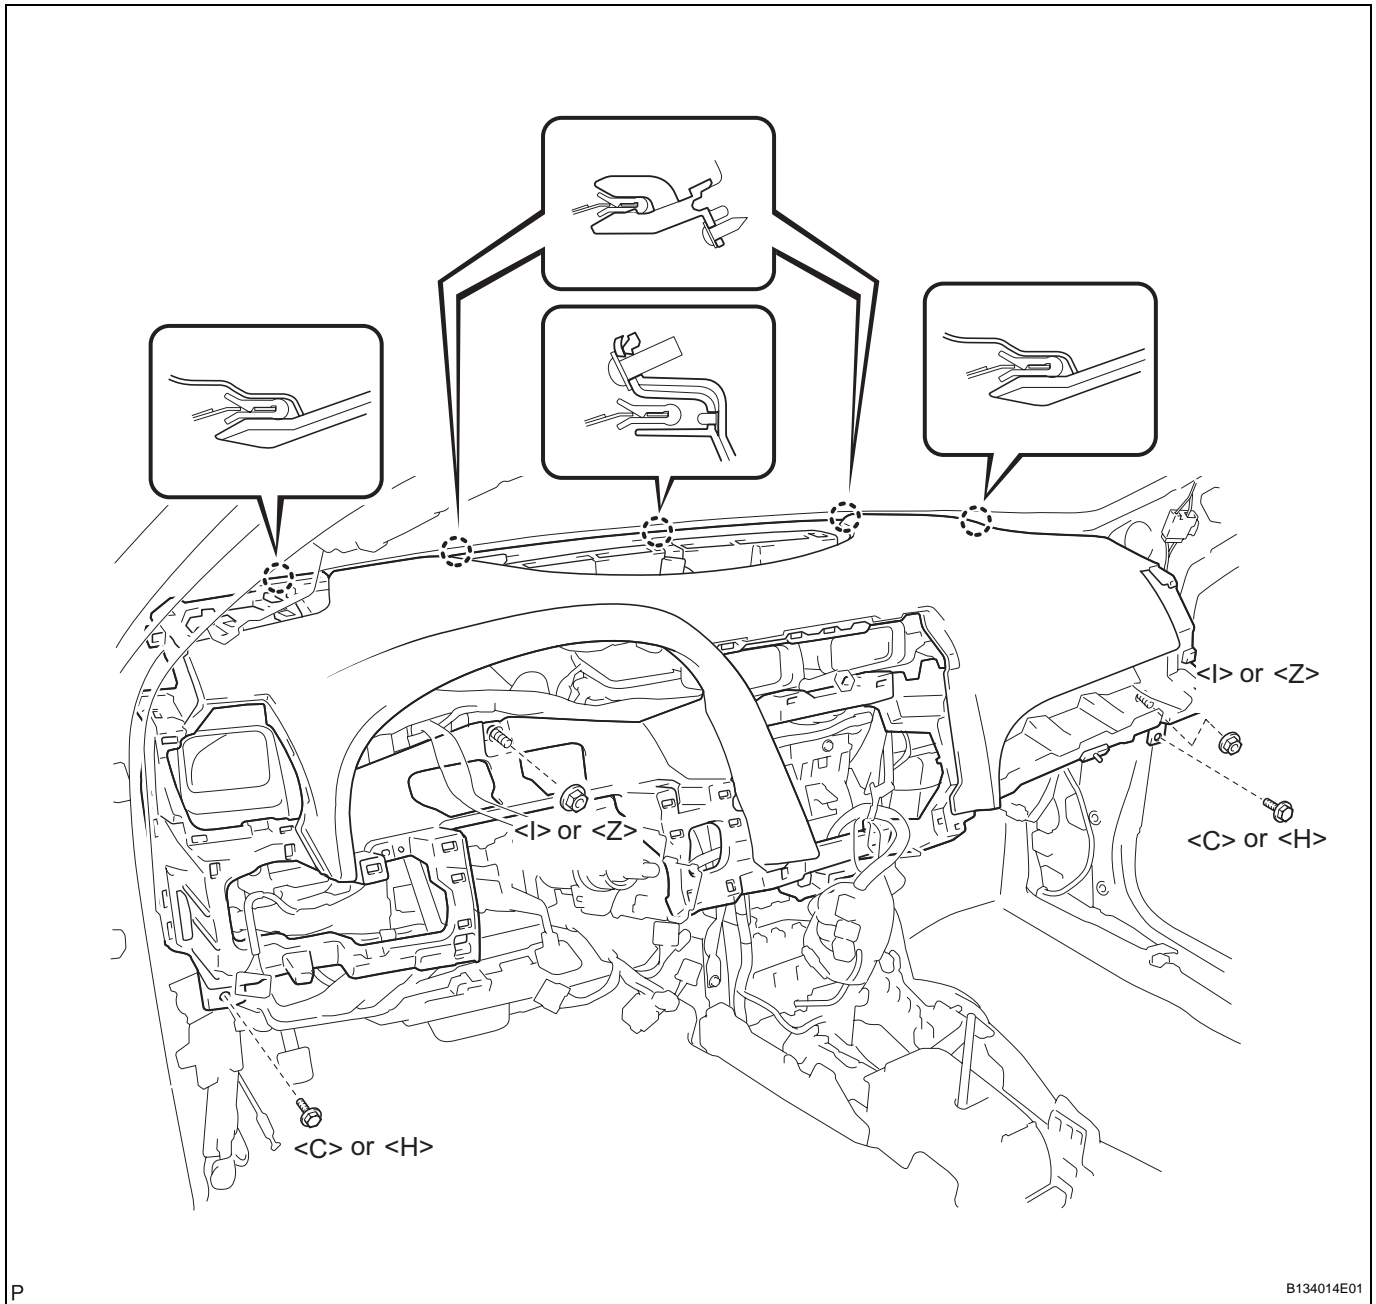

- (c) Engage each clamp.
 (d) Install the bolt <J>.
Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)
 (e) Install the 2 passenger airbag bolts <K>.
Torque: 20 N*m (204 kgf*cm, 15 ft.*lbf)
 (f) Connect each connector and install the instrument panel safety pad assembly.

- (g) with "Plasmacluster":
 - (1) Connect the connector.

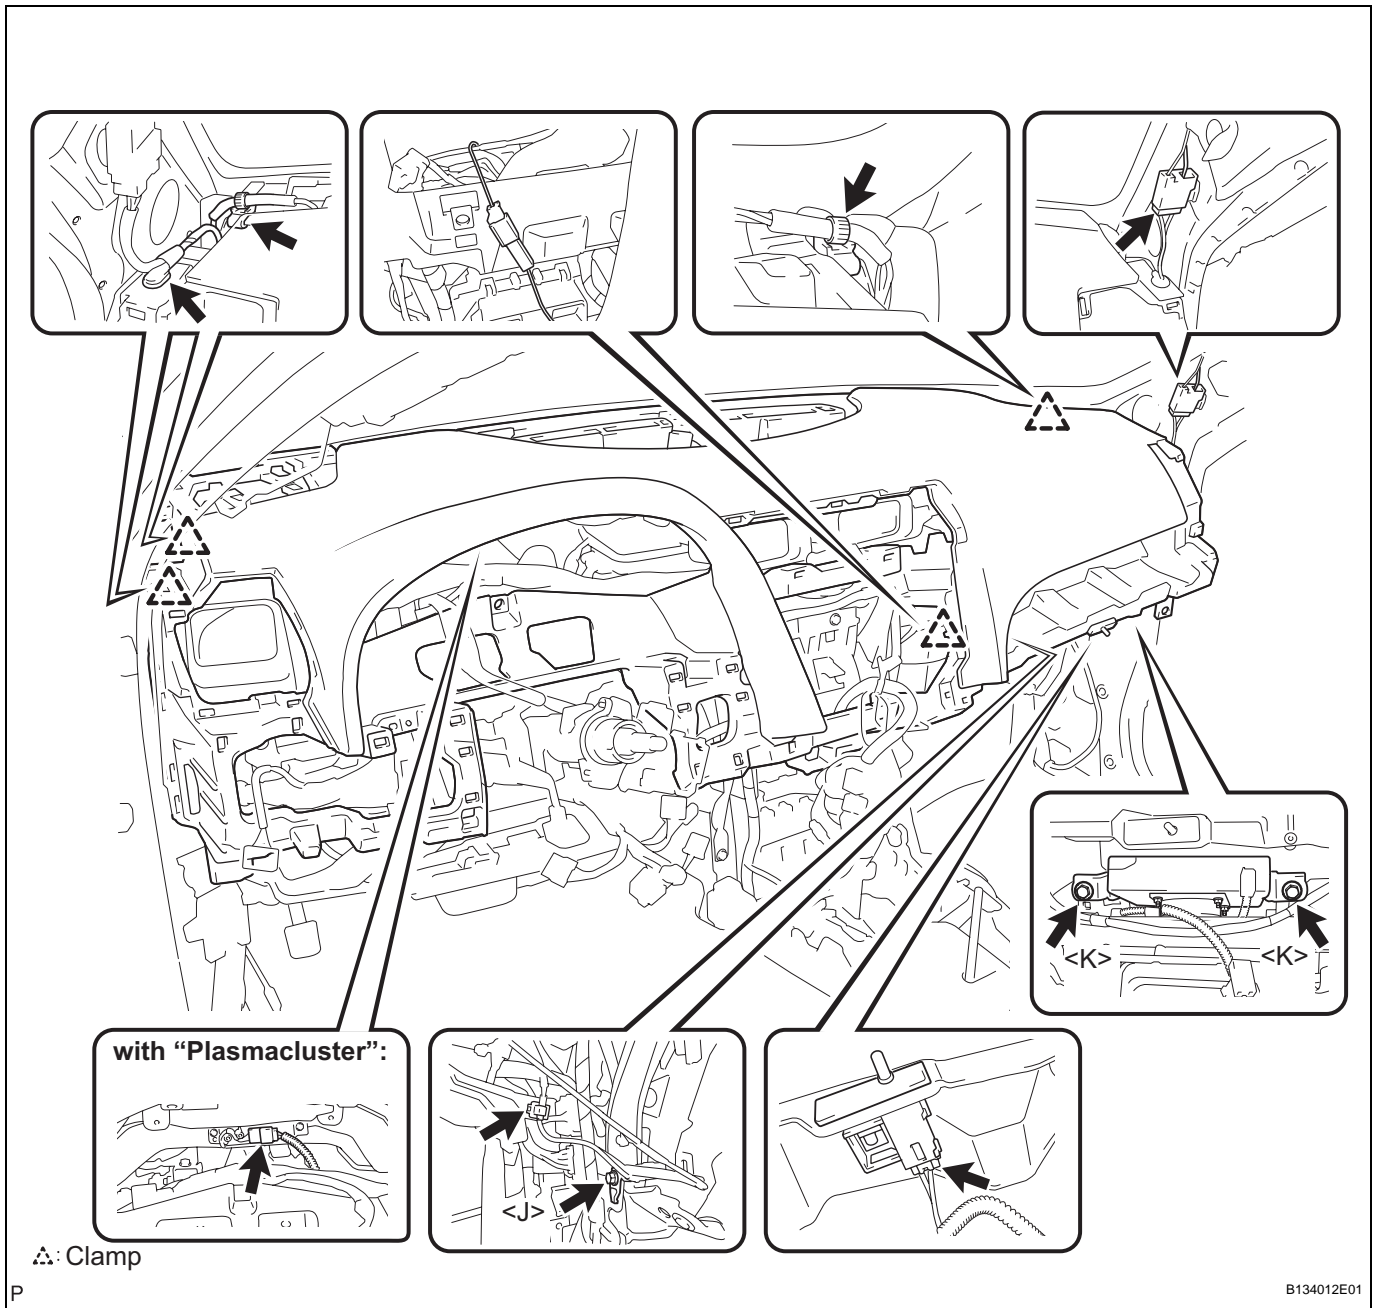


3. INSTALL INSTRUMENT PANEL SAFETY PAD ASSEMBLY (for TMMK Made)

- (a) Engage the 5 claws.

NOTICE:

Do not allow the wire harness to get caught in the claws.


(b) Install the 2 bolts <N>, <a> or and 2 nuts <U>.

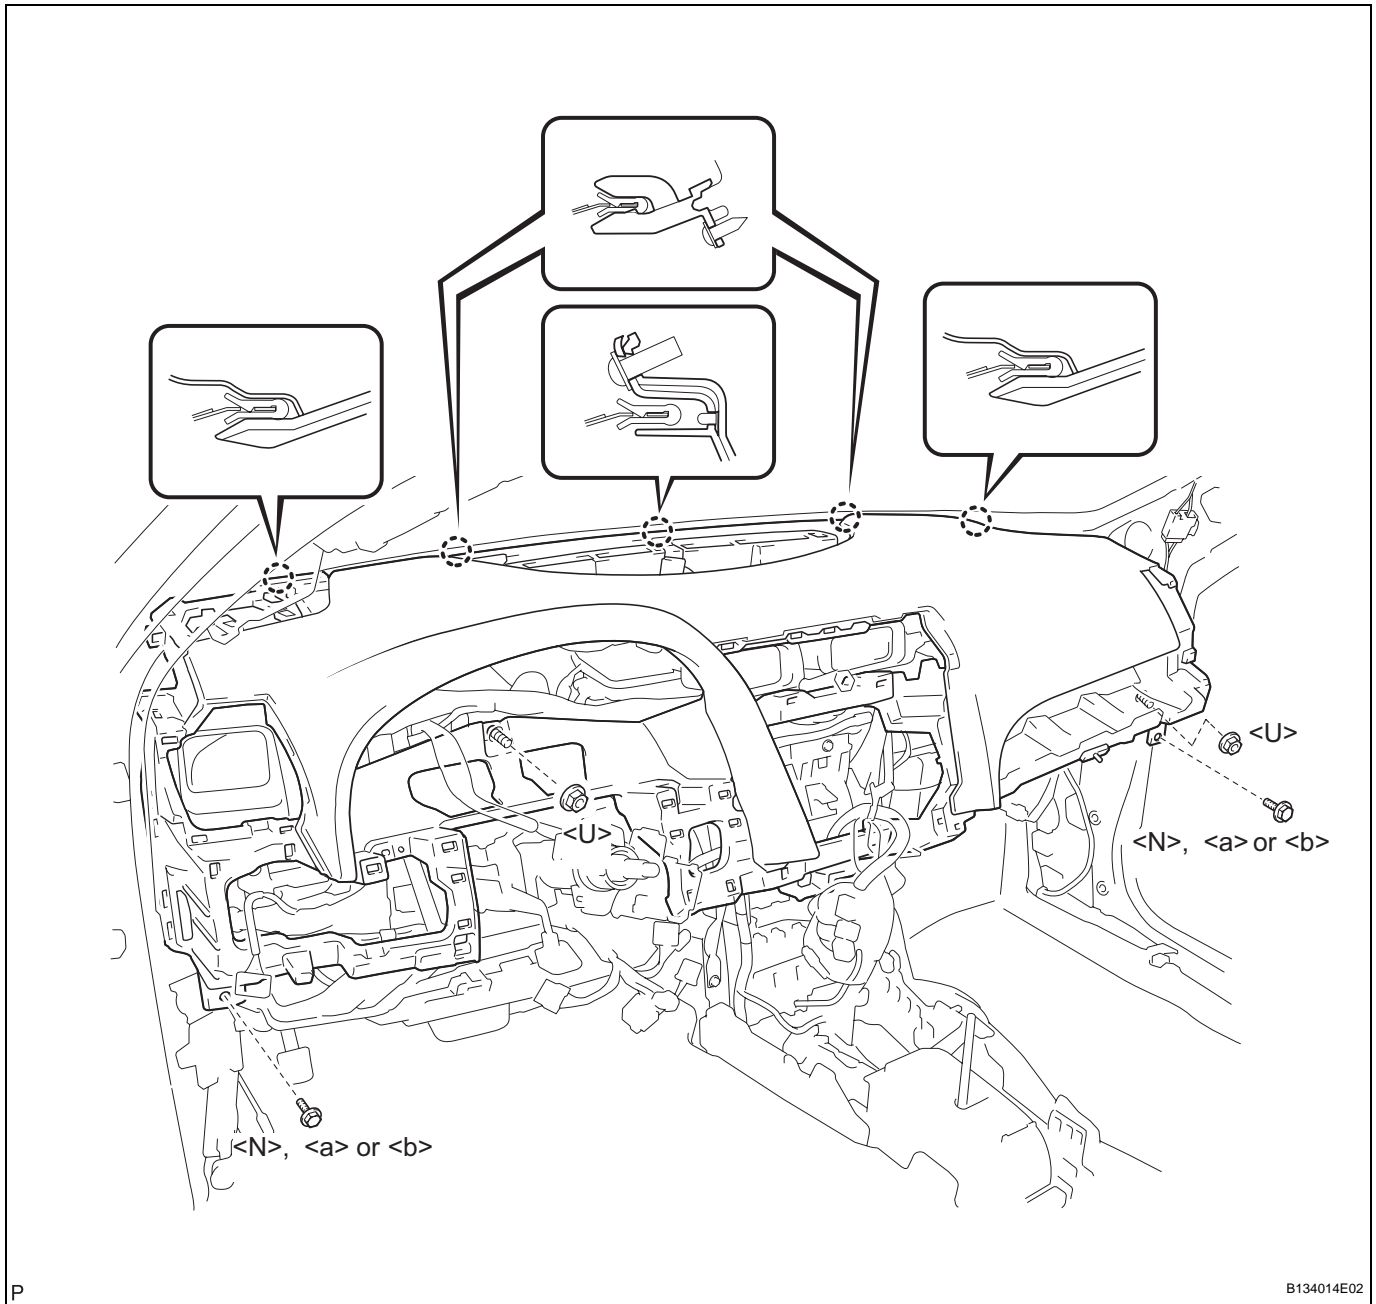


- (c) Engage each clamp.
 (d) Install the bolt <Y>.
Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)
 (e) Install the 2 passenger airbag bolts <V>.
Torque: 20 N*m (204 kgf*cm, 15 ft.*lbf)
 (f) Connect each connector and install the instrument panel safety pad assembly.

- (g) with "Plasmacluster":
 - (1) Connect the connector.


IP

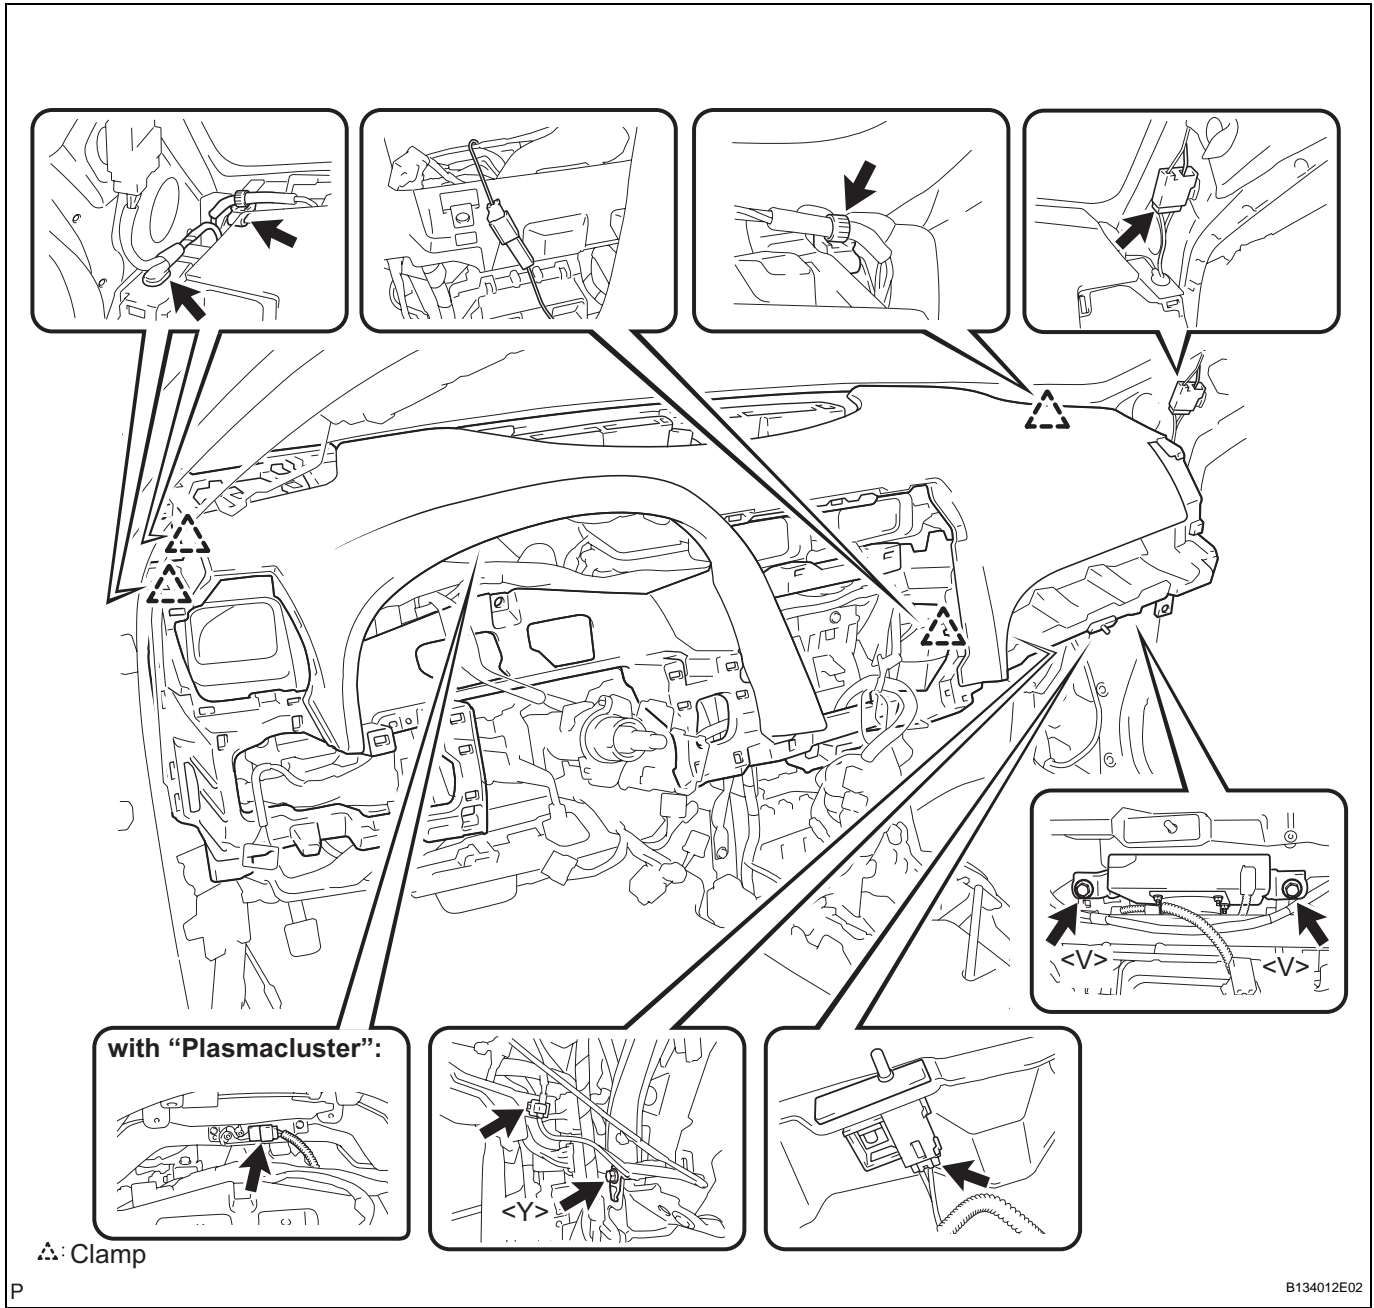


4. CONNECT INSTRUMENT PANEL WIRE ASSEMBLY
(See page [RS-398](#))

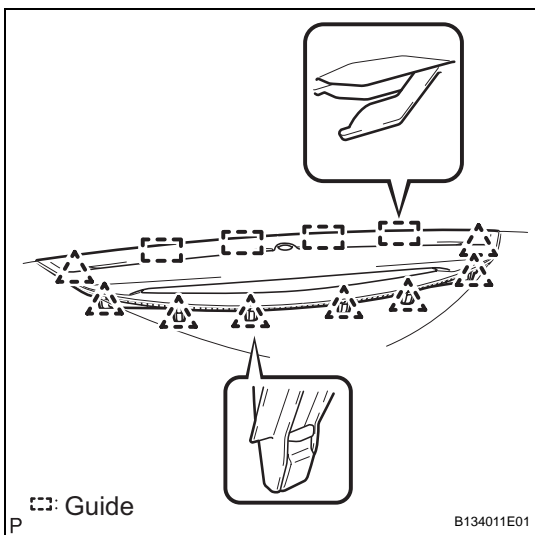


5. **INSTALL NO. 1 DEFROSTER NOZZLE GARNISH**
 - (a) Connect each connector.
 - (b) Engage the 4 guides.
 - (c) Engage the 8 clips and install the No. 1 defroster nozzle garnish.
6. **INSTALL FRONT NO. 2 SPEAKER ASSEMBLY (for LH Side) (See page AV-156)**

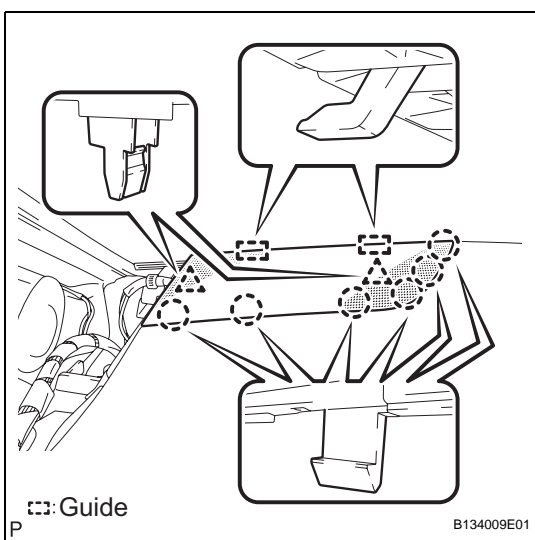

7. **INSTALL INSTRUMENT PANEL NO. 1 SPEAKER PANEL SUB-ASSEMBLY**
 - (a) Engage the 2 guides.
 - (b) Engage the 6 claws and the 2 clips to install the instrument panel No. 1 speaker panel sub-assembly.

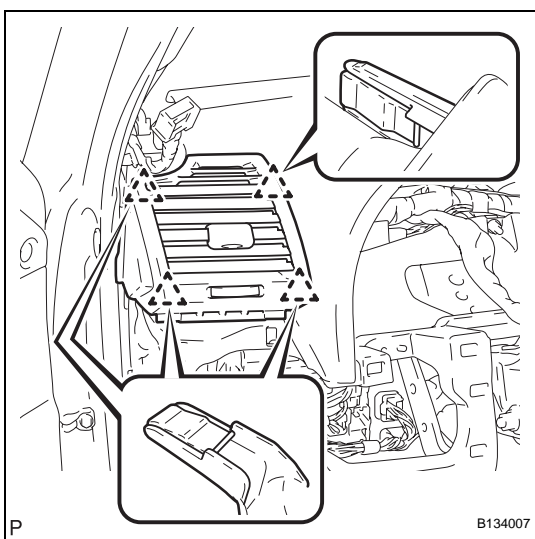


8. **INSTALL INSTRUMENT PANEL NO. 1 REGISTER ASSEMBLY**
 - (a) Engage the 4 clips and install the instrument panel No. 1 register assembly.
9. **INSTALL FRONT PILLAR GARNISH LH (See page IR-51)**
10. **INSTALL FRONT NO. 2 SPEAKER ASSEMBLY (for RH Side)**
HINT:
 Use the same procedures for the RH side and the LH side (See page AV-156).

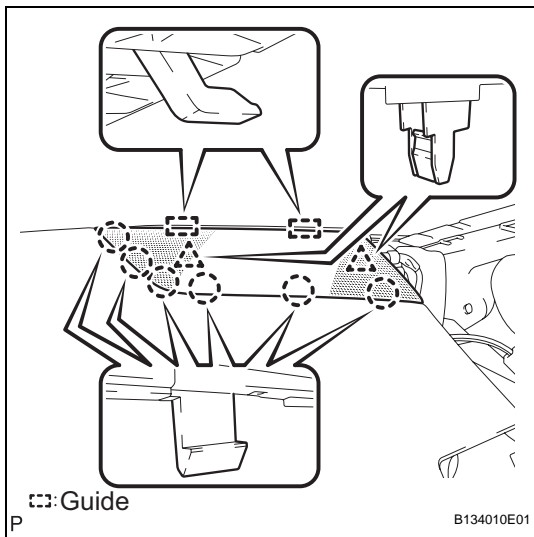

11. INSTALL INSTRUMENT PANEL NO. 2 SPEAKER PANEL SUB-ASSEMBLY


- (a) Engage the 2 guides.
- (b) Engage the 6 claws and the 2 clips to install the instrument panel No. 2 speaker panel sub-assembly.

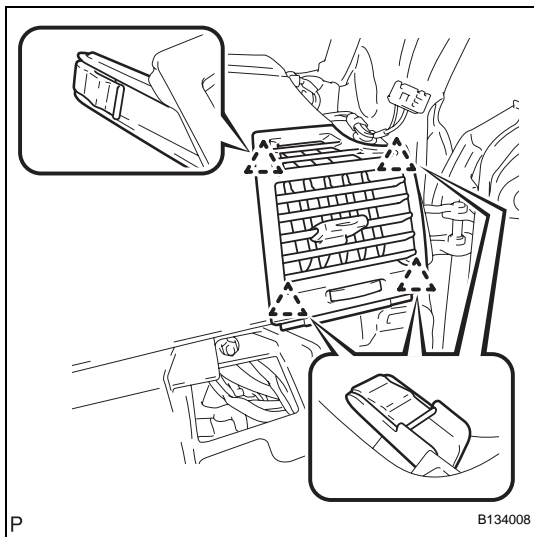

12. INSTALL INSTRUMENT PANEL NO. 3 REGISTER ASSEMBLY


- (a) Engage the 4 clips and install the instrument panel No. 3 register assembly.

13. INSTALL FRONT PILLAR GARNISH RH (See page [IR-52](#))

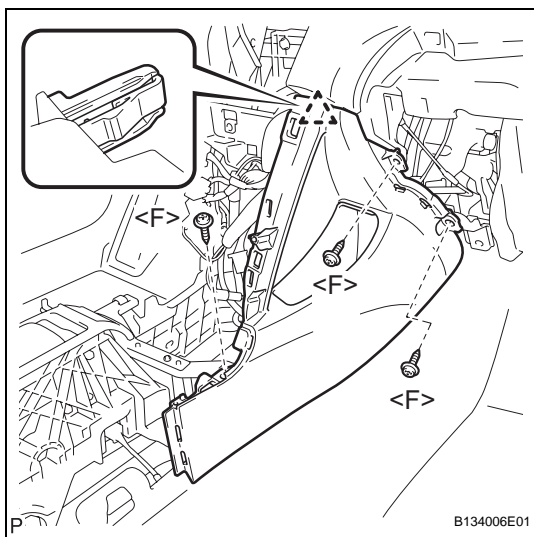


14. INSTALL NO. 1 CONSOLE BOX INSERT FRONT (for TMC Made)

- (a) Engage the clip.
- (b) Install the No. 1 console box insert front with the 3 screws <F>.

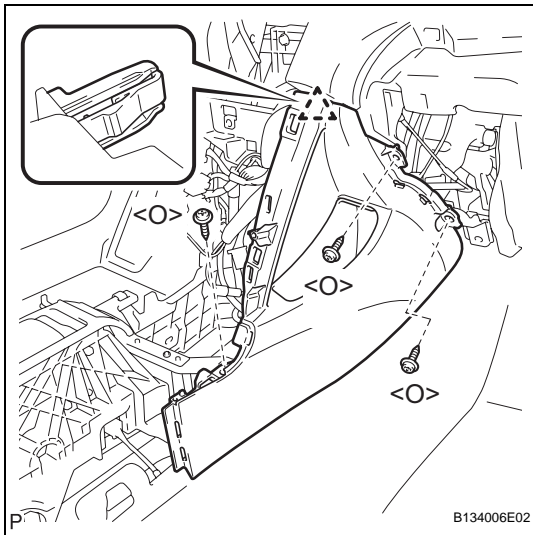


15. INSTALL NO. 1 CONSOLE BOX INSERT FRONT (for TMMK Made)

- (a) Engage the clip.
- (b) Install the No. 1 console box insert front with the 3 screws <O>.

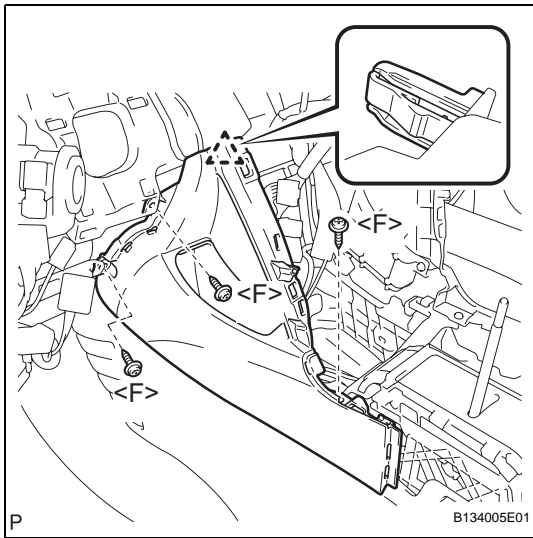


16. INSTALL NO. 2 CONSOLE BOX INSERT FRONT (for TMC Made)

- (a) Engage the clip.
- (b) Install the No. 2 console box insert front with the 3 screws <F>.

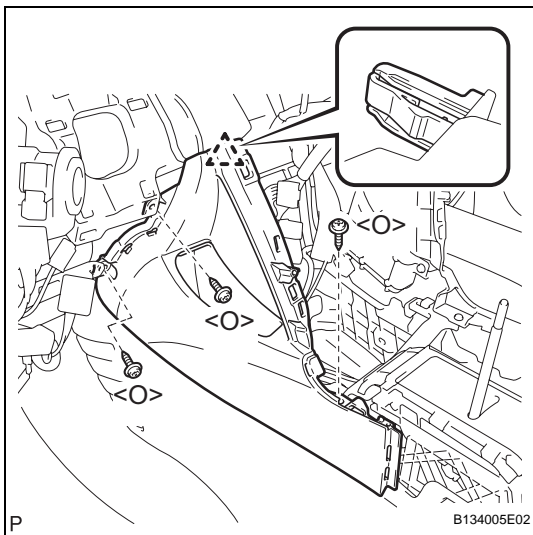


17. INSTALL NO. 2 CONSOLE BOX INSERT FRONT (for TMMK Made)


- (a) Engage the clip.
- (b) Install the No. 2 console box insert front with the 3 screws <O>.

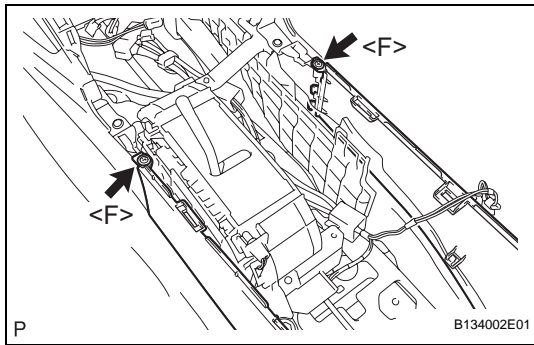**18. INSTALL CONSOLE BOX ASSEMBLY (for TMC Made)**


(a) Install the 2 screws <F>.

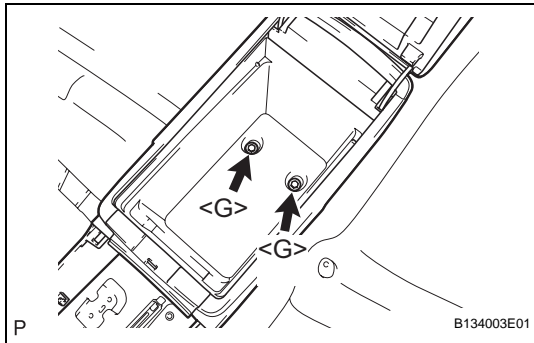


(b) Install the console box assembly with the 2 bolts <G>.

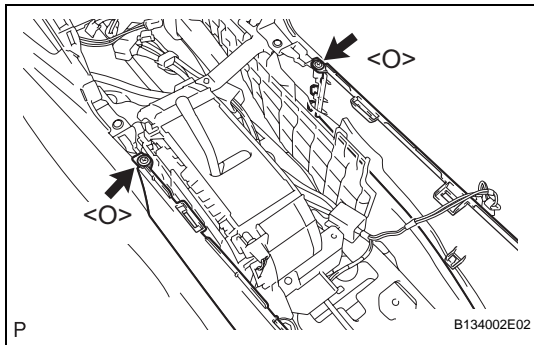**19. INSTALL CONSOLE BOX ASSEMBLY (for TMMK Made)**

(a) Install the 2 screws <O>.

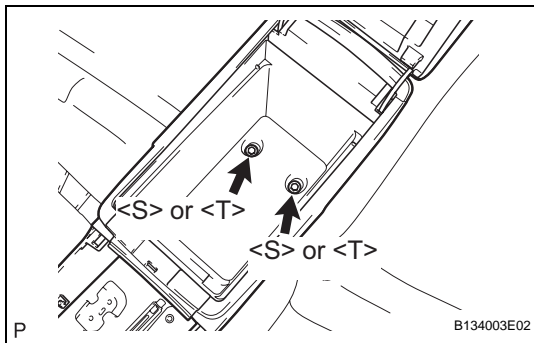

(b) Install the console box assembly with the 2 bolts <S> or <T>.

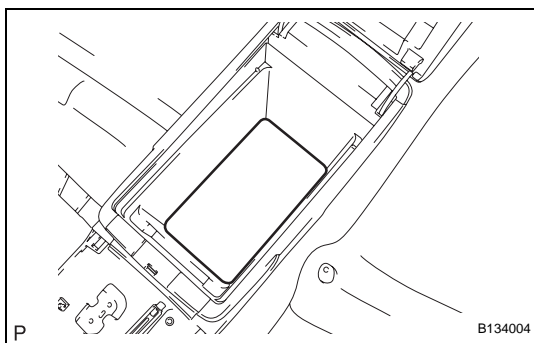**20. INSTALL CONSOLE BOX CARPET**

(a) Install the console box carpet.

21. INSTALL CONSOLE BOX POCKET

(a) Install the console box pocket.

22. INSTALL RADIO RECEIVER WITH HEATER CONTROL PANEL ASSEMBLY (w/o Navigation System) (See page [AV-147](#))


23. INSTALL NAVIGATION RECEIVER WITH HEATER CONTROL PANEL ASSEMBLY (w/ Navigation System) (See page NS-196)

24. INSTALL INSTRUMENT PANEL NO. 2 REGISTER ASSEMBLY

- (a) Engage the 7 clips and install the instrument panel No. 2 register assembly.

25. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY (for TMC Made)


- (a) Connect each connector.

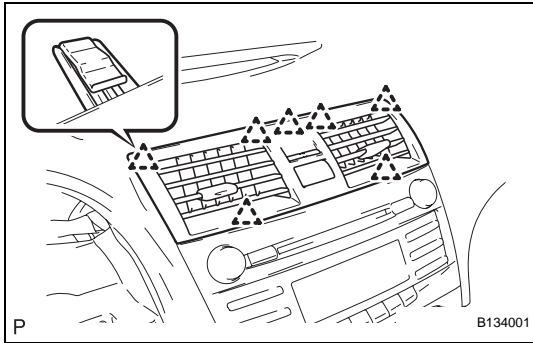


- (b) Engage the 4 claws.
- (c) Install the upper console panel sub-assembly with the 2 screws <F>.


26. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY (for TMMK Made)

- (a) Connect each connector.

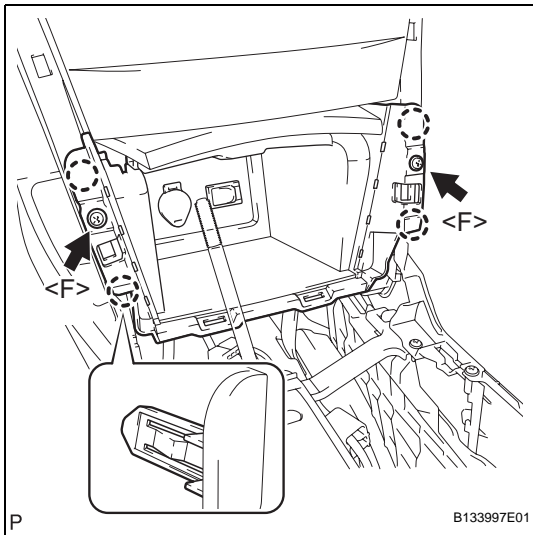


- (b) Engage the 4 claws.
- (c) Install the upper console panel sub-assembly with the 2 screws <O>.

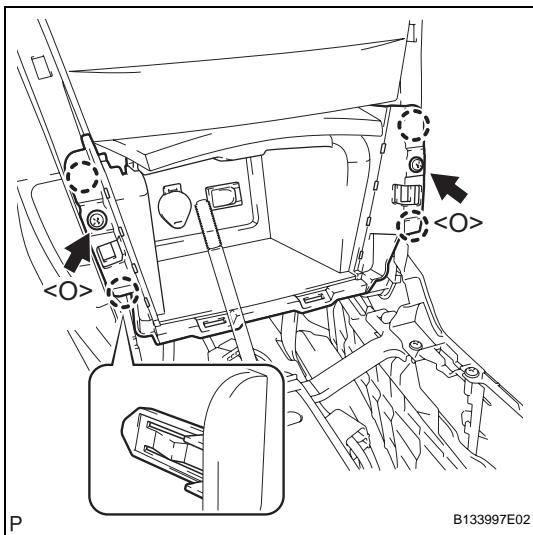

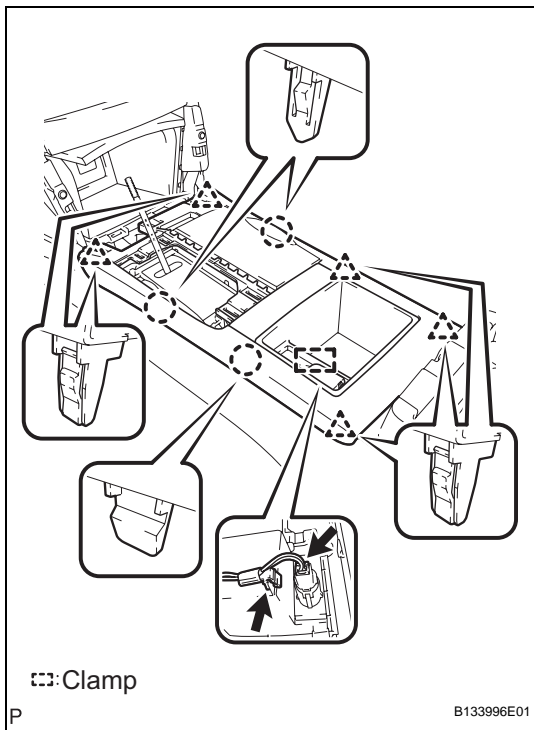

27. INSTALL UPPER CONSOLE REAR PANEL SUB-ASSEMBLY (for Automatic Transaxle)

- (a) Connect the connector and engage the clamp.
- (b) Engage the 3 claws and 5 clips to install the upper console rear panel sub-assembly.

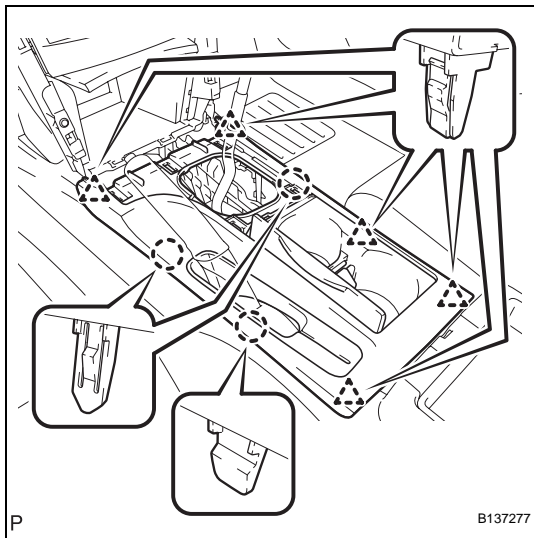


28. INSTALL UPPER CONSOLE REAR PANEL SUB-ASSEMBLY (for Manual Transaxle)


- (a) Engage the 3 claws and 5 clips to install the upper console rear panel sub-assembly.

29. INSTALL FLOOR SHIFT POSITION INDICATOR HOUSING SUB-ASSEMBLY (for Automatic Transaxle)

- (a) with Seat Heater System:
 - (1) Connect each connector.

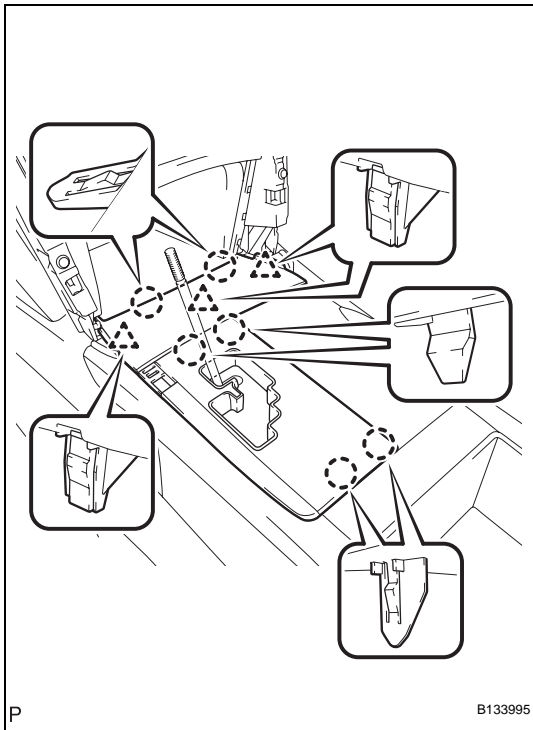


- (b) Engage the 6 claws and the 3 clips to install the floor shift position indicator housing sub-assembly.

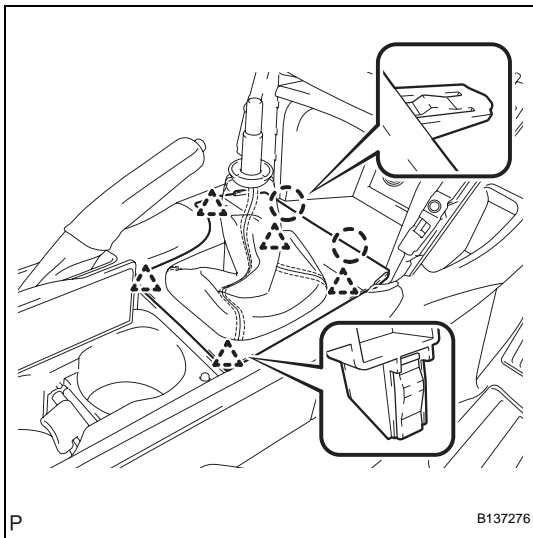


30. INSTALL UPPER CONSOLE PANEL (for Manual Transaxle)

- (a) Engage the 2 claws and the 5 clips to install the upper console panel as shown in the illustration.

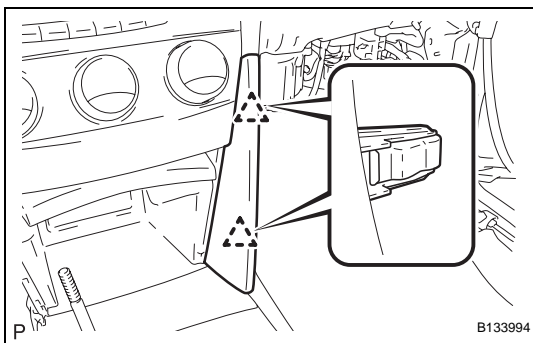


31. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

- (a) Engage the 2 clips and install the No. 2 instrument cluster finish panel garnish.

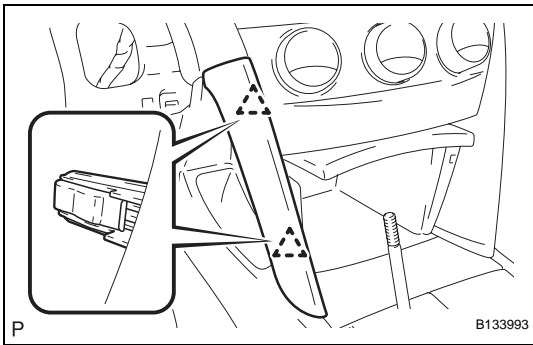


32. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

- (a) Engage the 2 clips and install the No. 1 instrument cluster finish panel garnish.

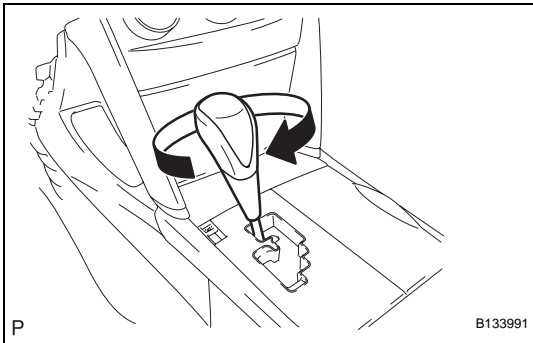


33. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for Automatic Transaxle)

- (a) Install the shift lever knob sub-assembly.

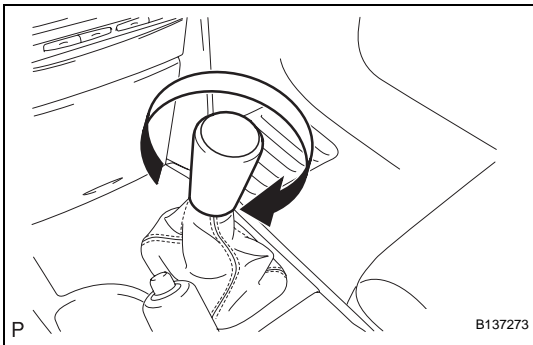


34. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transaxle)

- (a) Install the shift lever knob sub-assembly.

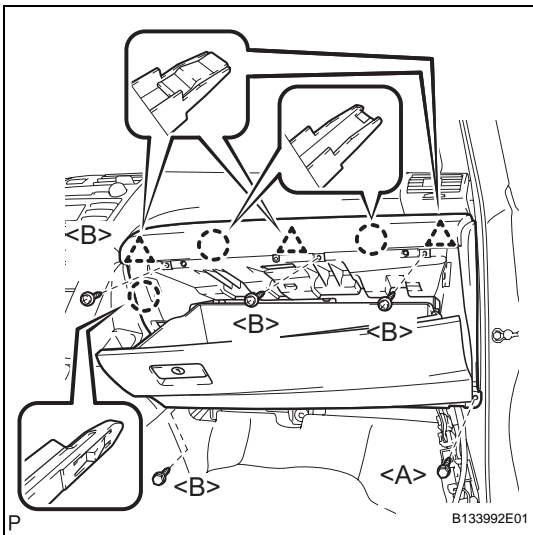


35. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY (for TMC Made)

- (a) Engage the 3 claws and 3 clips.
 (b) Install the 4 screws .
 (c) Install the lower instrument panel sub-assembly with the bolt <A>.

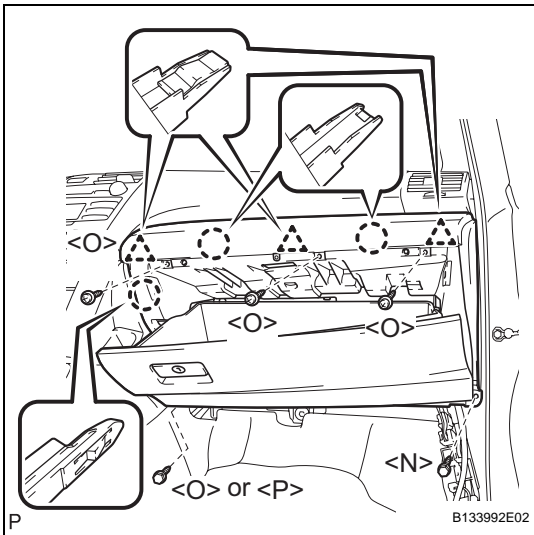

36. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY (for TMMK Made)

- Engage the 3 claws and 3 clips.
- Install the screw <O> or <P> and 3 screws <O>.
- Install the lower instrument panel sub-assembly with the bolt <N>.

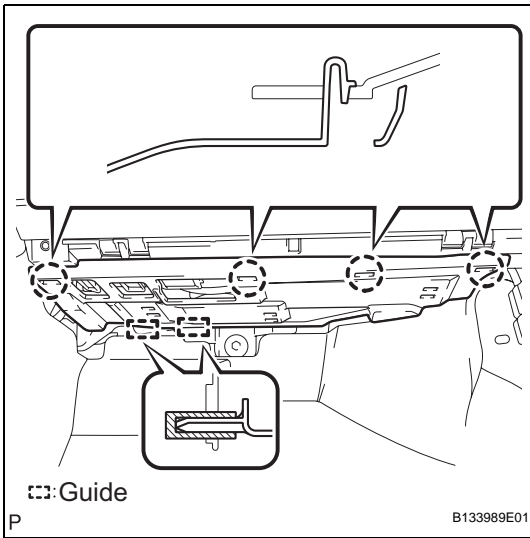


37. INSTALL INSTRUMENT PANEL NO. 2 UNDER COVER SUB-ASSEMBLY

- Engage the 4 claws and 2 guides and install the instrument panel No. 2 under cover.


38. INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH (See page IR-55)

39. INSTALL FRONT DOOR SCUFF PLATE RH (See page IR-55)

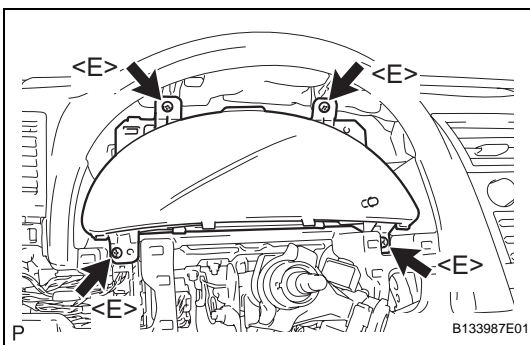


40. INSTALL COMBINATION METER ASSEMBLY (for TMC Made)

- Connect each connector.
- Install the combination meter assembly with the 4 screws <E>.

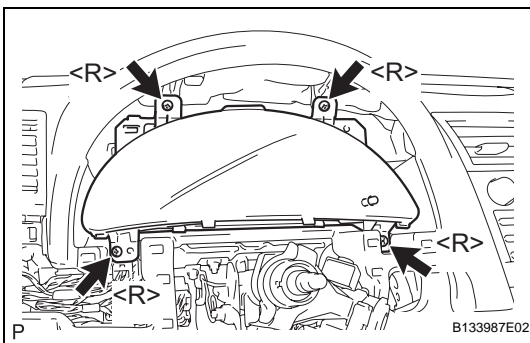


41. INSTALL COMBINATION METER ASSEMBLY (for TMMK Made)

- Connect each connector.
- Install the combination meter assembly with the 4 screws <R>.

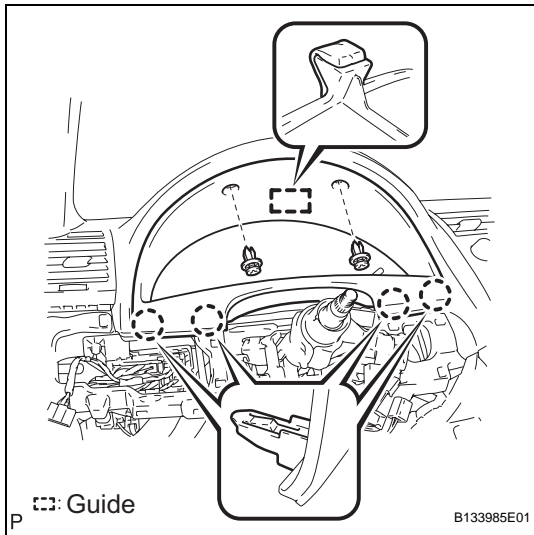**42. INSTALL INSTRUMENT CLUSTER FINISH PANEL**


- (a) Engage the guide and the 4 claws.
- (b) Install the instrument cluster finish panel with the 2 clips.

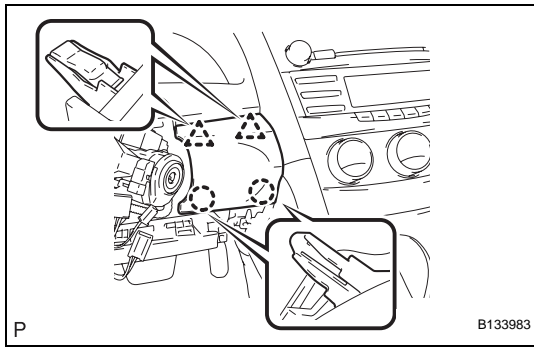**43. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL (w/o Smart Key System)**

- (a) Engage the 2 claws and 2 clips to install the lower instrument panel finish panel.

44. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL (w/ Smart Key System)


- (a) Connect the connector.

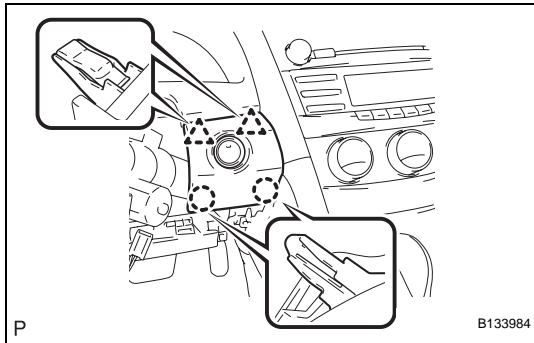

- (b) Engage the 2 claws and 2 clips to install the lower instrument panel finish panel.


45. INSTALL NO. 1 INSTRUMENT PANEL SUB-ASSEMBLY

- (a) Connect the connector.

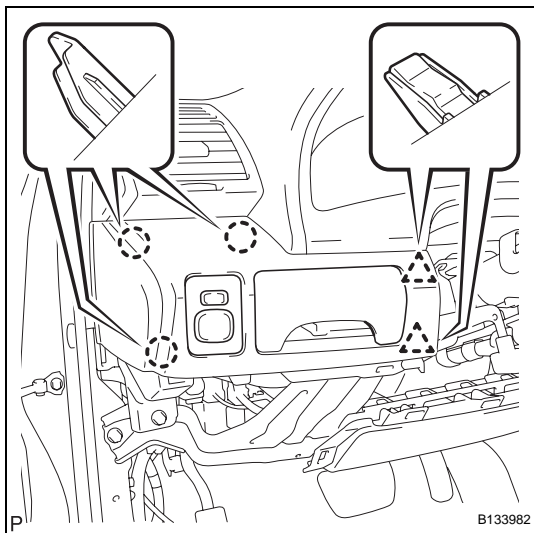

- (b) Engage the 3 claws and 2 clips to install the No. 1 instrument panel sub-assembly.


46. INSTALL TURN SIGNAL SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (See page [SR-50](#))**47. ADJUST SPIRAL CABLE SUB-ASSEMBLY (See page [RS-367](#))**

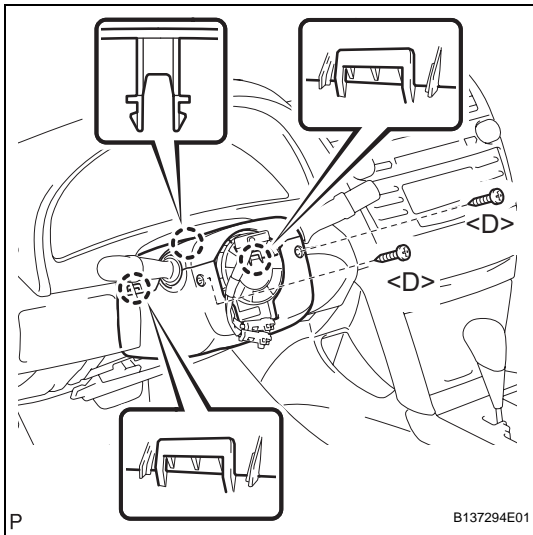

48. INSTALL STEERING COLUMN COVER (for TMC Made)

- (a) Engage the claw and install the upper steering column cover.
- (b) Engage the 2 claws and install the lower steering column cover.
- (c) Install the steering column cover with the 2 screws <D>.


Torque: 2.0 N*m (20 kgf*cm, 18 in.*lbf)

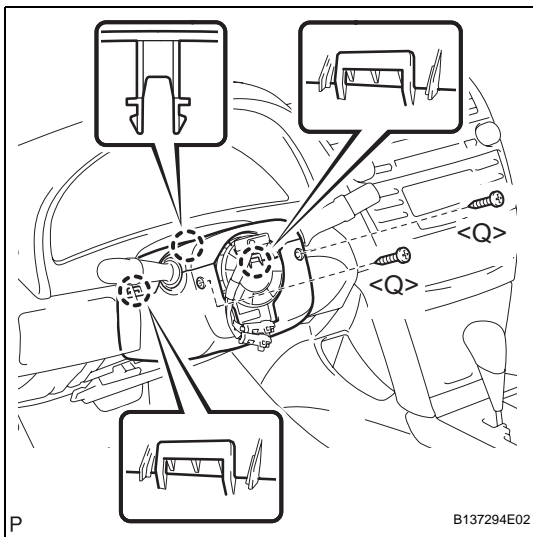

49. INSTALL STEERING COLUMN COVER (for TMMK Made)

- (a) Engage the claw and install the upper steering column cover.
- (b) Engage the 2 claws and install the lower steering column cover.
- (c) Install the steering column cover with the 2 screws <Q>.

Torque: 2.0 N*m (20 kgf*cm, 18 in.*lbf)

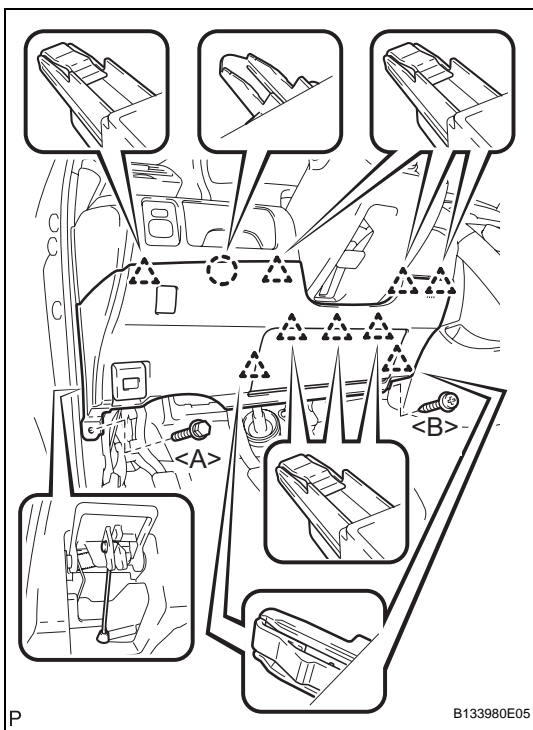

50. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL LH (for TMC Made)


- (a) Install the air hose and connect the connector.
- (b) Engage the claw and the 9 clips.
- (c) Install the instrument panel finish panel LH with the screw and bolt <A>.

REAR CONSOLE BOX





COMPONENTS


IP



for Automatic Transaxle:

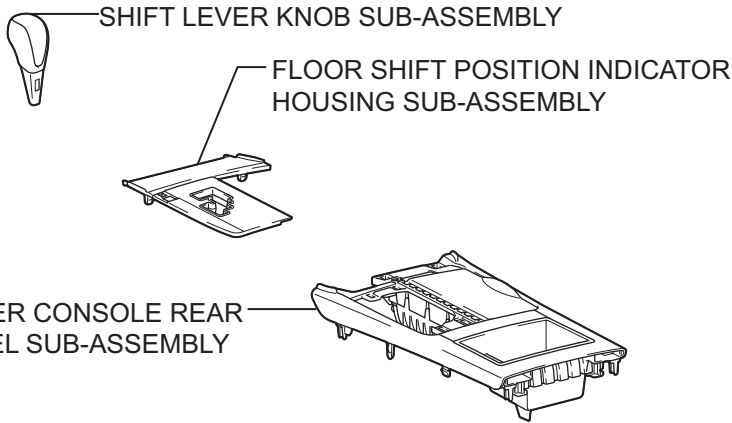

for Manual Transaxle:

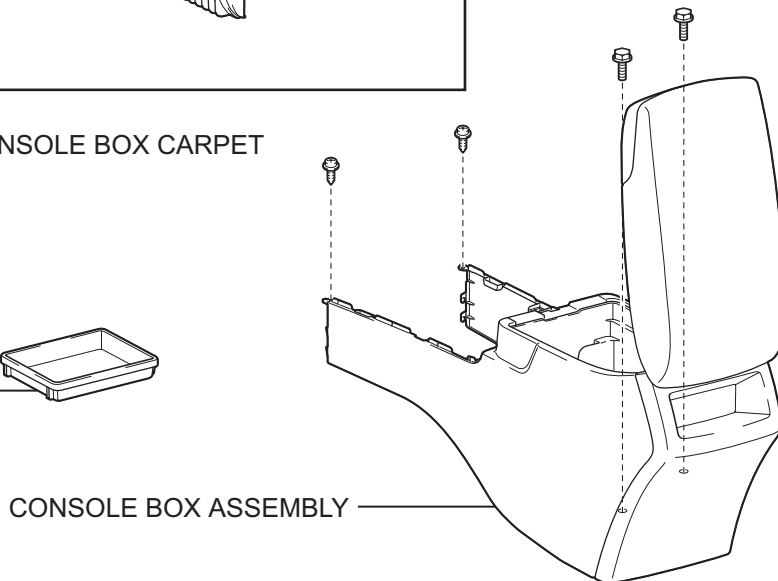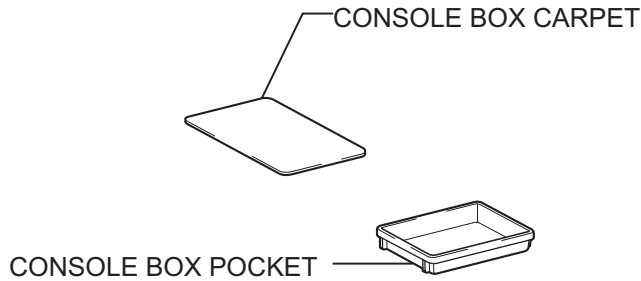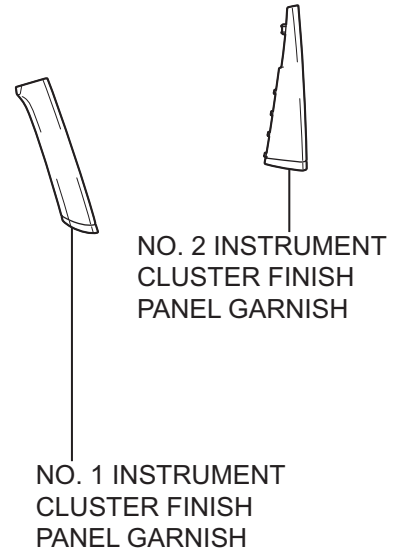
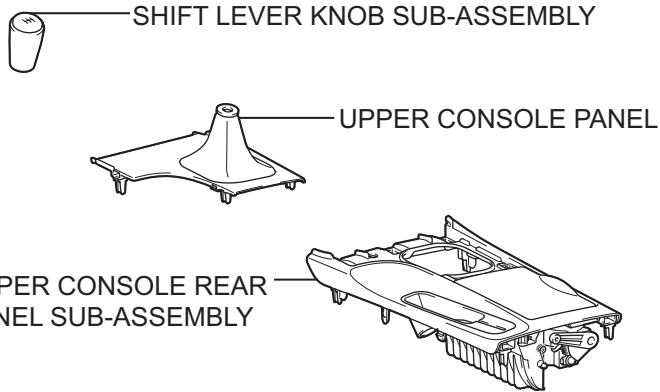


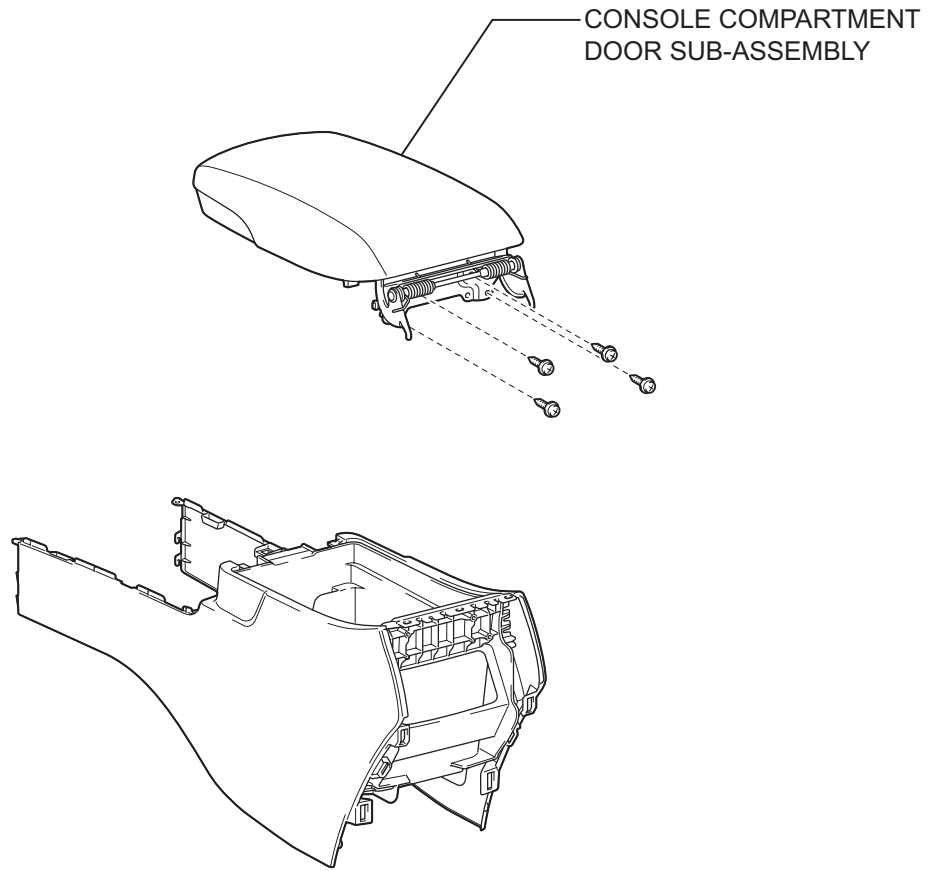

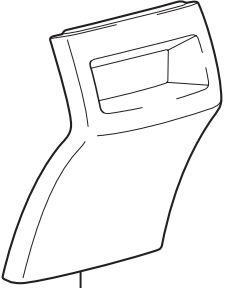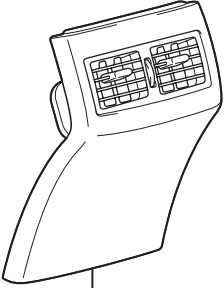for Manual Air Conditioning System:	for Automatic Air Conditioning System:
 <p>REAR CONSOLE END PANEL SUB-ASSEMBLY</p>	 <p>REAR CONSOLE END PANEL SUB-ASSEMBLY</p>

REMOVAL


1. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for Automatic Transaxle) (See page [IP-24](#))
2. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transaxle) (See page [IP-24](#))
3. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH (See page [IP-24](#))
4. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH (See page [IP-25](#))
5. REMOVE FLOOR SHIFT POSITION INDICATOR HOUSING SUB-ASSEMBLY (for Automatic Transaxle) (See page [IP-25](#))
6. REMOVE UPPER CONSOLE PANEL (for Manual Transaxle) (See page [IP-25](#))
7. REMOVE UPPER CONSOLE REAR PANEL SUB-ASSEMBLY (for Automatic Transaxle) (See page [IP-26](#))
8. REMOVE UPPER CONSOLE REAR PANEL SUB-ASSEMBLY (for Manual Transaxle) (See page [IP-26](#))
9. REMOVE CONSOLE BOX POCKET (See page [IP-28](#))
10. REMOVE CONSOLE BOX CARPET (See page [IP-28](#))
11. REMOVE CONSOLE BOX ASSEMBLY
 - (a) Remove the 2 screws.

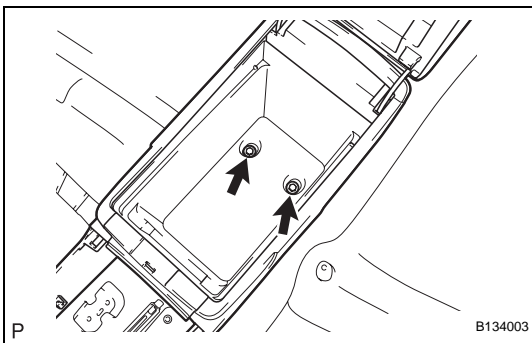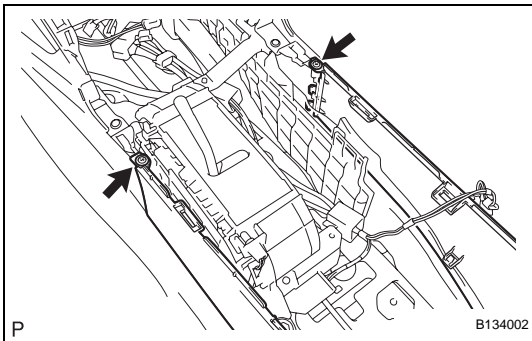


- (b) Remove the 2 bolts and the console box assembly.

DISASSEMBLY**1. REMOVE REAR CONSOLE END PANEL SUB-ASSEMBLY (for Manual Air Conditioning System)**


- (a) Disengage the 4 clips and remove the rear console end panel sub-assembly.

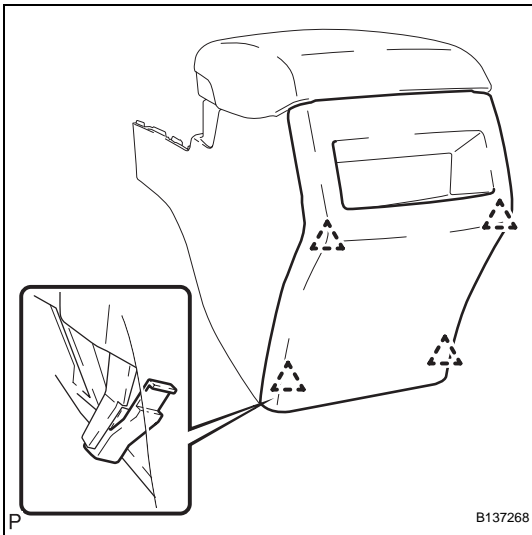**2. REMOVE REAR CONSOLE END PANEL SUB-ASSEMBLY (for Automatic Air Conditioning System)**


- (a) Disengage the 4 clips and remove the rear console end panel sub-assembly.

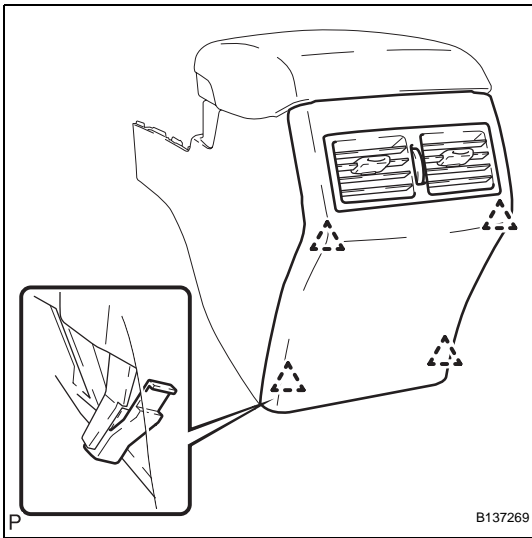
**3. REMOVE CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY**

- (a) Remove the 4 screws and the console compartment door sub-assembly.

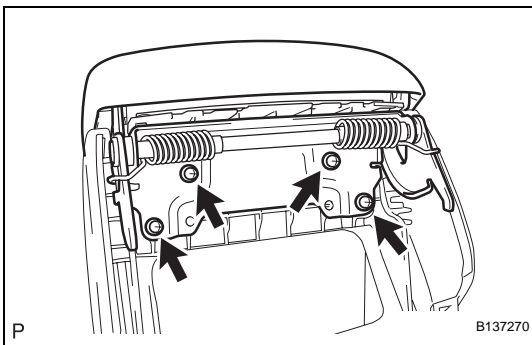**REASSEMBLY****1. INSTALL CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY**


- (a) Install the console compartment door sub-assembly with the 4 screws.

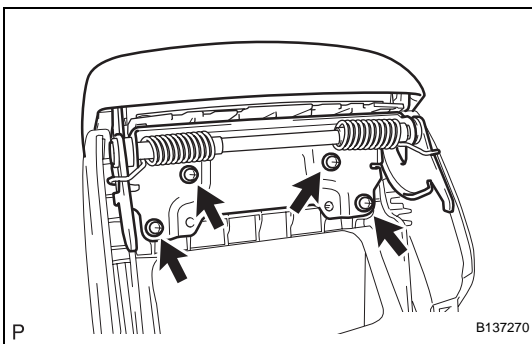

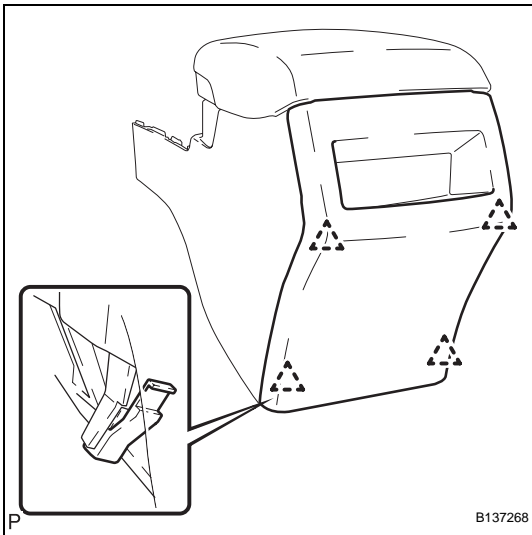


2. INSTALL REAR CONSOLE END PANEL SUB-ASSEMBLY (for Manual Air Conditioning System)

- (a) Engage the 4 clips and install the rear console end panel sub-assembly.

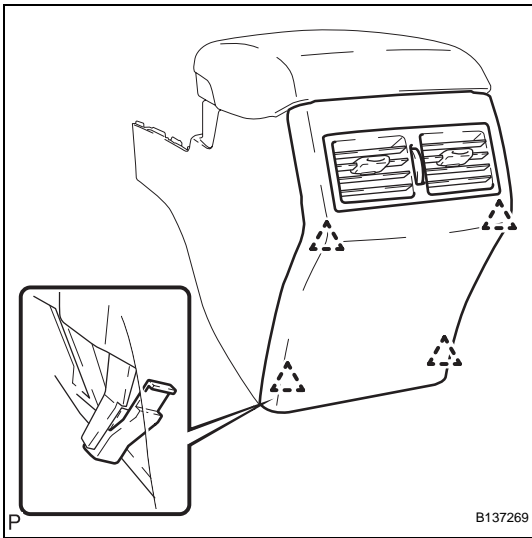

3. INSTALL REAR CONSOLE END PANEL SUB-ASSEMBLY (for Automatic Air Conditioning System)

- (a) Engage the 4 clips and install the rear console end panel sub-assembly.

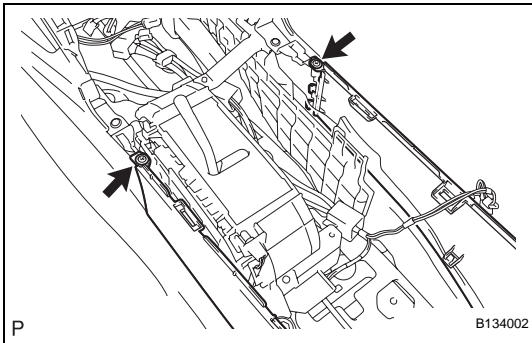

INSTALLATION

1. INSTALL CONSOLE BOX ASSEMBLY

- (a) Install the 2 screws.


- (b) Install the console box assembly with the 2 bolts.

2. INSTALL CONSOLE BOX CARPET (See page [IP-51](#))

3. INSTALL CONSOLE BOX POCKET (See page [IP-51](#))

4. INSTALL UPPER CONSOLE REAR PANEL SUB-ASSEMBLY (for Automatic Transaxle) (See page [IP-53](#))

5. INSTALL UPPER CONSOLE REAR PANEL SUB-ASSEMBLY (for Manual Transaxle) (See page [IP-53](#))

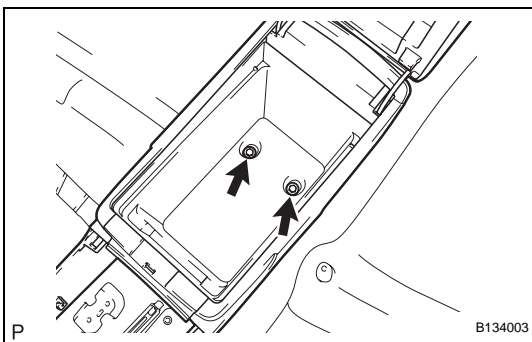

6. **INSTALL FLOOR SHIFT POSITION INDICATOR HOUSING SUB-ASSEMBLY** (See page [IP-53](#))
7. **INSTALL UPPER CONSOLE PANEL** (for Manual Transaxle) (See page [IP-54](#))
8. **INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH** (See page [IP-54](#))
9. **INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH** (See page [IP-55](#))
10. **INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY** (for Automatic Transaxle) (See page [IP-55](#))
11. **INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY** (for Manual Transaxle) (See page [IP-55](#))