

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000002AKZN
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> ADVANCED DRIVER ASSISTANCE SYSTEM: DRIVER MONITOR CAMERA SYSTEM: UTILITY; 2023 - 2024 MY Prius Prius Prime [03/2023 - ]		

## UTILITY

### HINT:

- It is possible to use the GTS to check whether or not DTC judgment has been completed.
- This procedure may be used to confirm whether DTCs are output after simulating malfunction symptoms or after finishing repairs.

### ALL READINESS

(a) Using the GTS, clear the DTCs.

(Even if no DTC is output, perform the clear operation)

#### Chassis > Driver Monitor Camera Control > Clear DTCs

(b) Turn the ignition switch off and wait for at least 2 minutes.

(c) Perform the DTC judgment driving pattern to run the DTC judgment.

(d) Perform "All Readiness" according to the display on the GTS.

#### Chassis > Driver Monitor Camera Control > Utility



(e) Input the DTC to be confirmed.

(f) Check the DTC judgment result.

GTS DISPLAY	DESCRIPTION
Normal	<ul style="list-style-type: none"> <li>• DTC judgment completed</li> <li>• System normal</li> </ul>
Abnormal	<ul style="list-style-type: none"> <li>• DTC judgment completed</li> <li>• System abnormal</li> </ul>
Incomplete	<ul style="list-style-type: none"> <li>• DTC judgment not completed</li> <li>• Perform the driving pattern</li> </ul>
N/A	<ul style="list-style-type: none"> <li>• Unable to perform DTC judgment</li> <li>• Number of DTCs which do not fulfill DTC preconditions has reached ECU memory limit</li> <li>• Perform the driving pattern</li> </ul>

If the judgment result shows Incomplete or N/A, perform the DTC confirmation driving pattern again.

(g) Turn the ignition switch off.

### IMAGE INFORMATION CLEAR

### HINT:

This deletes stored image data.

(a) Perform "Image Information Clear" according to the display on the GTS.

**Chassis > Driver Monitor Camera Control > Utility**



**IMAGE RECORD SETTING**

**HINT:**

This changes the settings for storing image data.

(a) Perform "Image Record Setting" according to the display on the GTS.

**Chassis > Driver Monitor Camera Control > Utility**

