

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000002BEFV
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: HYBRID / BATTERY CONTROL: PLUG-IN CHARGE CONTROL SYSTEM (for PHEV Model): UTILITY; 2023 - 2024 MY Prius Prime [03/2023 -]		

UTILITY

ALL READINESS

HINT:

- With "All Readiness", you can check whether or not the DTC judgment has been completed by using the GTS.
- You should check "All Readiness" after simulating malfunction symptoms or for validation after finishing repairs.

(a) Clear the DTCs even if no DTCs are stored.

Powertrain > Plug-in Control > Clear DTCs

(b) Turn the ignition switch off and wait for 2 minutes or more.

(c) Perform the DTC judgment driving pattern to run the DTC judgment.

(d) Enter the following menus.

Powertrain > Plug-in Control > Utility

TESTER DISPLAY
All Readiness

(e) Input the DTCs to be confirmed.

(f) Check the DTC judgment result.

GTS DISPLAY	DESCRIPTION
Normal	<ul style="list-style-type: none"> • DTC judgment completed • System normal
Abnormal	<ul style="list-style-type: none"> • DTC judgment completed • System abnormal
Incomplete	<ul style="list-style-type: none"> • DTC judgment not completed • Perform the driving pattern
N/A	<ul style="list-style-type: none"> • Unable to perform DTC judgment • Number of DTCs which do not fulfill DTC preconditions has reached ECU memory limit • Perform the driving pattern
If the judgment result shows Incomplete or N/A, perform the DTC confirmation driving pattern again.	

(g) Turn the ignition switch off.

VEHICLE CONTROL HISTORY (RoB)

(a) Connect the GTS to the DLC3.

- (b) Turn the ignition switch to ON.
- (c) Turn the GTS on.
- (d) Enter the following menus: Powertrain / Plug-in Control / Utility / Vehicle Control History (RoB).

Powertrain > Plug-in Control > Utility

Click here [INFO](#)

- (e) Turn the ignition switch off.

CHARGER COOLING FAN (CHG WAKE UP)**NOTICE:**

If the ignition switch is turned off, the connector between the GTS and vehicle is disconnected, or a communication error occurs when "Charger Cooling Fan (CHG Wake Up)" is being performed, perform "Charger Cooling Fan (CHG Wake Up)" again and make sure to terminate it normally.

- (a) Select "Charger Cooling Fan (CHG Wake Up)".

Powertrain > Plug-in Control > Utility

- (b) On the next screen, select "CHG 1 Side Fan Drive".
- (c) Enter the drive duty value (0/20/40/60/80/100).
- (d) Press "Next" to operate the cooling fan.
- (e) Press "Next", then on the next screen select "Exit" to complete "Charger Cooling Fan (CHG Wake Up)".

NOTICE:

Make sure to press the "Exit" button to terminate the operation.

