

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000000292K7
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: LIGHTING (EXT): REAR SIDE MARKER LIGHT ASSEMBLY: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

INSPECTION

PROCEDURE

1. INSPECT REAR SIDE MARKER LIGHT ASSEMBLY LH

(a) Illumination Inspection

- (1) Apply auxiliary battery voltage to the rear side marker light assembly LH and check that the light illuminates.

OK:




[Click Location & Routing\(P10\)](#)

[Click Connector\(P10\)](#)

TESTER CONNECTION	SPECIFIED CONDITION
Auxiliary battery positive (+) - P10-2 (B)	Rear side marker light illuminates
Auxiliary battery negative (-) - P10-1 (E)	

If the result is not as specified, replace the rear side marker light assembly LH.

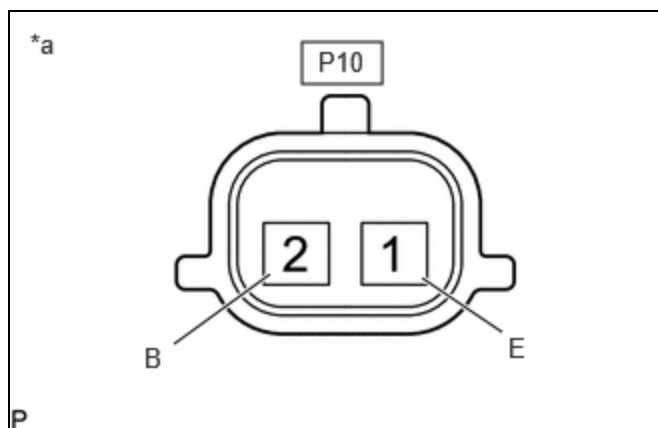

*a	Component without harness connected (Rear Side Marker Light Assembly LH)
----	--------------------------------------------------------------------------

2. INSPECT REAR SIDE MARKER LIGHT ASSEMBLY RH

(a) Illumination Inspection

- (1) Apply auxiliary battery voltage to the rear side marker light assembly RH and check that the light illuminates.

OK:




[Click Location & Routing\(P9\)](#)

[Click Connector\(P9\)](#)

TESTER CONNECTION	SPECIFIED CONDITION
Auxiliary battery positive (+) - P9-2 (B)	Rear side marker light illuminates
Auxiliary battery negative (-) - P9-1 (E)	

If the result is not as specified, replace the rear side marker light assembly RH.

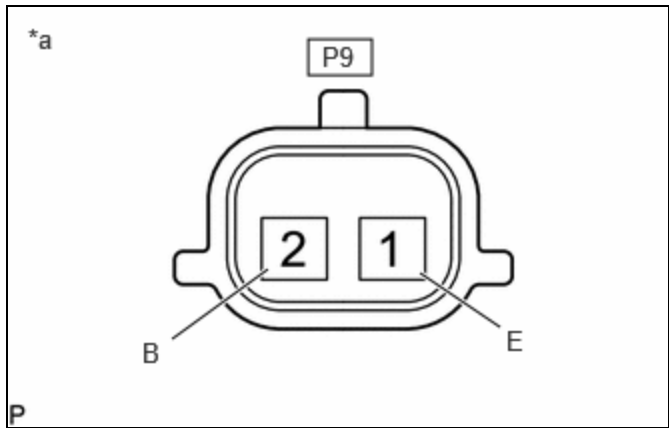

*a	Component without harness connected (Rear Side Marker Light Assembly RH)
----	-----------------------------------------------------------------------------

