

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000028WJT
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> MIRROR (EXT): OUTER REAR VIEW MIRROR GLASS: REMOVAL; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## REMOVAL


### CAUTION / NOTICE / HINT

**HINT:**

- Use the same procedure for the RH side and LH side.
- The following procedure is for the LH side.

### CAUTION / NOTICE / HINT


#### COMPONENTS (REMOVAL)

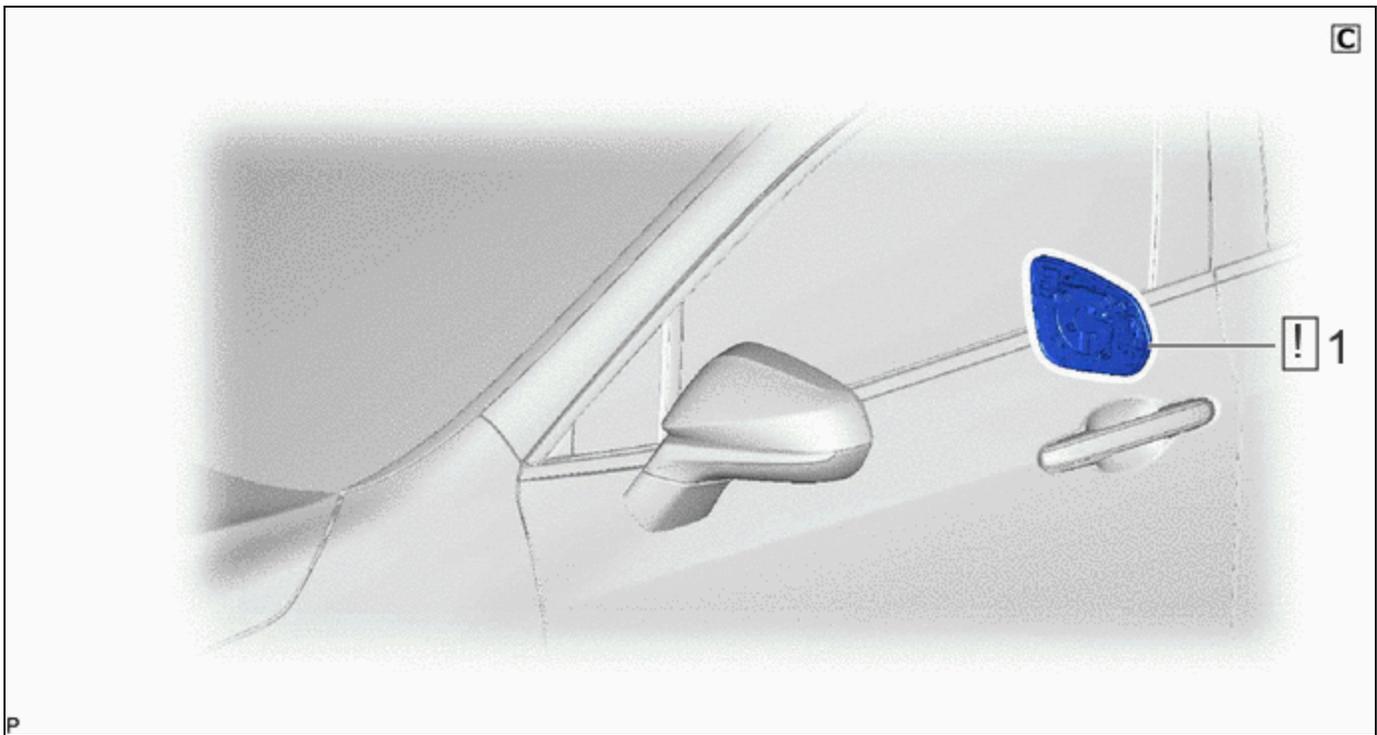

PROCEDURE		PART NAME CODE			
1	OUTER MIRROR	87961		-	-

## PROCEDURE

### 1. REMOVE OUTER MIRROR

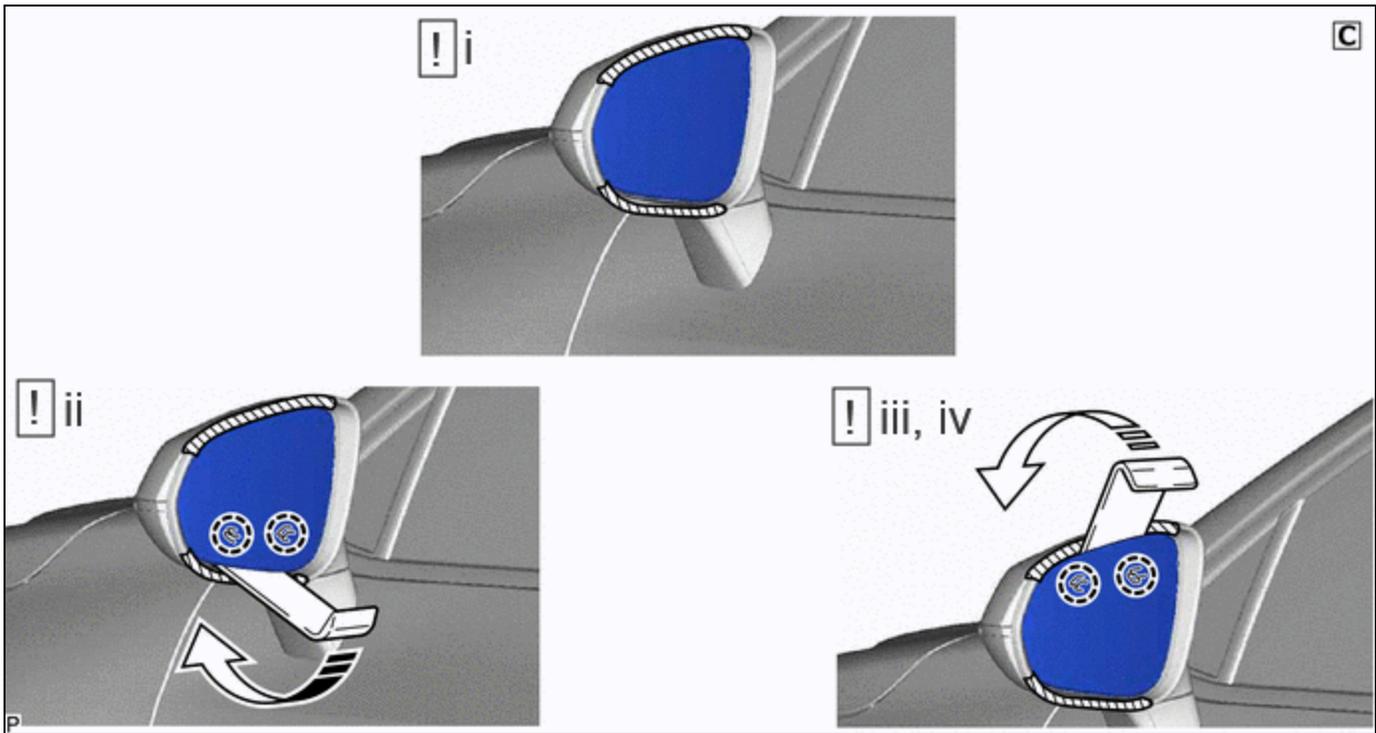

	Move in this Direction (1)		Move in this Direction (2)
--	----------------------------	--	----------------------------

(1) Apply protective tape to the areas shown in the illustration.

(2) Using a moulding remover, disengage the 2 claws on the lower part of the outer mirror as shown in the illustration.

(3) w/o Mirror Heater:

- Using a moulding remover, disengage the 2 claws on the upper part of the outer mirror as shown in the illustration to remove the outer mirror.

**NOTICE:**

Do not push the outer mirror with excessive force. Doing so may cause the actuator to come off or break the mirror surface.


(4) w/ Mirror Heater:

- Using a moulding remover, disengage the 2 claws on the upper part of the outer mirror as shown in the illustration.

**NOTICE:**

Do not push the outer mirror with excessive force. Doing so may cause the actuator to come off or break the mirror surface.

(b) w/ Mirror Heater:

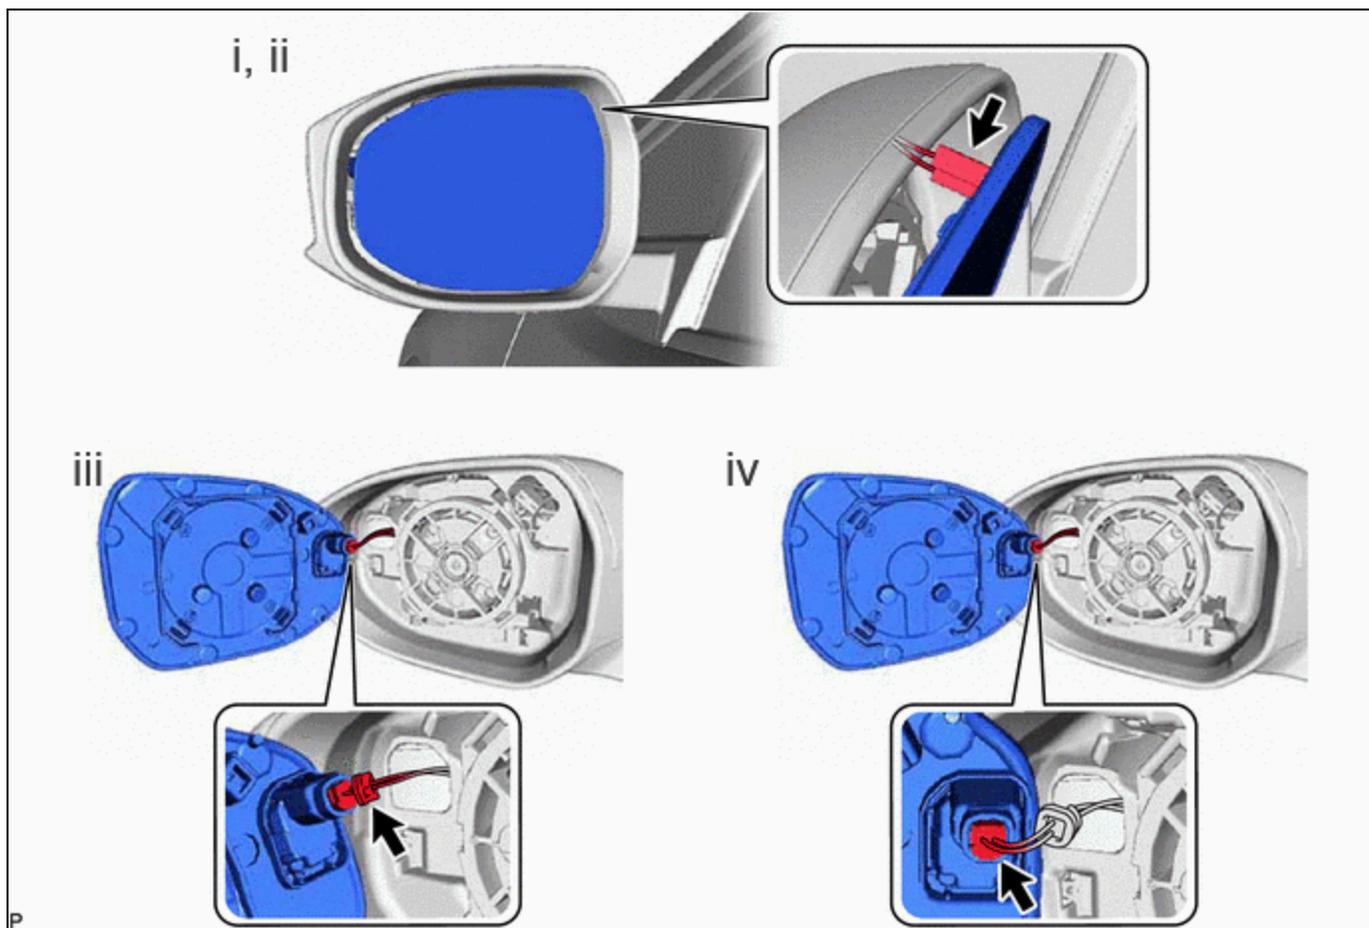

(1) w/o Blind Spot Monitor System:

1. Disconnect the connector to remove the outer mirror.

(2) w/ Blind Spot Monitor System:

1. Disconnect the connector.

(3) w/ Blind Spot Monitor System:

1. Move the grommet.

(4) w/ Blind Spot Monitor System:

1. Disconnect the connector to remove the outer mirror.

