

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000029X4S
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> SEAT: REAR SEAT REMINDER SYSTEM: DATA LIST / ACTIVE TEST; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## DATA LIST / ACTIVE TEST

### DATA LIST

#### NOTICE:

In the following table, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

#### HINT:

Using the GTS to read the Data List allows the values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time.

(a) Read the Data List according to the display on the GTS.

#### Body Electrical > Main Body > Data List

TESTER DISPLAY	MEASUREMENT ITEM	RANGE	NORMAL CONDITION	DIAGNOSTIC NOTE
RR Door Courtesy Switch Status	Rear door courtesy light switch assembly (RH) signal	Close or Open	Close: Rear door RH closed Open: Rear door RH open	-
RL Door Courtesy Switch Status	Rear door courtesy light switch assembly (LH) signal	Close or Open	Close: Rear door LH closed Open: Rear door LH open	-
Rear Seat Reminder Function	Setting status of rear seat reminder function	Disable or Enable	Customized value displayed	-
Rear Seat Reminder Function	Setting status of rear seat reminder function (Driver 1)	Disable or Enable	Customized value displayed	w/ My Settings System
Rear Seat Reminder Function	Setting status of rear seat reminder function (Driver 2)	Disable or Enable	Customized value displayed	w/ My Settings System
Rear Seat Reminder Function	Setting status of rear seat reminder function (Driver 3)	Disable or Enable	Customized value displayed	w/ My Settings System

