

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000028UYY
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: SUPPLEMENTAL RESTRAINT SYSTEMS: OCCUPANT CLASSIFICATION SYSTEM: B00C096; Passenger Seat Occupant Classification Sensor "A" Component Internal Failure; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

DTC	B00C096	Passenger Seat Occupant Classification Sensor "A" Component Internal Failure
------------	----------------	---

DESCRIPTION

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	DTC OUTPUT FROM	PRIORITY
B00C096	Passenger Seat Occupant Classification Sensor "A" Component Internal Failure	Front occupant classification sensor LH malfunction	Front seat adjuster assembly RH (front occupant classification sensor LH)	SRS Airbag	A

CAUTION / NOTICE / HINT

NOTICE:

After replacing the front seat adjuster assembly RH, refer to work procedure.

Click here [INFO](#)

PROCEDURE

1.	CLEAR DTC
-----------	------------------

Pre-procedure1

(a) Turn the ignition switch to ON, and wait for at least 60 seconds.

Procedure1

(b) Clear the DTCs stored in memory.

Body Electrical > SRS Airbag > Clear DTCs

Post-procedure1

(c) Turn the ignition switch off.

NEXT



2.	CHECK DTC
-----------	------------------

Pre-procedure1

(a) Turn the ignition switch to ON, and wait for at least 60 seconds.

Procedure1

(b) Check the DTCs.

Body Electrical > SRS Airbag > Trouble Codes

RESULT	PROCEED TO
B00C096 is output	A
B00C096 is not output	B

Post-procedure1

(c) None

A  **REPLACE FRONT SEAT ADJUSTER ASSEMBLY RH** 

B  **USE SIMULATION METHOD TO CHECK**

