

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000028UZ6
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> SUPPLEMENTAL RESTRAINT SYSTEMS: OCCUPANT CLASSIFICATION SYSTEM: B00C296; Passenger Seat Occupant Classification Sensor "C" Component Internal Failure; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

<b>DTC</b>	<b>B00C296</b>	<b>Passenger Seat Occupant Classification Sensor "C" Component Internal Failure</b>
------------	----------------	---

## DESCRIPTION

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	DTC OUTPUT FROM	PRIORITY
B00C296	Passenger Seat Occupant Classification Sensor "C" Component Internal Failure	Rear occupant classification sensor LH malfunction	Front seat adjuster assembly RH (rear occupant classification sensor LH)	SRS Airbag	A

## CAUTION / NOTICE / HINT

### NOTICE:

After replacing the front seat adjuster assembly RH, refer to work procedure.

Click here [INFO](#)

## PROCEDURE

<b>1.</b>	<b>CLEAR DTC</b>
-----------	------------------

Pre-procedure1

(a) Turn the ignition switch to ON, and wait for at least 60 seconds.

Procedure1

(b) Clear the DTCs stored in memory.

**Body Electrical > SRS Airbag > Clear DTCs**

Post-procedure1

(c) Turn the ignition switch off.

## **NEXT**



<b>2.</b>	<b>CHECK DTC</b>
-----------	------------------

Pre-procedure1

(a) Turn the ignition switch to ON, and wait for at least 60 seconds.

Procedure1

(b) Check the DTCs.

**Body Electrical > SRS Airbag > Trouble Codes**

RESULT	PROCEED TO
B00C296 is output	A
B00C296 is not output	B

Post-procedure1

(c) None

**A** ▶ **REPLACE FRONT SEAT ADJUSTER ASSEMBLY RH** [INFO](#)

**B** ▶ **USE SIMULATION METHOD TO CHECK**

