

**2000-06 ACCESSORIES & EQUIPMENT**

**Bumpers - Insight**

**FRONT BUMPER REMOVAL/INSTALLATION**

- NOTE:**
- **Have an assistant help you remove and install the front bumper.**
  - **Take care not to scratch the front bumper and body.**
  - **Put on gloves to protect your hands.**


1. Remove the front inner fender from each side as necessary (see **FRONT INNER FENDER REPLACEMENT** ).
2. Remove the front bumper as shown.
3. Install the bumper in the reverse order of removal, and note these items:
  - If equipped, make sure the outside air temperature sensor connector is plugged in properly.
  - Make sure the front bumper engages the hooks of the center and corner upper beams securely.
  - Check for damaged or stress-whitened clips, and replace them with new ones.

## 2006 Honda Insight

2000-06 ACCESSORIES & EQUIPMENT Bumpers - Insight

### Fastener Locations

A ▶ Bolt, 2    B ▶ Screw, 4    C ▶ Screw, 6    D ▶ Clip, 4

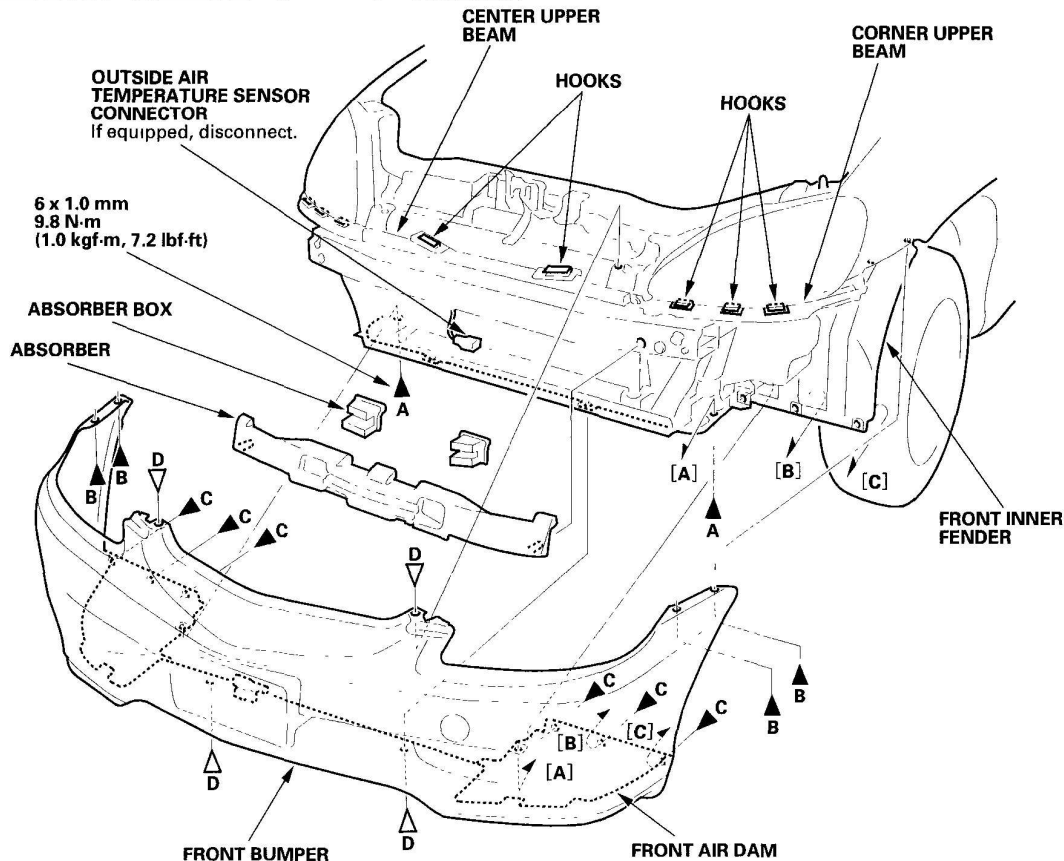

G03682605

**Fig. 1: Removing Front Bumper And Torque Specifications**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

### FRONT AIR DAM REPLACEMENT

**NOTE:** Take care not to scratch the front bumper.

1. Remove the front air dam as shown.
2. Install the front air dam in the reverse order of removal, and note these items:
  - Before installing the air dam, clean the front bumper bonding surface with alcohol, and apply primer.
  - If the old air dam will be reinstalled, scrape off the double-sided adhesive

## 2006 Honda Insight


2000-06 ACCESSORIES & EQUIPMENT Bumpers - Insight

tape, then clean the air dam surface with alcohol where adhesive tape will be applied. Attach the new double-sided adhesive tape to the air dam.

- Before installing the air dam, fold the edge of the adhesive backing from the double-sided adhesive tape. After installing the air dam, carefully pull the adhesive backing away.

### Fastener Locations

A ▶ : Bolt, 1    B ▶ : Screw, 8

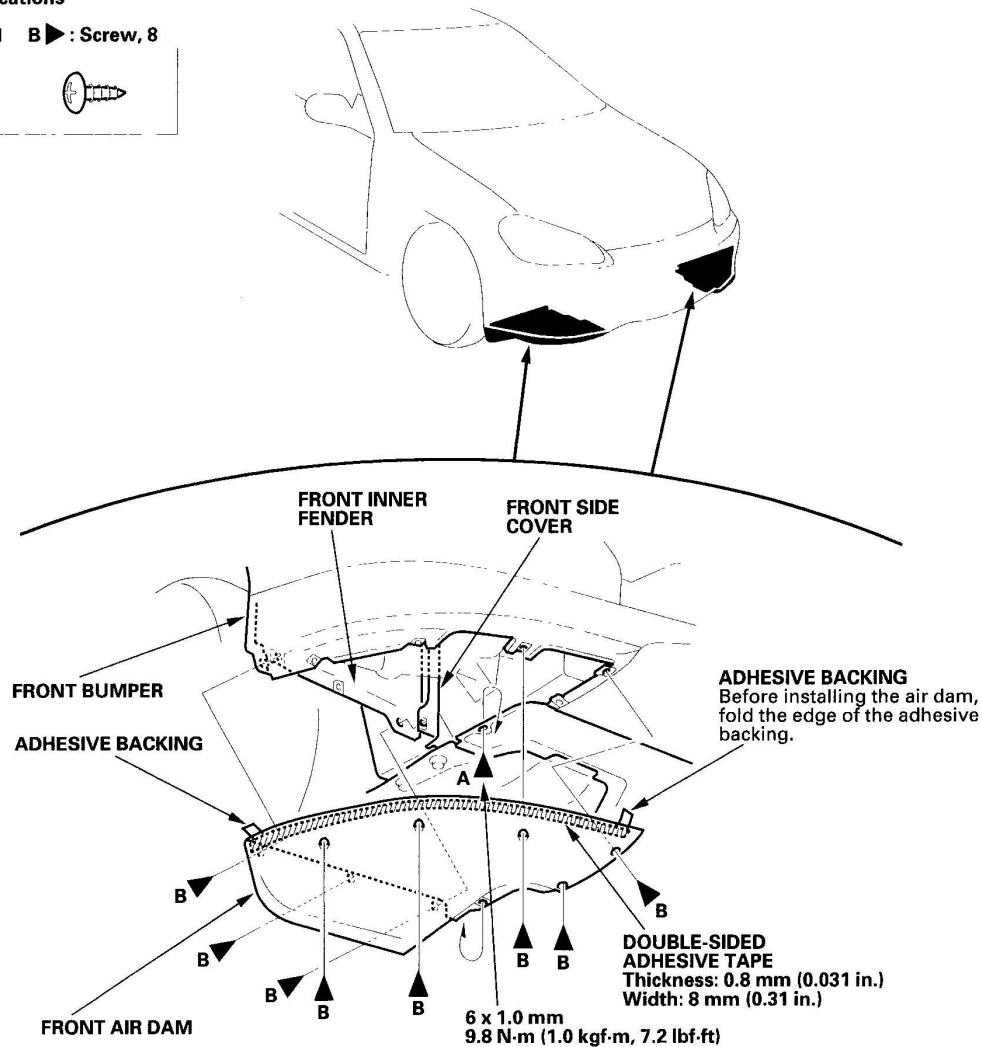

G03682606

**Fig. 2: Removing Front Air Dam And Torque Specifications**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

## REAR BUMPER REMOVAL/INSTALLATION

- NOTE:**
- **Have an assistant help you remove and install the rear bumper.**
  - **Take care not to scratch the rear bumper and body.**
  - **Put on gloves to protect your hands.**

1. Remove these items:

- Rear fender skirt, both sides (see **REAR INNER FENDER REPLACEMENT** )
- Taillight, both sides (see **TAILLIGHT REPLACEMENT** )

2. Remove the rear bumper as shown.

3. Install the bumper in the reverse order of removal, and note these items:


 
 
- Make sure the rear bumper engages the hooks (bumper upper beam and under the taillight) on each side securely.
- Make sure the license plate light bulb socket is connected properly.
- Check for damaged or stress-whitened clips, and replace them with new ones.
- Reinstall the rear fender skirt (see **INSTALLATION** ).

## 2006 Honda Insight

2000-06 ACCESSORIES & EQUIPMENT Bumpers - Insight

### Fastener Locations

A ▶ : Bolt, 6    B ▶ : Bolt, 2    C ▶ : Clip, 2    D ▶ : Clip, 4

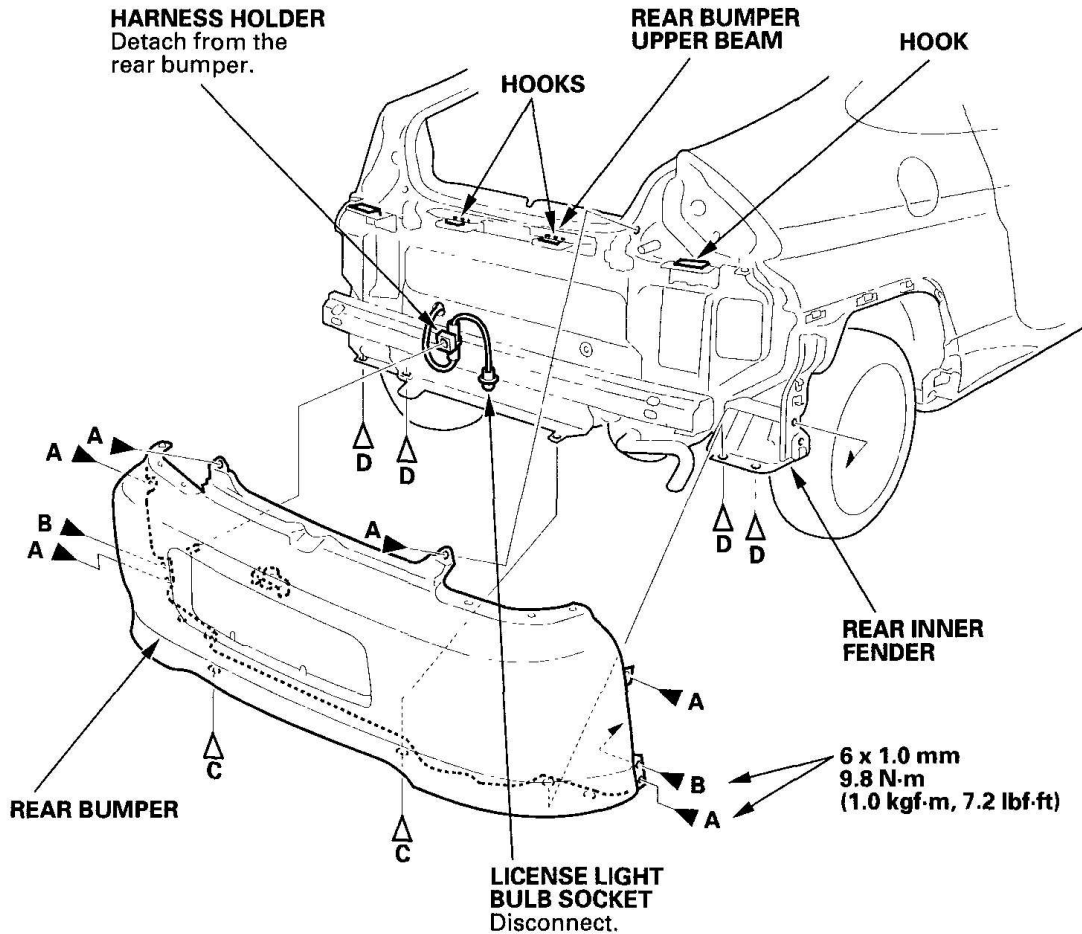

G03682607

**Fig. 3: Removing Rear Bumper And Torque Specifications**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

### REAR BUMPER SKIRT REPLACEMENT


 
**NOTE:** Take care not to scratch the rear bumper.

1. Remove the rear bumper (see **REAR BUMPER REMOVAL/INSTALLATION** ).

2. Remove the rear bumper skirt as shown.
3. Install the bumper skirt in the reverse order of removal, and note these items:
  - Replace any damaged clips.
  - Make sure the clips are installed securely.

**Fastener Locations**

A ▶ : Screw, 5 (5 mm)    B ▶ : Screw, 2 (4 mm)    C ▷ : Clip, 4

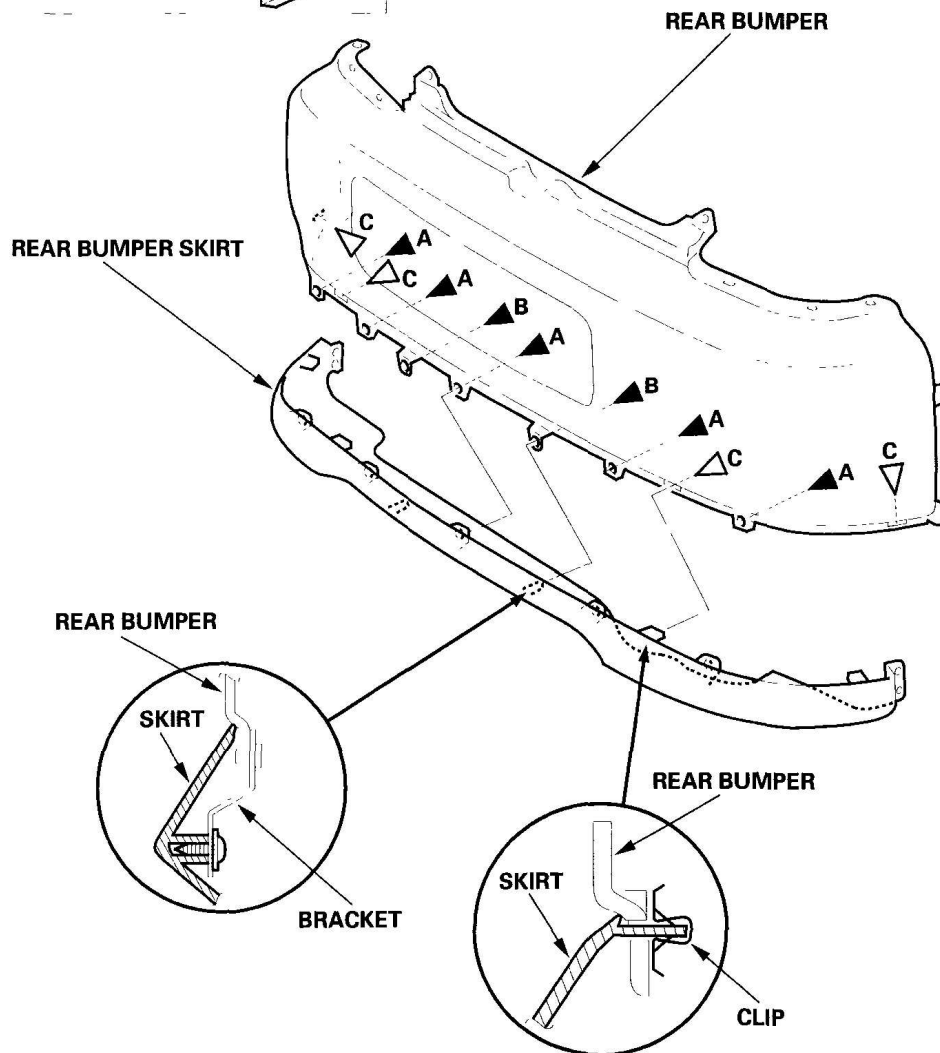

G03682608

**Fig. 4: Removing Rear Bumper Skirt**

**2006 Honda Insight**

2000-06 ACCESSORIES & EQUIPMENT Bumpers - Insight

**Courtesy of AMERICAN HONDA MOTOR CO., INC.**