

2006 HONDA

Insight

BUZZERS, RELAYS & TIMERS

BUZZERS, RELAYS & TIMERS LOCATION

Component	Location
A/C Compressor Clutch Relay	In under-hood fuse/relay box. See Fig. 25 .
A/C Condenser Fan Relay	In under-hood fuse/relay box. See Fig. 25 .
A/F Sensor Relay	Behind upper left kick panel. See Fig. 97 .
A/T Reverse Relay	Under left side of dash. See Fig. 109 .
Battery Module Fan Control Relay (High Speed)	Left front side of battery module. See Fig. 74 .
Battery Module Fan Control Relay (Low Speed)	Left front side of battery module. See Fig. 74 .
Blower Motor High Relay	Behind glove box. See Fig. 53 .
Blower Motor Relay	In under-hood fuse/relay box. See Fig. 26 .
EPS Motor Relay (CVT)	Under right kick panel. See Fig. 95 .
EPS Motor Relay (M/T)	Under right kick panel. See Fig. 55 .
Fuel Cut Relay	At left front of engine compartment. See Fig. 24 .
Hatch Opener Relay	Below left taillight. See Fig. 102 .
Headlight Relay 1	In under-hood fuse/relay box. See Fig. 27 .
Headlight Relay 2	In under-hood fuse/relay box. See Fig. 27 .
High Speed MPI Module Fan Control Relay	Left rear of power control unit. See Fig. 71 .
High Voltage Contactor Relay	Left rear of power control unit. See

2006 Honda Insight

2006 HONDA Insight

	Fig. 71 .
Horn Relay	In under-hood fuse/relay box. See Fig. 27 .
Ignition Hold Relay	Left rear of power control unit. See Fig. 71 .
Intermittent Wiper Relay	At left front of engine compartment. See Fig. 24 .
Low Speed MPI Module Fan Control Relay	Left rear of power control unit. See Fig. 71 .
PGM-FI Main Relay	Under left side of dash. See Fig. 109 .
Power Window Relay	In under-dash fuse/relay box. See Fig. 32 .
Radiator Fan Main Relay	At left front of engine compartment. See Fig. 24 .
Radiator Fan Relay	In under-hood fuse/relay box. See Fig. 25 .
Rear Window Defogger Relay	At left front of engine compartment. See Fig. 24 .
Starter Cut Relay	In under-dash fuse/relay box. See Fig. 32 .
Taillight Relay	In under-dash fuse/relay box. See Fig. 32 .
Turn Signal/Hazard Relay	In under-dash fuse/relay box. See Fig. 32 .
Unlock Relay	Left side of dash. See Fig. 36 .

CIRCUIT PROTECTION DEVICES**CIRCUIT PROTECTION DEVICES LOCATION**

Component	Location
In-Line Fuse A	Left side of dash. See Fig. 35 .
In-Line Fuse B	Left side of dash. See Fig. 35 .
Under-Dash Fuse/Relay Box	Left end of dash. See Fig. 97 .

2006 Honda Insight
2006 HONDA Insight

Under-Hood Fuse/Relay Box	Left side of engine compartment. See Fig. 23 .
---------------------------	---

CONTROL UNITS

CONTROL UNITS LOCATION

Component	Location
ABS Modulator/Control Unit	At right front of engine compartment. See Fig. 2 .
BCM Module	On top front of battery module. See Fig. 79 .
Climate Control Unit	Behind middle of dash. See Fig. 44 .
ECM	On right side of front floor. See Fig. 51 .
ELD Unit	In under-hood fuse/relay box. See Fig. 26 .
EPS Control Unit (CVT)	Under right side kick panel. See Fig. 95 .
EPS Control Unit (M/T)	Under right side kick panel. See Fig. 54 .
Immobilizer Receiver Unit	Under left side of dash, right of steering column. See Fig. 39 .
Keyless Door Lock Control Unit	Under left side of dash. See Fig. 31 .
MCM	On top front of battery module. See Fig. 79 .
MPI Module	In power control unit. See Fig. 70 .
Security Control Unit	Left side of dash. See Fig. 36 .
SRS Unit	Under center of dash. See Fig. 42 .
Transmission Control Module (CVT)	Behind right side of dash. See Fig. 96 .
Voltage Converter Module	In power control unit. See Fig. 69 .

MOTORS

MOTORS LOCATION

--	--

2006 Honda Insight

2006 HONDA Insight

Component	Location
A/C Condenser Fan Assembly Connector	Right front of engine compartment. See Fig. 3 .
Air Mix Control Motor	Behind glove box. See Fig. 50 .
Battery Module Fan Motor	At top rear of battery module. See Fig. 80 .
Battery Module Fan Motor Connector	Top of battery module. See Fig. 80 .
Blower Motor	Behind glove box. See Fig. 53 .
Driver's Door Lock Actuator	Rear of left front door. See Fig. 56 .
Driver's Power Window Motor Connector	Middle of driver's door. See Fig. 111 .
EPS Motor Connector	At left rear of engine compartment. See Fig. 19 .
Fuel Tank Unit	On top left side of fuel tank. See Fig. 62 .
Left Power Mirror Connector	Front of driver's door. See Fig. 111 .
Mode Control Motor	Under center of dash. See Fig. 41 .
MPI Fan	Left rear side of PCU. See Fig. 73 .
Passenger's Door Lock Actuator	Rear of passenger's door. See Fig. 57 .
Passenger's Power Window Motor Connector	Middle of front passenger's door. See Fig. 112 .
Radiator Fan Motor Connector	At left front of engine compartment. See Fig. 21 .
Rear Window Washer Motor	At right front of engine compartment. See Fig. 84 .
Rear Window Wiper Motor Connector	Lower right side of hatch. See Fig. 113 .
Recirculation Control Motor	Behind glove box. See Fig. 48 .
Right Power Mirror Connector	Front of front passenger's door. See Fig. 112 .
Starter	On engine above transaxle. See Fig. 12 .
	At right rear engine compartment. See

Windshield Washer Motor	Fig. 84 .
Windshield Wiper Motor	At right rear of engine compartment. See Fig. 16 .

SENDING UNITS & SENSORS

SENDING UNITS & SENSORS LOCATION

Component	Location
A/F Sensor Connector	On top rear of engine. See Fig. 108 .
Battery Current Sensor Connector	On top front of battery module. See Fig. 75 .
Brake Booster Vacuum Sensor	On left rear of engine compartment. See Fig. 18 .
Brake Fluid Pressure Sensor A	Right side of engine compartment. See Fig. 105 .
Brake Fluid Pressure Sensor B	Right side of engine compartment. See Fig. 105 .
CKP Sensor	On lower right front of engine. See Fig. 88 .
CVT Driven Pulley Speed Sensor	On transaxle housing. See Fig. 10 .
CVT Drive Pulley Speed Sensor	On transaxle housing. See Fig. 12 .
CVT Speed Sensor	On transaxle housing. See Fig. 10 .
ECT Sensor	On rear of engine. See Fig. 13 .
EPS Torque Sensor	At left rear of engine compartment. See Fig. 19 .
Evaporator Temperature Sensor Connector	Behind glove box. See Fig. 47 .
Fuel Tank Pressure Sensor	Under right rear of vehicle. See Fig. 90 .
Fuel Tank Unit	On top left side of fuel tank. See Fig. 62 .
Heater Core Temperature Sensor Connector	Behind center lower cover. See Fig. 104 .

2006 Honda Insight

2006 HONDA Insight

IAT Sensor	On air intake hose. See Fig. 8 .
In-Car Temperature Sensor	Under center of dash. See Fig. 98 .
Knock Sensor	On left side of engine. See Fig. 5 .
MAP Sensor	On right rear of engine. See Fig. 9 .
Motor Communication Sensor	On lower right rear of engine. See Fig. 14 .
MPI Module Current Sensor	On left side of battery module. See Fig. 74 .
Outside Air Temperature Sensor	Behind middle of front bumper. See Fig. 106 .
Secondary HO2S	In exhaust, after catalytic converter. See Fig. 89 .
Sunlight Sensor	At top middle of dash. See Fig. 110 .
TDC Sensor 1	On left rear of engine. See Fig. 9 .
TDC Sensor 2	On right rear of engine. See Fig. 9 .
Third HO2S Connector	Under driver's seat. See Fig. 115 .
TP Sensor	On throttle body. See Fig. 7 .
U Phase Motor Current Sensor	In power control unit. See Fig. 68 .
V Phase Motor Current Sensor	In power control unit. See Fig. 68 .
VSS (CVT)	On rear of transaxle. See Fig. 92 .
VSS (M/T)	On rear of transaxle. See Fig. 14 .
Wheel Speed Sensor Connector (Left Front)	At left front wheel hub assembly. See Fig. 28 .
Wheel Speed Sensor Connector (Left Rear)	At left rear wheel hub assembly. See Fig. 91 .
Wheel Speed Sensor Connector (Right Front)	At right front wheel hub assembly. See Fig. 1 .
Wheel Speed Sensor Connector (Right Rear)	At right rear wheel hub assembly. See Fig. 91 .
W Phase Motor Current Sensor	In power control unit. See Fig. 68 .

SOLENOIDS & SOLENOID VALVES

SOLENOIDS & SOLENOID VALVES LOCATION

Component	Location
ABS Modulator/Control Unit	At right front of engine compartment. See Fig. 2 .
A/C Compressor Connector	Lower right front of engine compartment. See Fig. 86 .
CAS Solenoid Valves (CVT)	At right side of engine compartment. See Fig. 1 .
CVT Pulley Pressure Control Valve Assembly	In CVT. See Fig. 93 .
CVT Speed Change Control Valve Assembly	In CVT. See Fig. 93 .
CVT Start Clutch Pressure Control Valve Assembly	In CVT. See Fig. 93 .
EGR Valve & EGR Valve Position Sensor	On left rear of engine. See Fig. 8 .
EVAP Canister Purge Valve	On left rear of engine. See Fig. 10 .
EVAP Canister Vent Shut Valve	Under rear of vehicle, near right side of fuel tank. See Fig. 114 .
Fuel Injector No. 1	On left side of engine. See Fig. 6 .
Fuel Injector No. 2	On left side of engine. See Fig. 6 .
Fuel Injector No. 3	On left side of engine. See Fig. 6 .
Hatch Opener Actuator	Middle rear of cargo area. See Fig. 81 .
IAC Valve	On left side of engine. See Fig. 7 .
Inhibitor Solenoid	In CVT. See Fig. 93 .
Rocker Arm Oil Control Solenoid (VTEC Solenoid Valve)	On left side of engine. See Fig. 107 .
Shift Lock Solenoid	Under center console. See Fig. 94 .
Starter Solenoid	On starter motor. See Fig. 12 .

SWITCHES**SWITCHES LOCATION**

--	--

2006 Honda Insight

2006 HONDA Insight

Component	Location
A/C Pressure Switch	At right side of engine compartment. See Fig. 1 .
Back-Up Light Switch	On transaxle housing. See Fig. 11 .
Brake Fluid Level Switch	On master cylinder reservoir. See Fig. 29 .
Brake Pedal Position Switch	Under left side of dash. See Fig. 33 .
Clutch Pedal Position Switch	Under left side of dash. See Fig. 33 .
Driver's Seat Belt Switch Connector	Under driver's seat. See Fig. 59 .
Idle Stop Switch	Under left side of dash. See Fig. 34 .
IMA Diode	On top front of battery module. See Fig. 78 .
Neutral Position Switch	Rear of transmission. See Fig. 15 .
Oil Pressure Switch	On lower left side of engine. See Fig. 87 .
Parking Brake Switch	At base of parking brake lever. See Fig. 60 .
Park Pin Switch Connector	Under center console. See Fig. 94 .
Radiator Fan Switch	At front of engine compartment. See Fig. 5 .
Rocker Arm Oil Pressure Switch (VTEC Oil Pressure Switch)	On left side of engine. See Fig. 107 .
Transmission Range Switch Connector (CVT)	On transaxle housing. See Fig. 92 .

MISCELLANEOUS**MISCELLANEOUS LOCATION**

Component	Location
A/C Condenser Fan Capacitor	Right front of engine compartment. See Fig. 3 .
A/C Diode	Under left side of dash. See Fig. 33 .
Battery Module Fan Resistor	Left front of battery module. See Fig.

2006 Honda Insight

2006 HONDA Insight

	101 .
Blower Power Transistor	Behind glove box. See Fig. 48 .
Bypass Contactor	Left front of battery module. See Fig. 100 .
Bypass Resistor	Below left side of battery module. See Fig. 77 .
Cable Reel Connector B	On steering column. See Fig. 39 .
DC-DC Converter Connector	Right front of power control unit. See Fig. 76 .
DLC (Data Link Connector)	Behind center of dash. See Fig. 41 .
Driver's Seat Belt Tensioner Connector	At left "B" pillar. See Fig. 61 .
High Voltage Contactor Connector	In left front of battery module. See Fig. 75 .
Horn	Behind right side of front bumper. See Fig. 4 .
Ignition Coil No. 1	On top center of engine. See Fig. 108 .
Ignition Coil No. 2	On top center of engine. See Fig. 108 .
Ignition Coil No. 3	On top center of engine. See Fig. 108 .
IMA Diode	On top front of battery module. See Fig. 78 .
Junction Board	At left front of battery module. See Fig. 75 .
Junction Connector C104	At top rear of engine. See Fig. 10 .
Junction Connector C105	At right side of floor. See Fig. 52 .
Junction Connector C107	Under center of dash. See Fig. 52 .
Junction Connector C108	Under center of dash. See Fig. 52 .
Junction Connector C507	Behind rear seats, at center of floor. See Fig. 63 .
Junction Connector C508	Behind rear seats, at center of floor. See Fig. 63 .
Junction Connector C571	Under left side of dash. See Fig. 37 .
MES Connector	Behind upper left kick panel. See Fig. 97 .

2006 Honda Insight

2006 HONDA Insight

MPI Module Fan Control Resistor (High Speed)	Left rear side of PCU. See Fig. 72 .
MPI Module Fan Control Resistor (Low Speed)	Left rear side of PCU. See Fig. 99 .
Noise Condenser Connector	Behind passenger's seat. See Fig. 65 .
Passenger's Seat Belt Tensioner Connector	At right "B" pillar. See Fig. 66 .
Test Tachometer Connector	Left rear of engine compartment. See Fig. 29 .

CONNECTORS

CONNECTORS LOCATION

Component	Location
C101 (CVT) (Gray, 8 Pin)	Under center of dash. See Fig. 50 .
C101 (M/T) (Gray, 6 Pin)	Under center of dash. See Fig. 50 .
C102 (Light Blue, 16 Pin)	Under center of dash. See Fig. 43 .
C103 (Light Blue, 24 Pin)	Under center of dash. See Fig. 50 .
C106 (CVT) (Light Blue, 6 Pin)	Behind center lower cover. See Fig. 43 .
C109 (CVT) (Gray, 8 Pin)	On transaxle housing. See Fig. 12 .
C401 (Brown, 3 Pin)	Under left side of dash. See Fig. 34 .
C402 (Gray, 18 Pin)	Under left side of dash. See Fig. 40 .
C403 (Light Blue, 16 Pin)	Under left side of dash. See Fig. 40 .
C404 (Light Blue, 24 Pin)	Under left side of dash. See Fig. 34 .
C405 (Gray, 14 Pin)	Under left side of dash. See Fig. 34 .
C406 (Gray, 4 Pin)	Under left side of dash. See Fig. 30 .
C407 (Gray, 16 Pin)	Behind top of left kick panel. See Fig. 97 .
C408 (Light Blue, 16 Pin)	Behind center lower cover. See Fig. 104 .
C409 (Gray, 12 Pin)	Behind right side of dash. See Fig. 49 .
C410 (Gray, 10 Pin)	Behind center lower cover. See Fig.

2006 Honda Insight

2006 HONDA Insight

	104 .
C451 (Brown, 1 Pin)	Under left side of dash. See Fig. 109 .
C452 (Gray, 16 Pin)	Under left side of dash. See Fig. 40 .
C501 (Light Blue, 16 Pin)	Under center of dash. See Fig. 50 .
C502 (Light Blue, 24 Pin)	Behind center lower cover. See Fig. 46 .
C503 (Blue, 2 Pin)	Behind center lower cover. See Fig. 46 .
C504 (Blue, 16 Pin)	Behind center lower cover. See Fig. 46 .
C505 (Light Blue, 12 Pin)	Behind rear seats, at center of floor. See Fig. 64 .
C506 (Gray, 12 Pin)	Behind rear seats, at center of floor. See Fig. 64 .
C531 (Light Blue, 16 Pin)	Under left side of dash. See Fig. 109 .
C551 (Gray, 10 Pin)	At right front side of power control unit. See Fig. 76 .
C552 (Light Blue, 24 Pin)	At right front side of power control unit. See Fig. 76 .
C561 (Gray, 12 Pin)	Under right rear of vehicle. See Fig. 90 .
C601 (Gray, 14 Pin)	At left "B" pillar. See Fig. 61 .
C602 (Gray, 2 Pin)	At center rear of cargo area. See Fig. 81 .
C701 (Light Blue, 6 Pin)	At right "B" pillar. See Fig. 66 .
C702 (Brown, 1 Pin)	At right "B" pillar. See Fig. 66 .
C703 (White, 2 Pin)	At left side of hatch. See Fig. 82 .
C710 (CVT) (Gray, 3 Pin)	In steering wheel. See Fig. 38 .

GROUND S**GROUND S LOCATION**

Component	Location


2006 Honda Insight

2006 HONDA Insight

G1	At center rear of engine compartment. See Fig. 17 .
G2 (CVT)	At left side of engine compartment. See Fig. 103 .
G2 (M/T)	At left side of engine compartment. See Fig. 22 .
G3 (CVT)	At left side of engine compartment. See Fig. 103 .
G3 (M/T)	At left side of engine compartment. See Fig. 22 .
G4	At left side of engine compartment. See Fig. 20 .
G101	At top rear of engine. See Fig. 9 .
G102	At top rear of engine. See Fig. 108 .
G201	Above right front wheelwell. See Fig. 83 .
G301	Above left front wheelwell. See Fig. 85 .
G401	Behind top of left kick panel. See Fig. 32 .
G402	Behind left side of dash. See Fig. 37 .
G403	Behind center of dash. See Fig. 45 .
G404	Behind right side of dash. See Fig. 49 .
G451	Behind right kick panel. See Fig. 55 .
G501	Under SRS unit, at front of center console. See Fig. 43 .
G502	Behind rear seats, at center of floor. See Fig. 63 .
G601	At center rear of cargo area. See Fig. 81 .
G651	At left rear side of floor. See Fig. 67 .
G701	At center rear of roof. See Fig. 58 .


COMPONENT LOCATION GRAPHICS

NOTE: Figures may show multiple component locations. Refer to appropriate table for proper figure references.

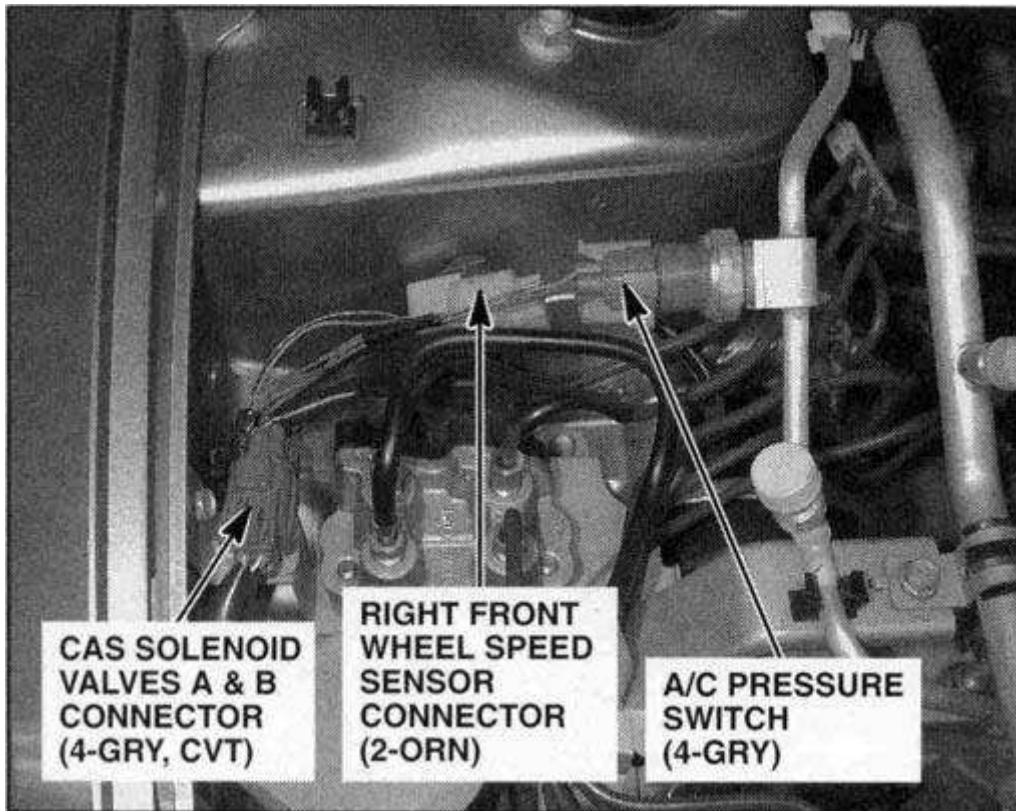


G00288317

Fig. 1: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

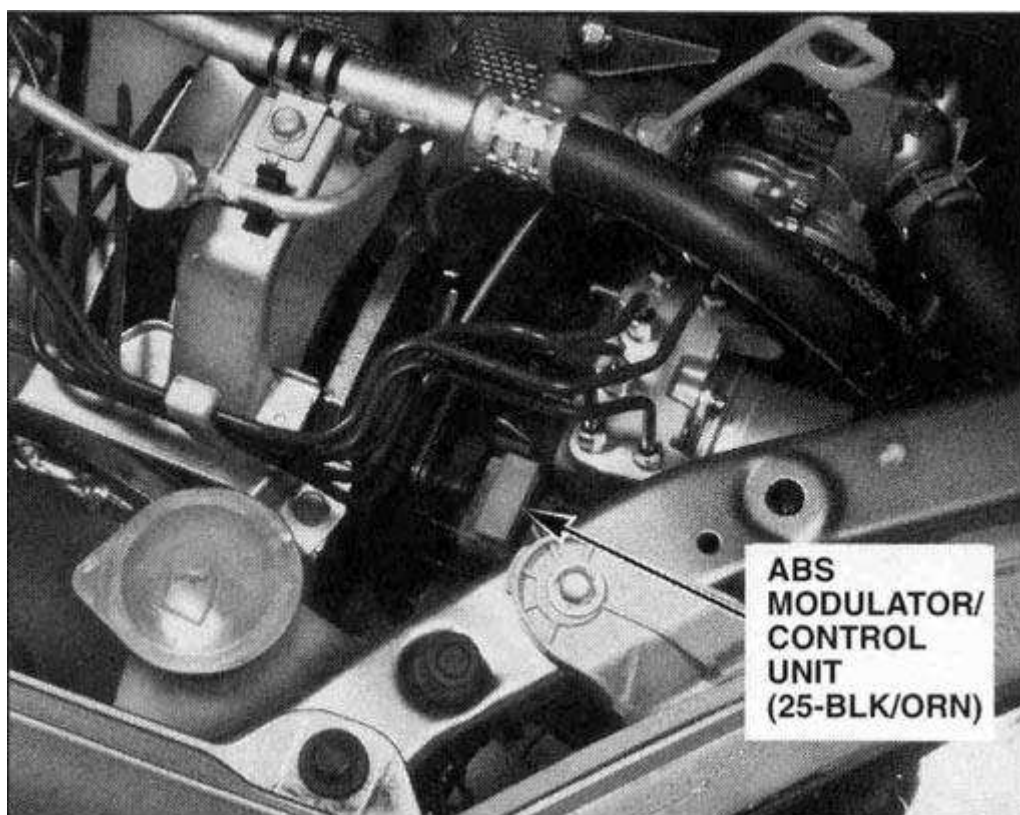


G00288318

Fig. 2: Right Front Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

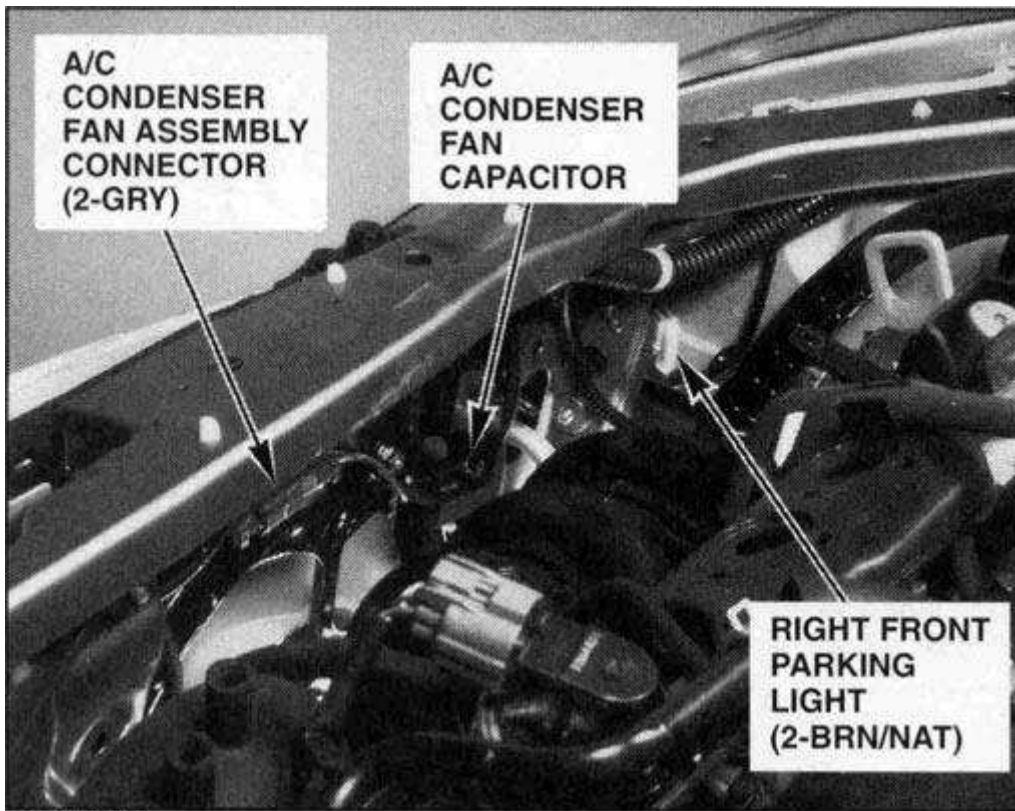


G00288319

Fig. 3: Right Front Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

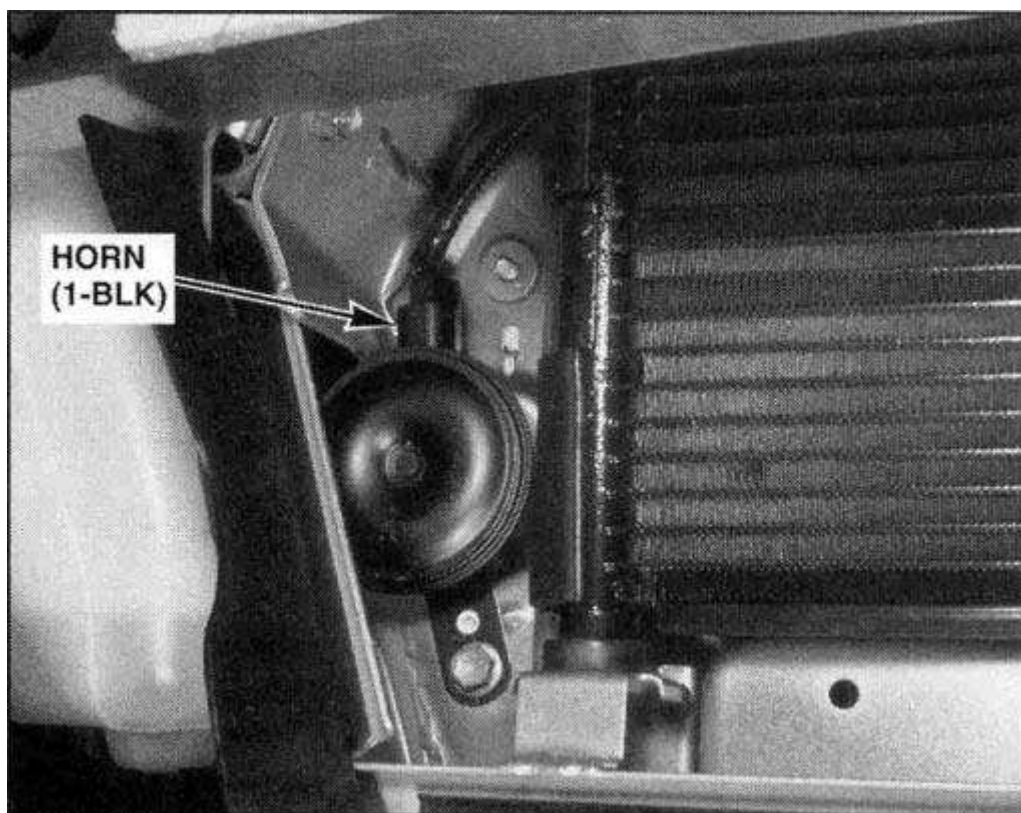

G00288320


Fig. 4: Behind Right Side Of Front Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

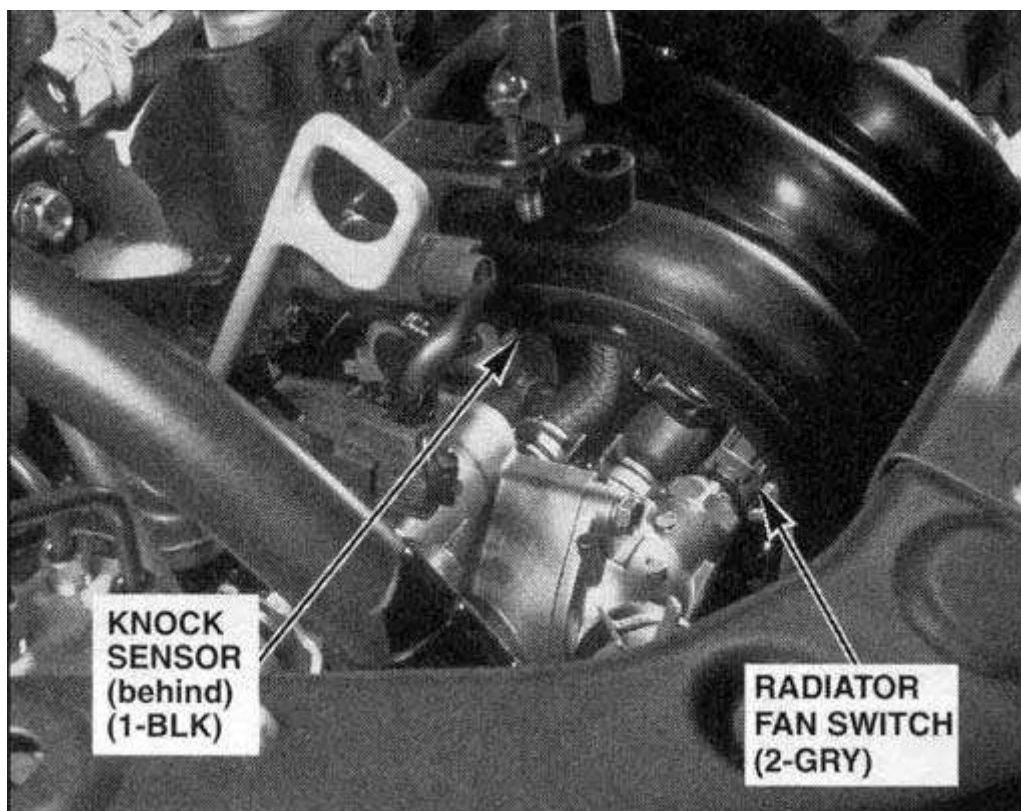

G00288323

Fig. 5: Front Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

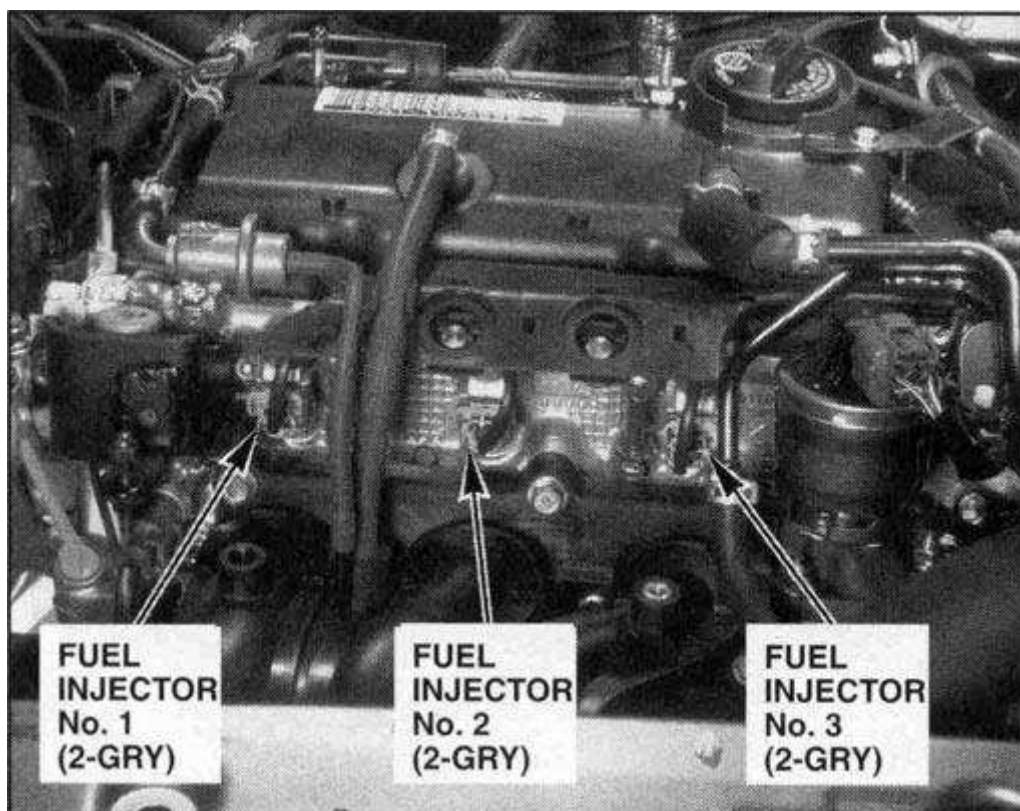

G00288324

Fig. 6: Front Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

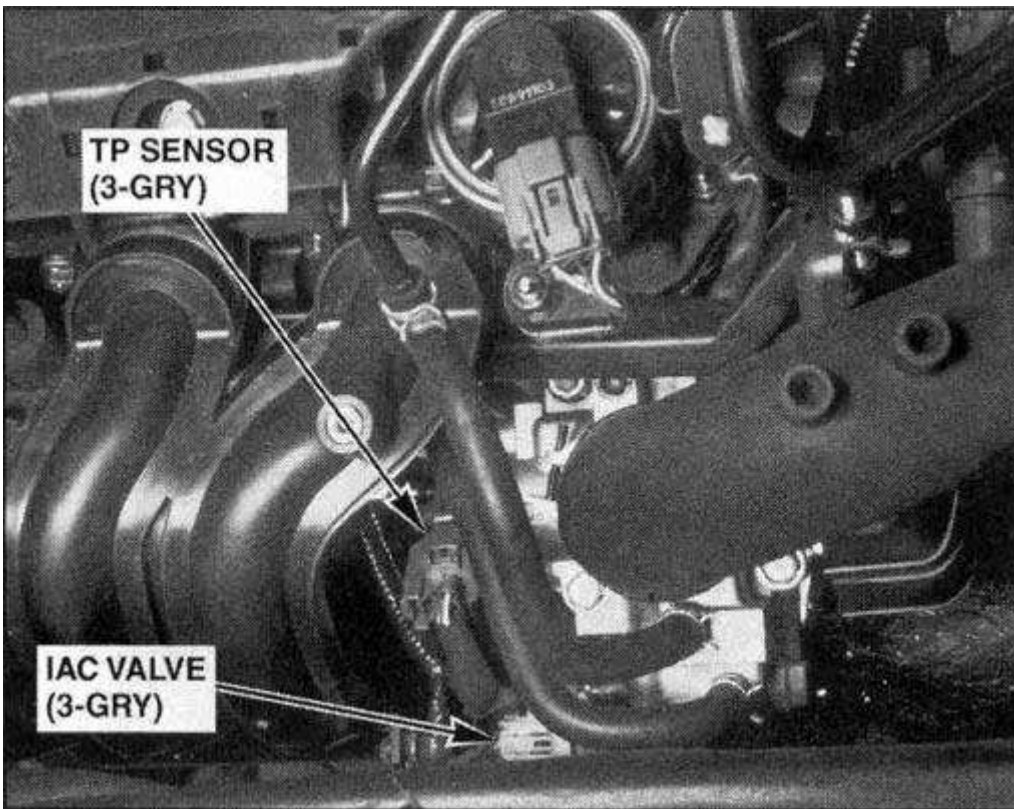

G00288325

Fig. 7: Front Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

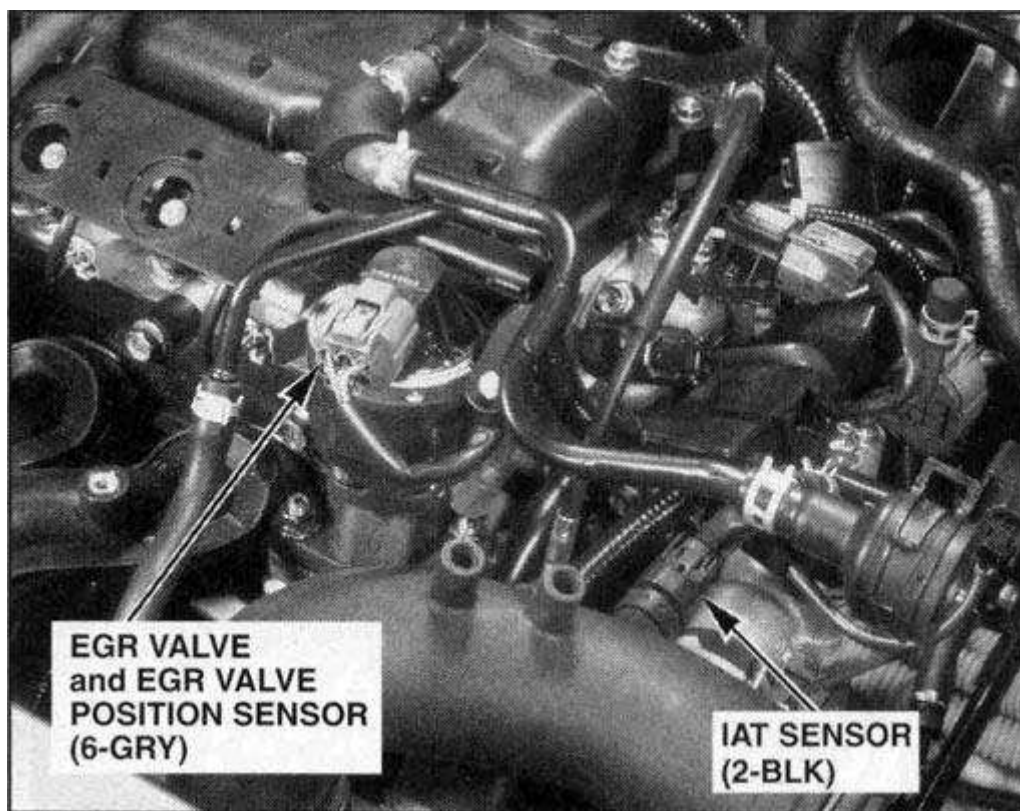

G00288326

Fig. 8: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

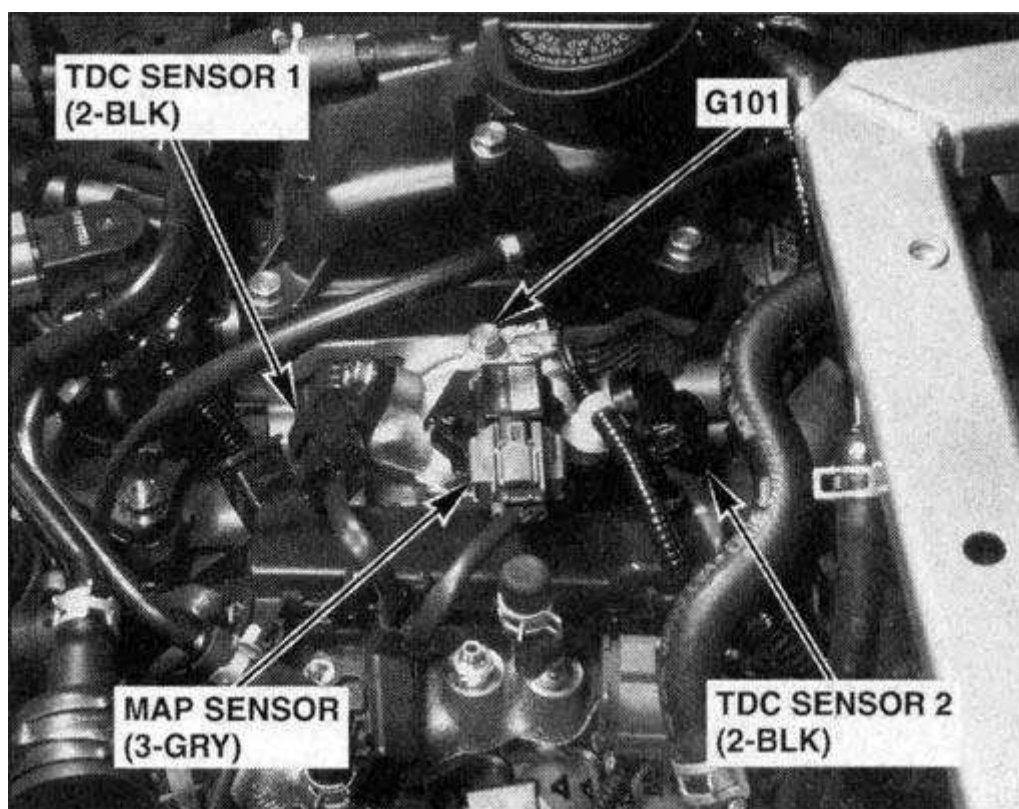

G00288327

Fig. 9: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

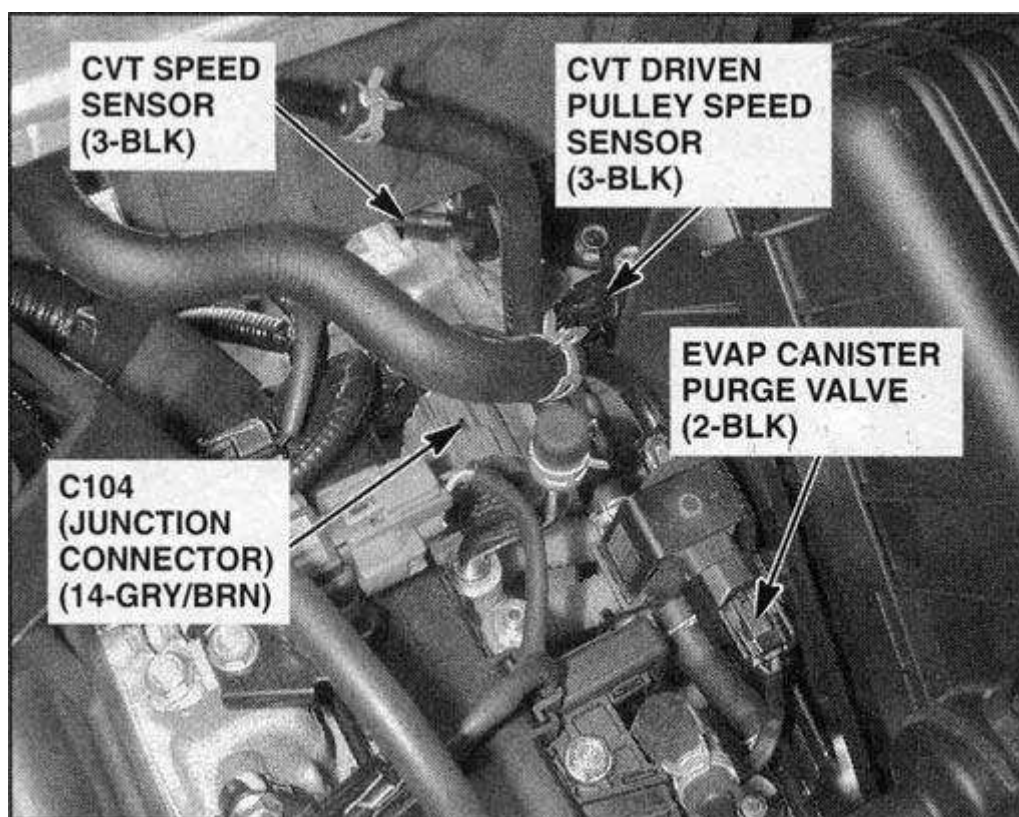

G00288328

Fig. 10: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

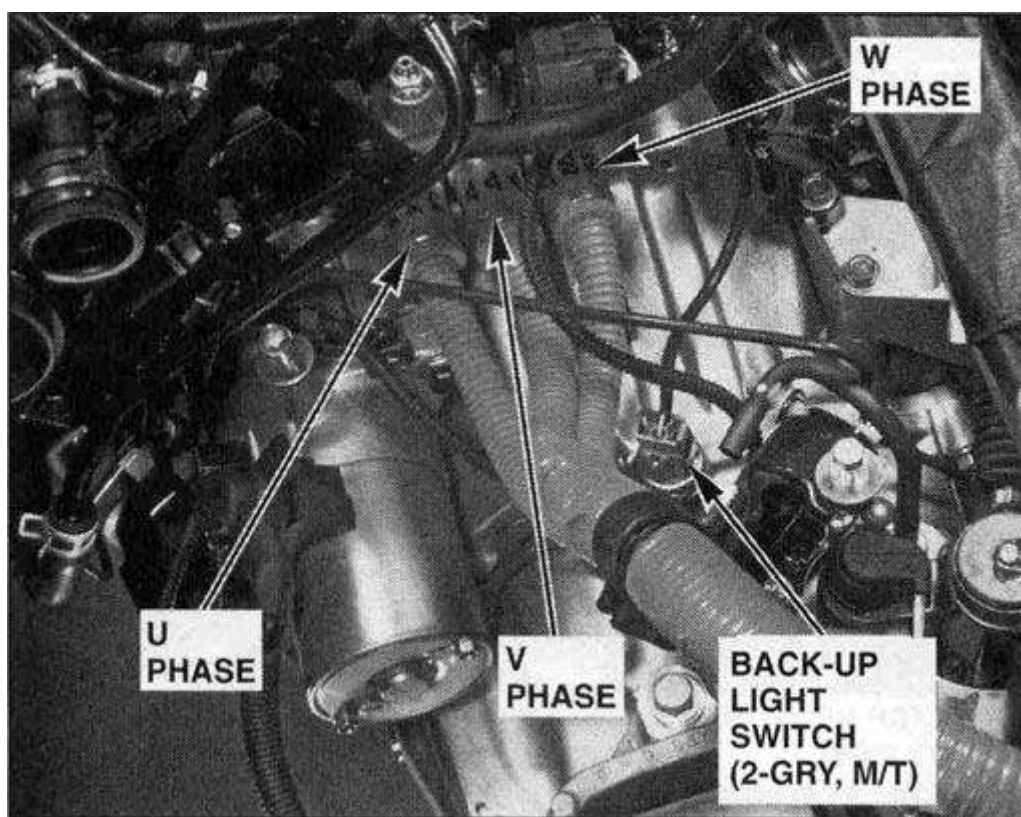

G00288329

Fig. 11: Top Of Transmission


Courtesy of AMERICAN HONDA MOTOR CO., INC.

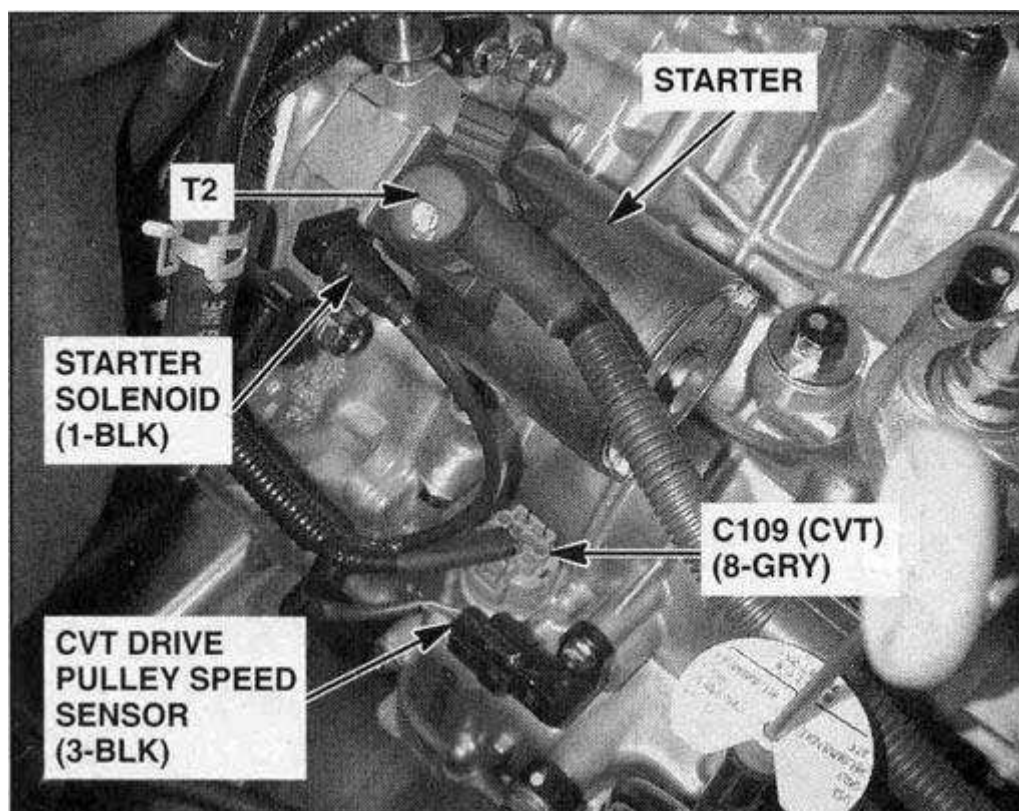

G00288330

Fig. 12: Top Front Of Transmission


Courtesy of AMERICAN HONDA MOTOR CO., INC.

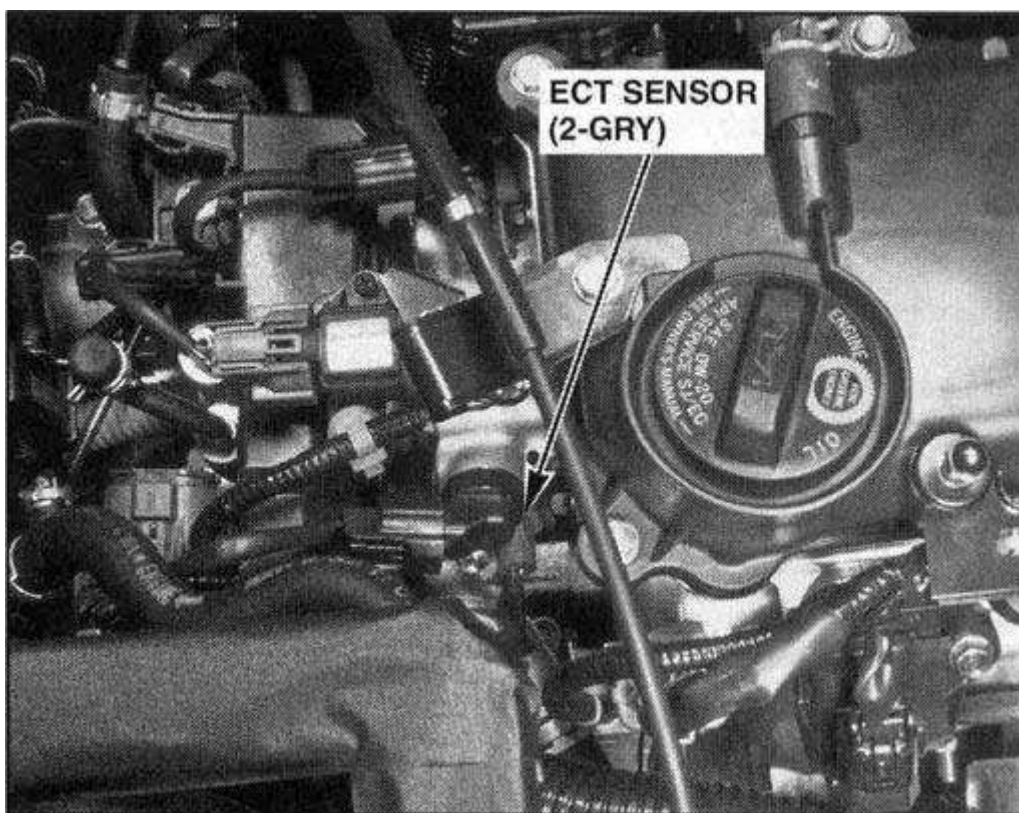

G00288332

Fig. 13: Rear Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

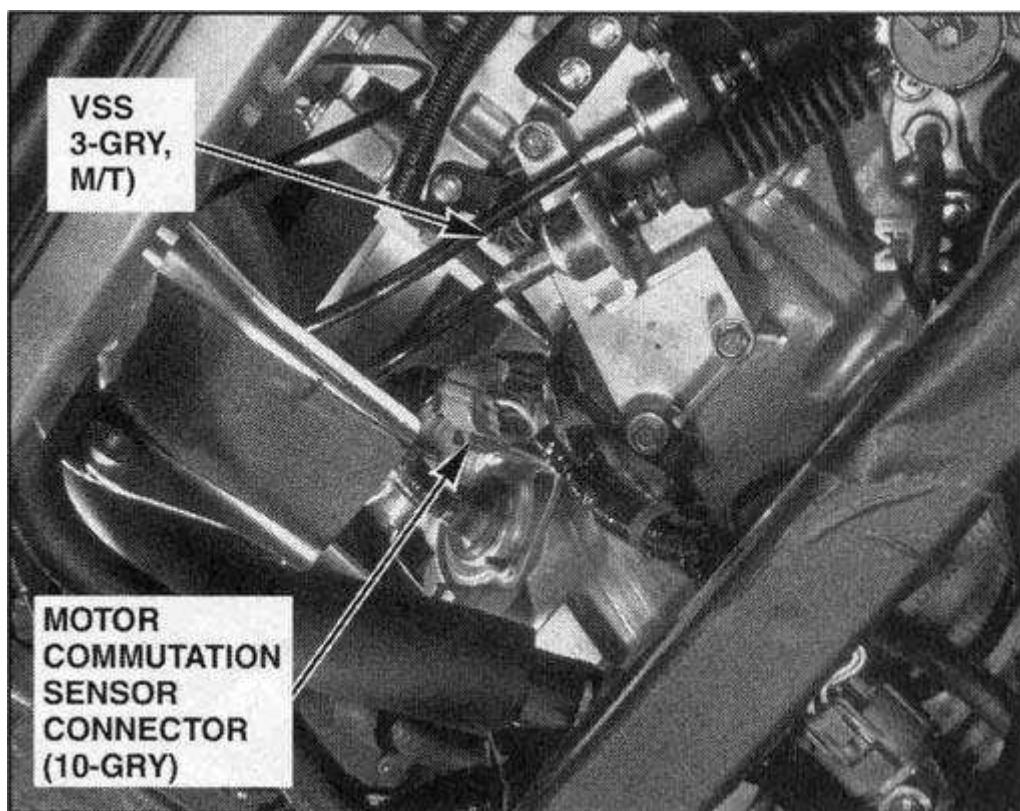

G00288333

Fig. 14: Middle Rear Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

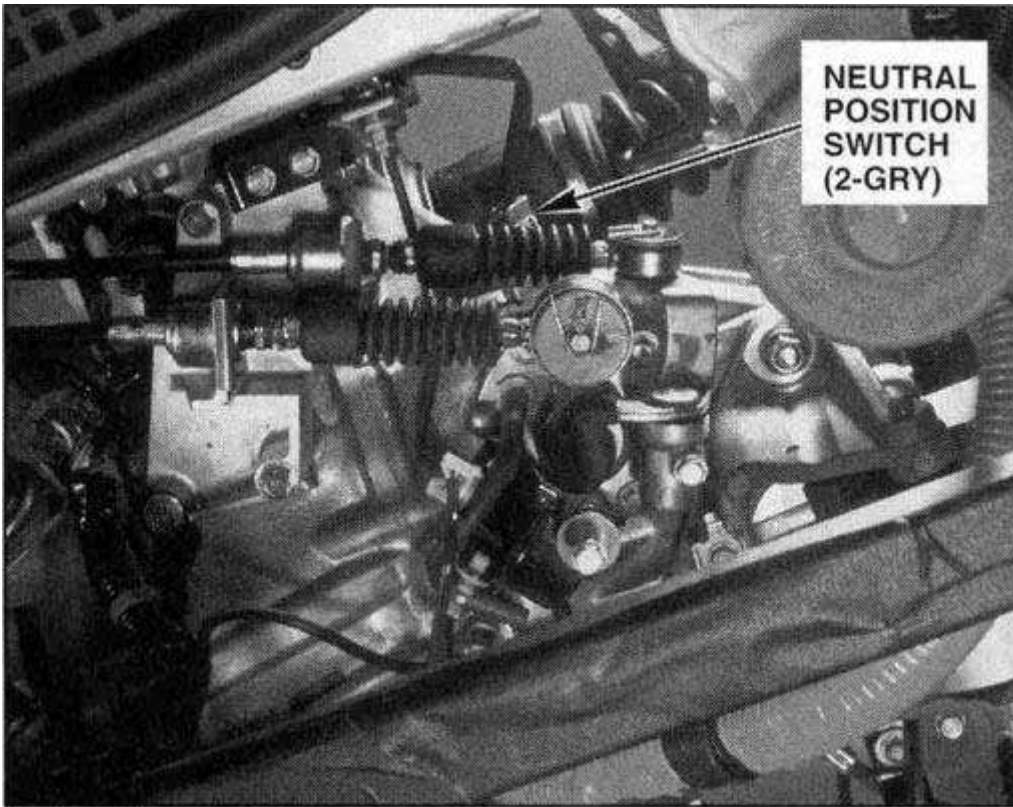

G00288334

Fig. 15: Rear Of Transmission (M/T)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

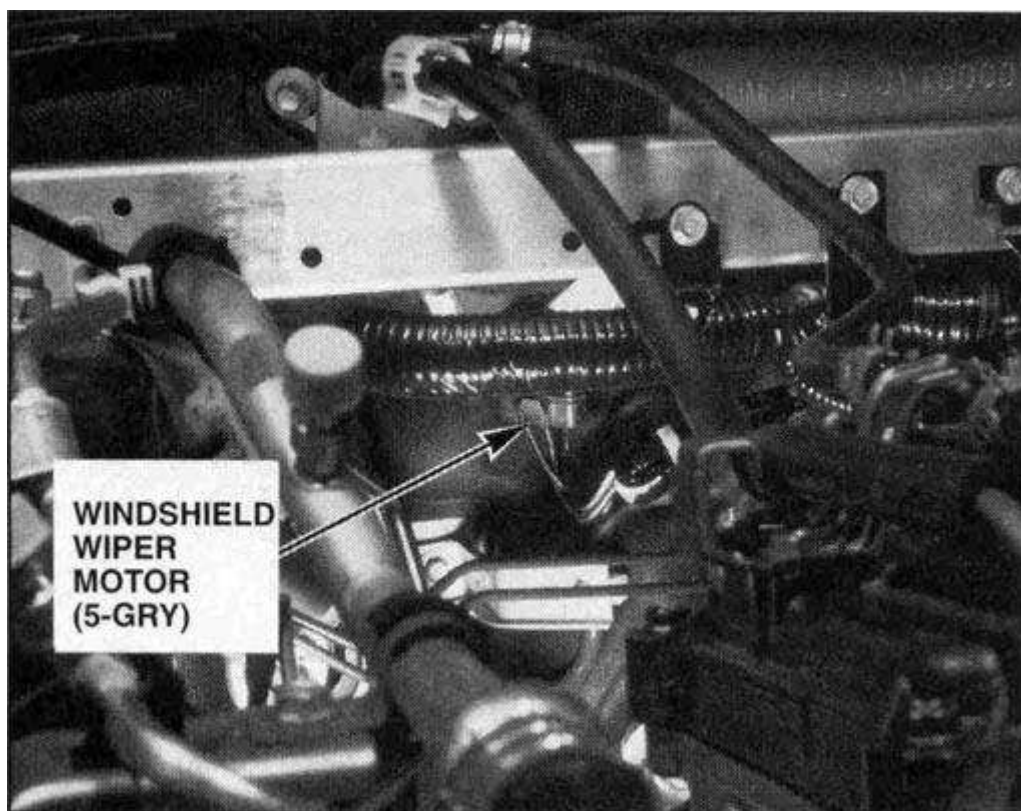


G00288335

Fig. 16: Right Rear Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.




G00288336

Fig. 17: Middle Rear Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

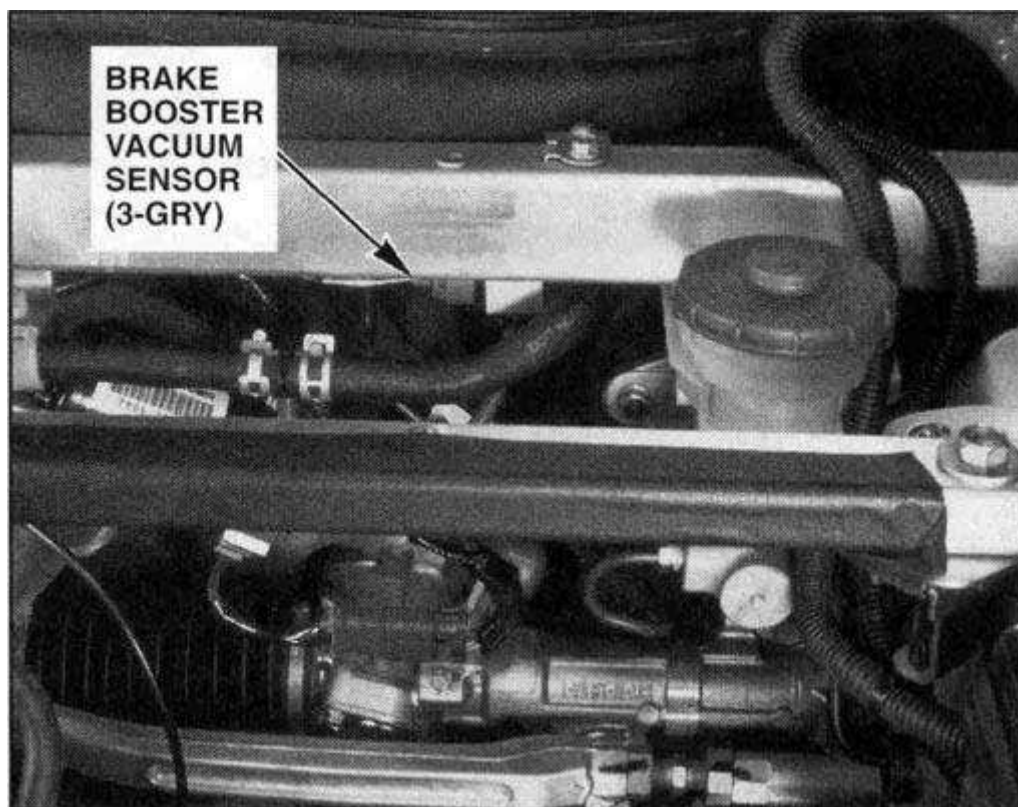


G00288337

Fig. 18: Left Rear Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

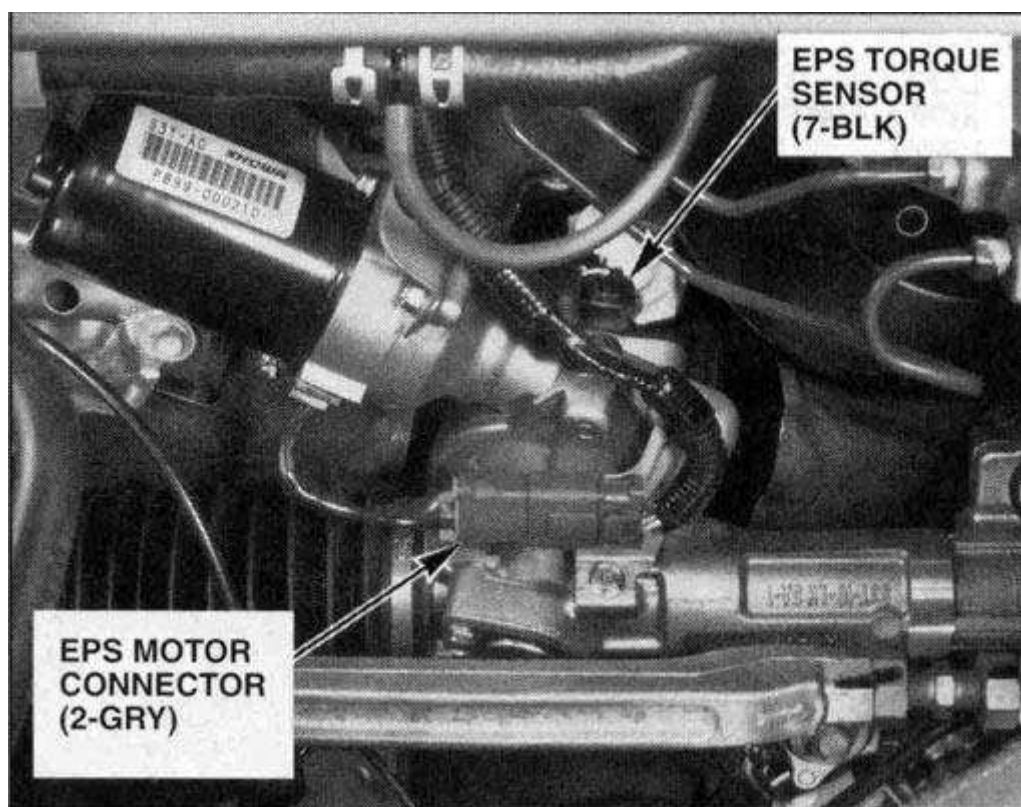


G00288338

Fig. 19: Left Rear Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

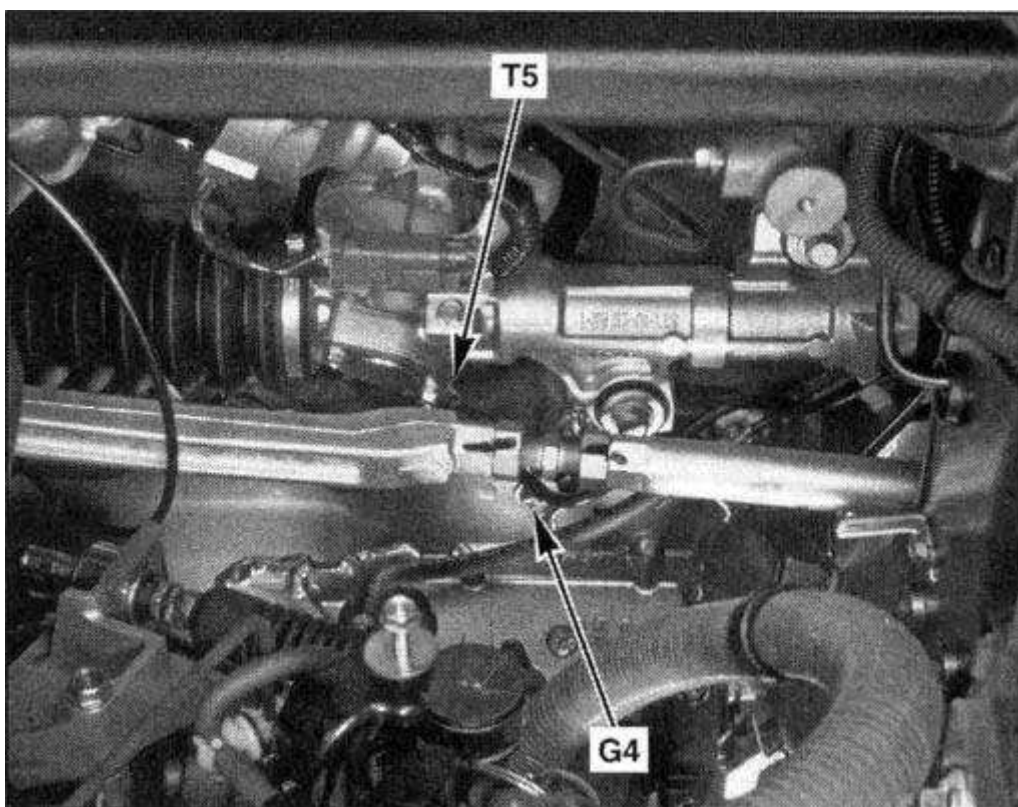


G00288339

Fig. 20: Left Rear Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

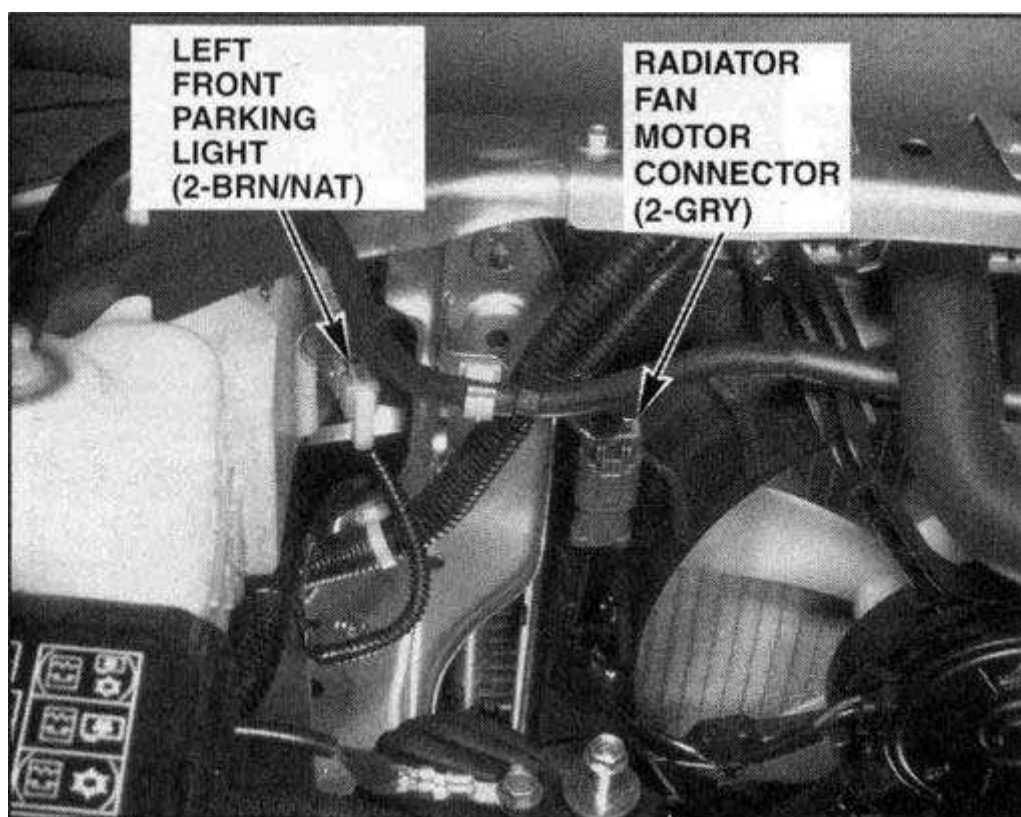


G00288340

Fig. 21: Left Front Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

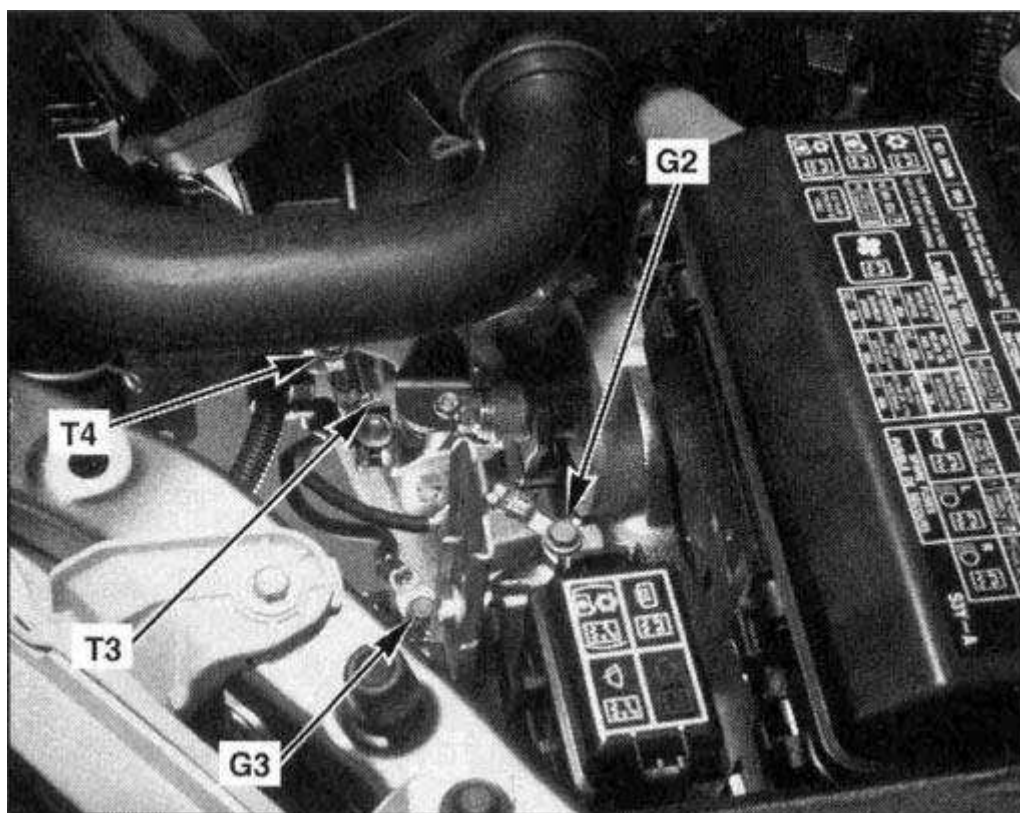


G00288341

Fig. 22: Left Side Of Engine Compartment (M/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

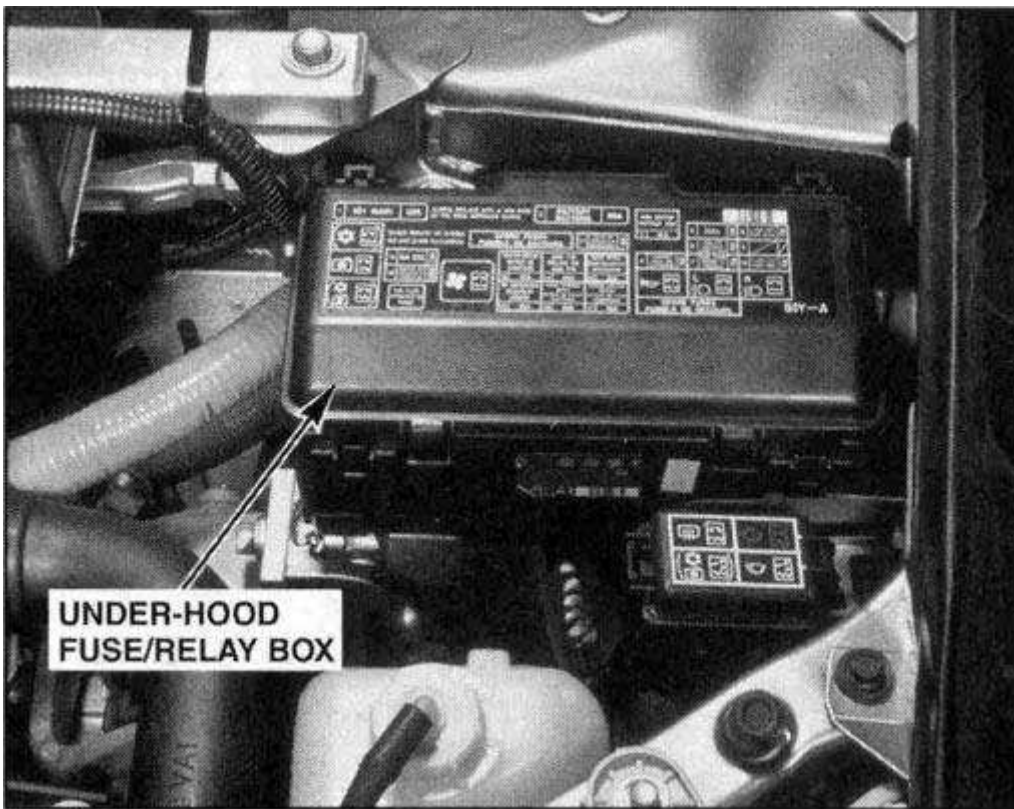


G00288342

Fig. 23: Left Front Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

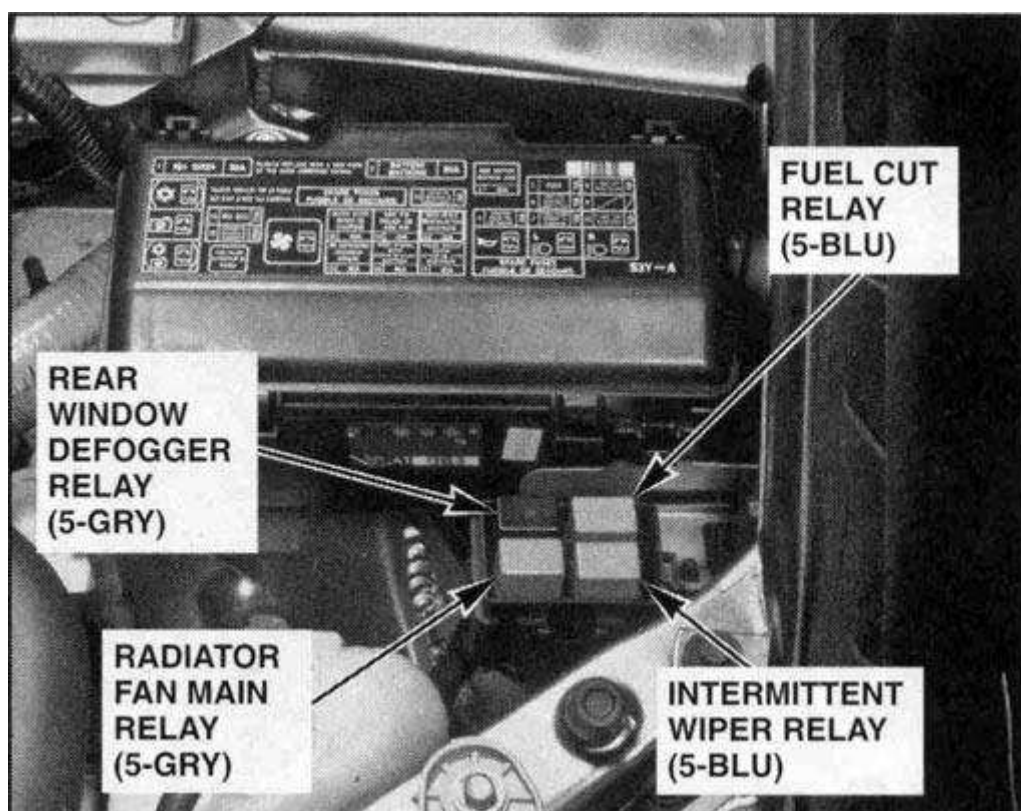


G00288343

Fig. 24: Left Front Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

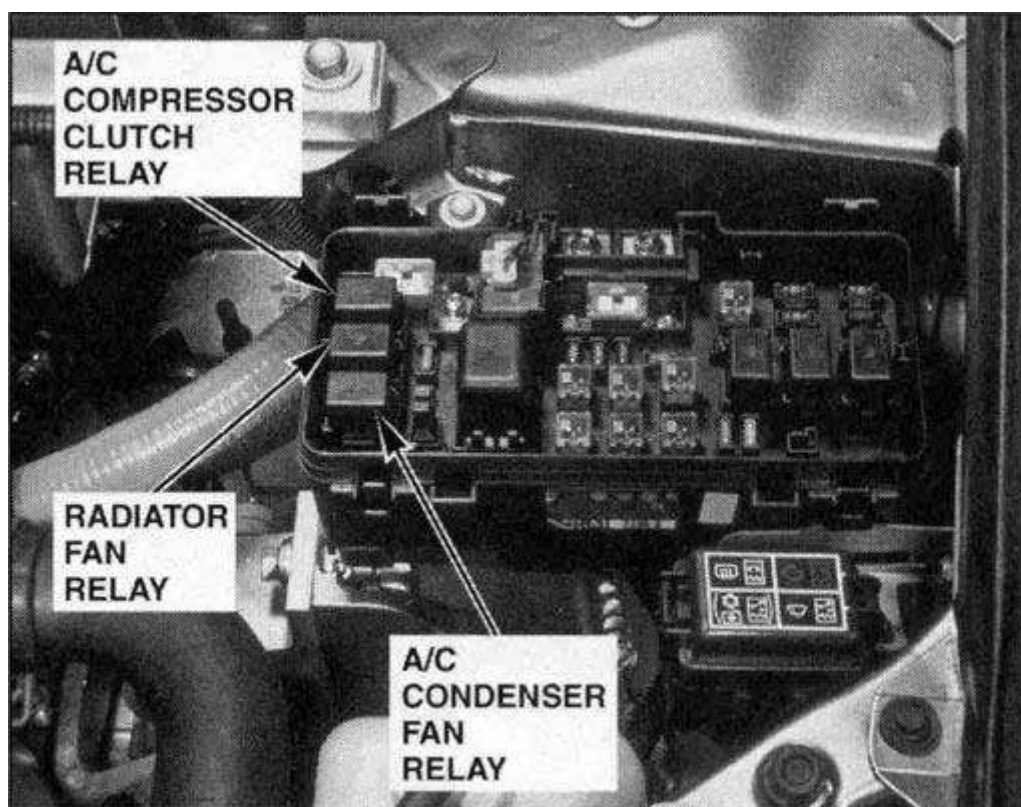


G00288344

Fig. 25: Left Front Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

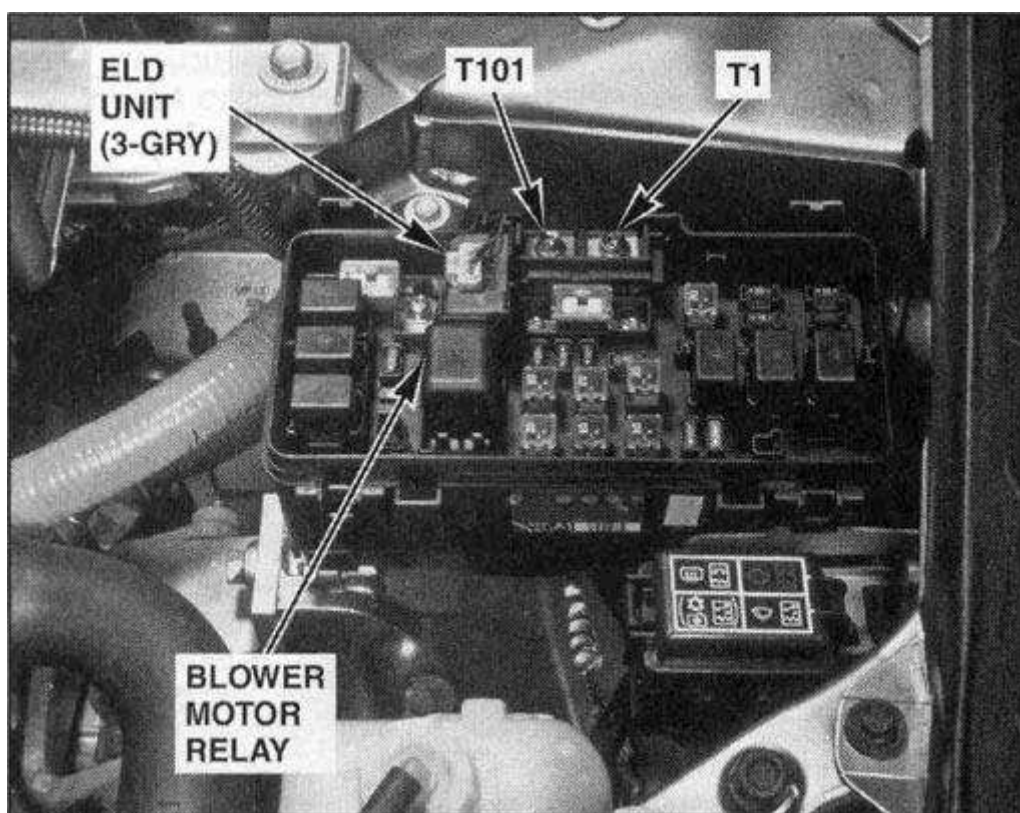


G00288345

Fig. 26: Left Front Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

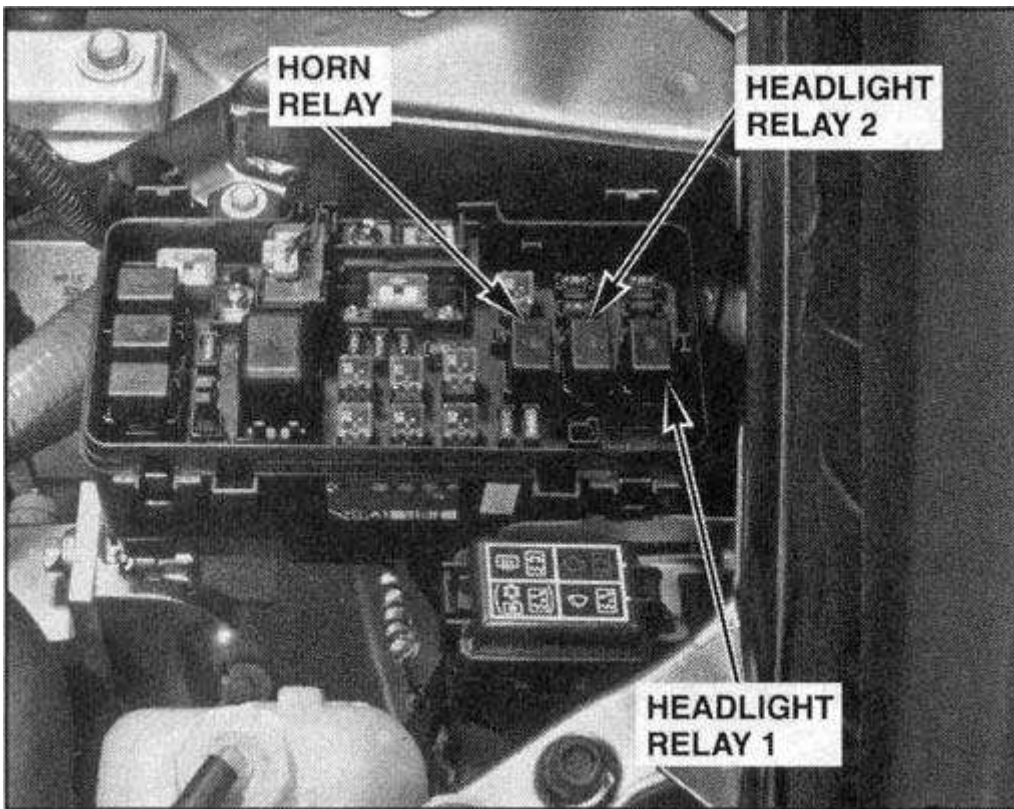


G00288346

Fig. 27: Left Front Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

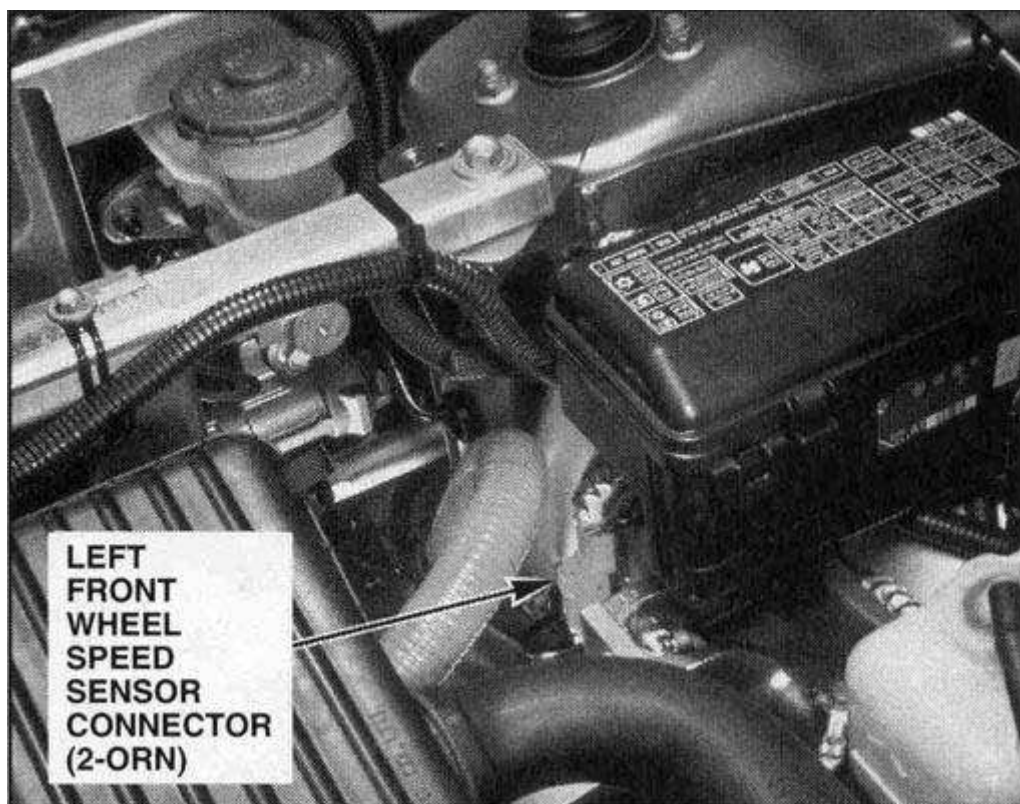


G00288347

Fig. 28: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

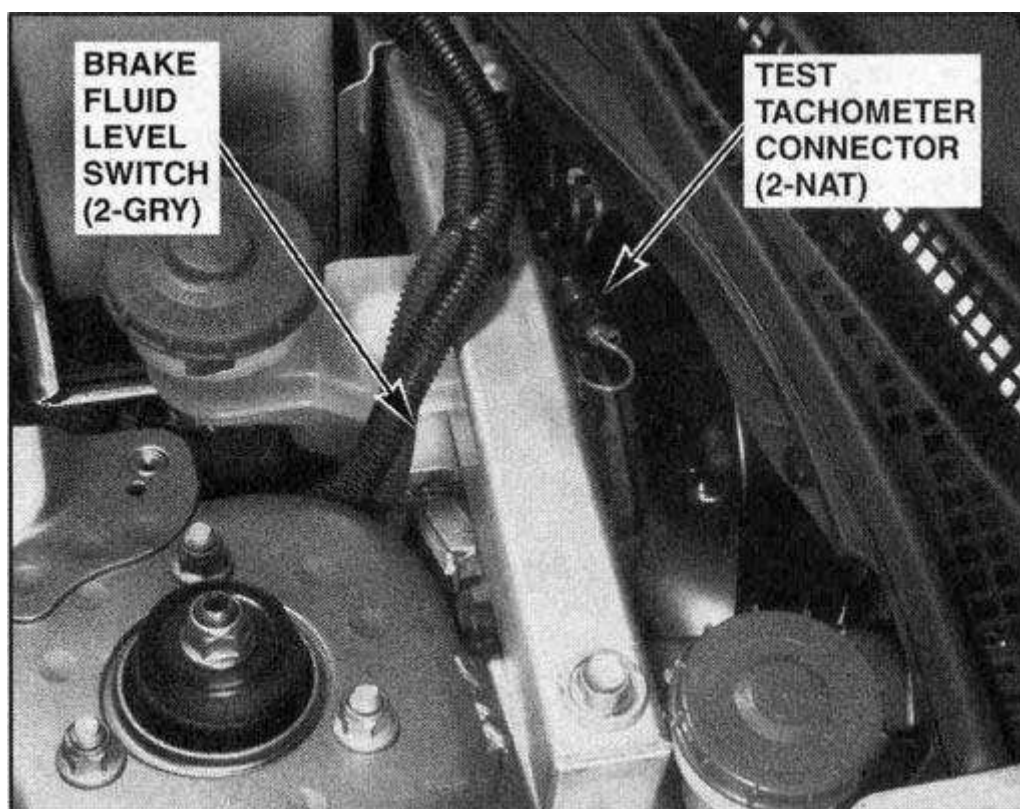

G00288348


Fig. 29: Left Rear Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

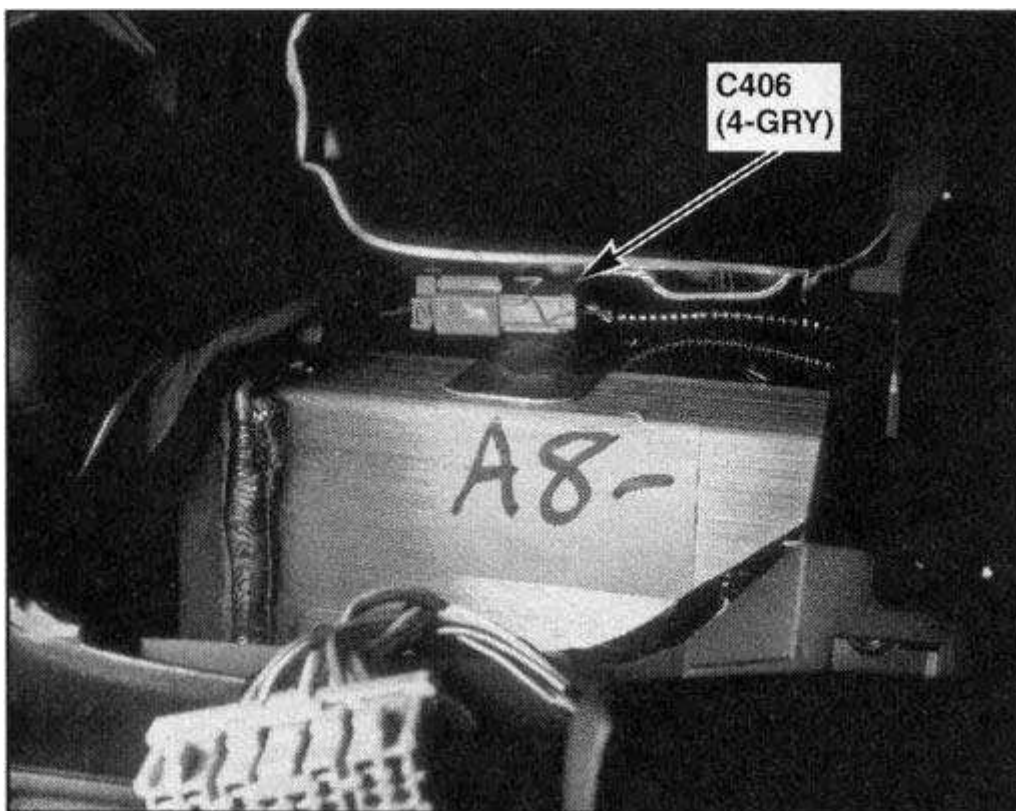

G00288350


Fig. 30: Left Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

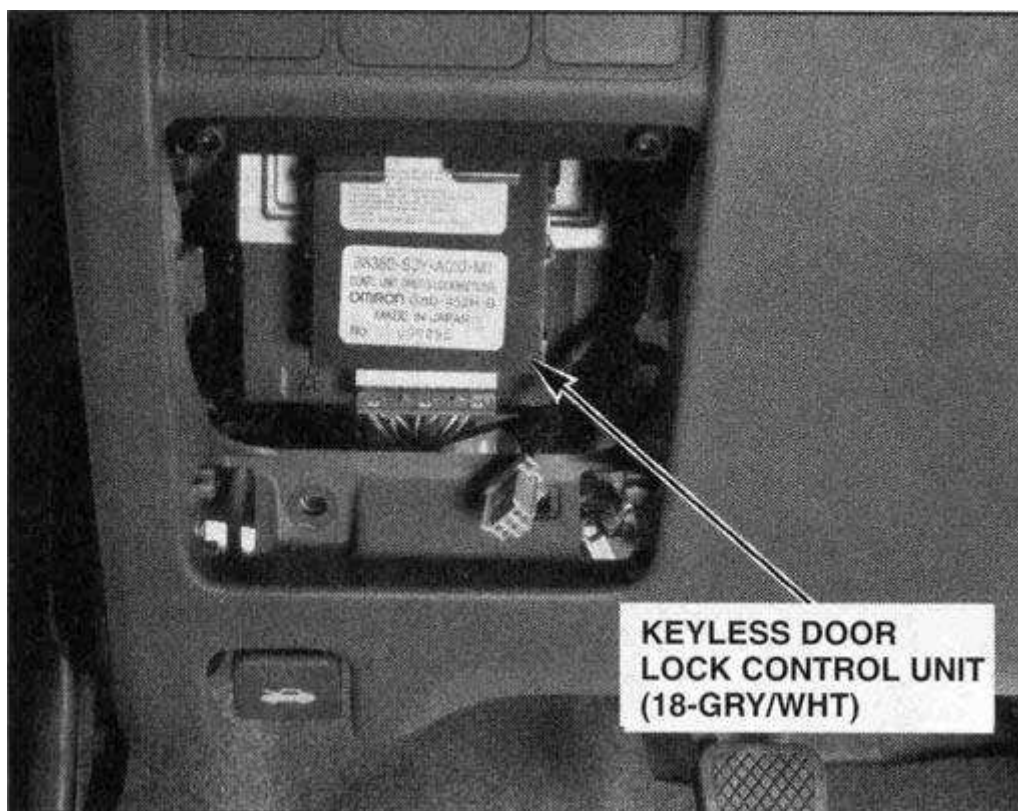

G00288351


Fig. 31: Under Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

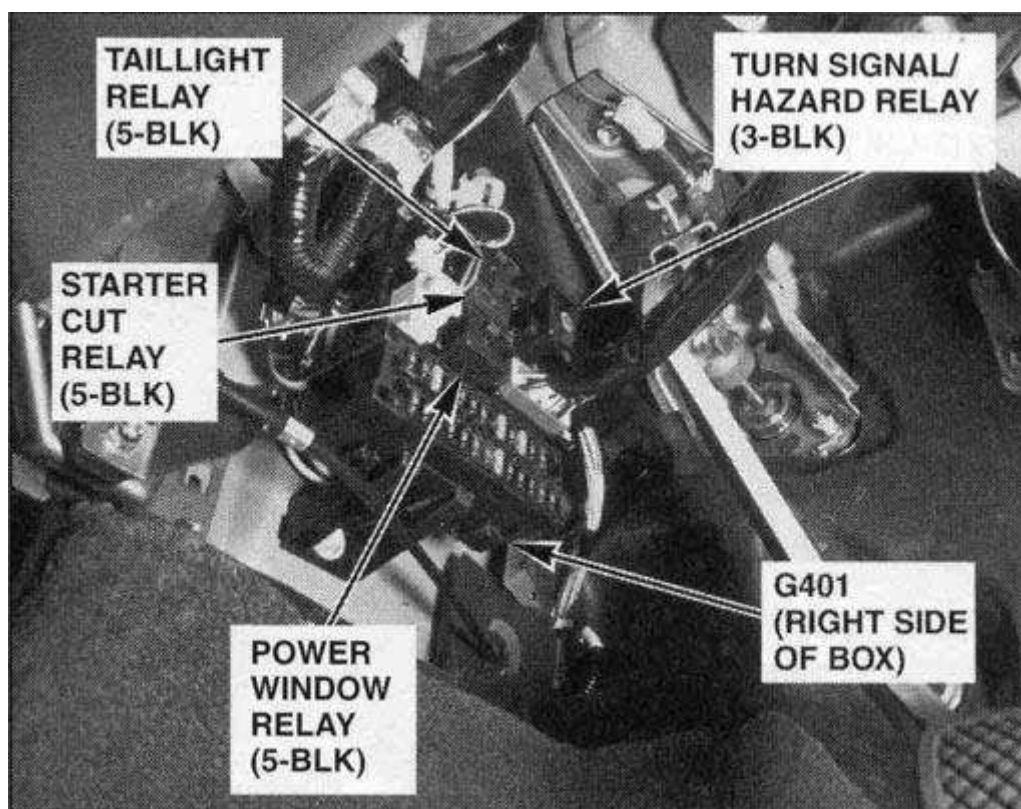

G00288352

Fig. 32: Upper Left Kick Panel Area


Courtesy of AMERICAN HONDA MOTOR CO., INC.

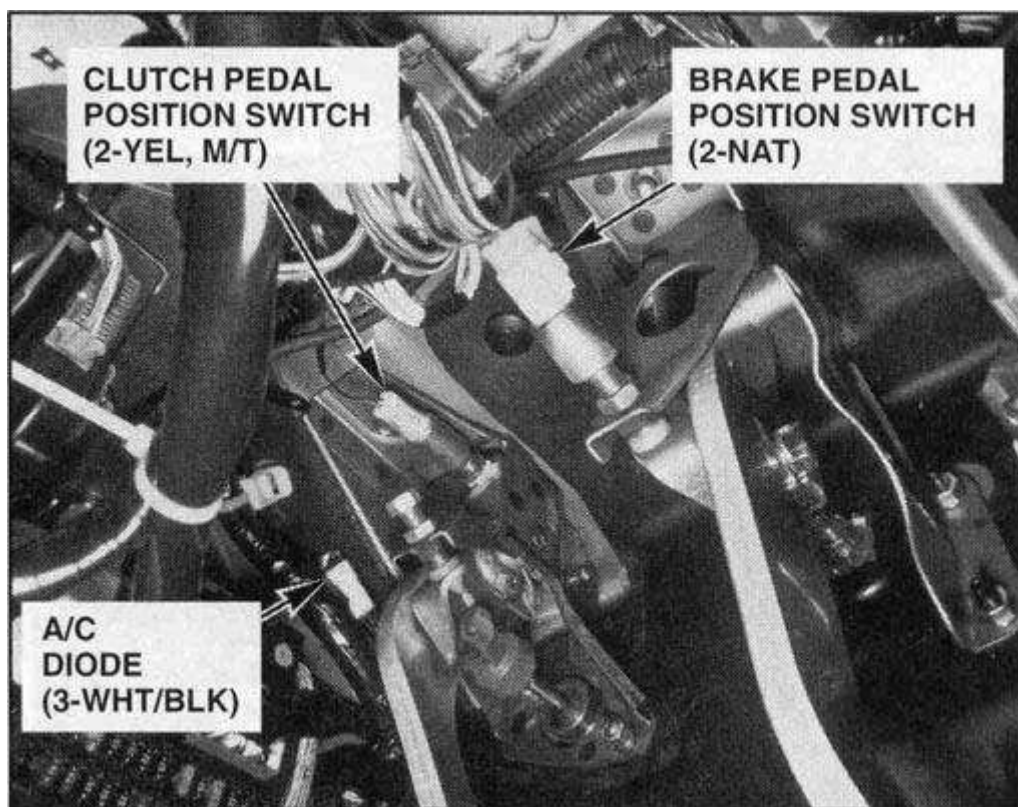

G00288353

Fig. 33: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

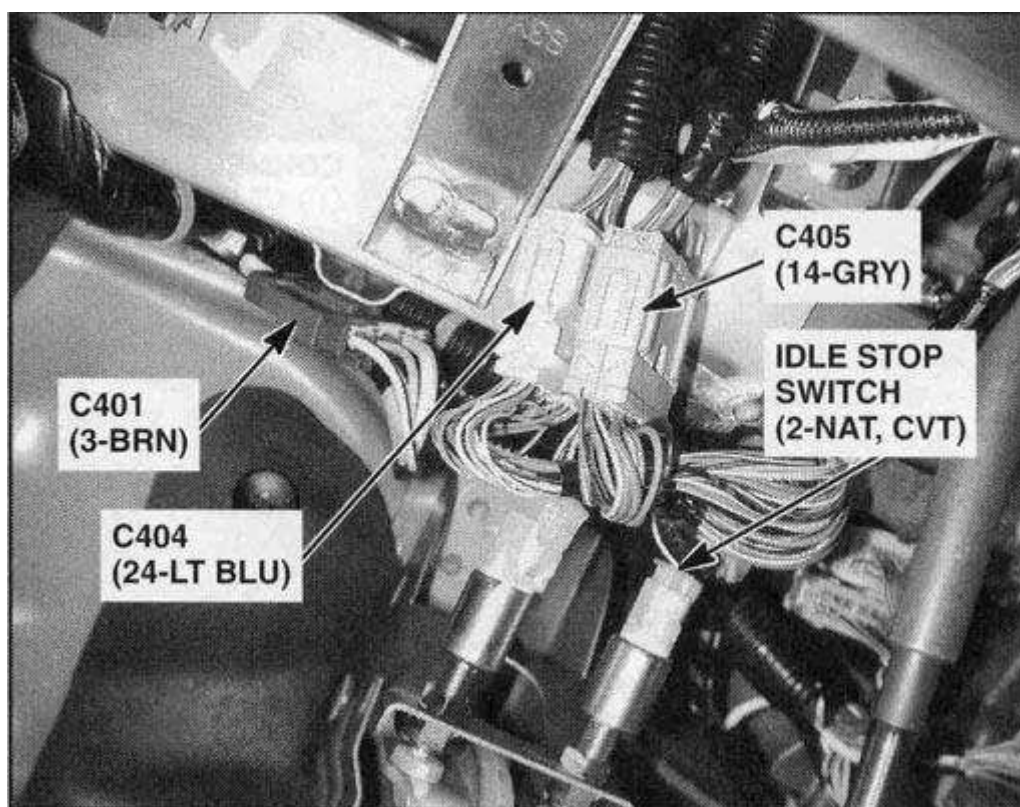

G00288354


Fig. 34: Under Left Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

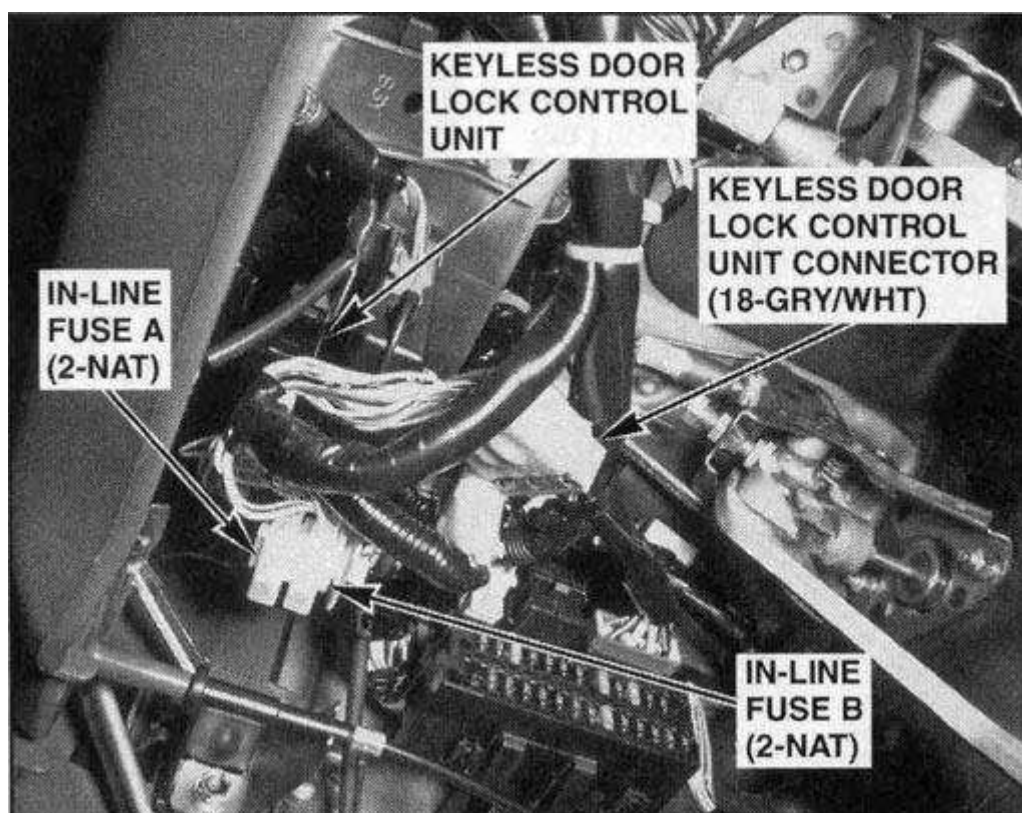

G00288355


Fig. 35: Under Left Side Of Dash (Honda Accessory)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

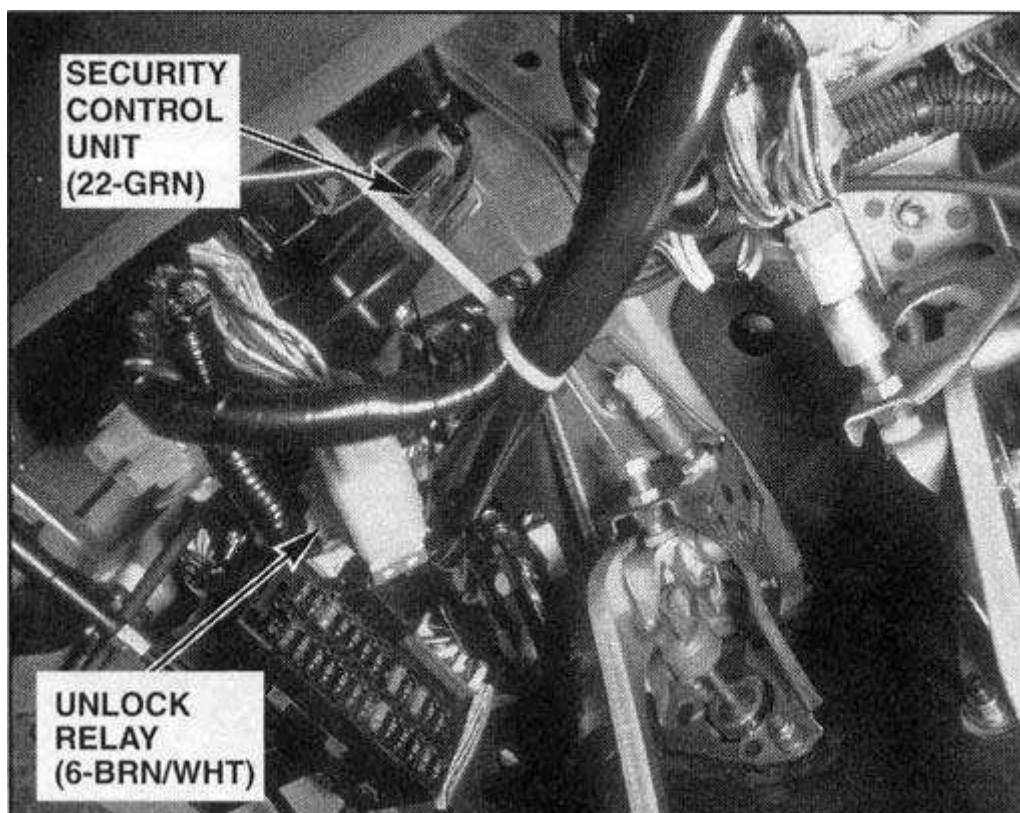

G00288356

Fig. 36: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

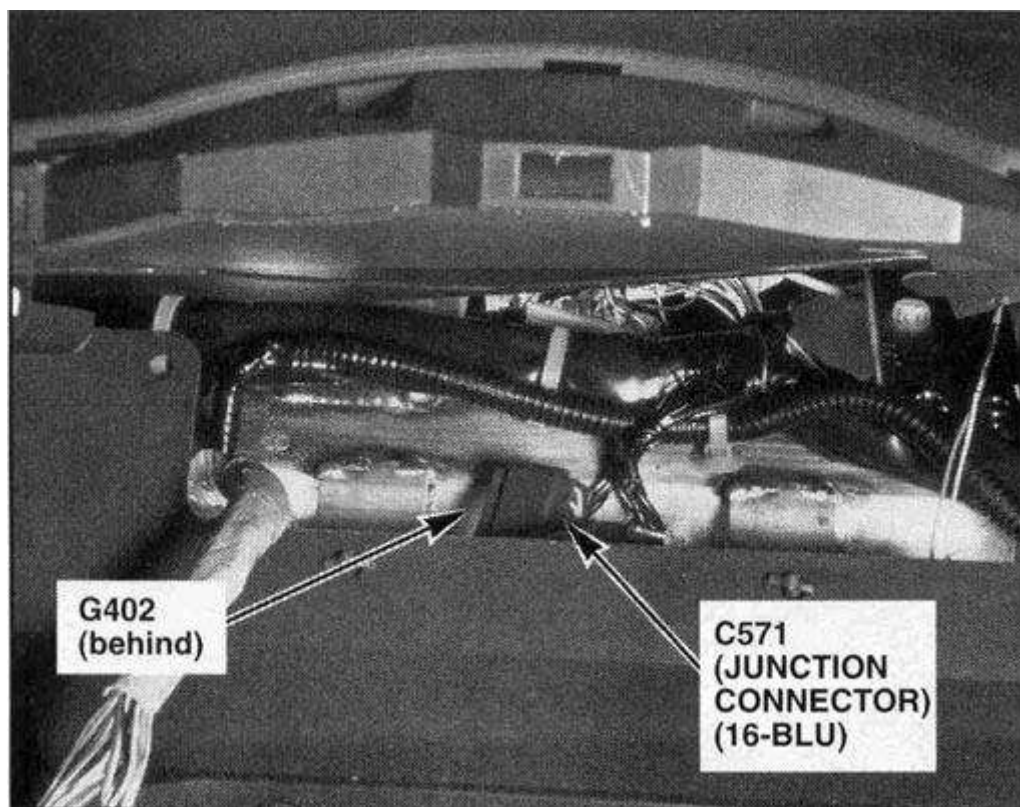

G00288357


Fig. 37: Left Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

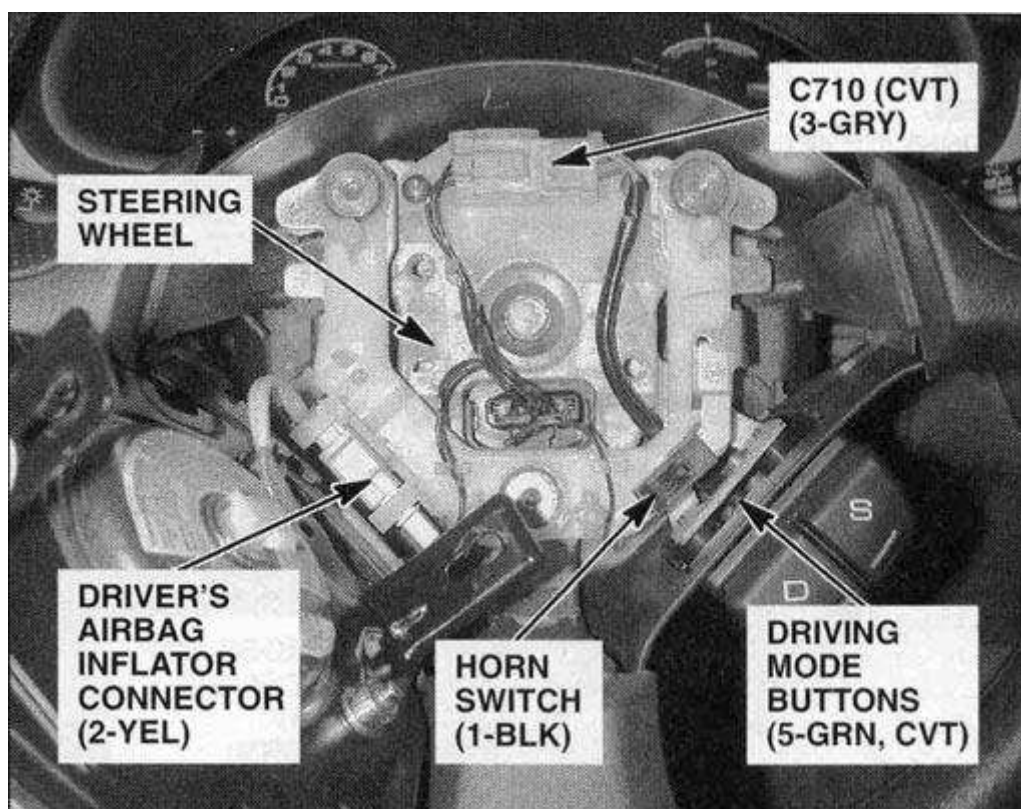

G00288358

Fig. 38: Steering Wheel (Airbag Removed)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

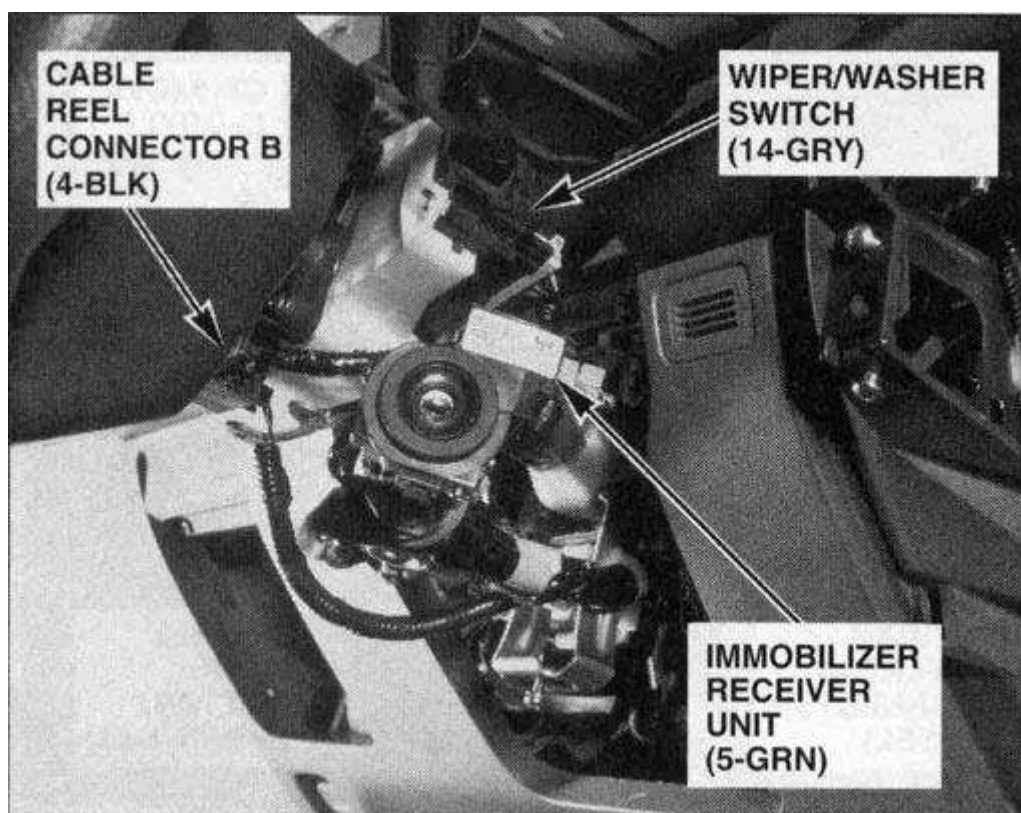

G00288360

Fig. 39: Right Side Of Steering Column


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00421161


Fig. 40: Under Left Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

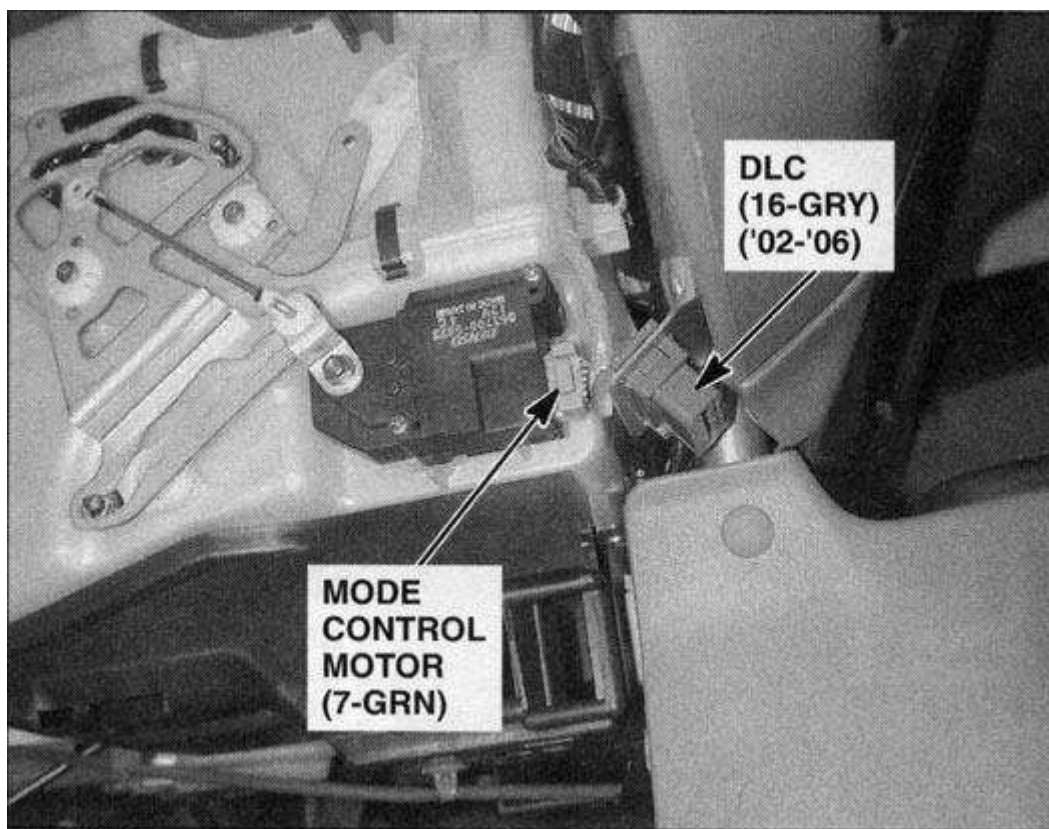

G00421163

Fig. 41: Under Middle Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

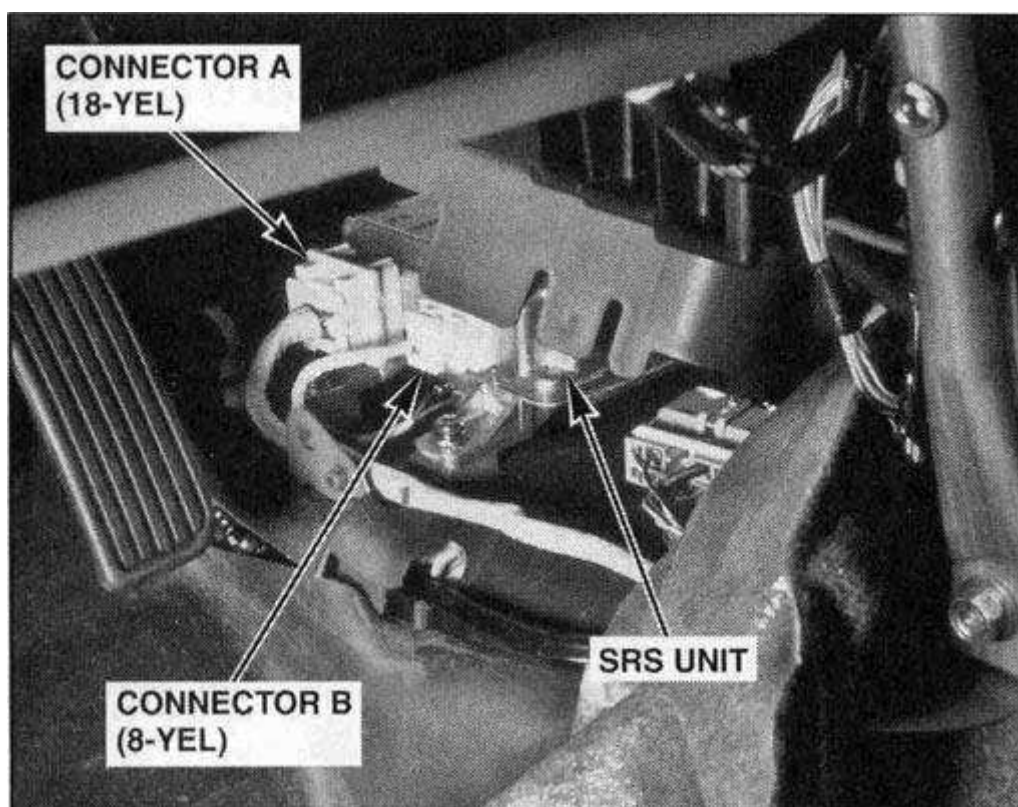

G00288364

Fig. 42: Under Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00288365

Fig. 43: Under Middle Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

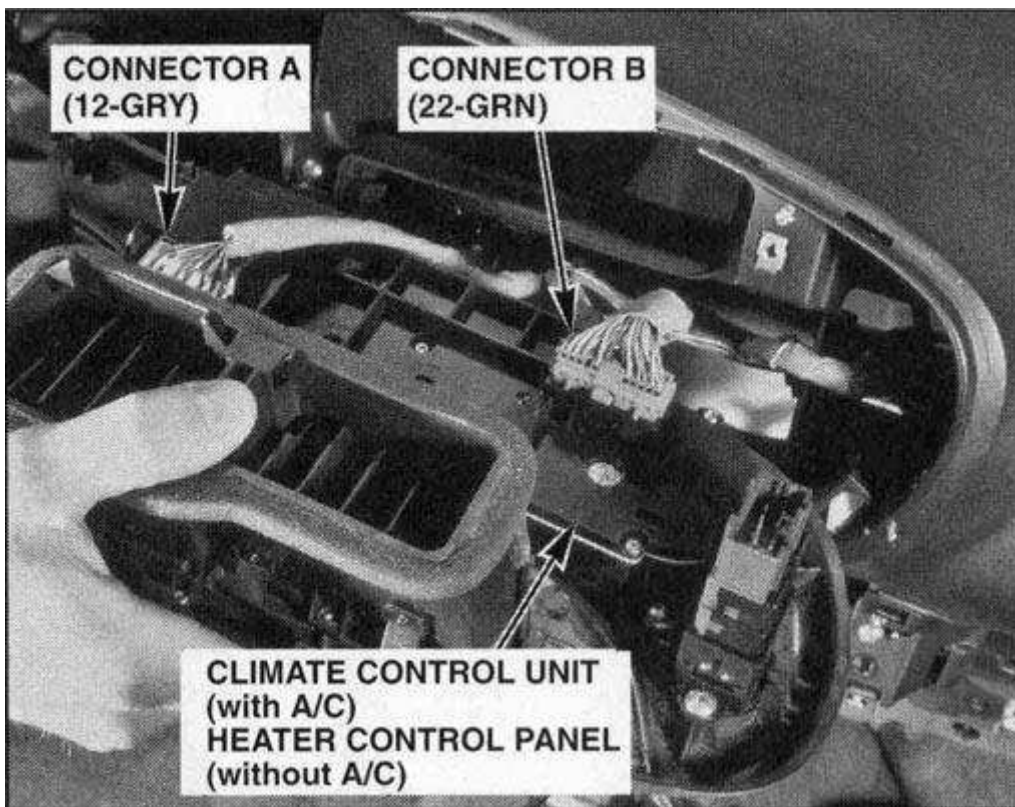

G00291988

Fig. 44: Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00288366

Fig. 45: Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

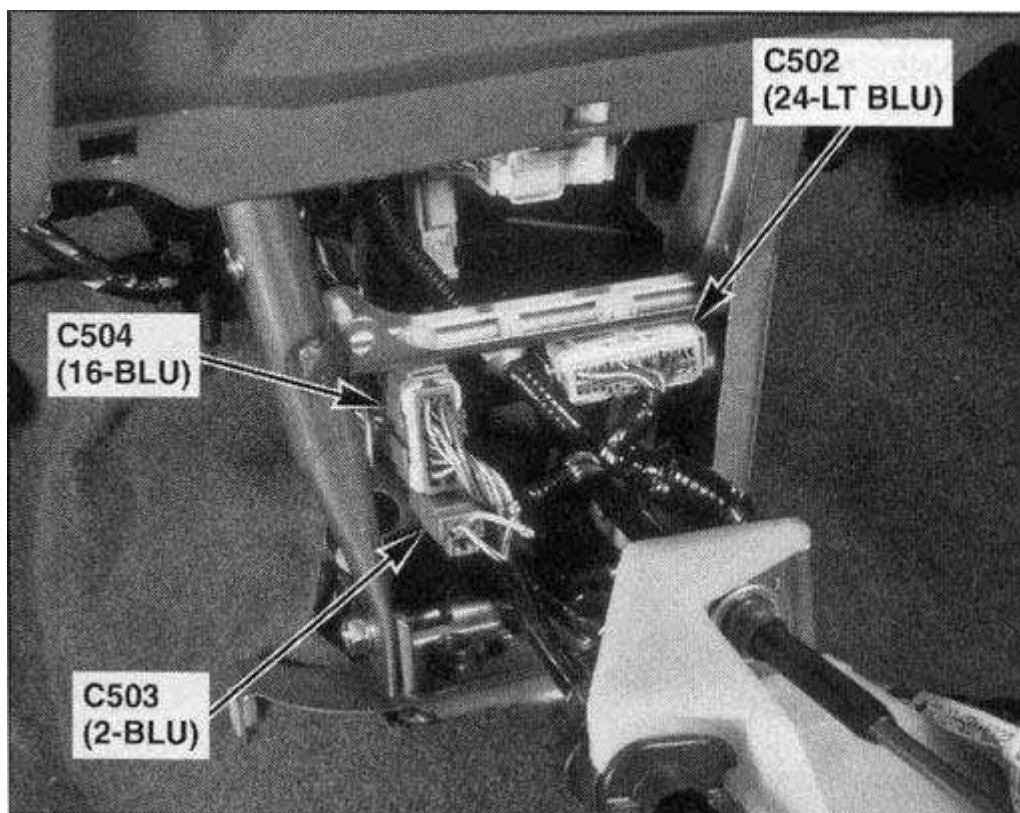

G00288368

Fig. 46: Behind Center Lower Cover


Courtesy of AMERICAN HONDA MOTOR CO., INC.

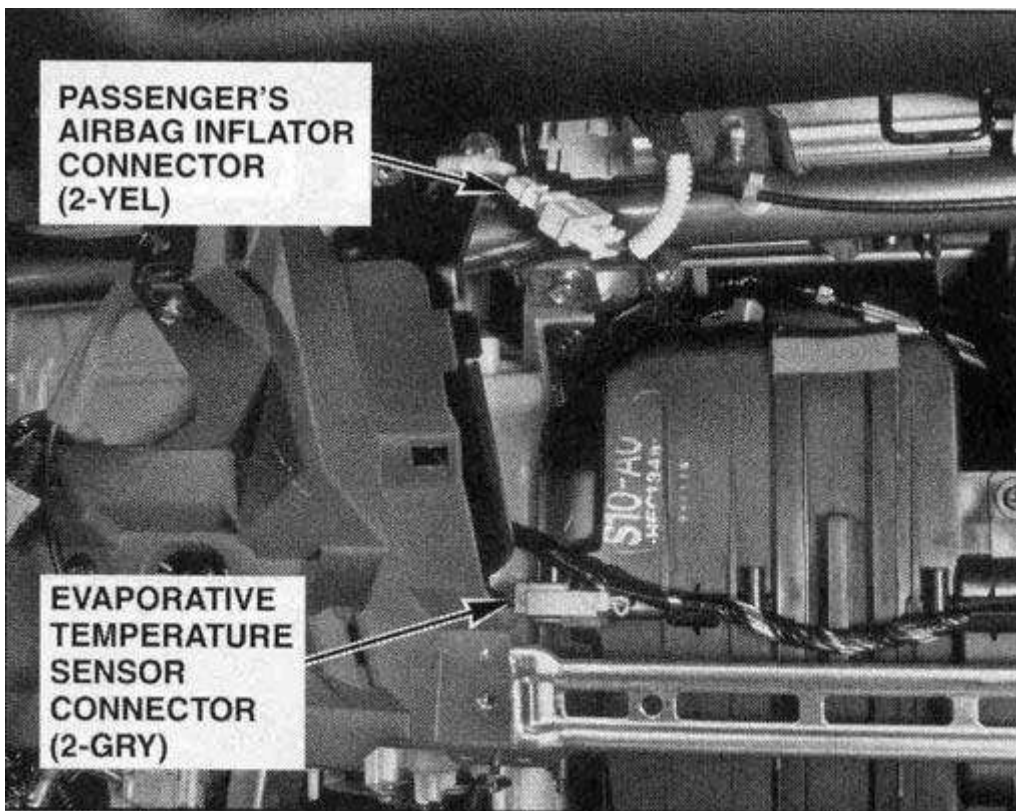

G00288369

Fig. 47: Behind Glove Box


Courtesy of AMERICAN HONDA MOTOR CO., INC.

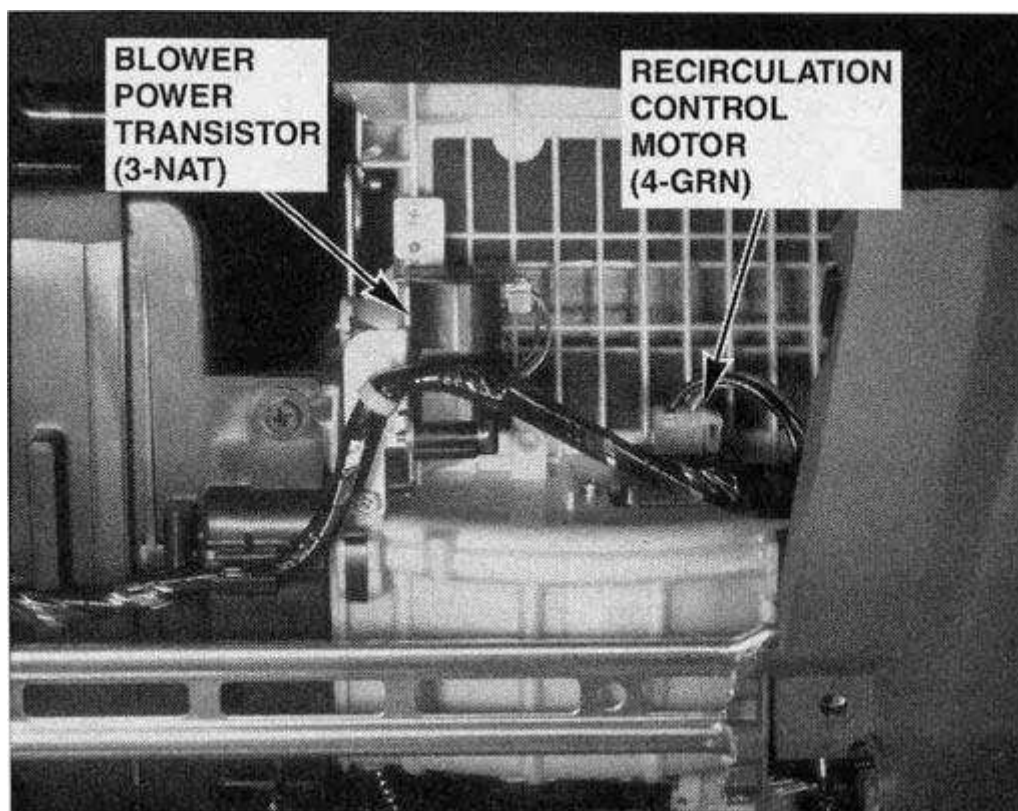

G00288370

Fig. 48: Behind Glove Box


Courtesy of AMERICAN HONDA MOTOR CO., INC.

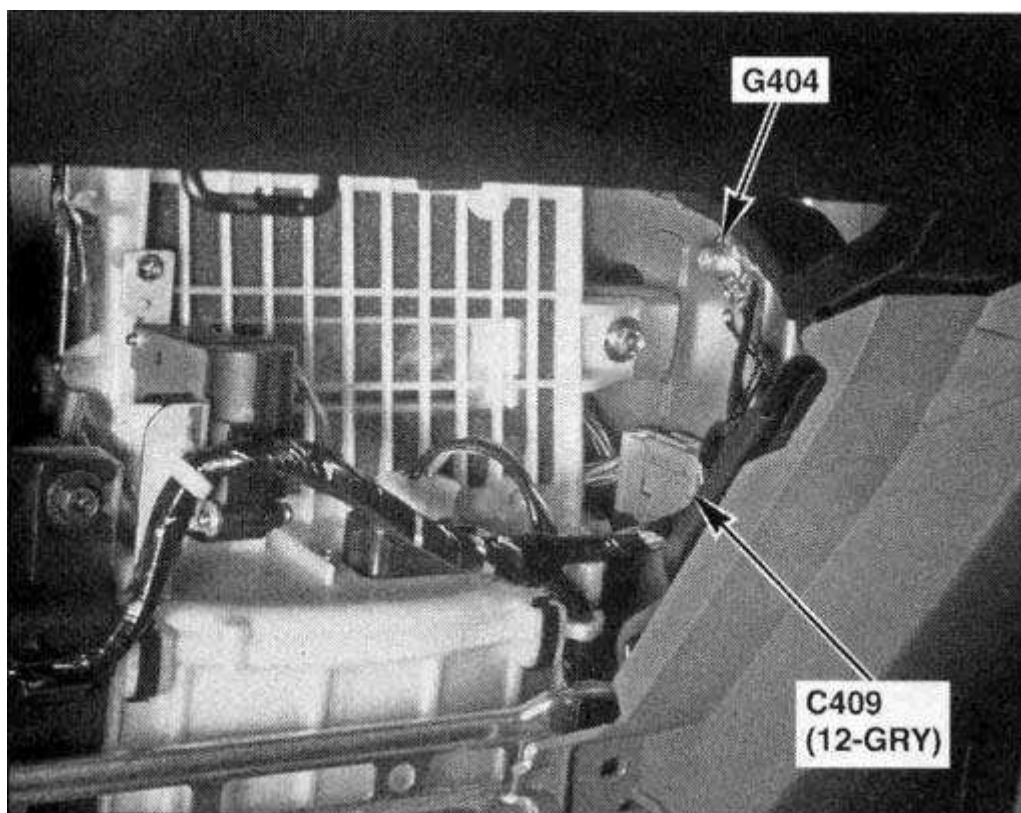

G00288371

Fig. 49: Right Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

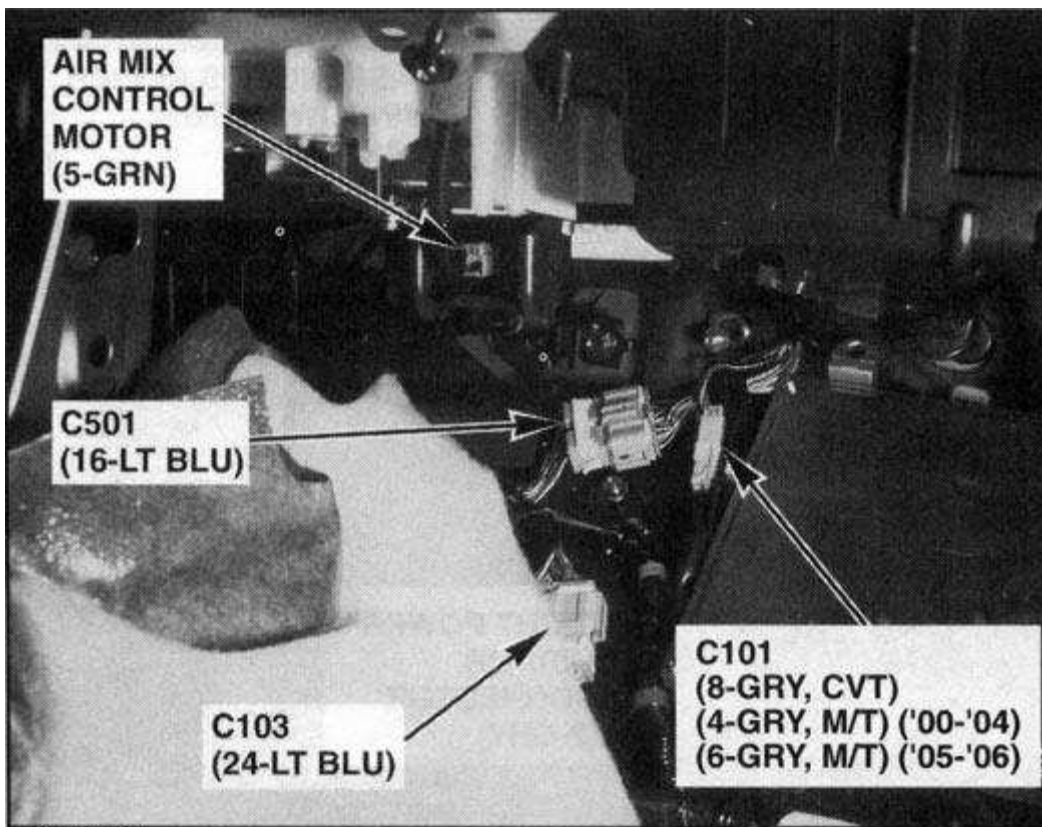

G00421165

Fig. 50: Under Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

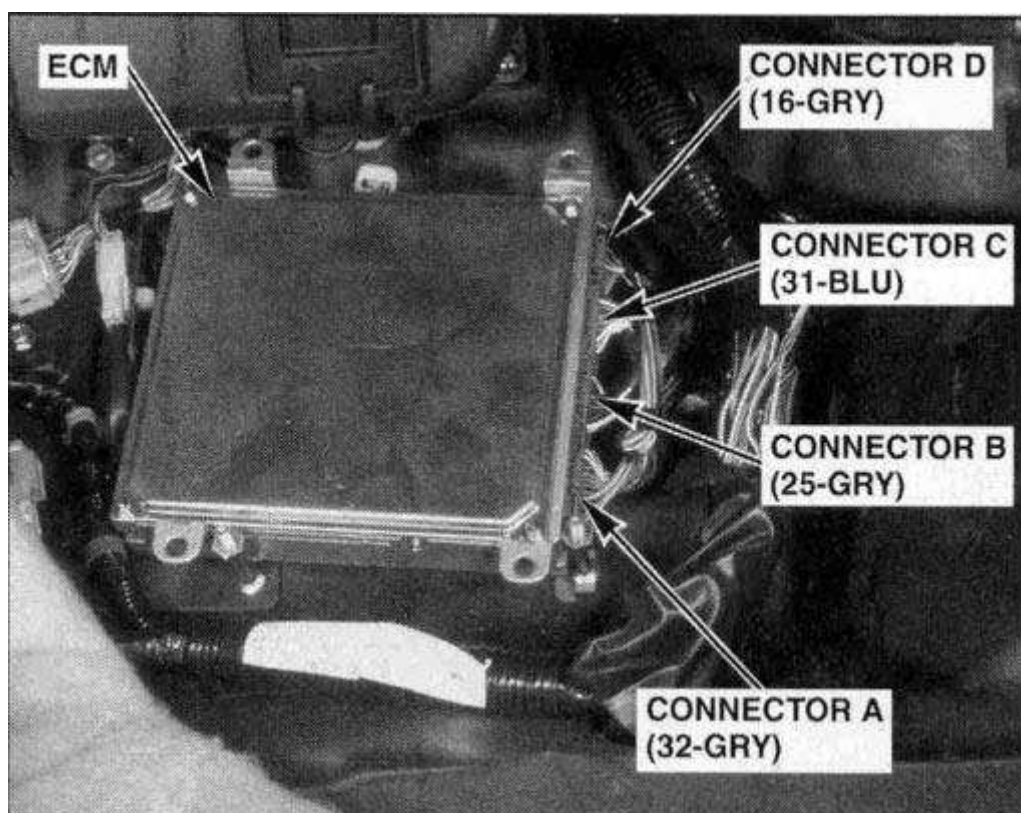

G00288374

Fig. 51: Right Side Of Floor


Courtesy of AMERICAN HONDA MOTOR CO., INC.

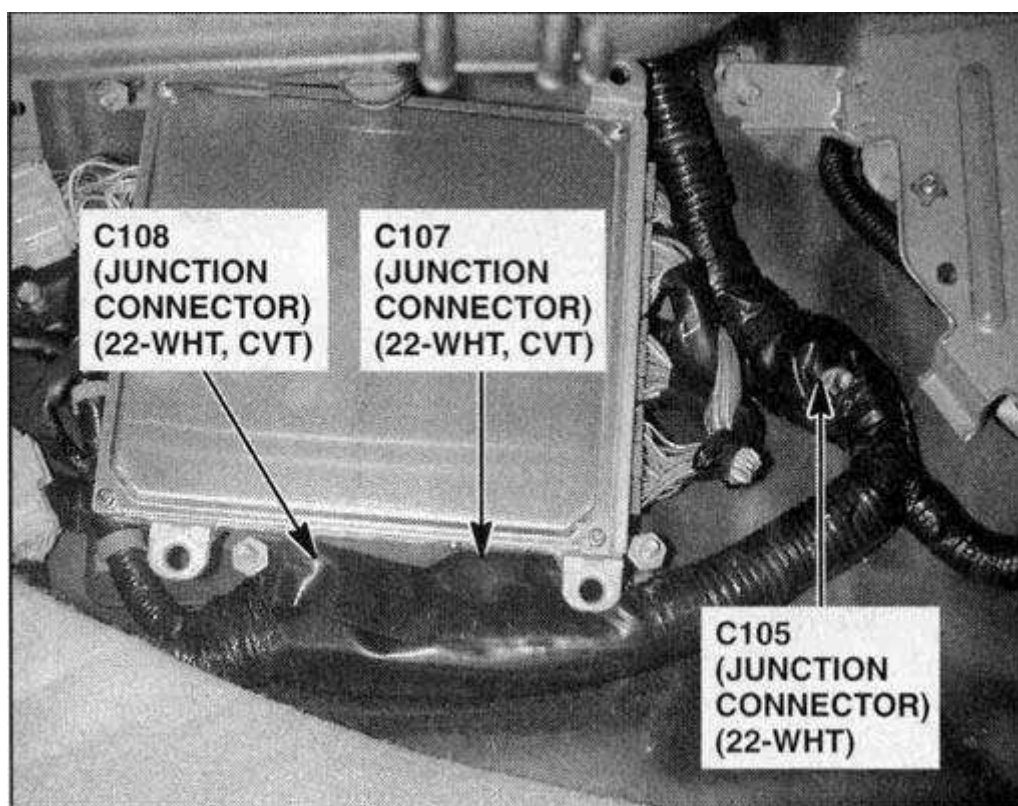

G00288375

Fig. 52: Right Side Of Floor


Courtesy of AMERICAN HONDA MOTOR CO., INC.

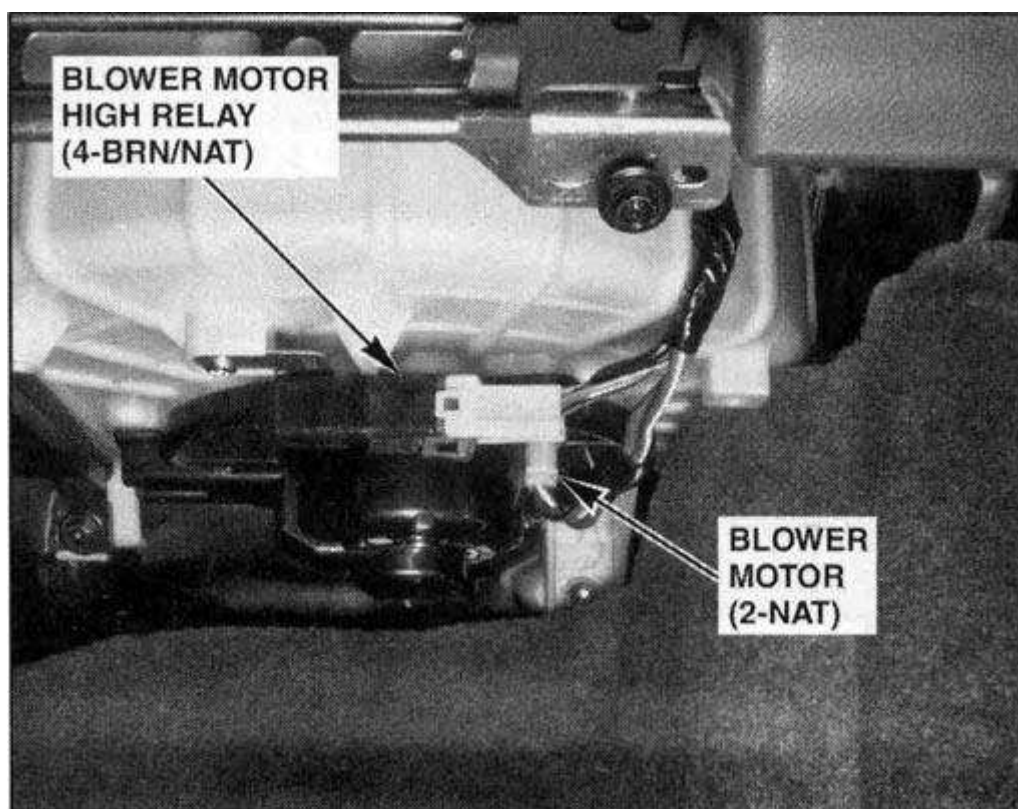

G00288376


Fig. 53: Under Right Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

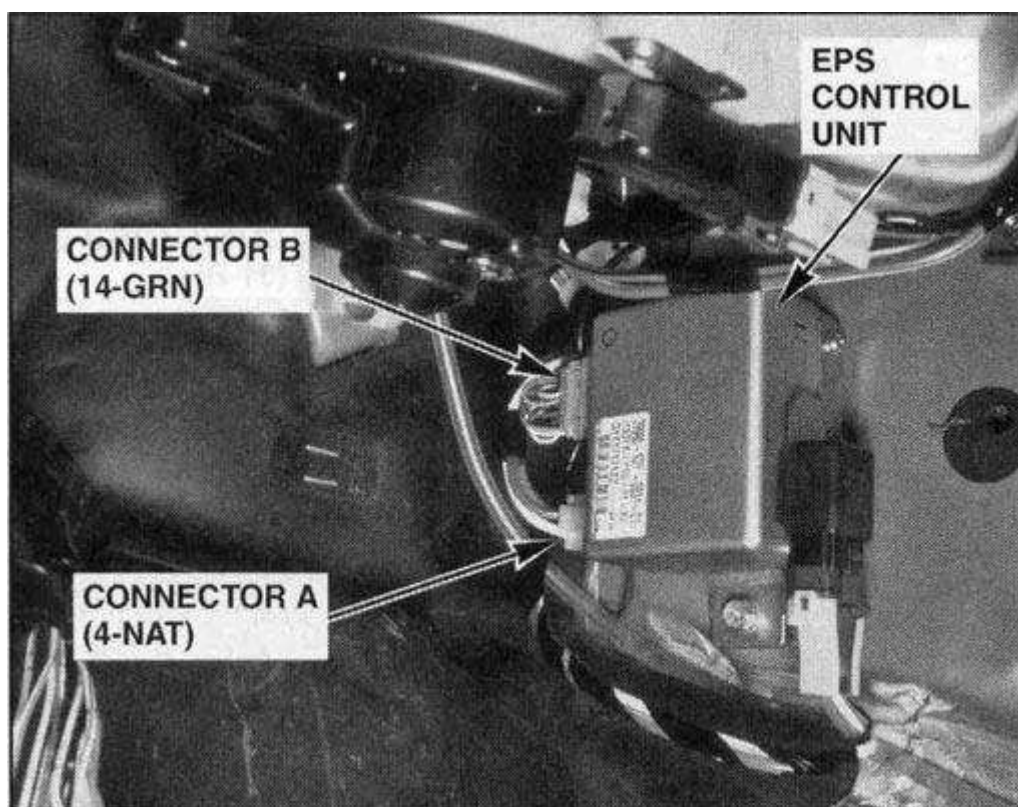


G00288377

Fig. 54: Under Right Side Of Kick Panel (M/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

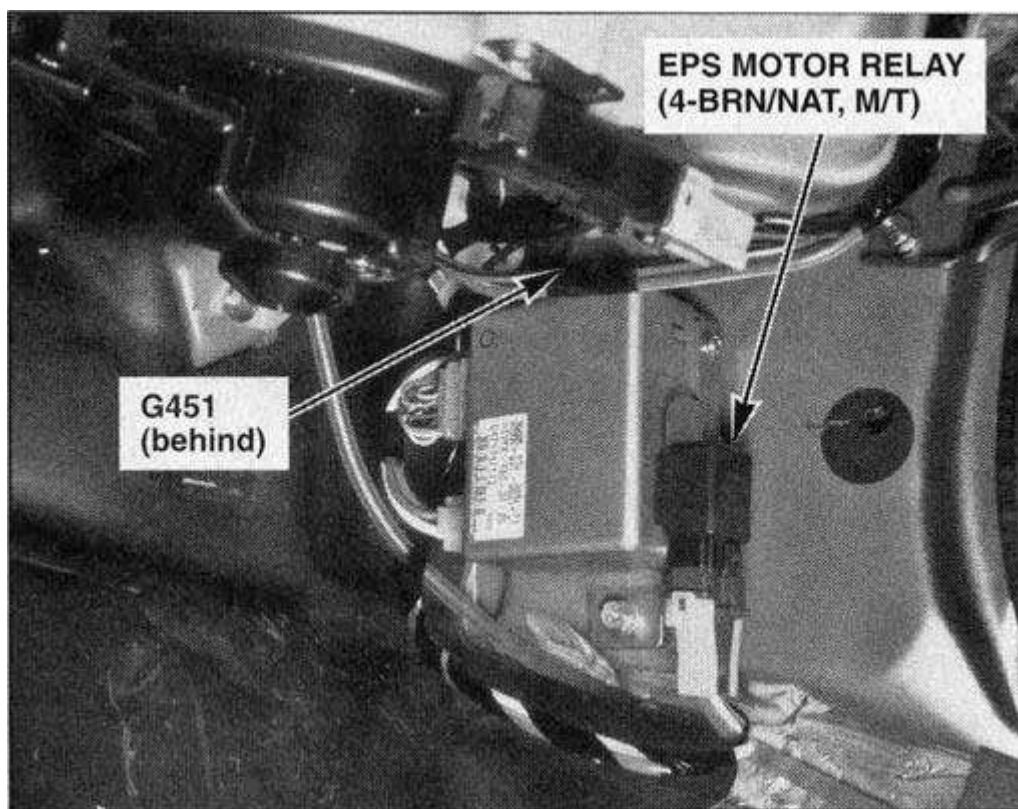

G00288378


Fig. 55: Under Right Side Of Kick Panel
Courtesy of AMERICAN HONDA MOTOR CO., INC.

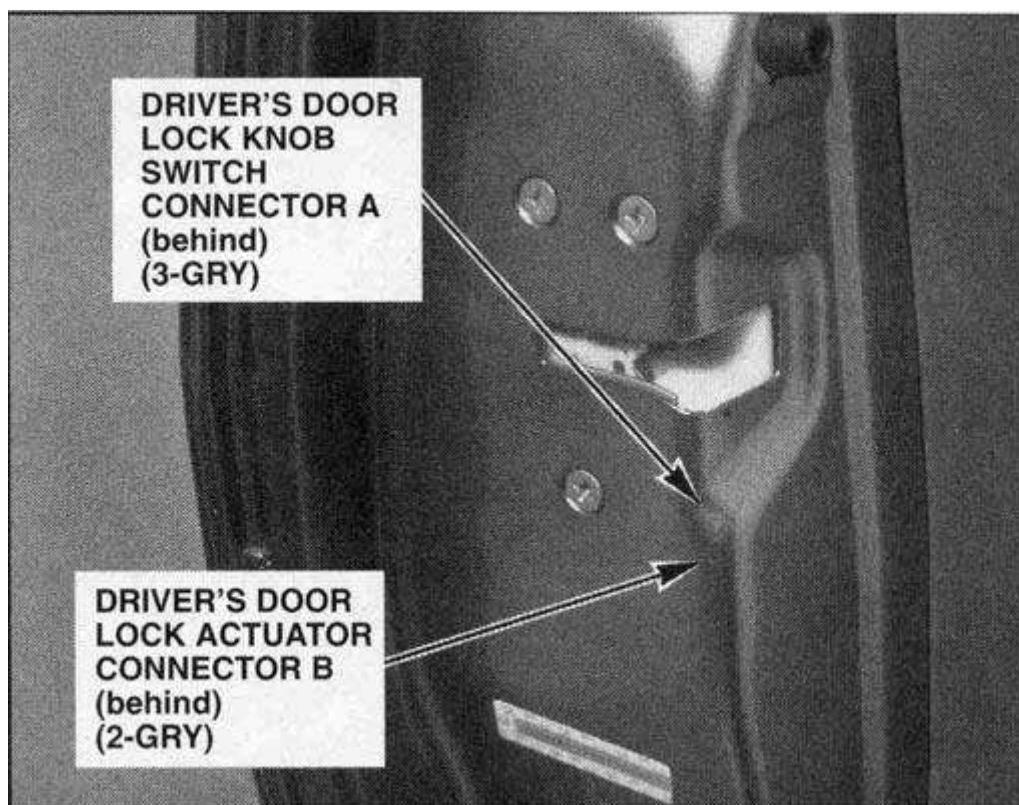

G00291989

Fig. 56: Rear Of Driver's Door

Courtesy of AMERICAN HONDA MOTOR CO., INC.

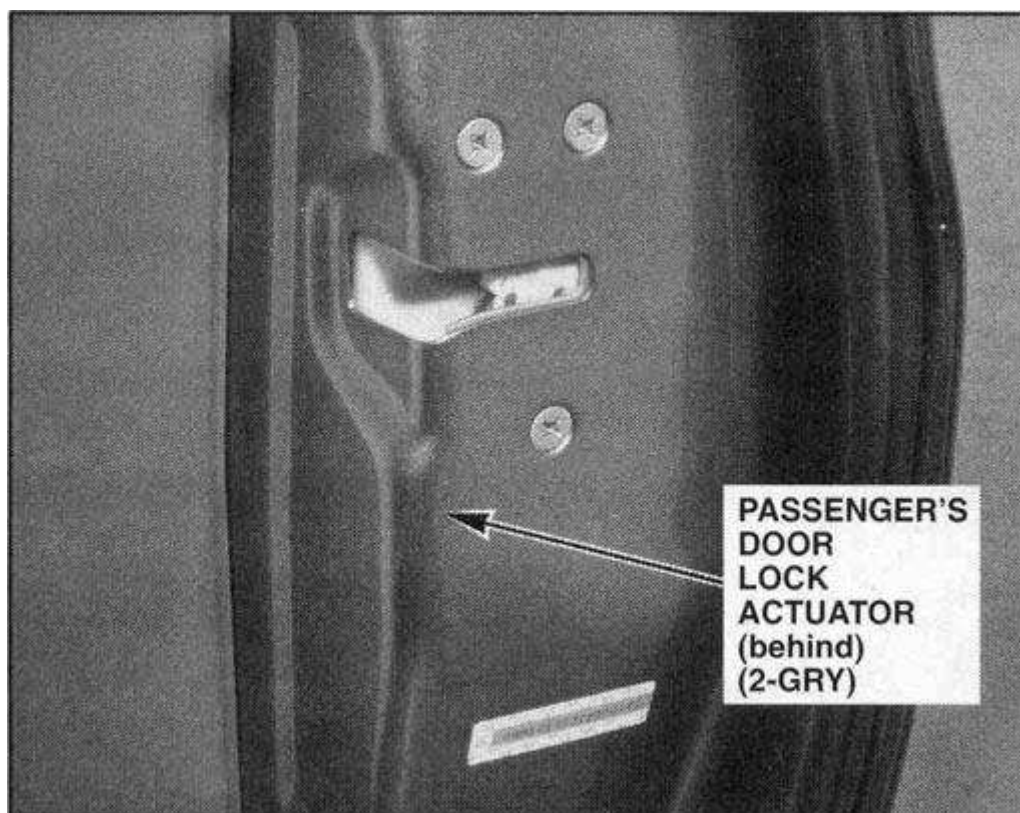

G00291990


Fig. 57: Rear Of Passenger's Door
Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00288380

Fig. 58: Middle Rear Of Roof


Courtesy of AMERICAN HONDA MOTOR CO., INC.

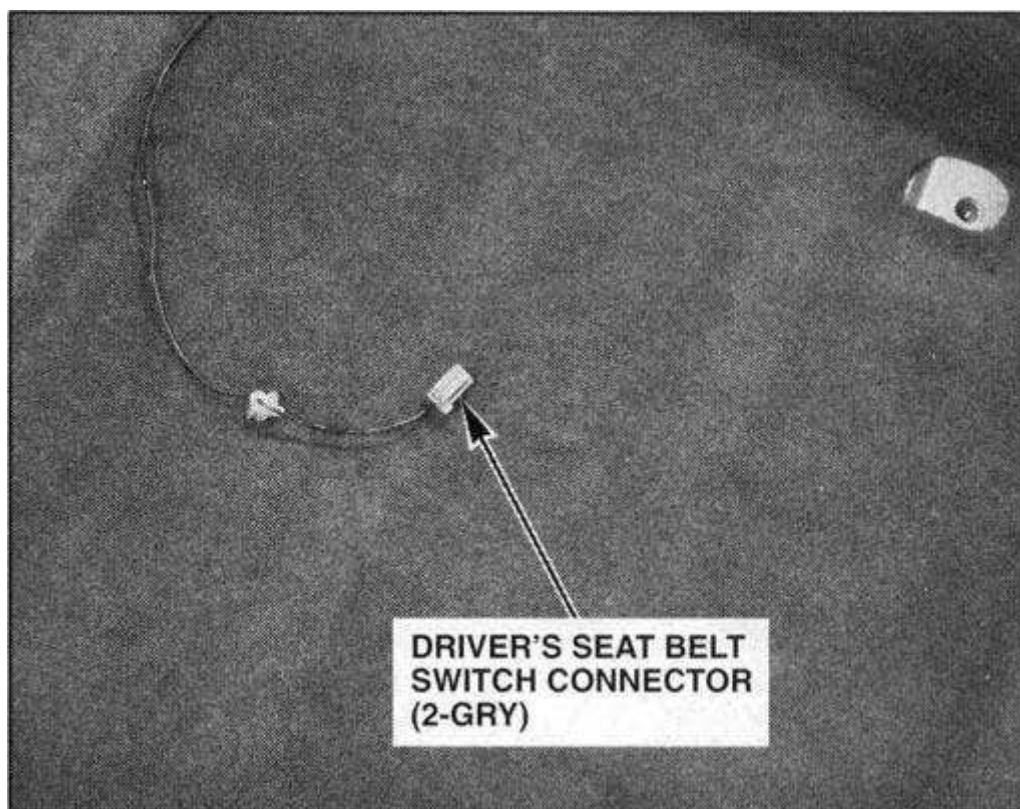

G00288381

Fig. 59: Under Driver's Seat


Courtesy of AMERICAN HONDA MOTOR CO., INC.

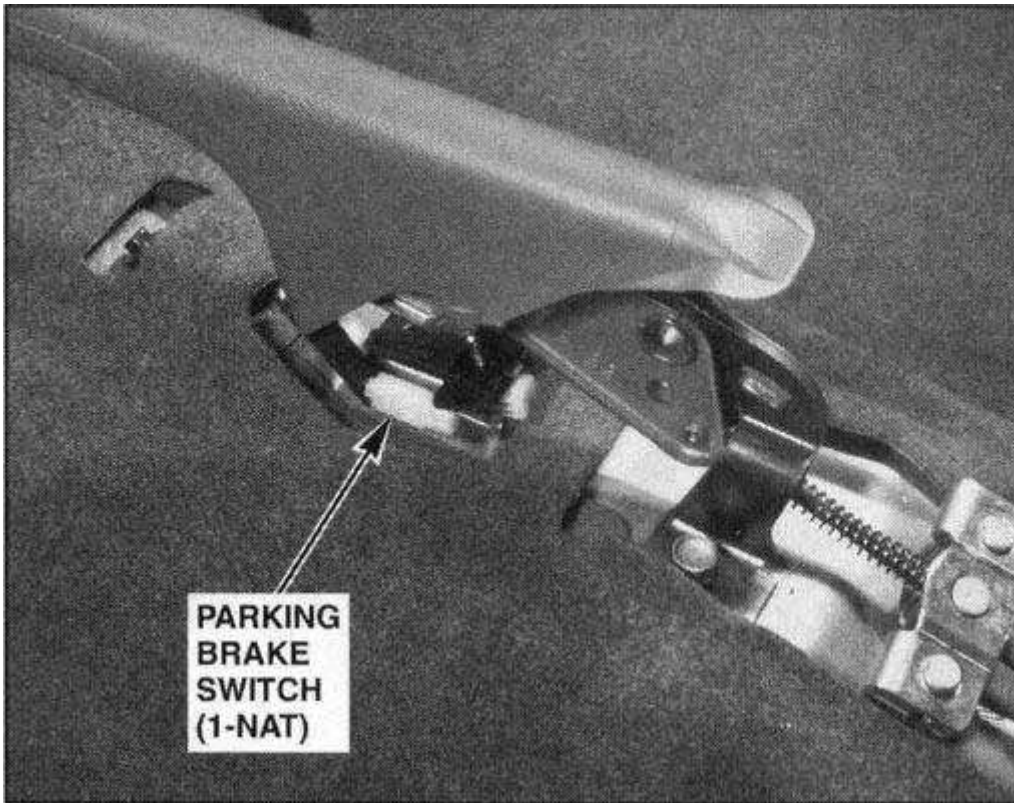

G00288382

Fig. 60: Middle Of Floor


Courtesy of AMERICAN HONDA MOTOR CO., INC.

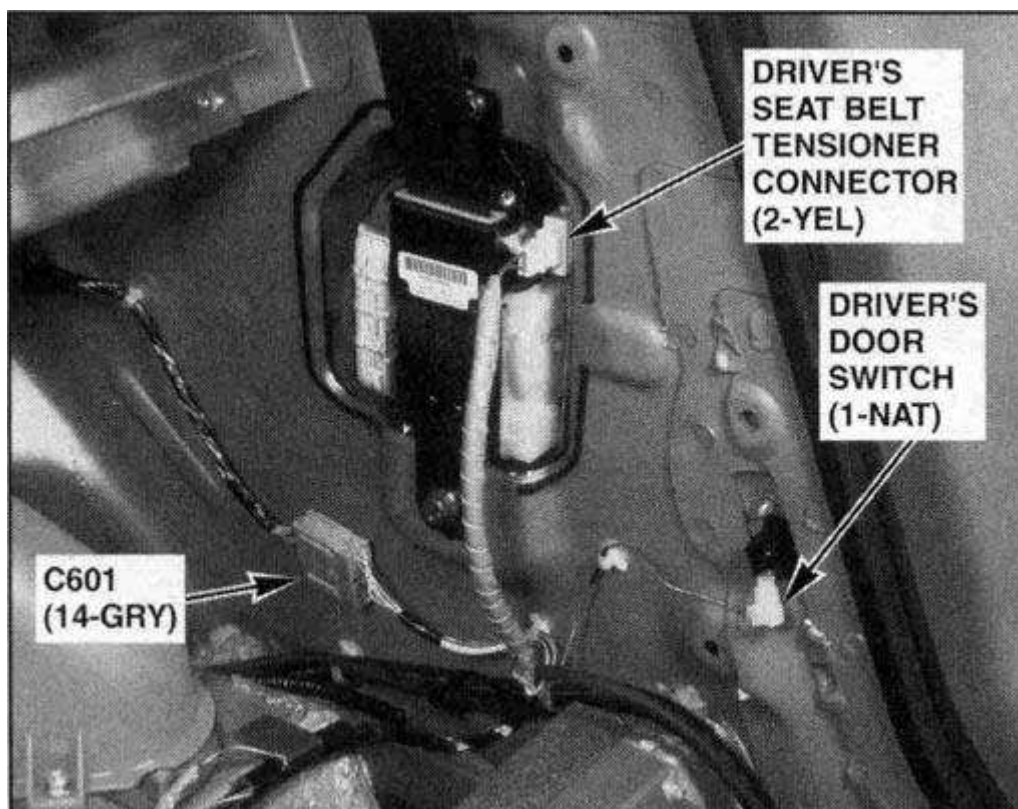

G00288383

Fig. 61: Left "B" Pillar


Courtesy of AMERICAN HONDA MOTOR CO., INC.

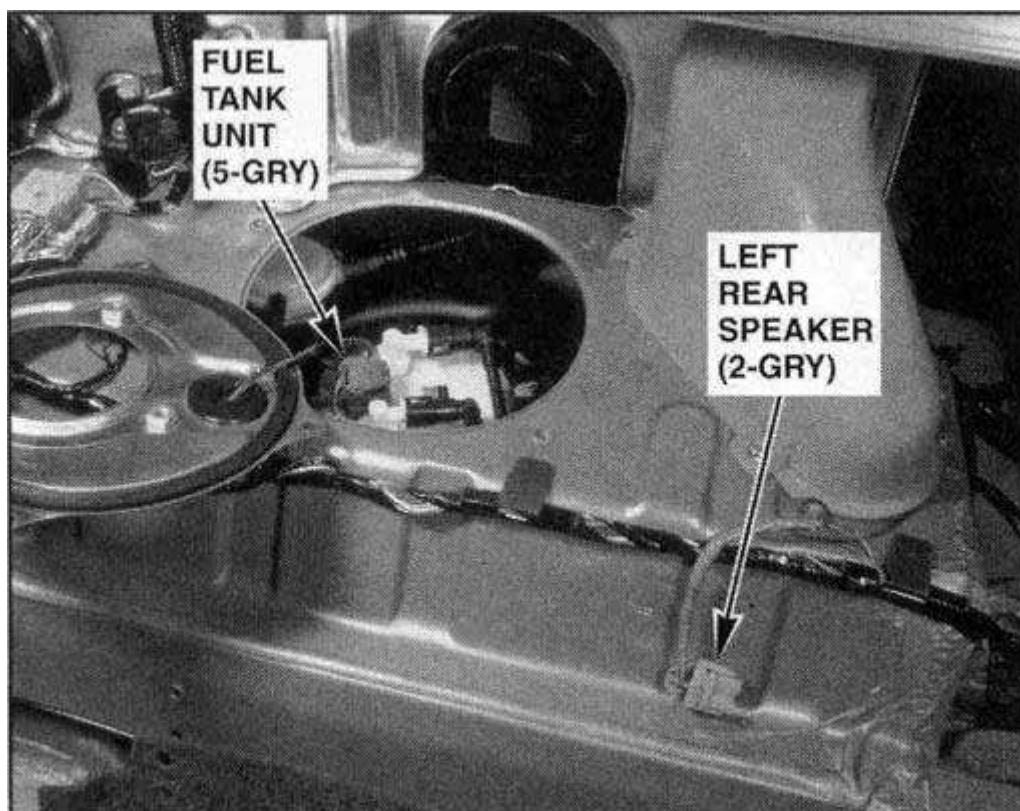

G00288384

Fig. 62: Behind Seat, Middle Of Floor


Courtesy of AMERICAN HONDA MOTOR CO., INC.

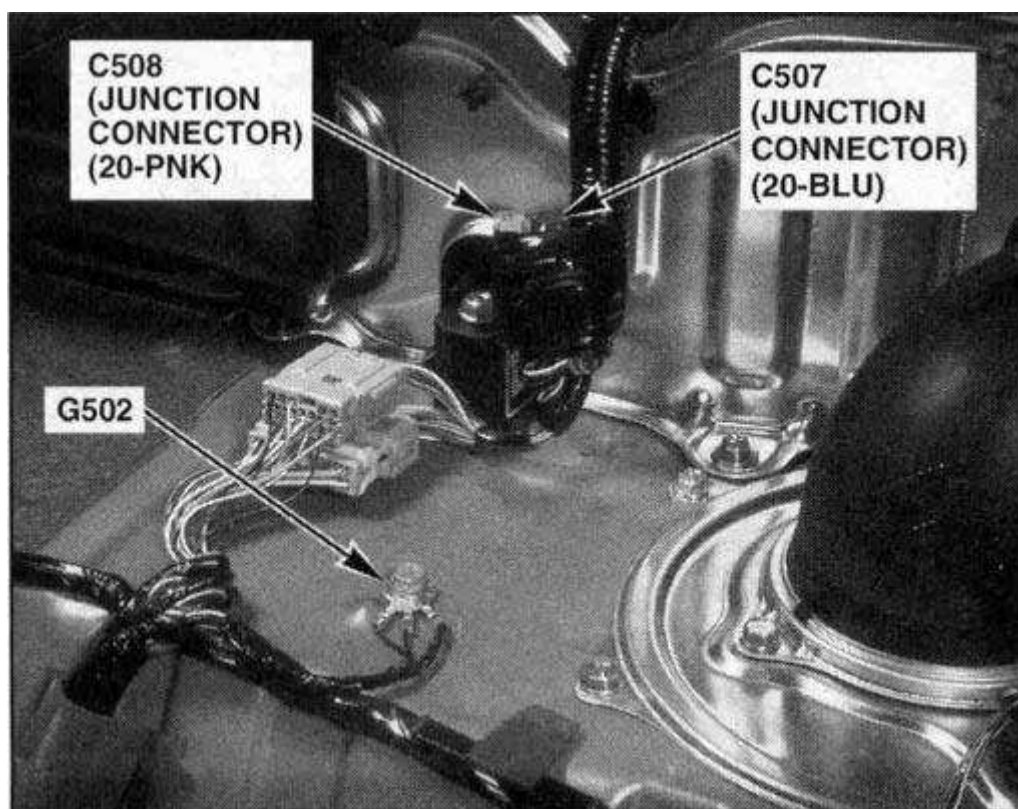

G00288385

Fig. 63: Behind Seat, Middle Of Floor


Courtesy of AMERICAN HONDA MOTOR CO., INC.

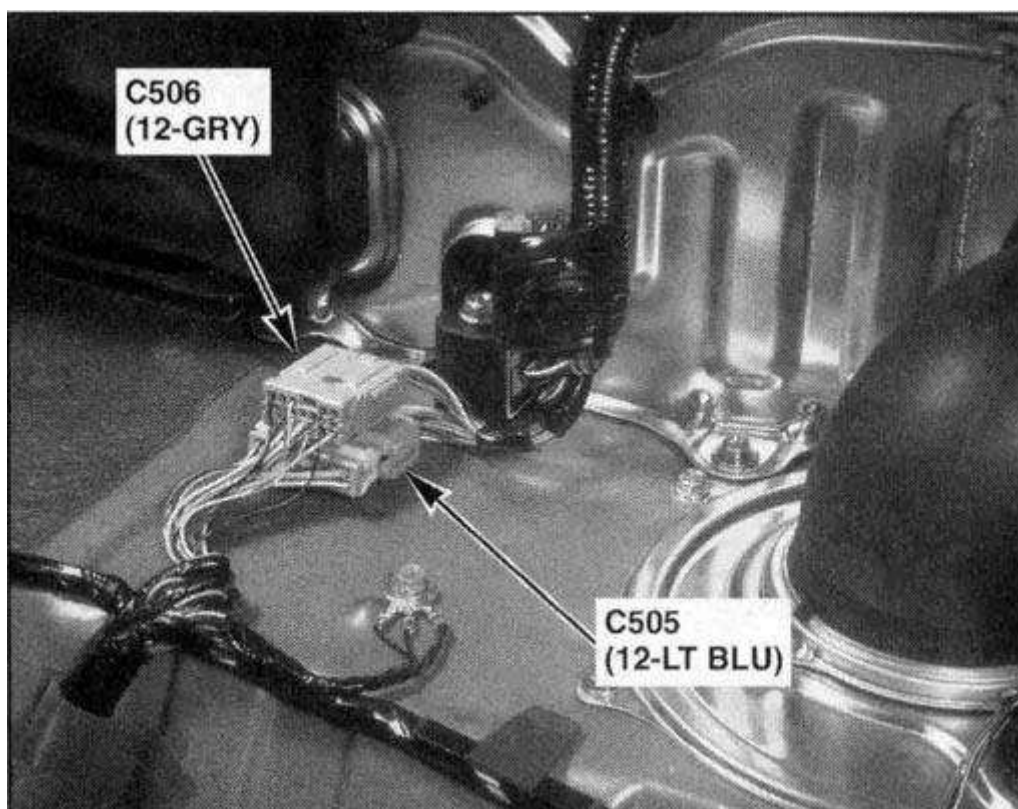

G00288386

Fig. 64: Behind Seat, Middle Of Floor


Courtesy of AMERICAN HONDA MOTOR CO., INC.

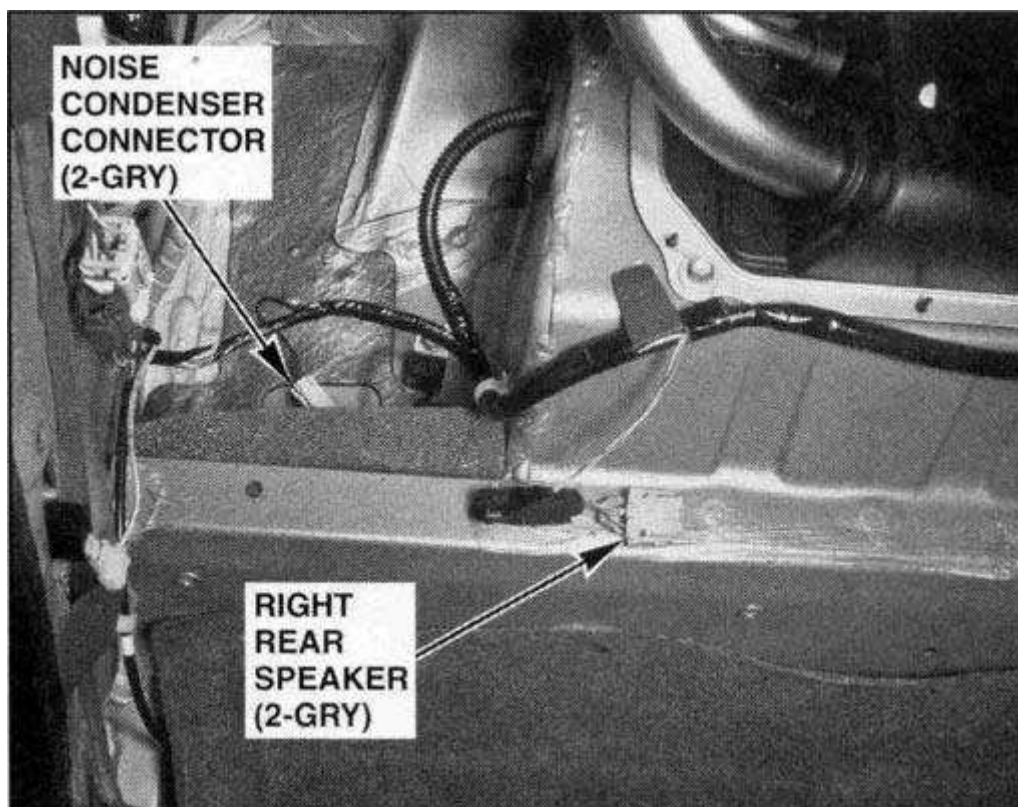

G00288387

Fig. 65: Behind Passenger's Seat


Courtesy of AMERICAN HONDA MOTOR CO., INC.

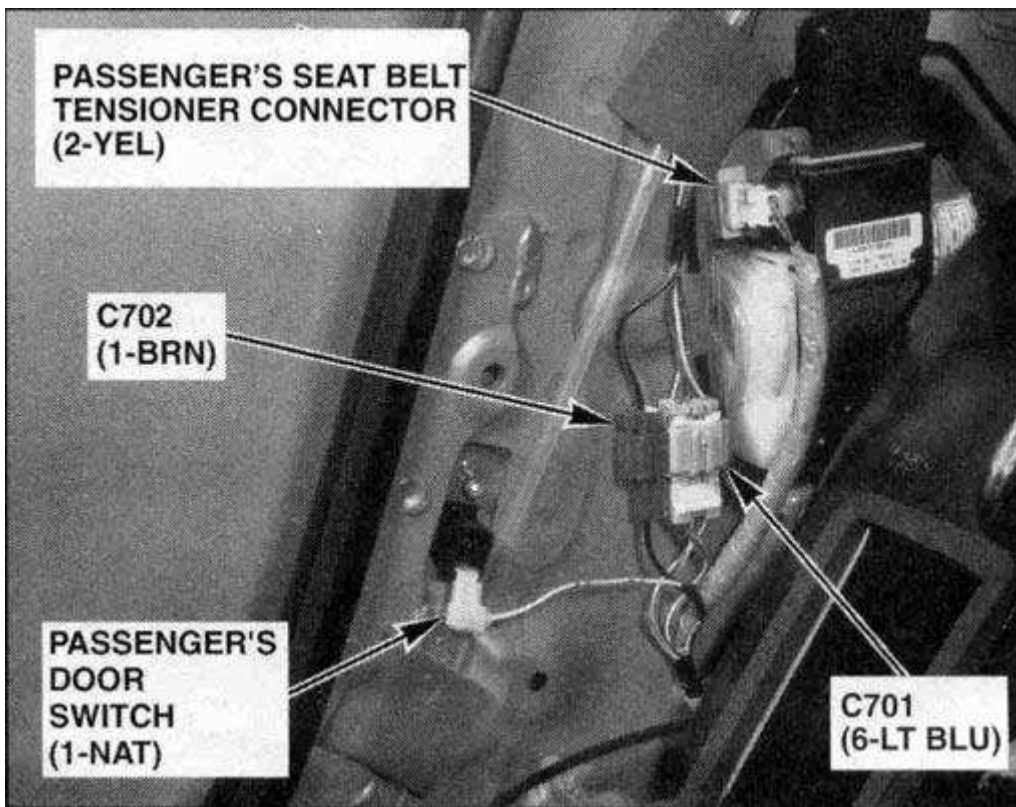

G00288388


Fig. 66: Right "B" Pillar

Courtesy of AMERICAN HONDA MOTOR CO., INC.

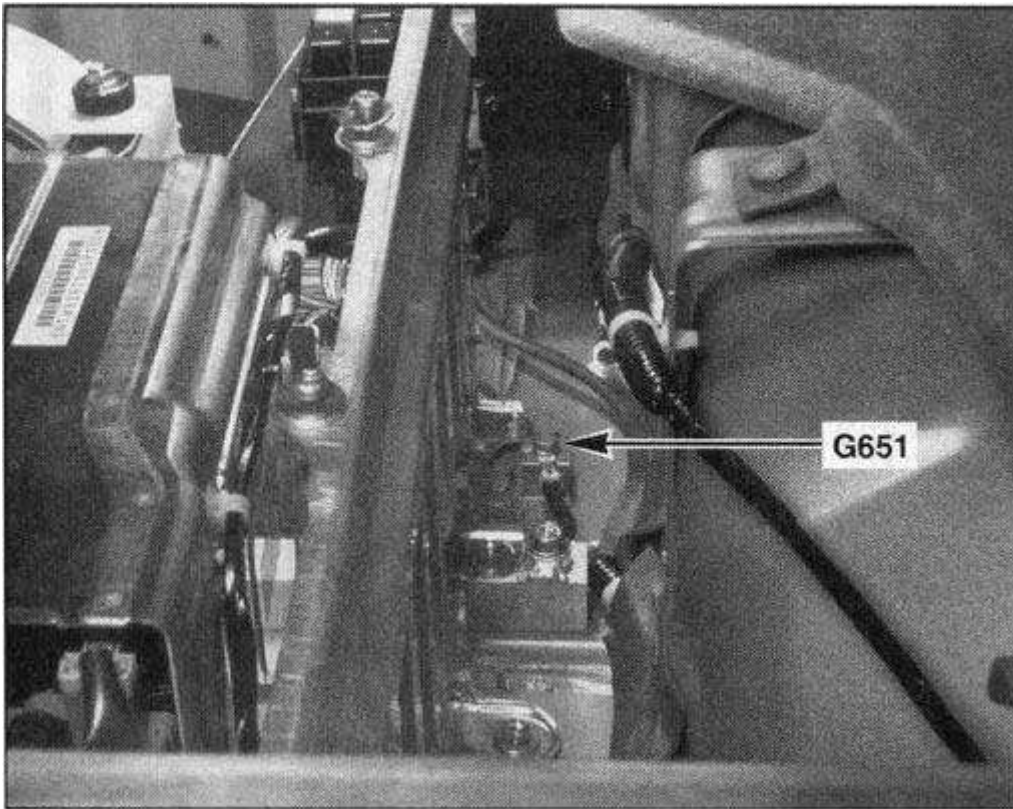


G00288389

Fig. 67: Left Rear Side Of Floor
Courtesy of AMERICAN HONDA MOTOR CO., INC.

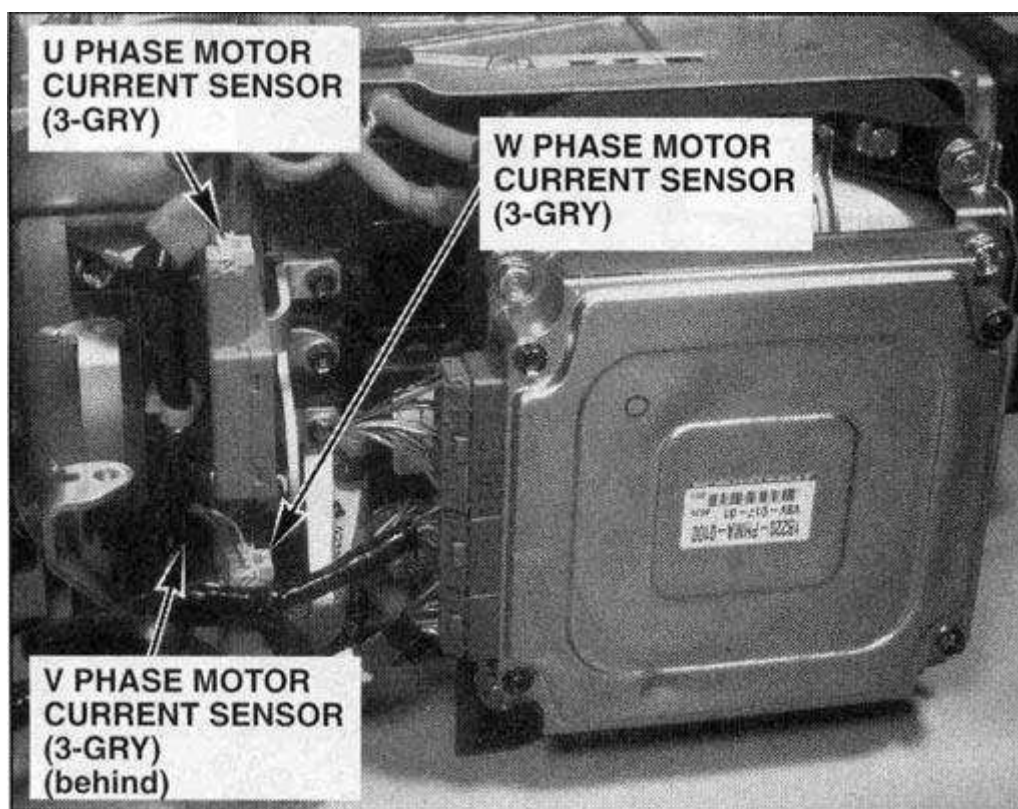


G00288390

Fig. 68: Left Side Of PCU (PCU Removed)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

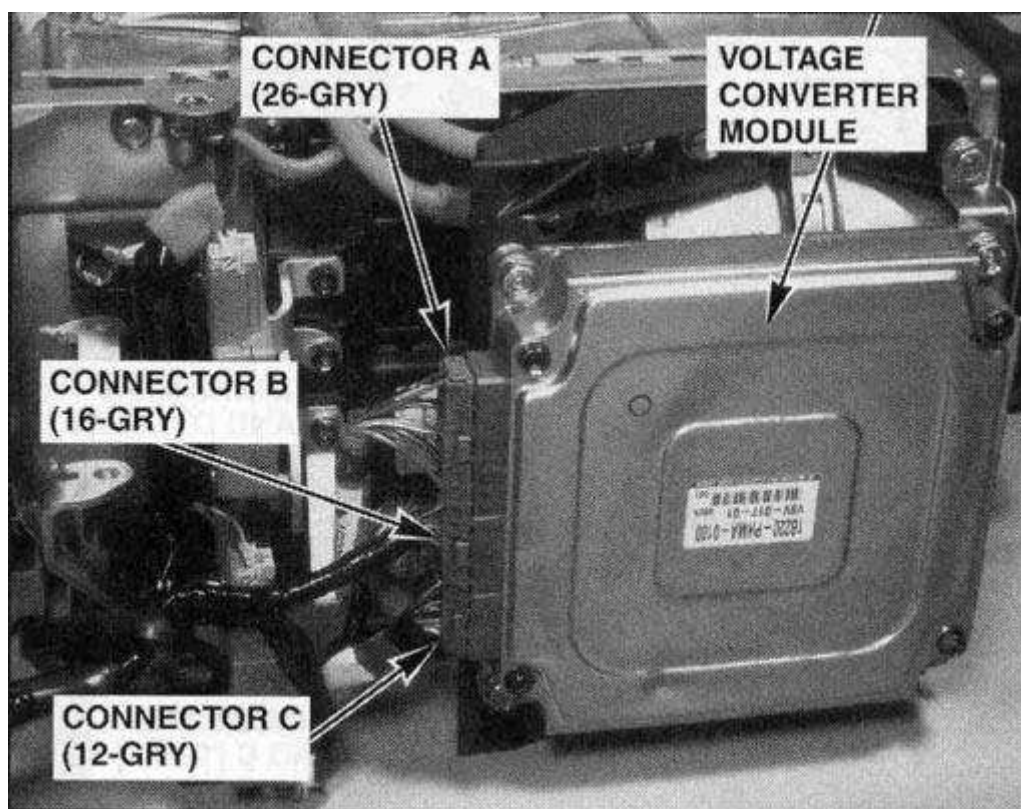


G00288391

Fig. 69: Left Side Of PCU (PCU Removed)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

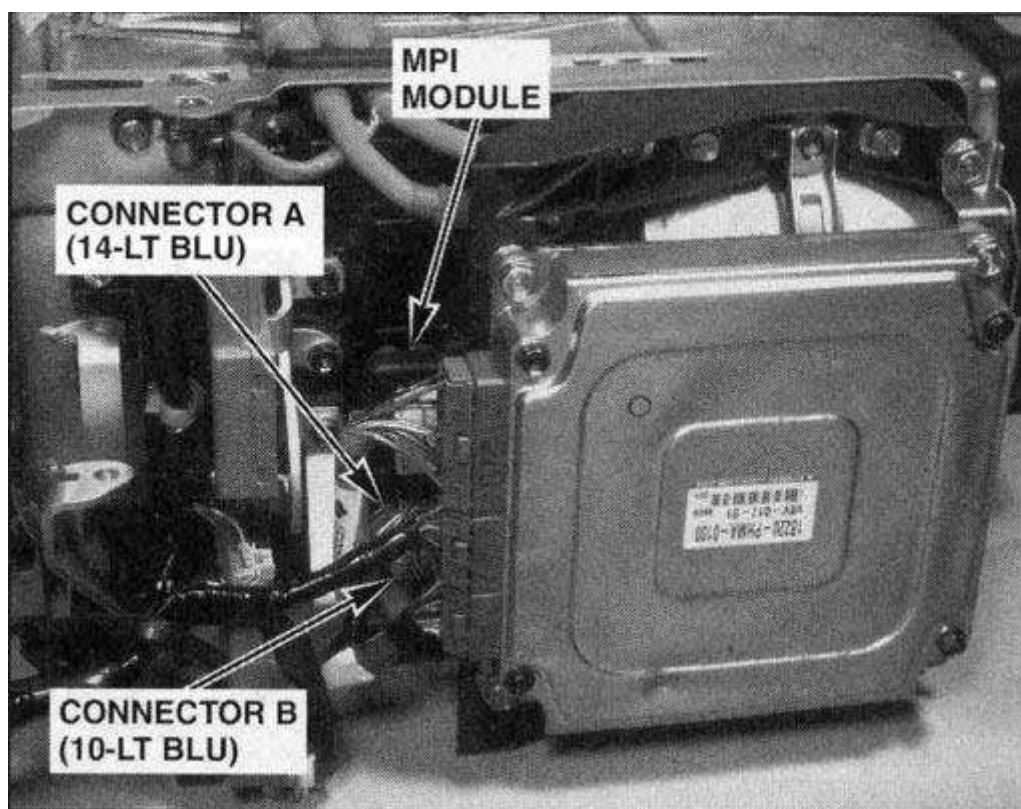

G00288392


Fig. 70: Left Side Of PCU (PCU Removed)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

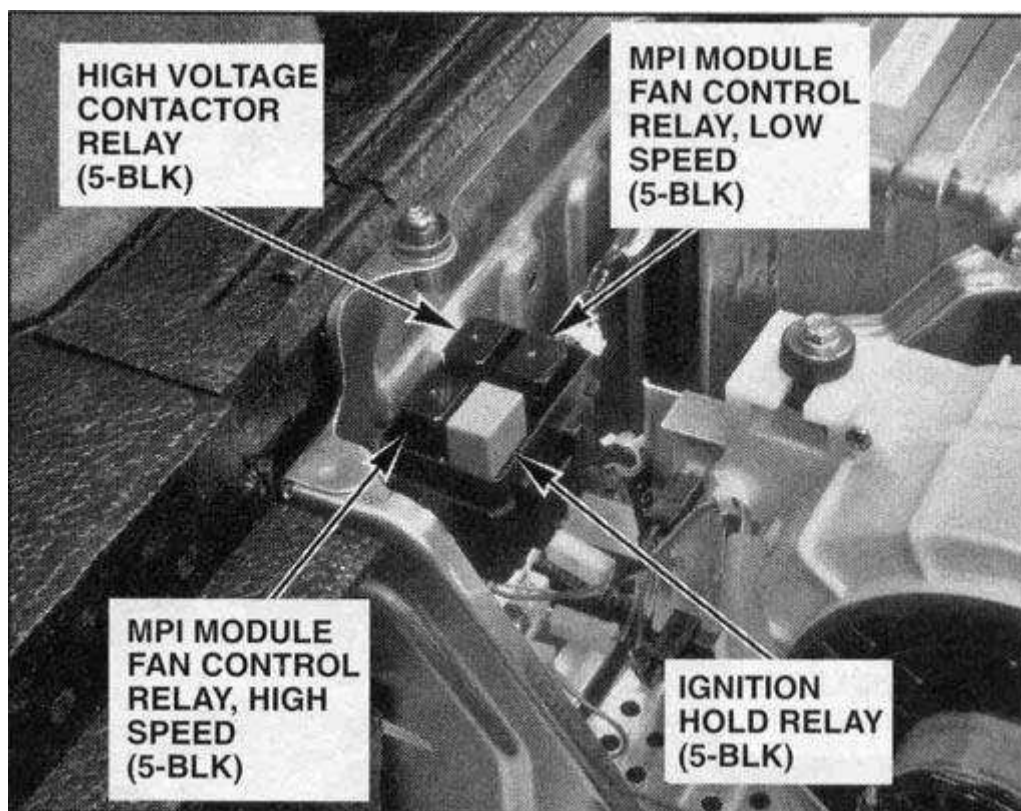

G00288393

Fig. 71: Left Rear Side Of PCU


Courtesy of AMERICAN HONDA MOTOR CO., INC.

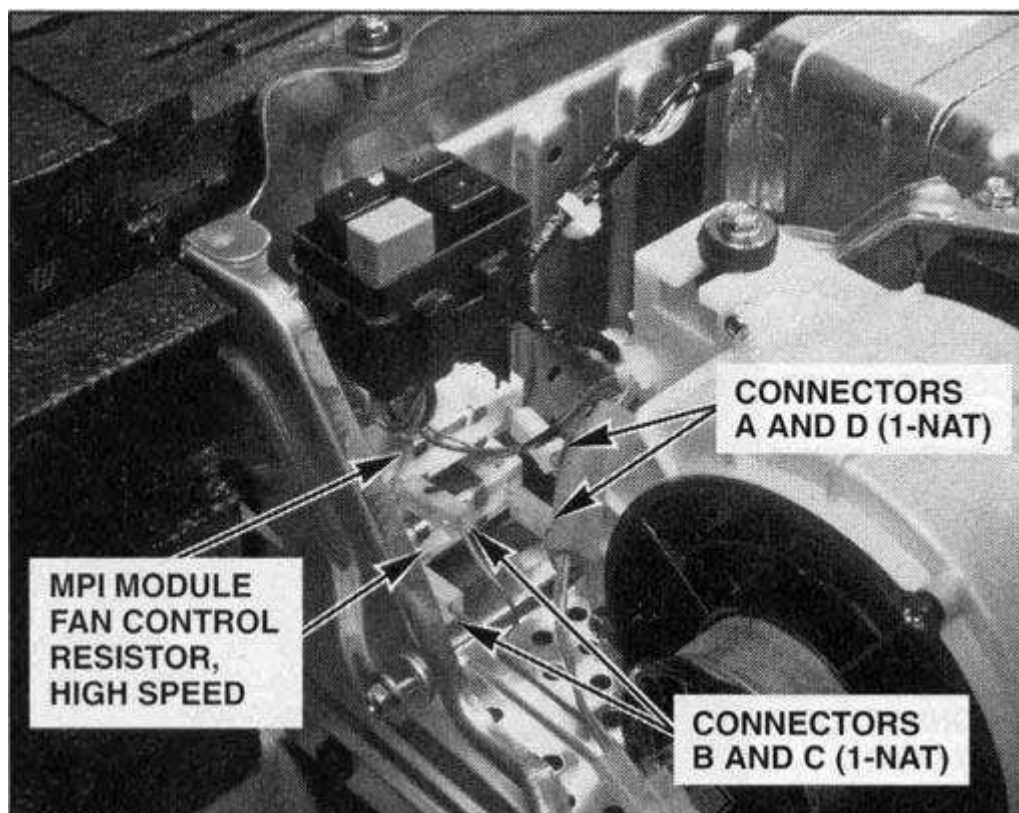

G00288394

Fig. 72: Left Rear Side Of PCU


Courtesy of AMERICAN HONDA MOTOR CO., INC.

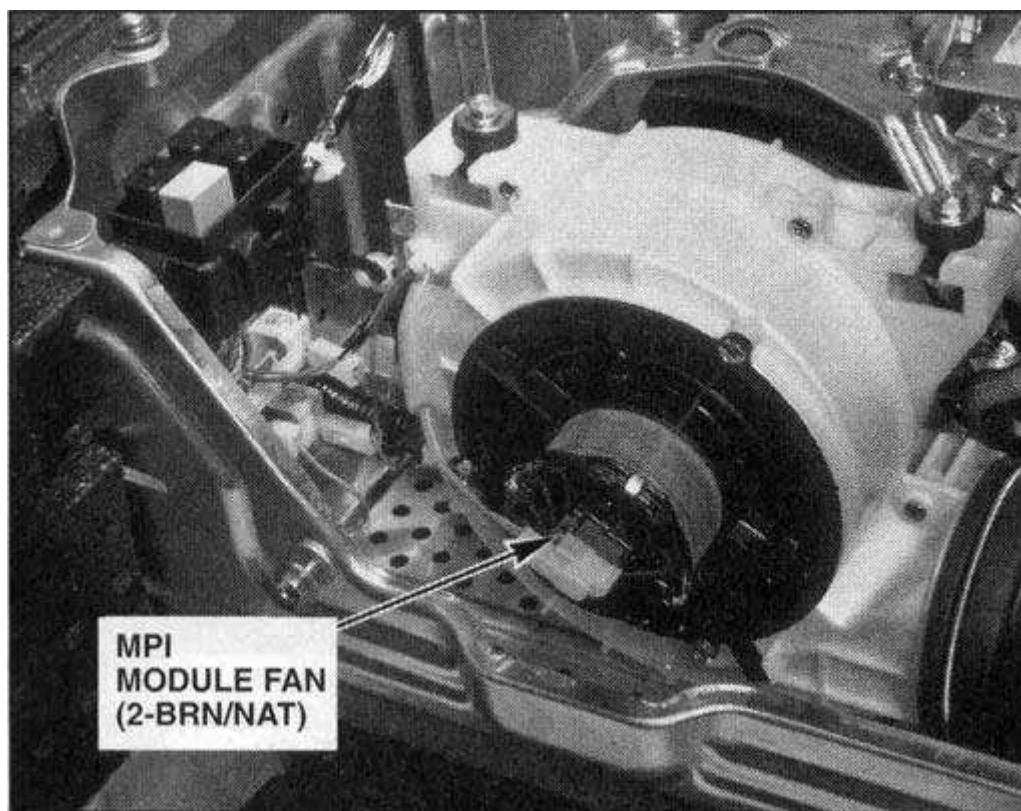

G00288395


Fig. 73: Left Rear Side Of PCU

Courtesy of AMERICAN HONDA MOTOR CO., INC.

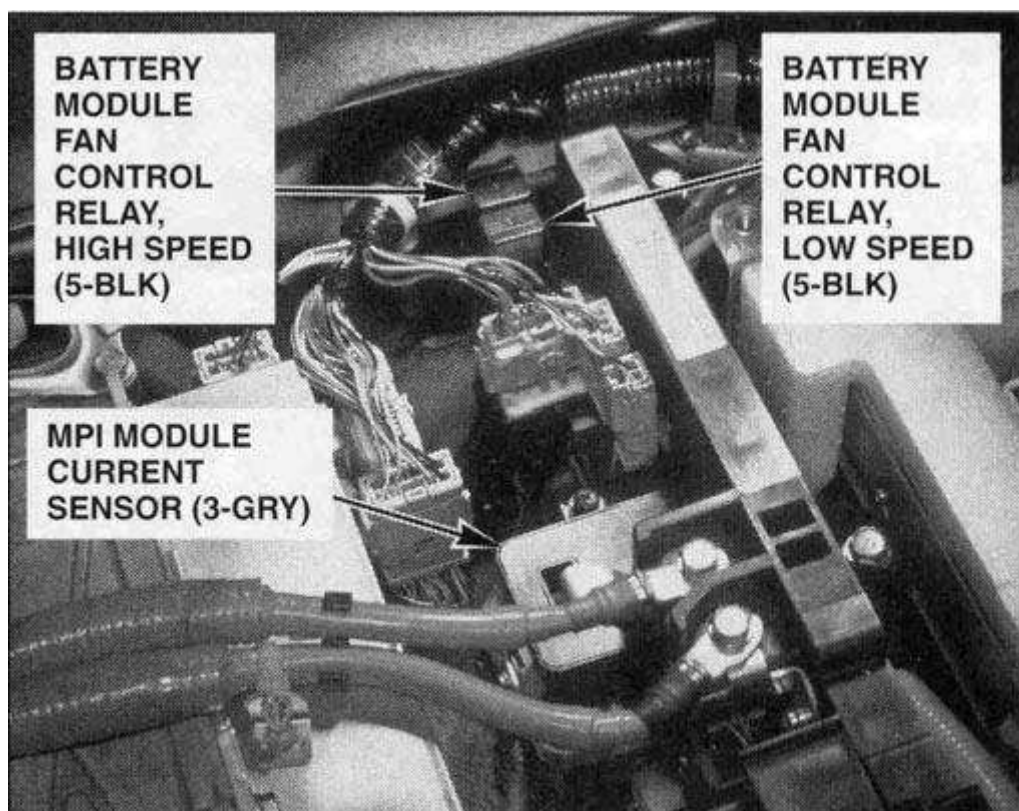


G00288396

Fig. 74: Left Front Side Of Battery Module
Courtesy of AMERICAN HONDA MOTOR CO., INC.

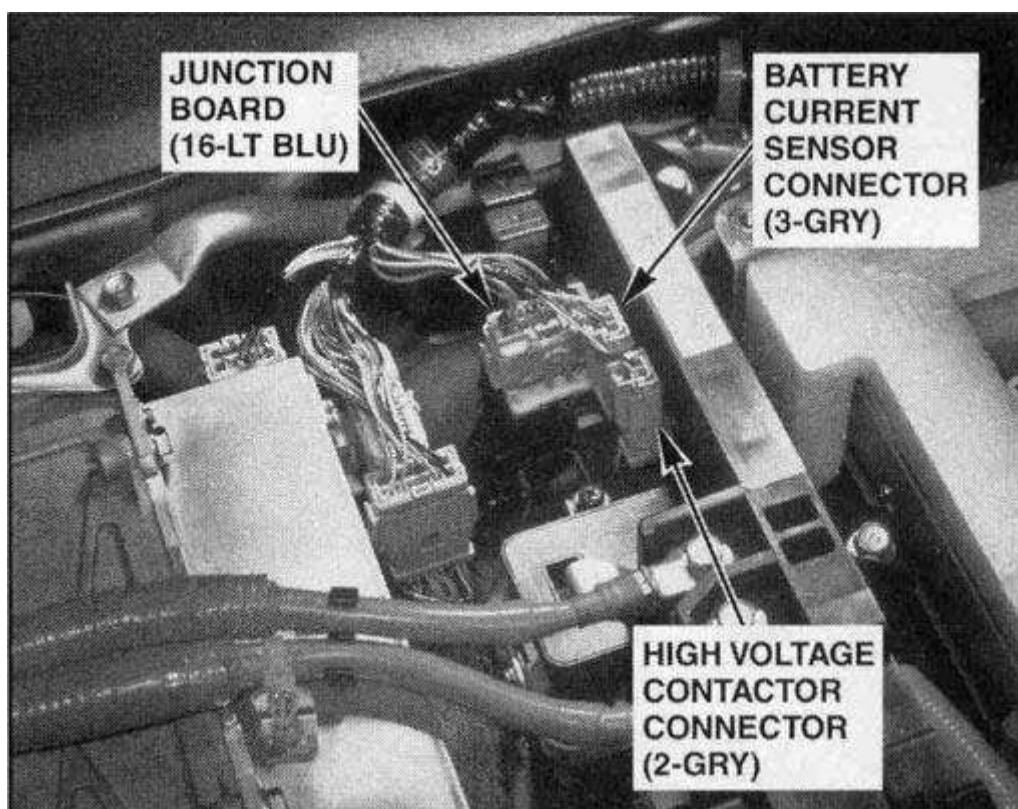

G00288397


Fig. 75: Left Front Side Of Battery Module
Courtesy of AMERICAN HONDA MOTOR CO., INC.

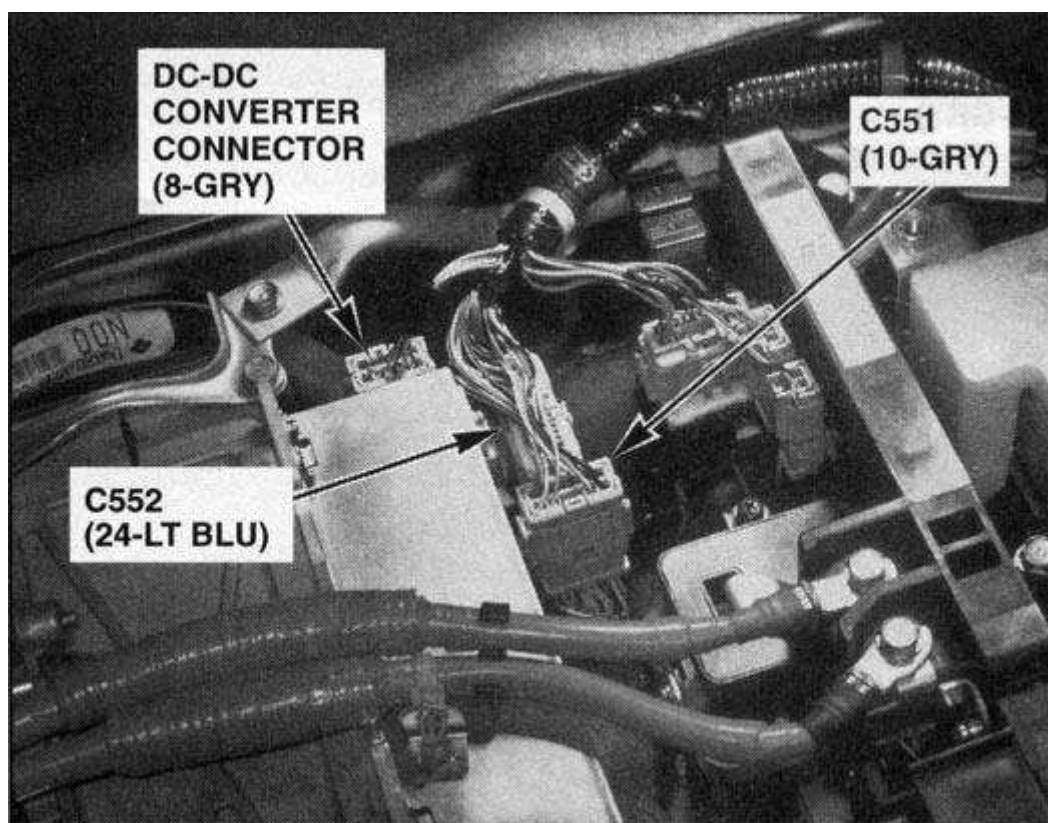

G00421168


Fig. 76: Right Front Side Of PCU

Courtesy of AMERICAN HONDA MOTOR CO., INC.

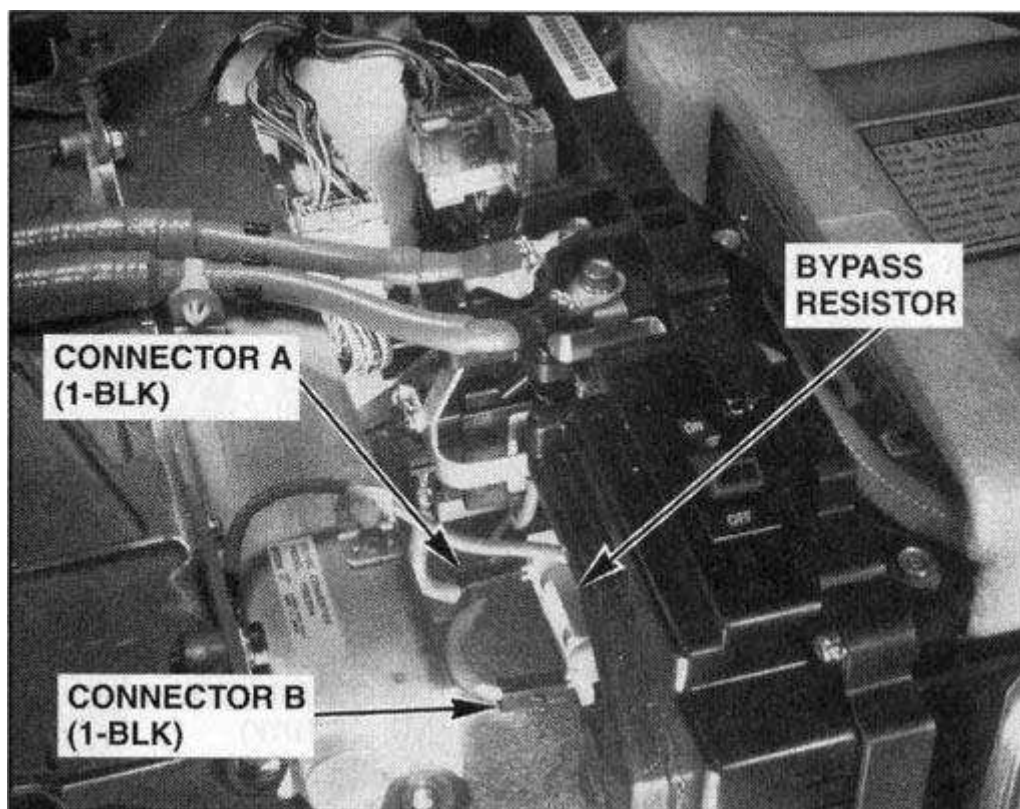


G00288401

Fig. 77: Below Left Side Of Battery Module
Courtesy of AMERICAN HONDA MOTOR CO., INC.

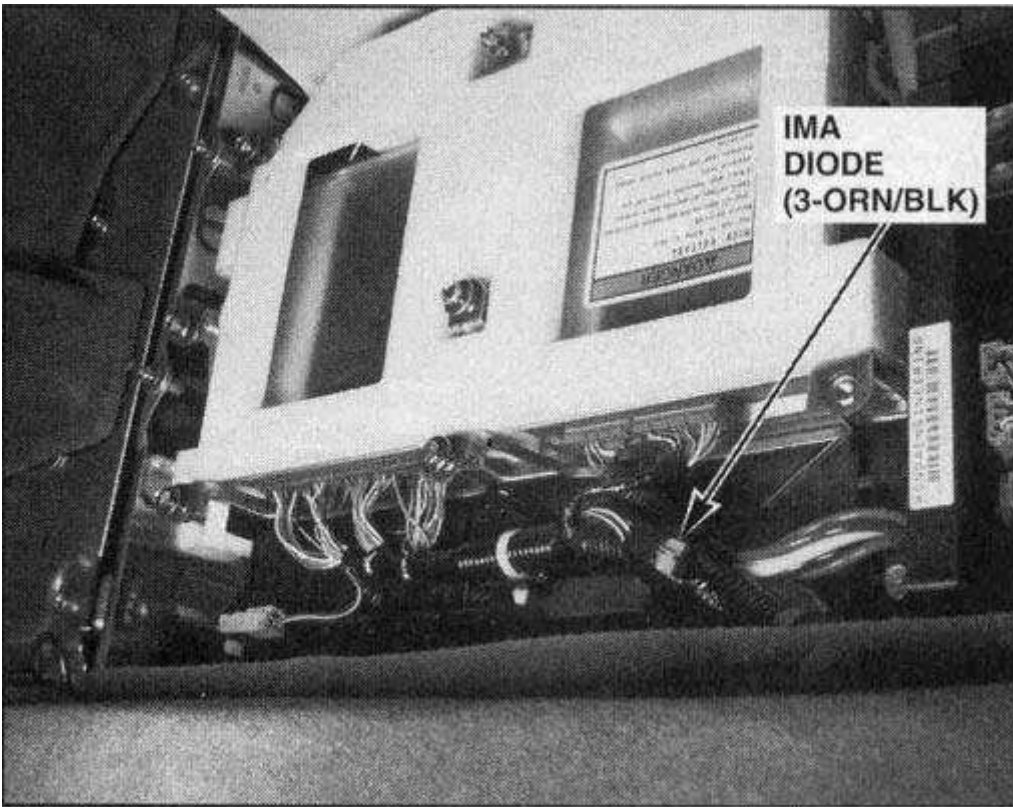

G00288402


Fig. 78: Top Front Of Battery Module
Courtesy of AMERICAN HONDA MOTOR CO., INC.

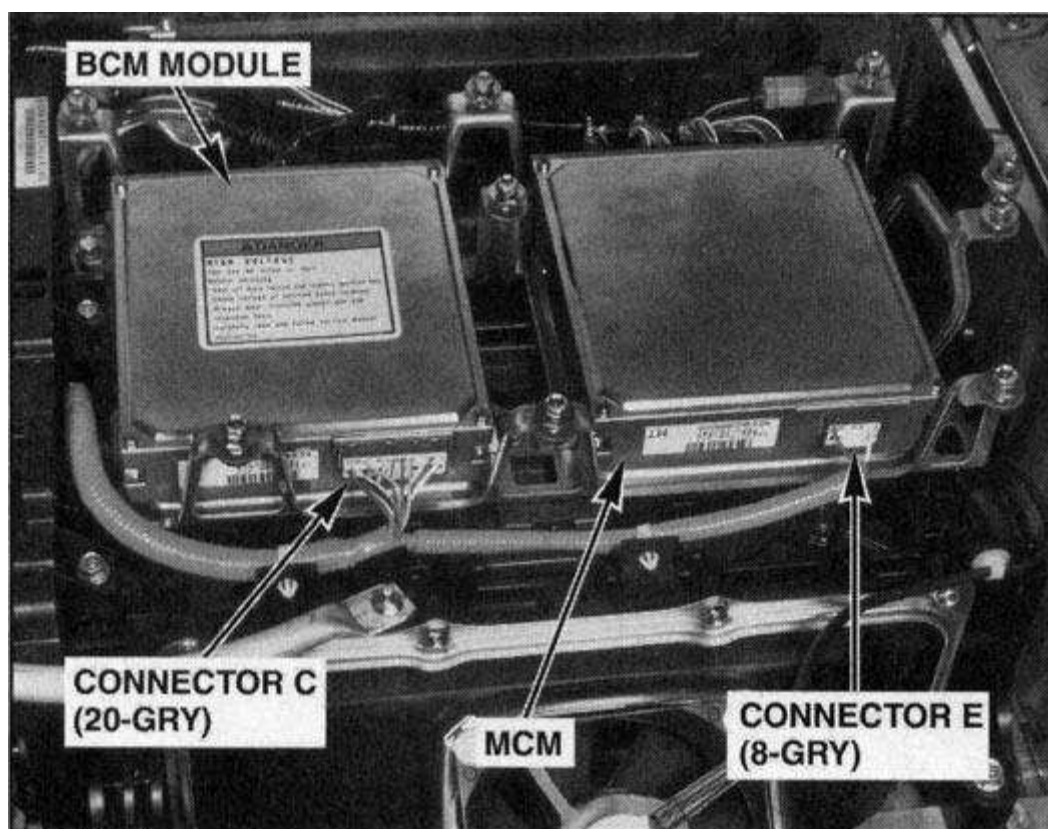

G00421169


Fig. 79: Top Rear Of Battery Module

Courtesy of AMERICAN HONDA MOTOR CO., INC.

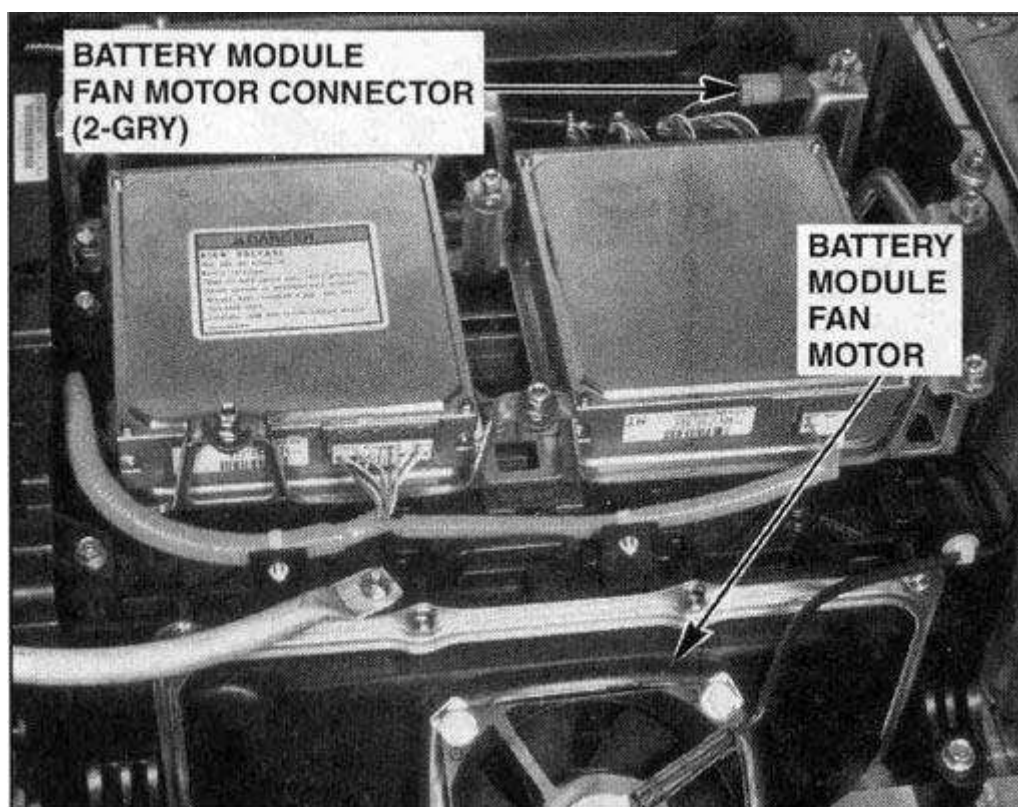

G00288406


Fig. 80: Top Rear Of Battery Module
Courtesy of AMERICAN HONDA MOTOR CO., INC.

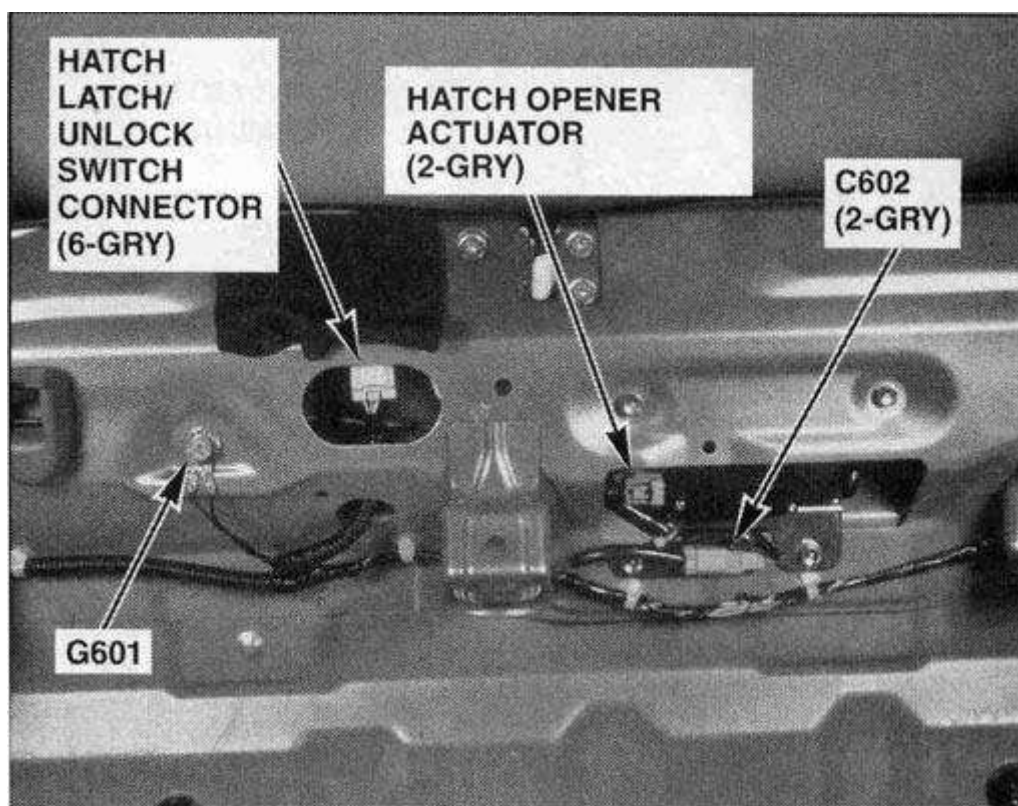

G00288407

Fig. 81: Middle Of Cargo Area


Courtesy of AMERICAN HONDA MOTOR CO., INC.

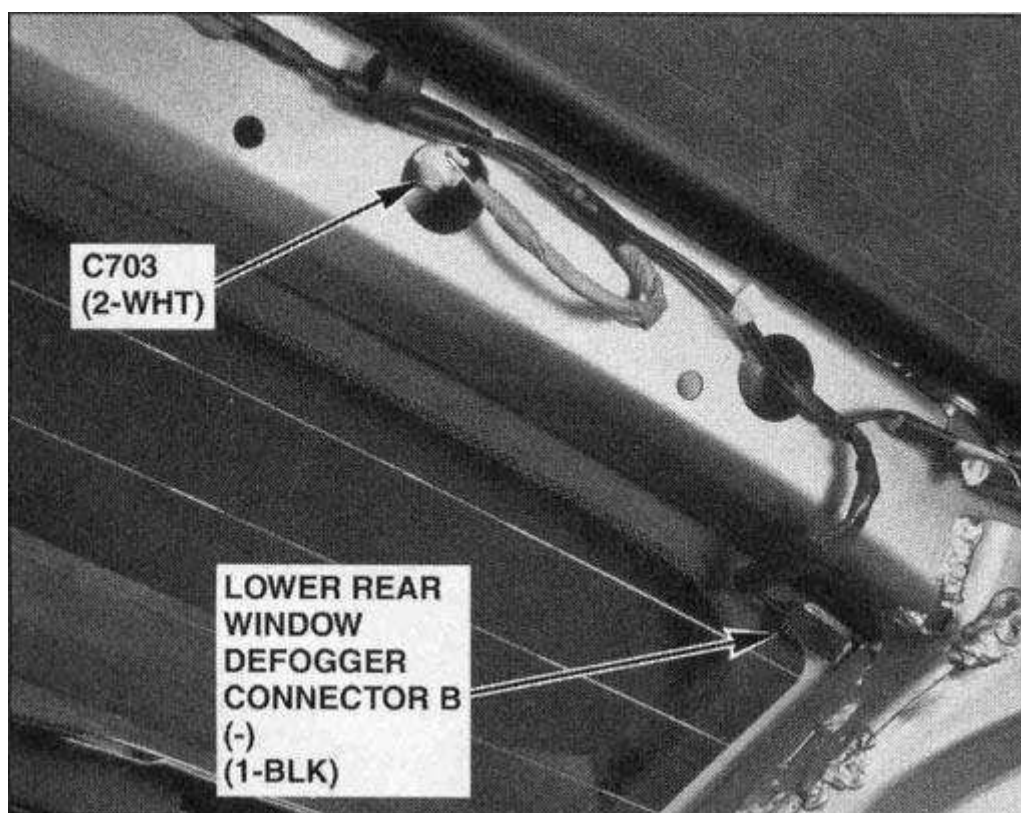

G00288409

Fig. 82: Left Side Of Hatch


Courtesy of AMERICAN HONDA MOTOR CO., INC.

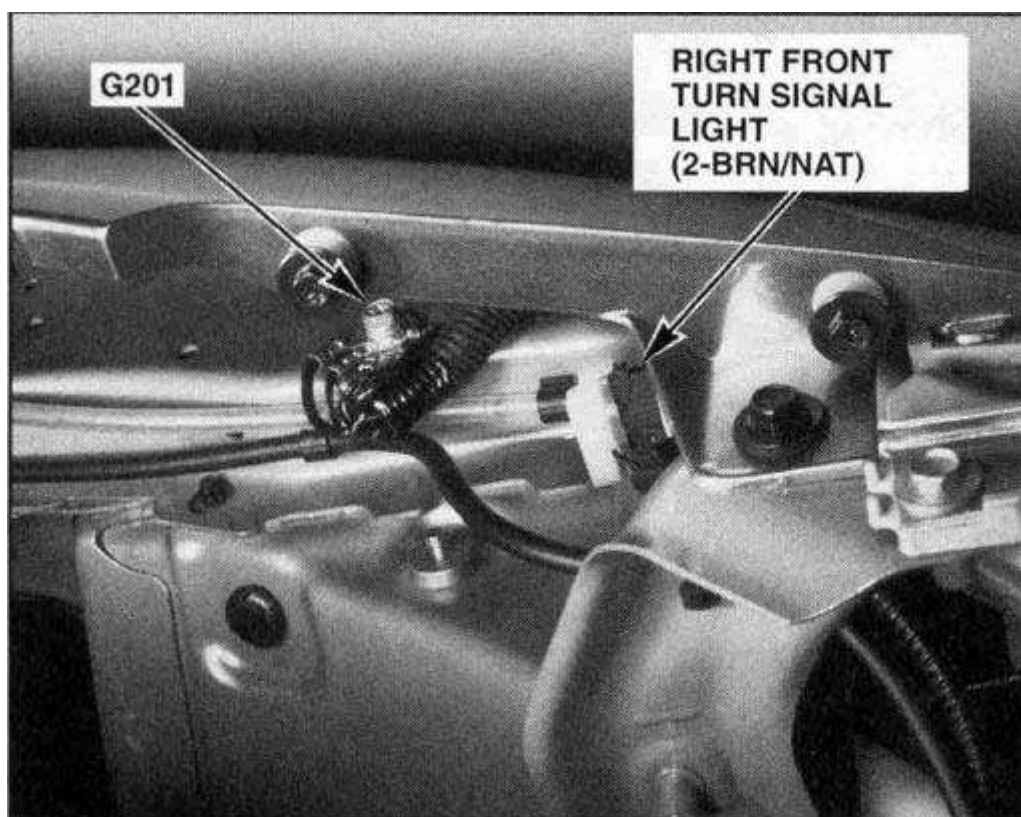

G00288410

Fig. 83: Above Right Front Wheelwell


Courtesy of AMERICAN HONDA MOTOR CO., INC.

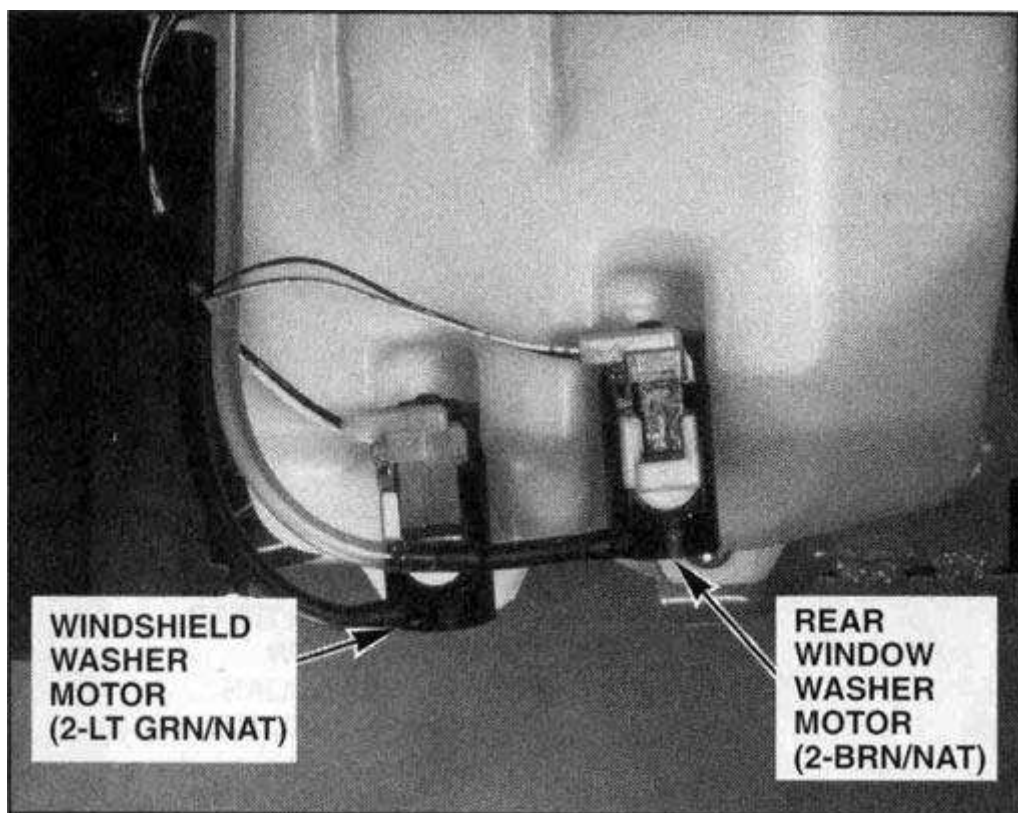

G00288411

Fig. 84: Below Right Front Wheelwell


Courtesy of AMERICAN HONDA MOTOR CO., INC.

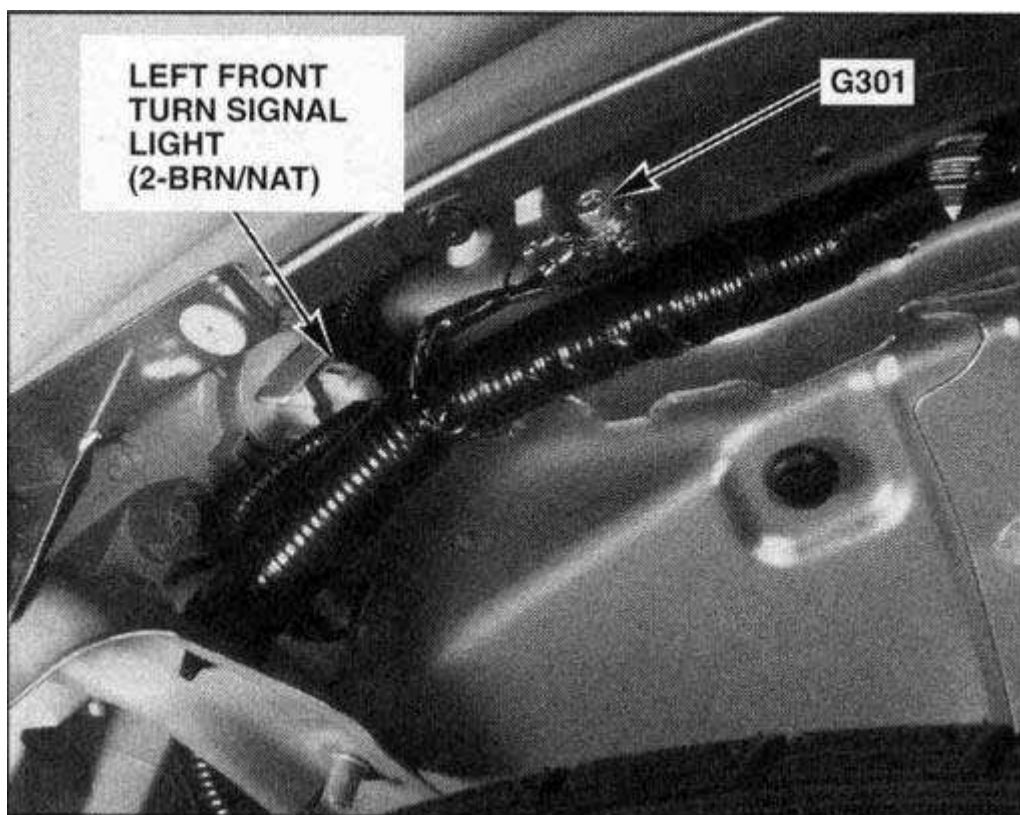

G00288412


Fig. 85: Above Left Front Wheelwell

Courtesy of AMERICAN HONDA MOTOR CO., INC.

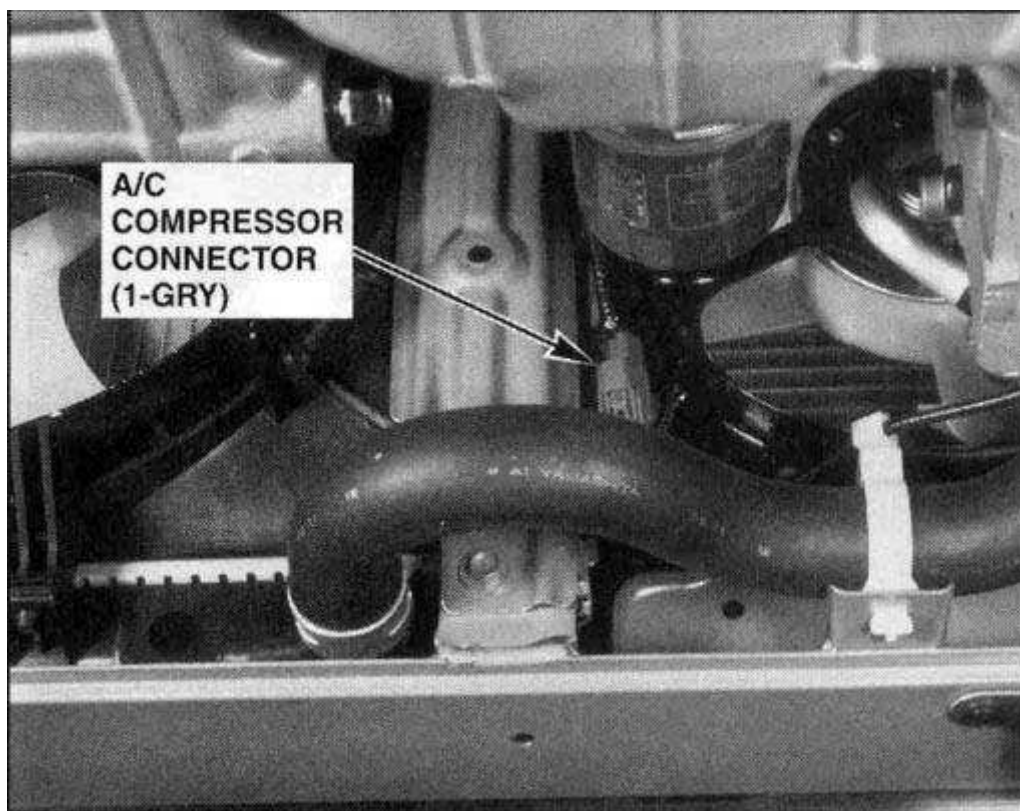

G00288413


Fig. 86: Below Right Front Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

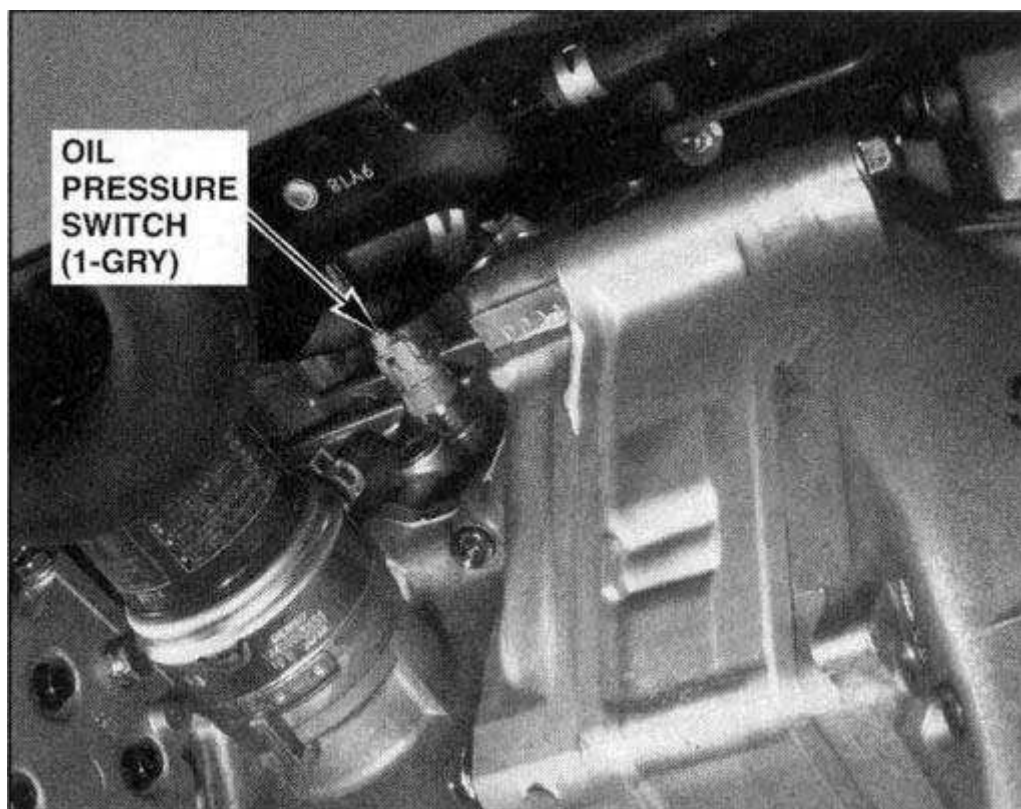

G00288414

Fig. 87: Below Front Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

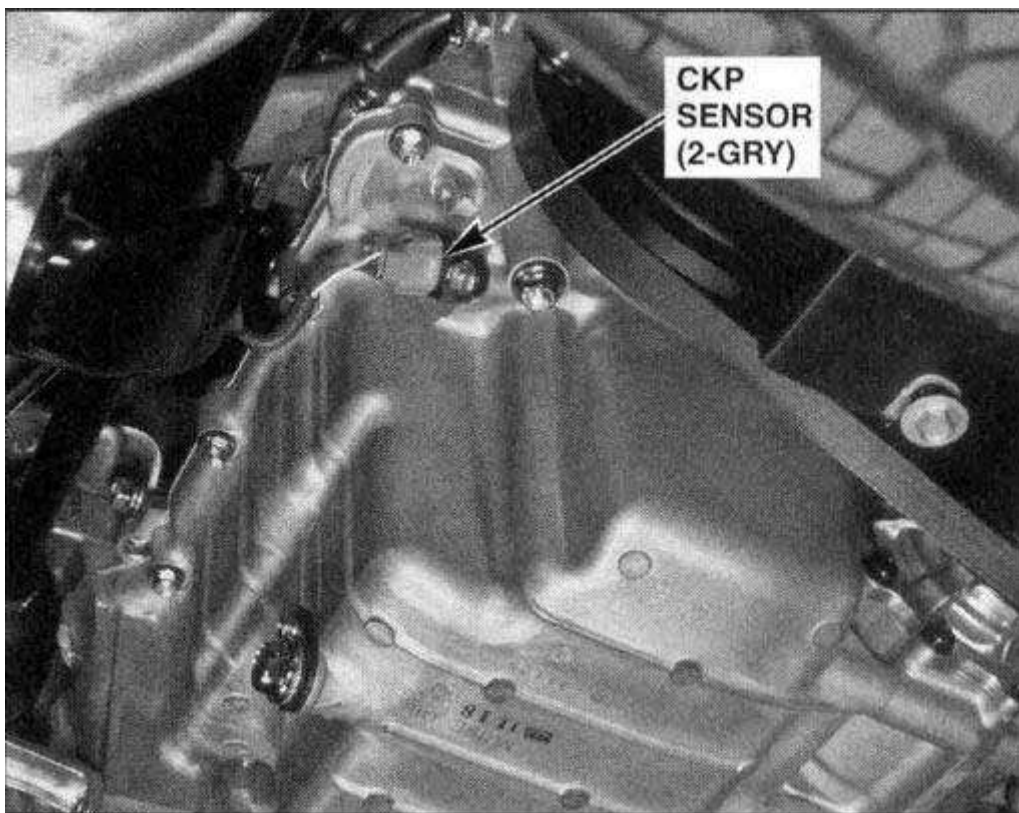

G00288415

Fig. 88: Below Right Side Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

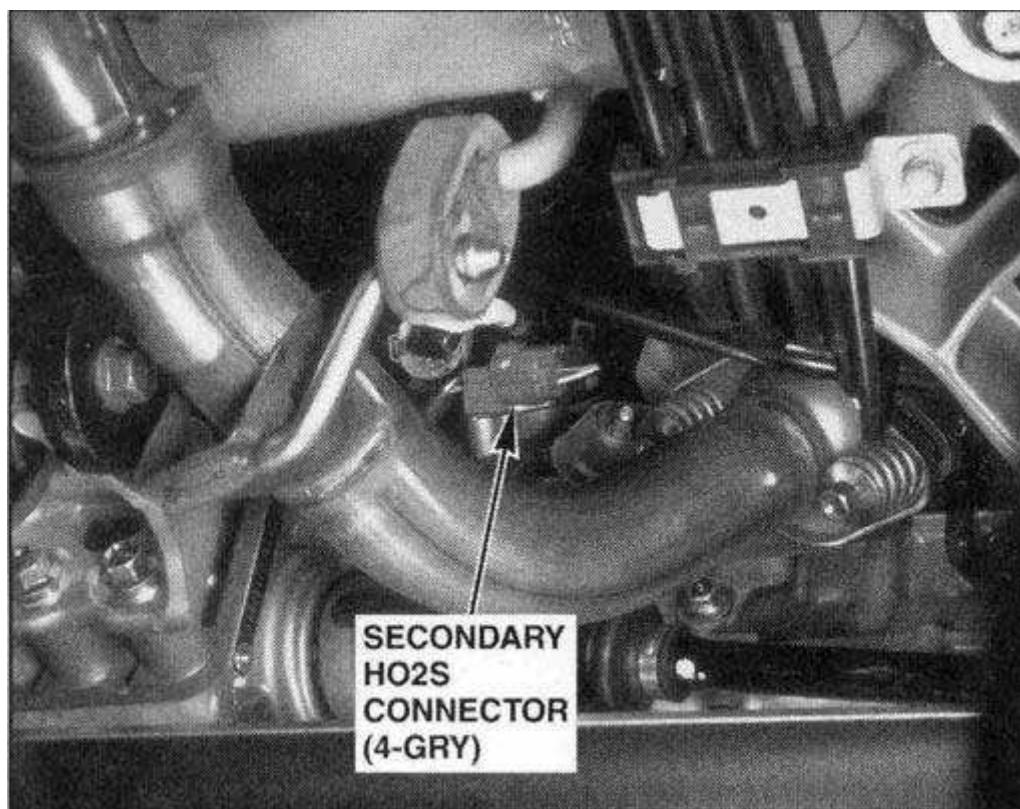

G00288416


Fig. 89: Below Rear Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

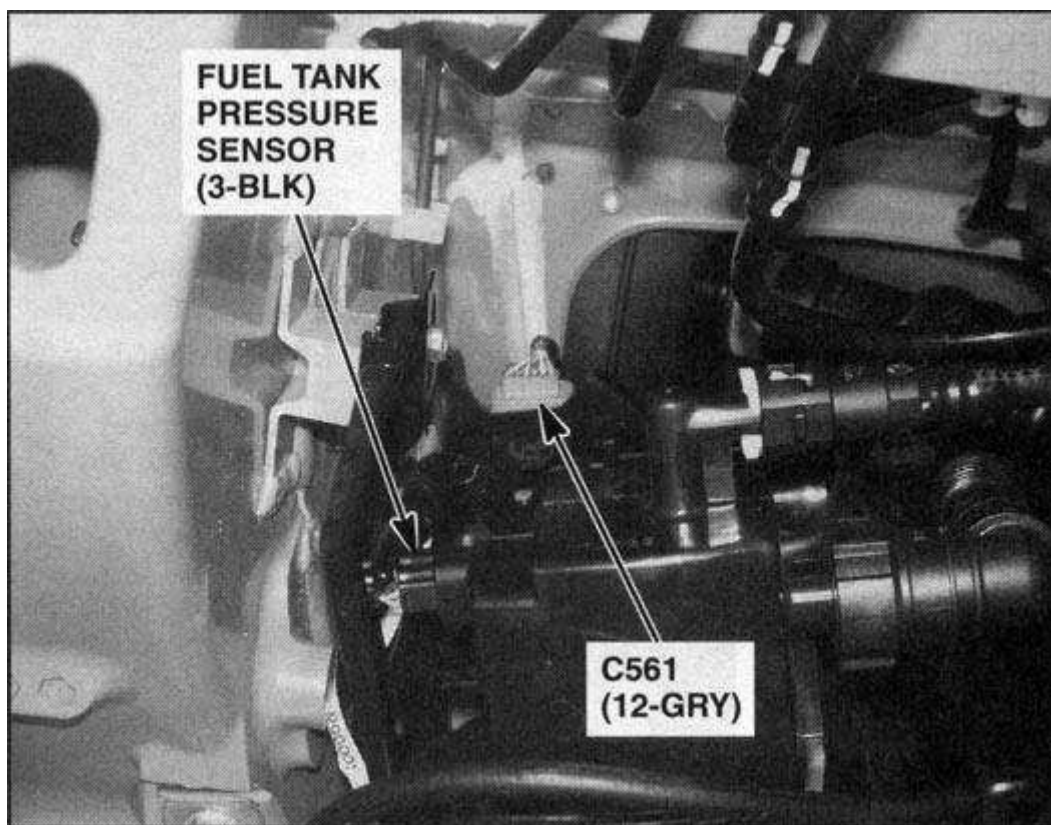


G00421171

Fig. 90: Under Right Rear Side Of Vehicle
Courtesy of AMERICAN HONDA MOTOR CO., INC.

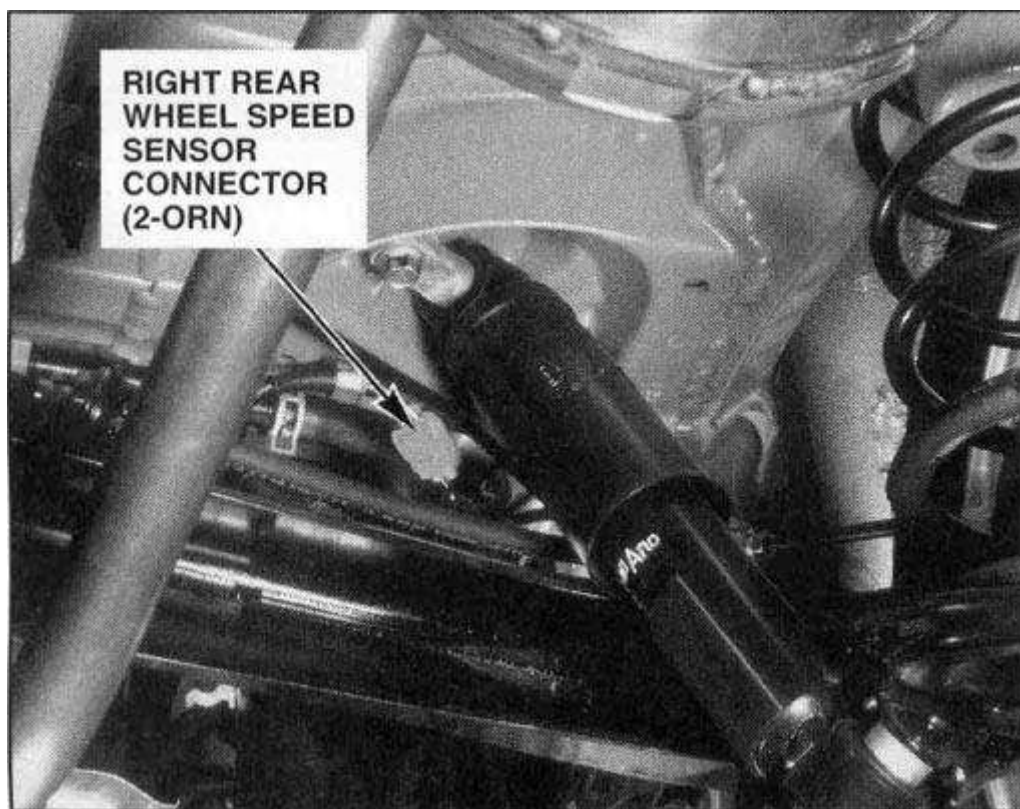

G00288418


Fig. 91: Right Rear Underside Of Vehicle (Left Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

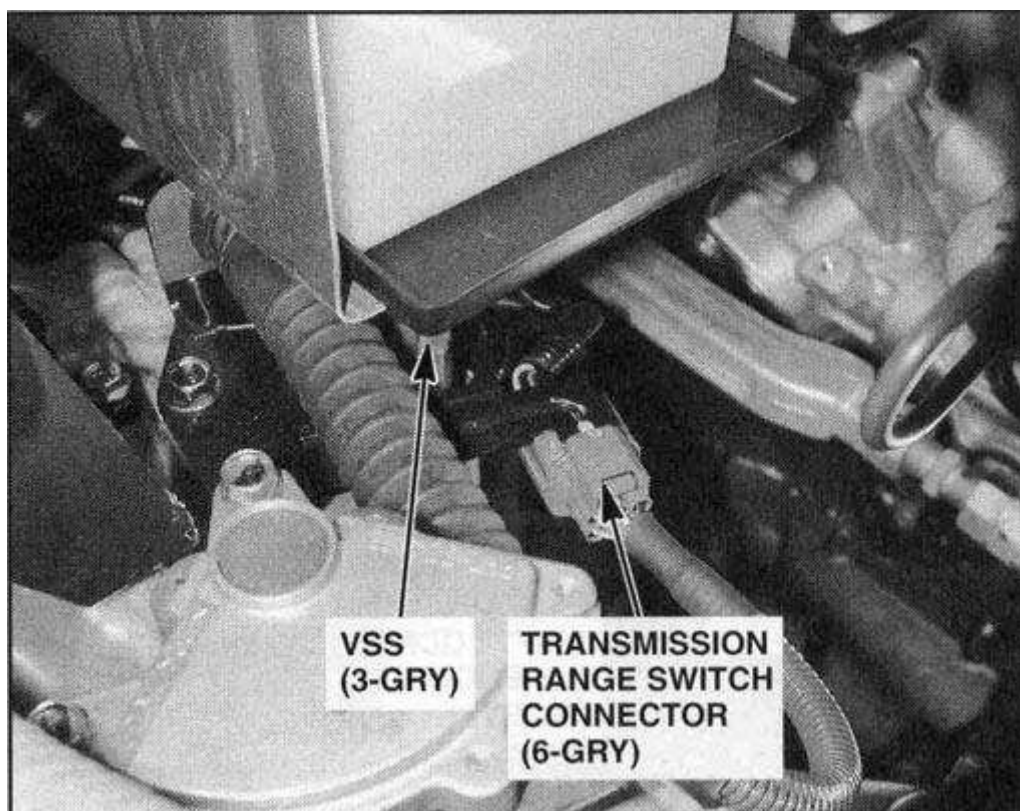

G00288419

Fig. 92: Transmission Housing (CVT)


Courtesy of AMERICAN HONDA MOTOR CO., INC.

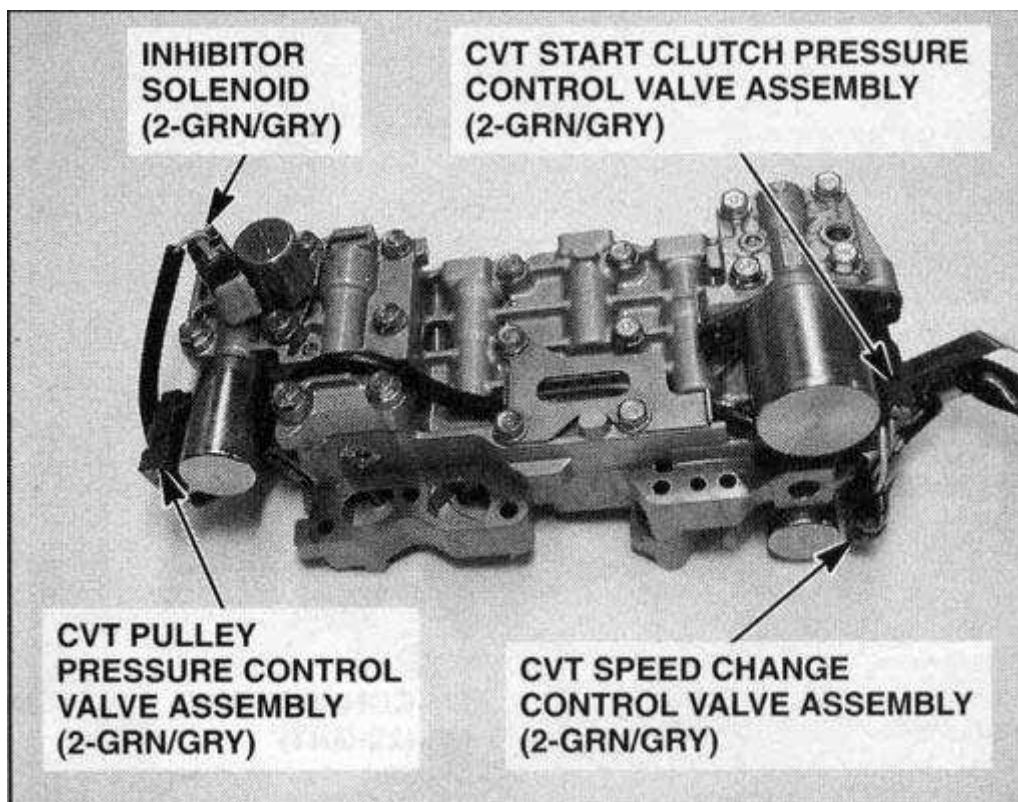

G00288420


Fig. 93: Valve Body (CVT)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

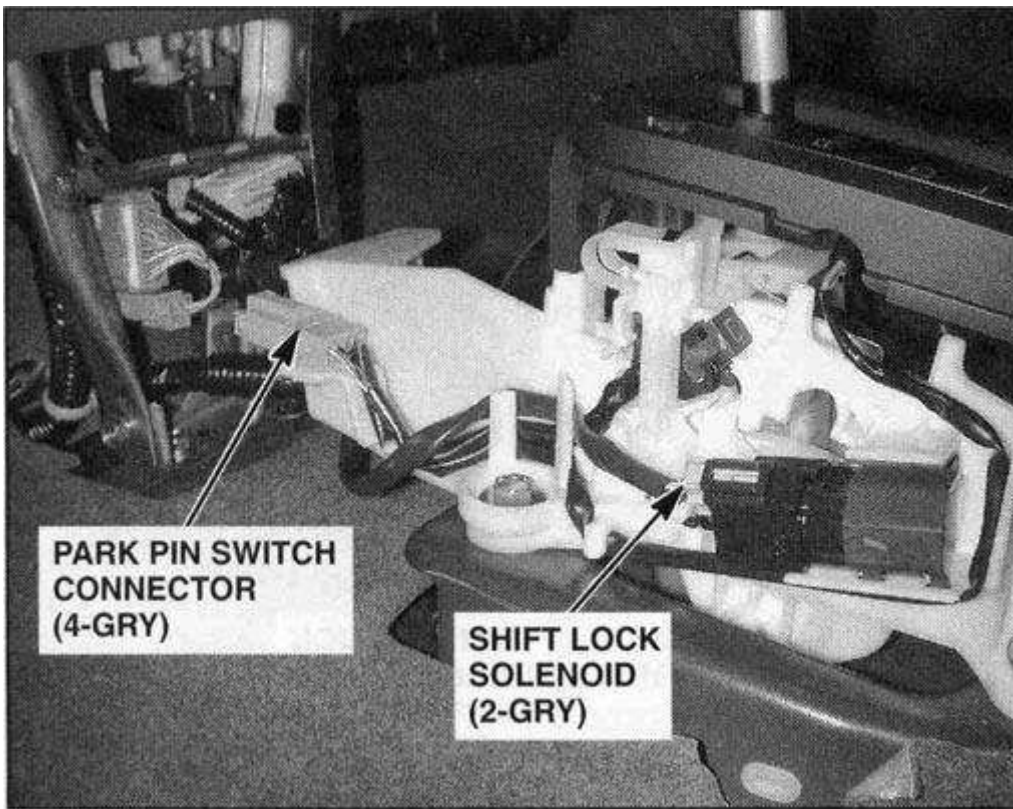


G00288421

Fig. 94: Middle Of Floor (CVT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

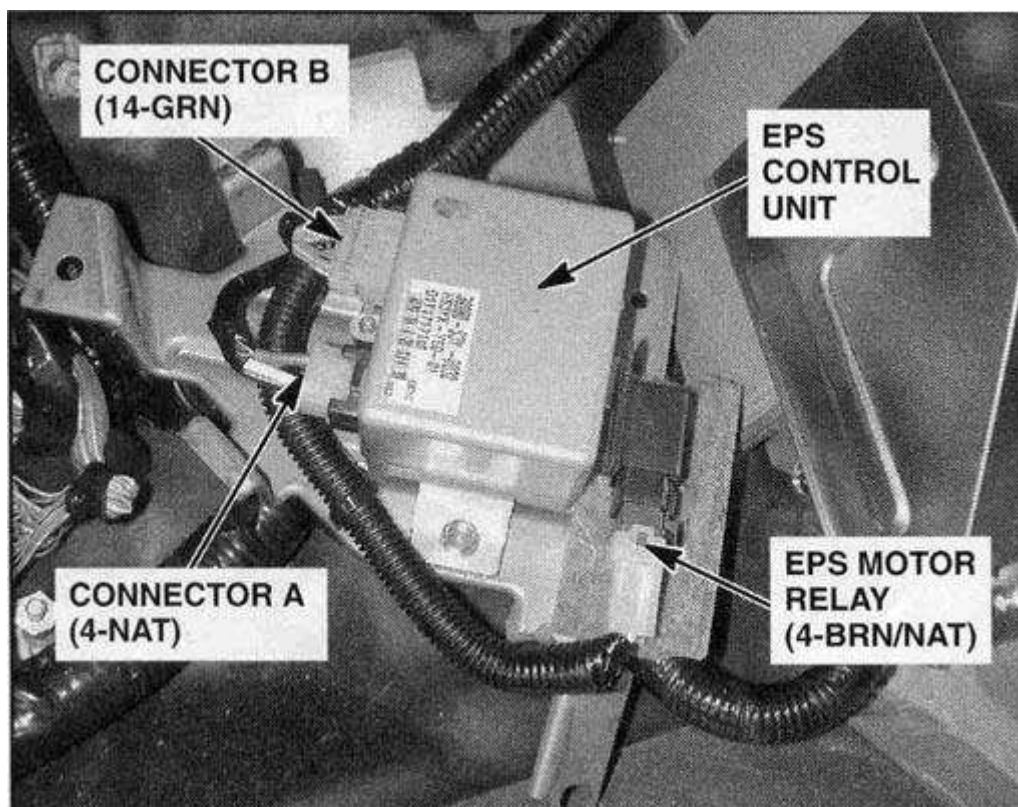


G00288422

Fig. 95: Under Right Side Of Kick Panel (CVT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

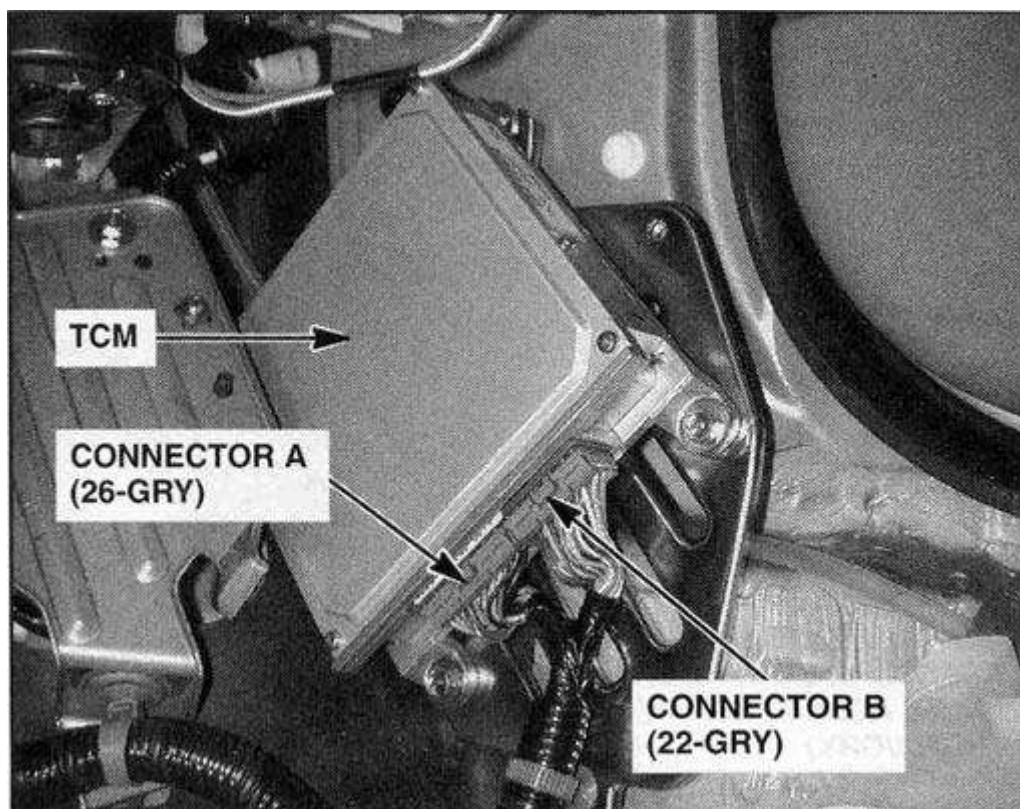

G00288423

Fig. 96: Under Right Side Of Kick Panel (CVT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

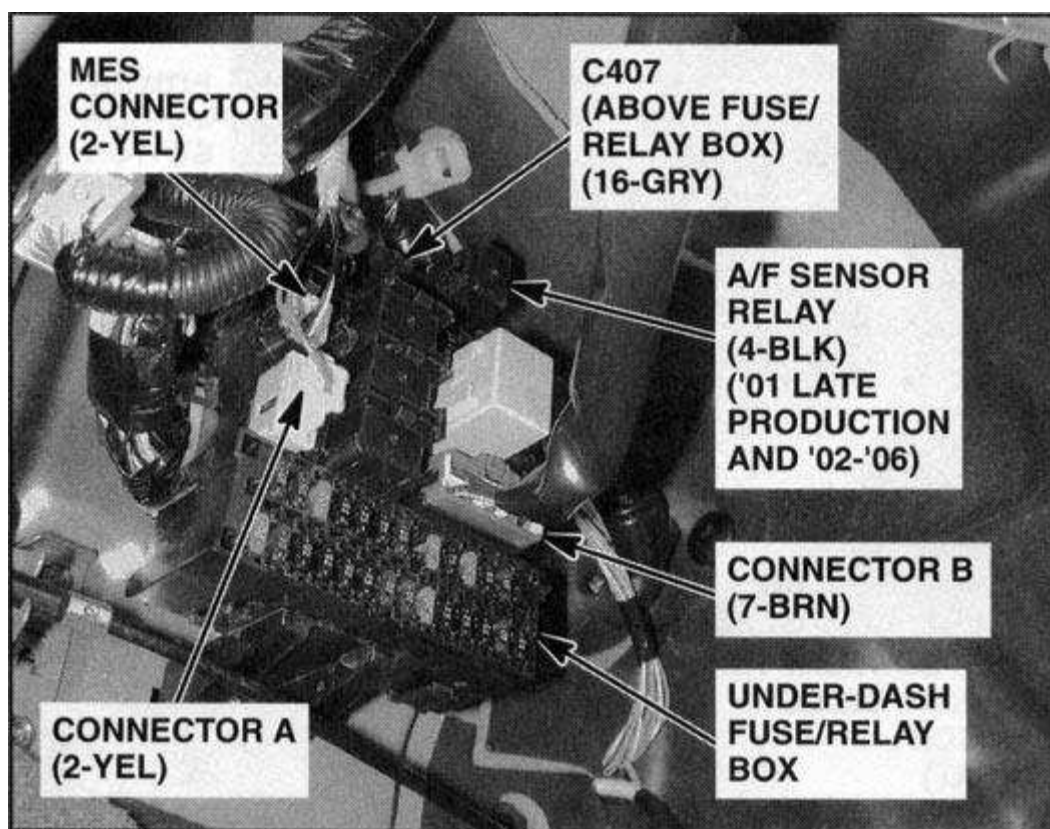

G00421162

Fig. 97: Upper Left Kick Panel Area


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00291987

Fig. 98: Right Of Steering Column


Courtesy of AMERICAN HONDA MOTOR CO., INC.

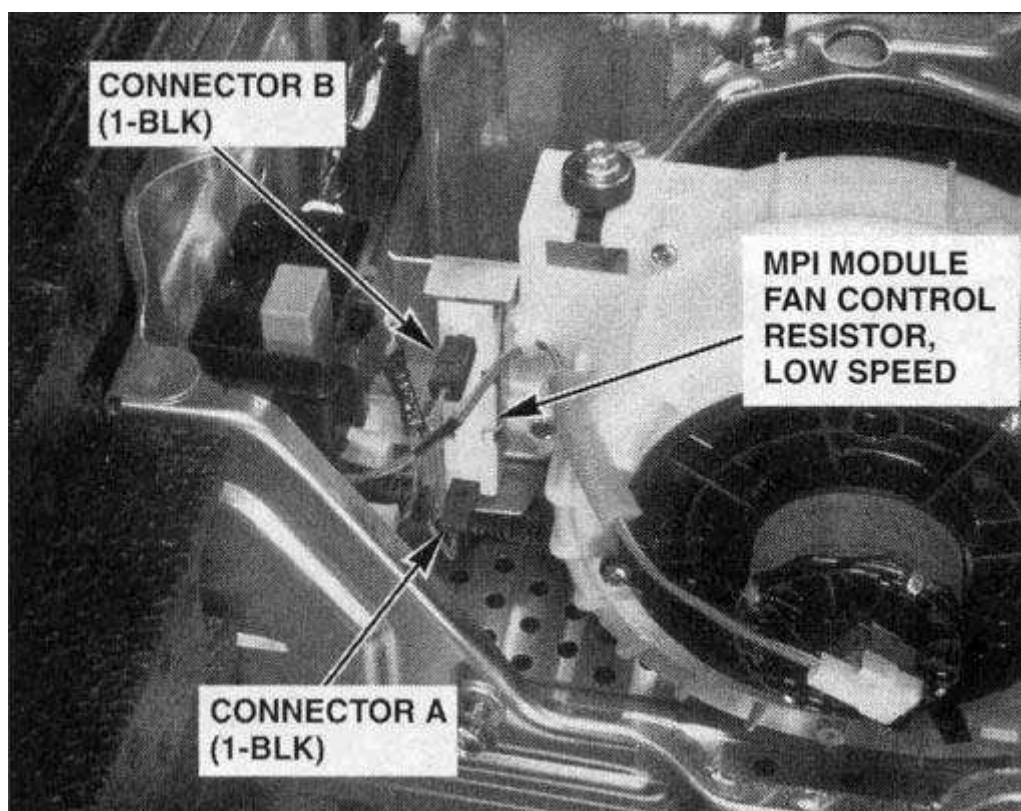

G00291991


Fig. 99: Left Rear Side Of PCU

Courtesy of AMERICAN HONDA MOTOR CO., INC.

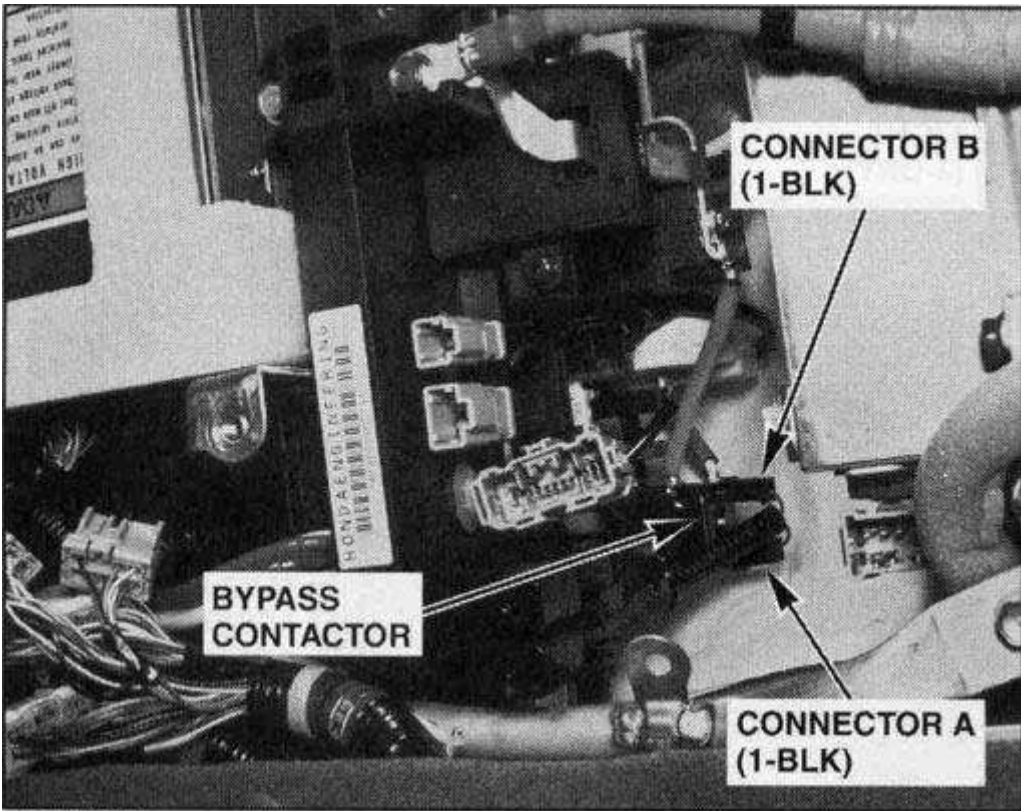


G00291992

Fig. 100: Left Front Side Of Battery Module (Connectors Disconnected)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

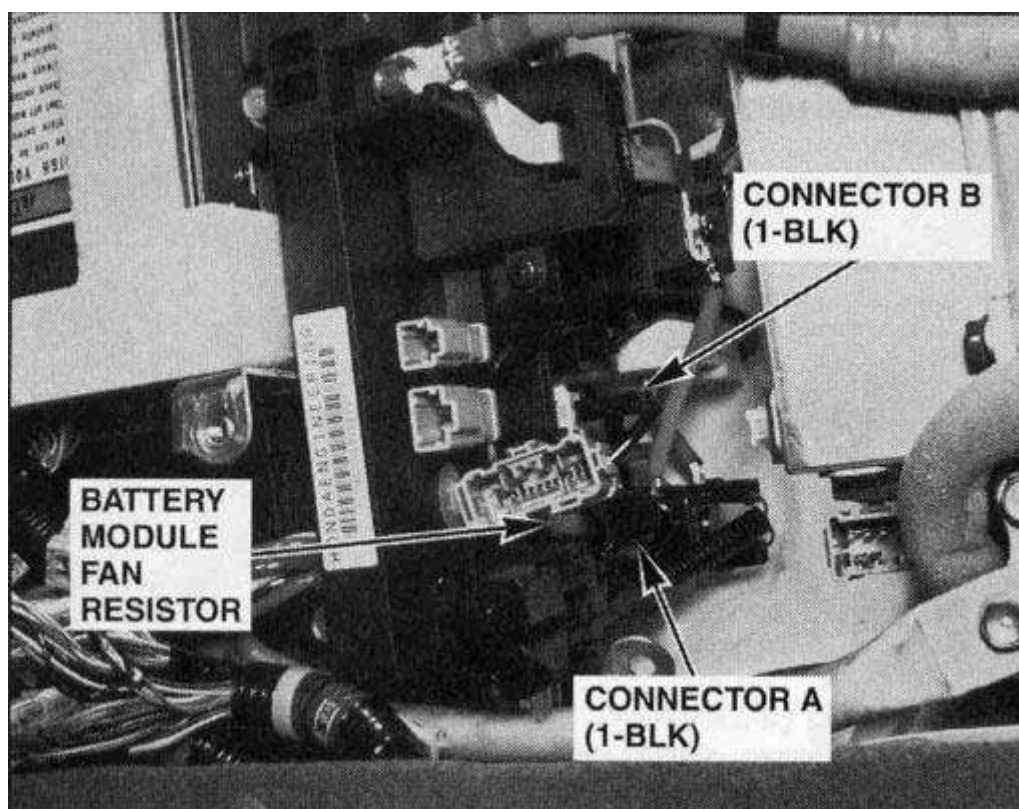


G00291993

Fig. 101: Left Front Of Battery Module (Connectors Disconnected)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

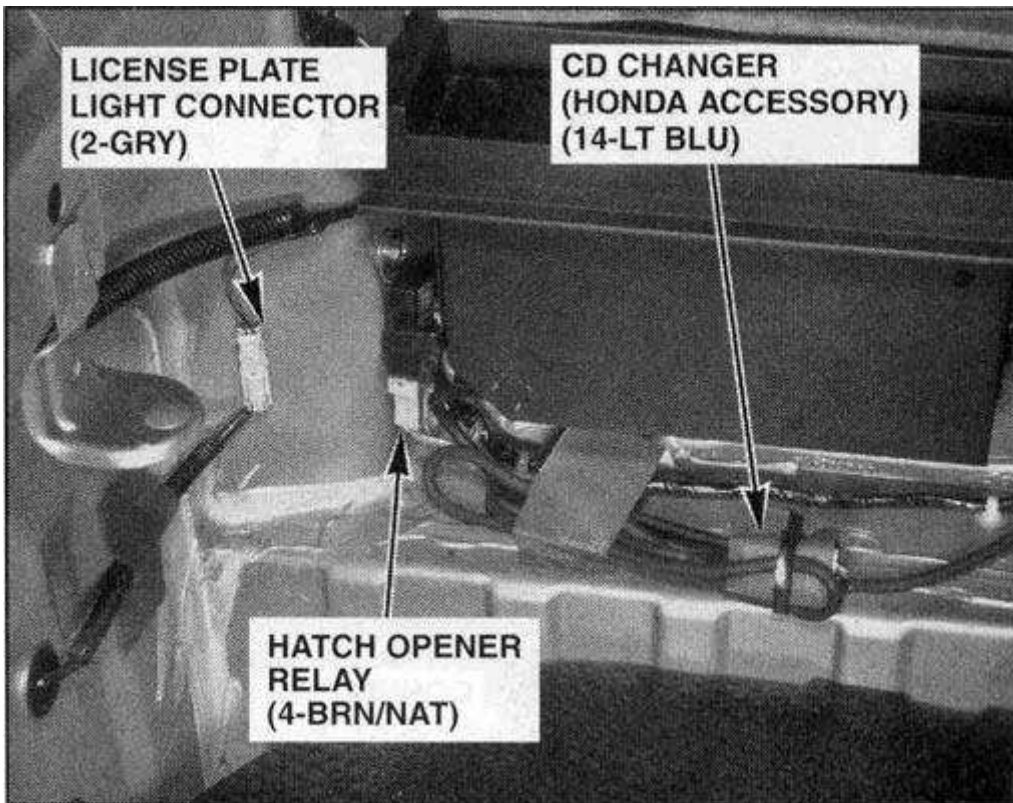


G00291994

Fig. 102: Below Left Side Of Cargo Area
Courtesy of AMERICAN HONDA MOTOR CO., INC.

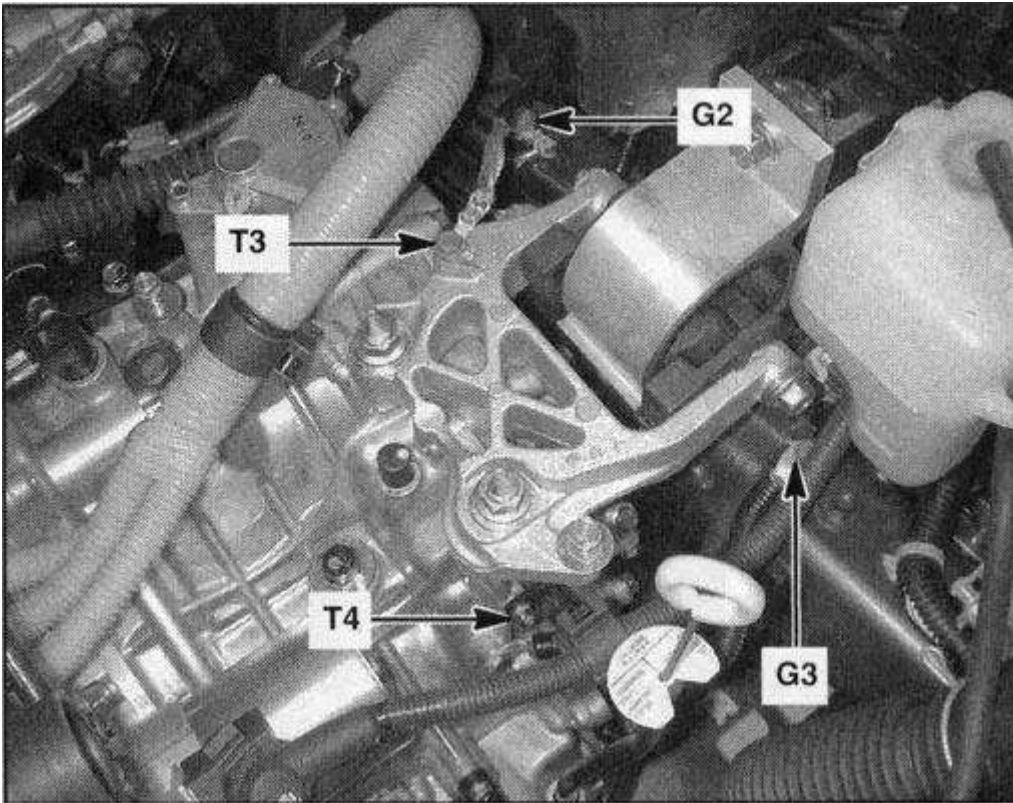


G00291995

Fig. 103: Left Side Of Engine Compartment (CVT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

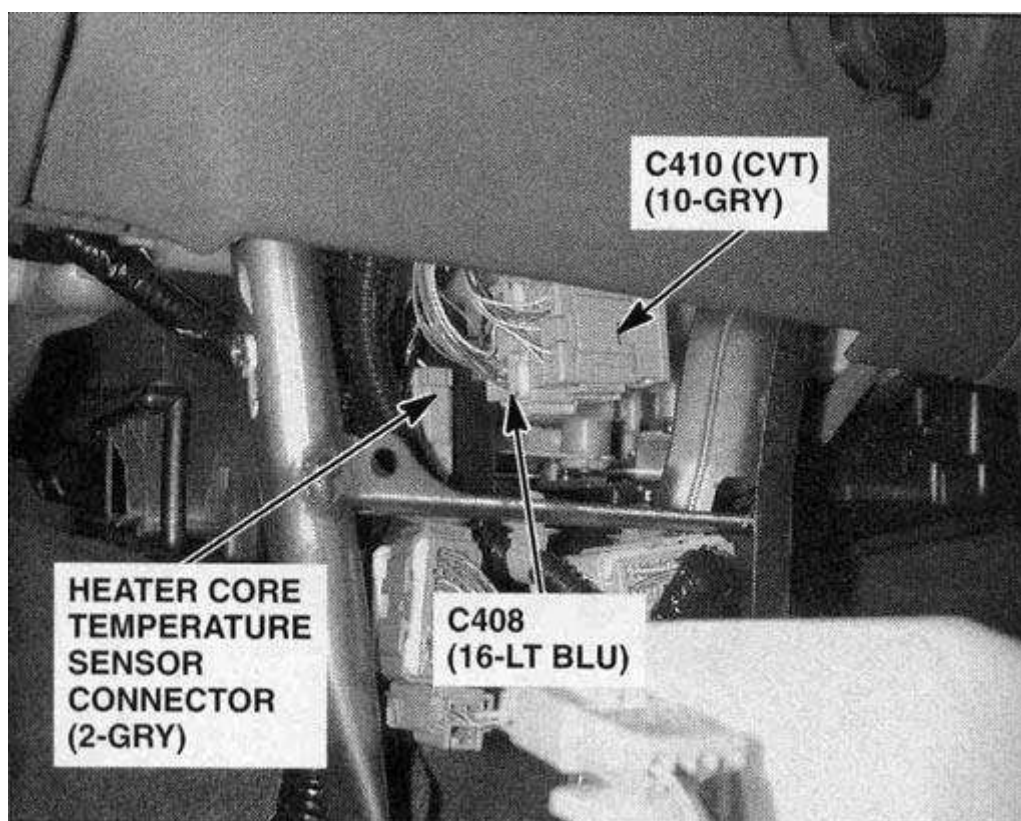


G00288367

Fig. 104: Behind Center Lower Cover
Courtesy of AMERICAN HONDA MOTOR CO., INC.

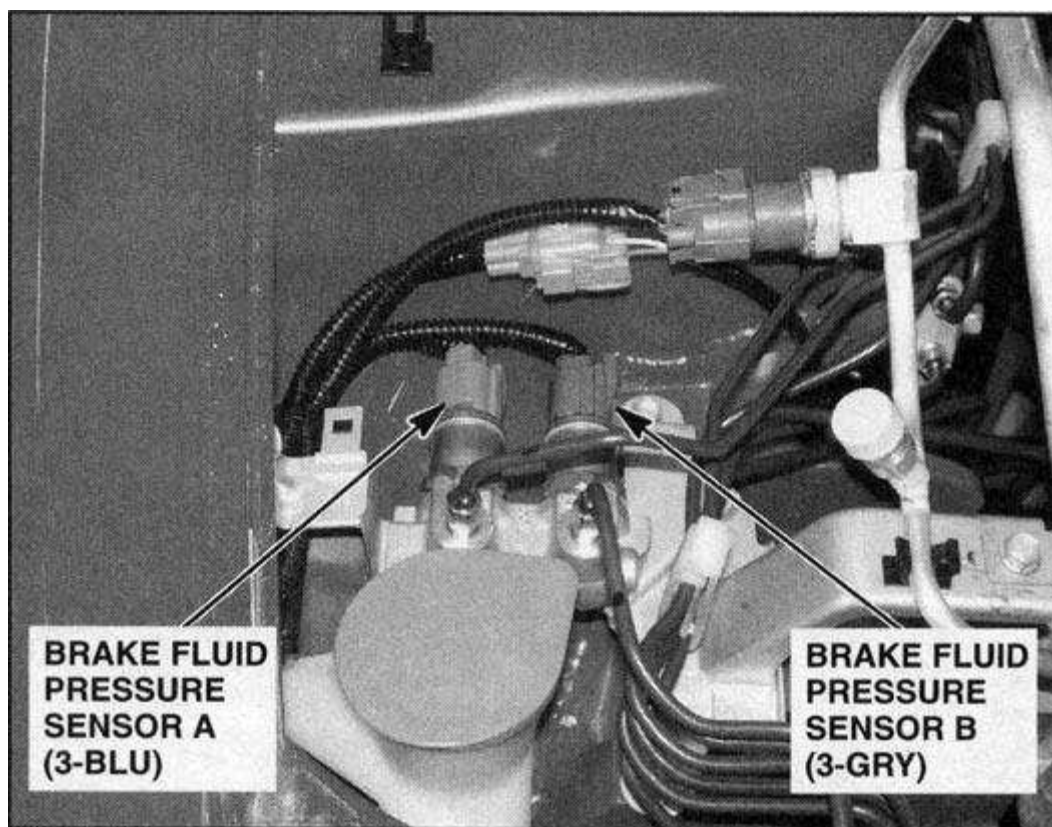


G00363846

Fig. 105: Right Side Of Engine Compartment (M/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

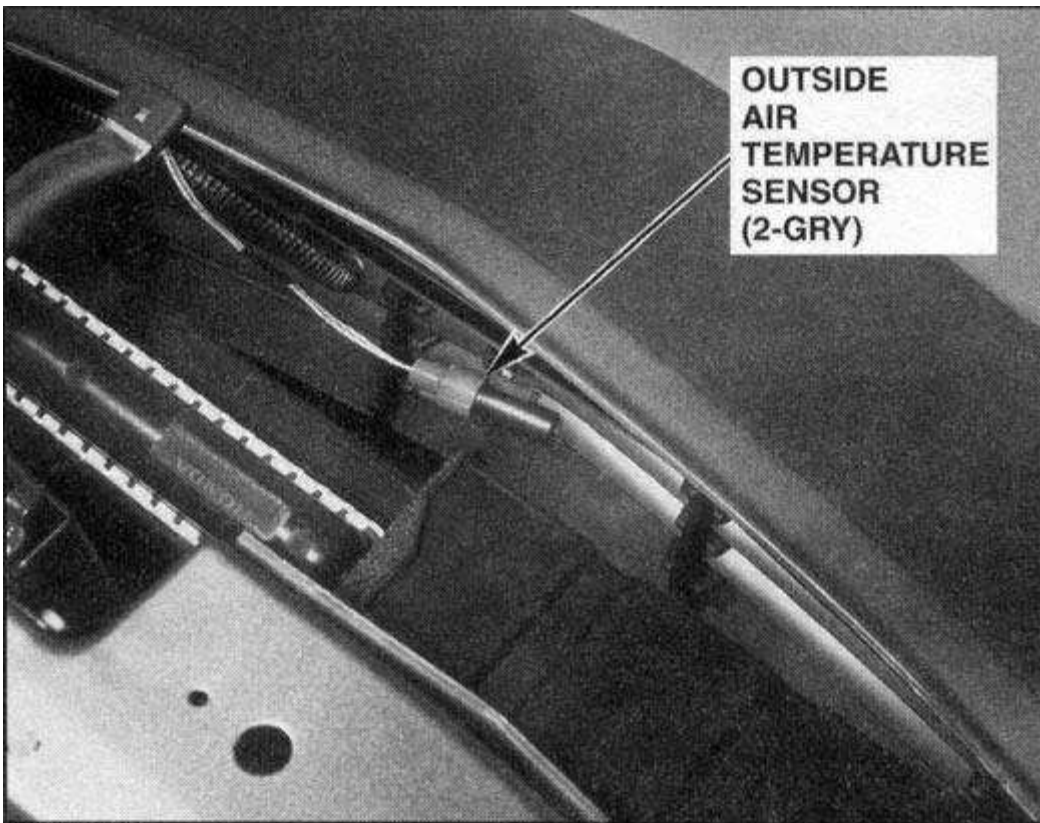

G00421157

Fig. 106: Behind Middle Of Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

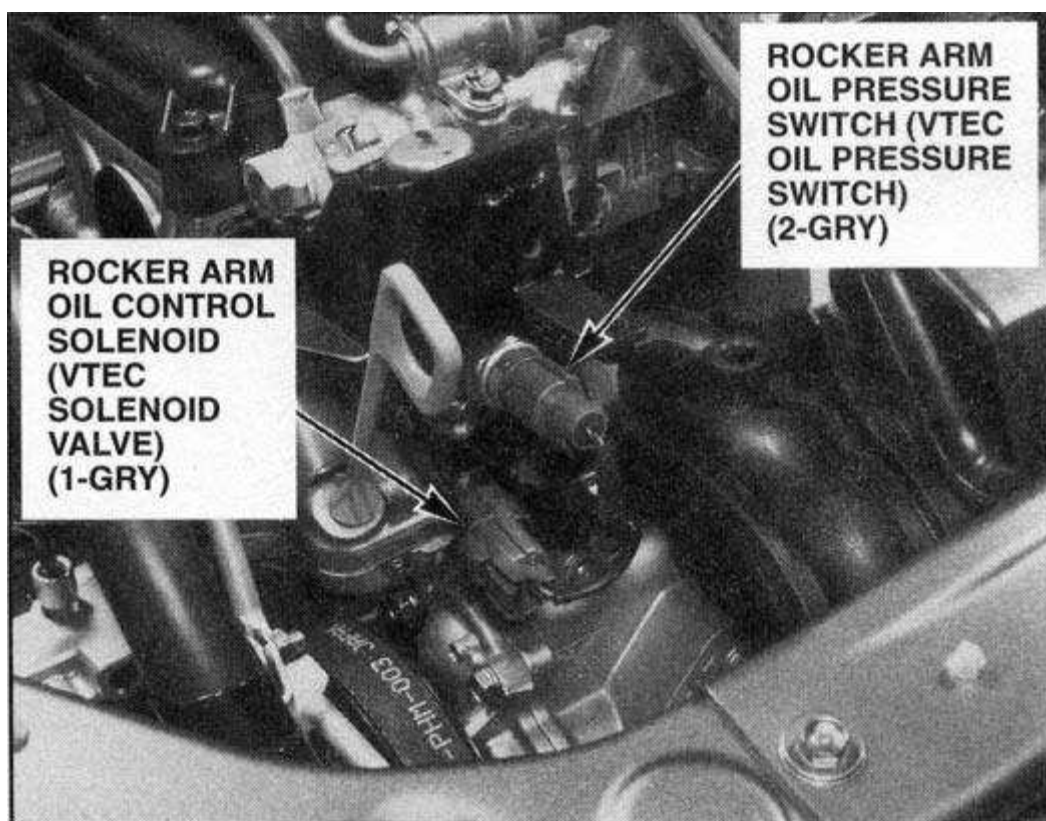

G00421158

Fig. 107: Front Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.


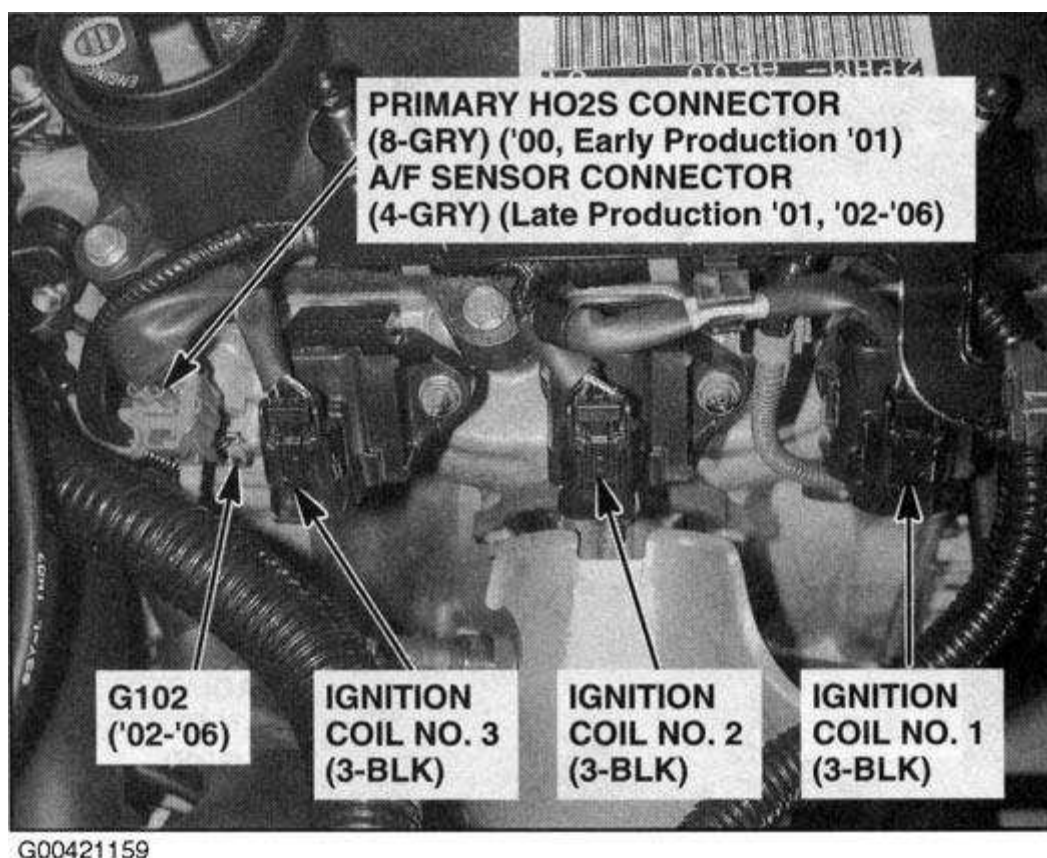


Fig. 108: Rear Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

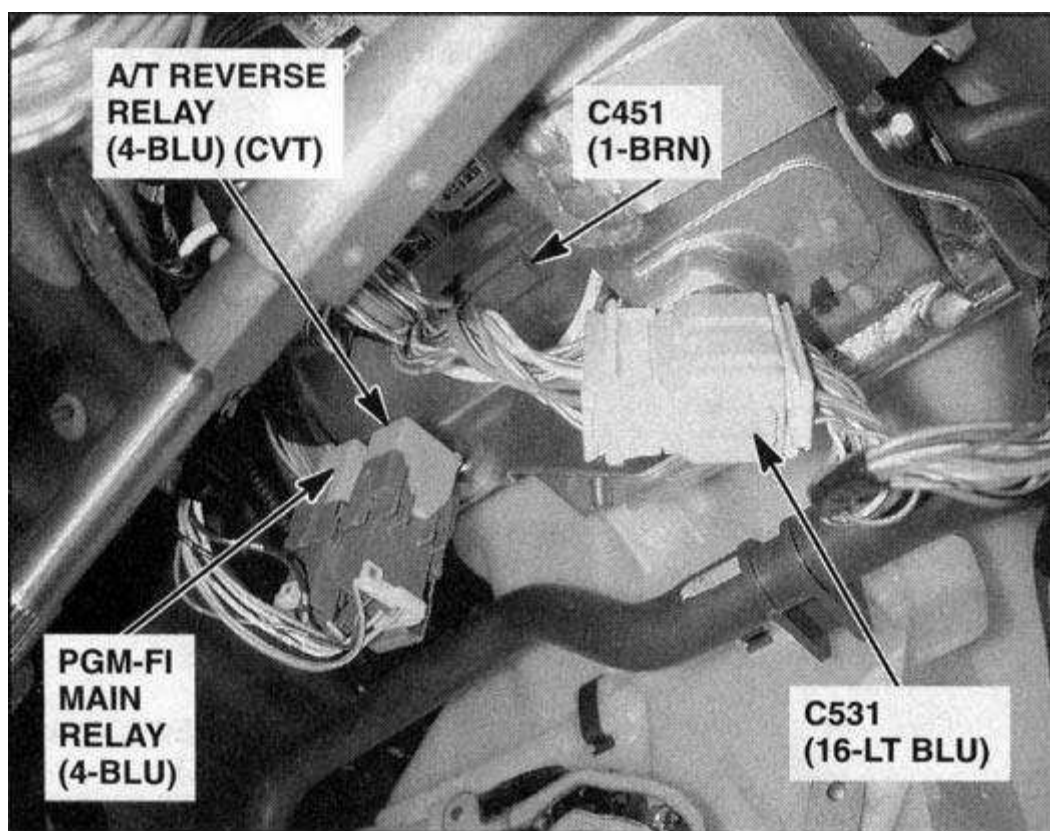

G00421160

Fig. 109: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

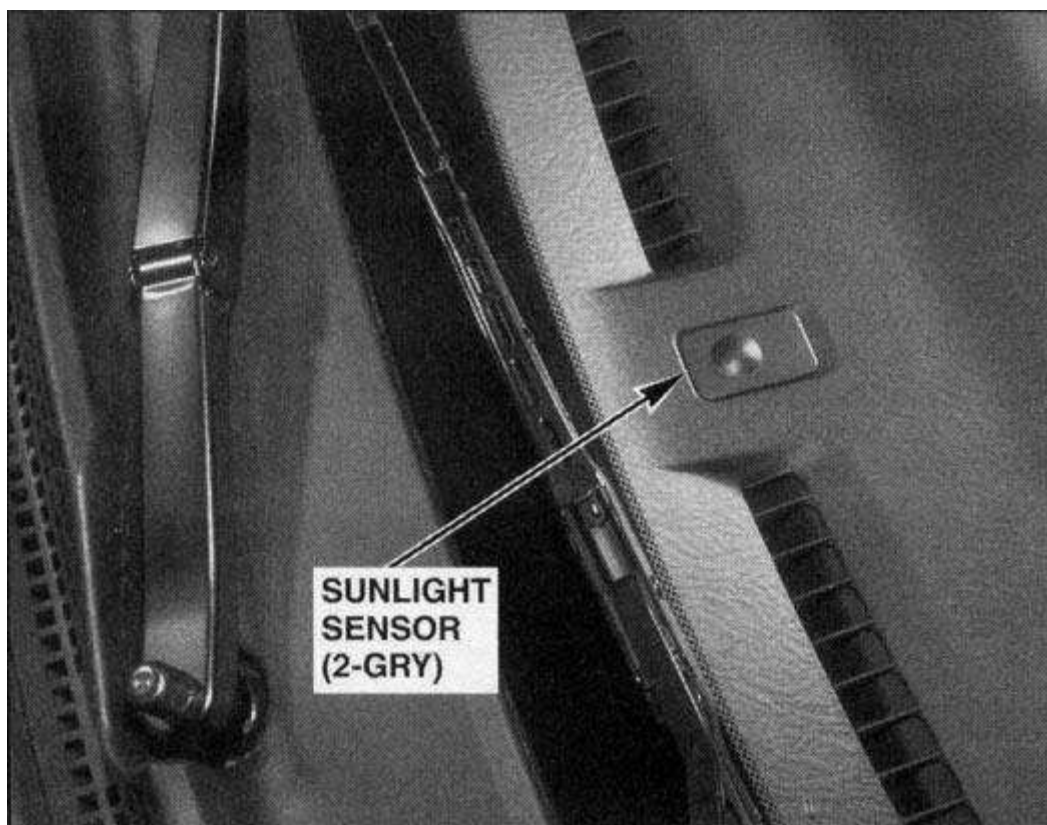

G00421164


Fig. 110: Top Middle Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

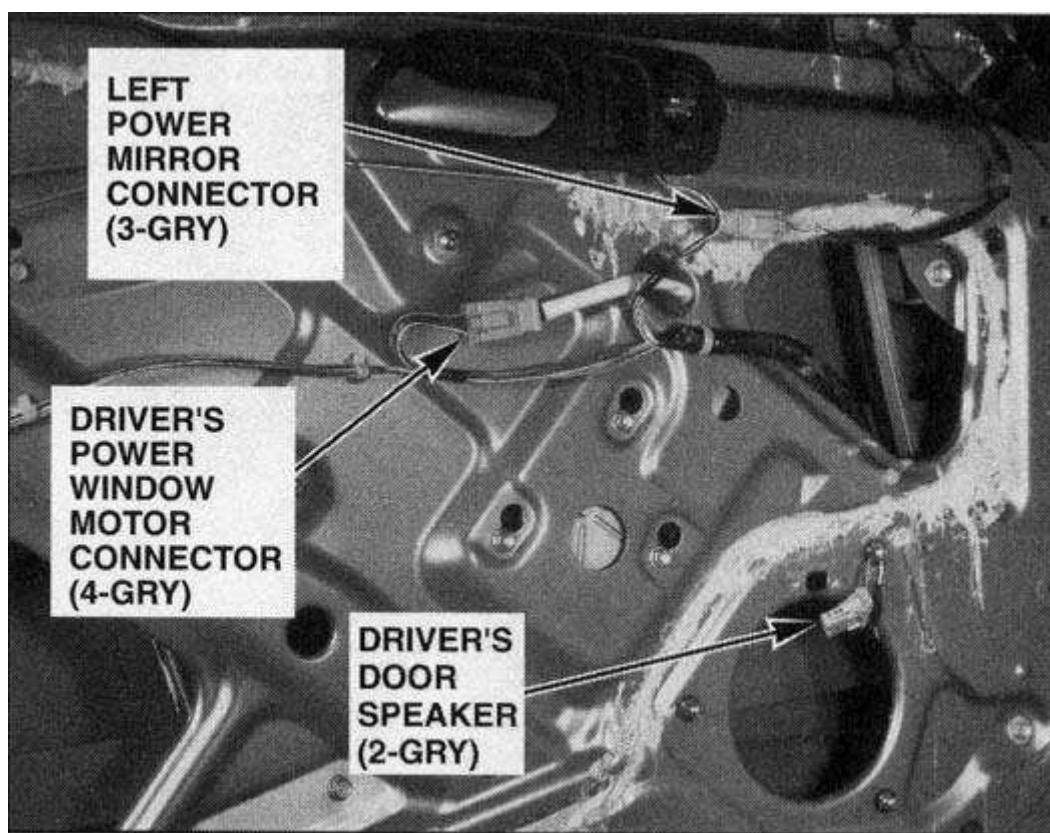

G00421166


Fig. 111: Front Of Driver's Door
Courtesy of AMERICAN HONDA MOTOR CO., INC.

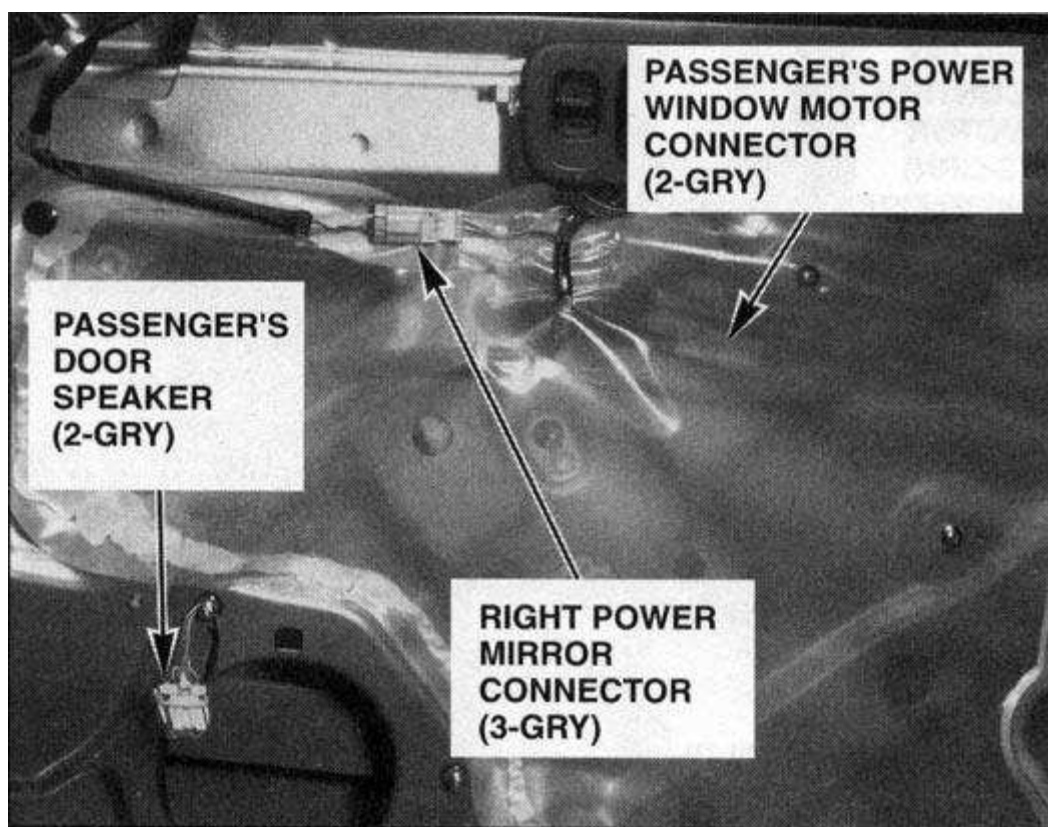

G00421167

Fig. 112: Front Of Passenger's Door


Courtesy of AMERICAN HONDA MOTOR CO., INC.

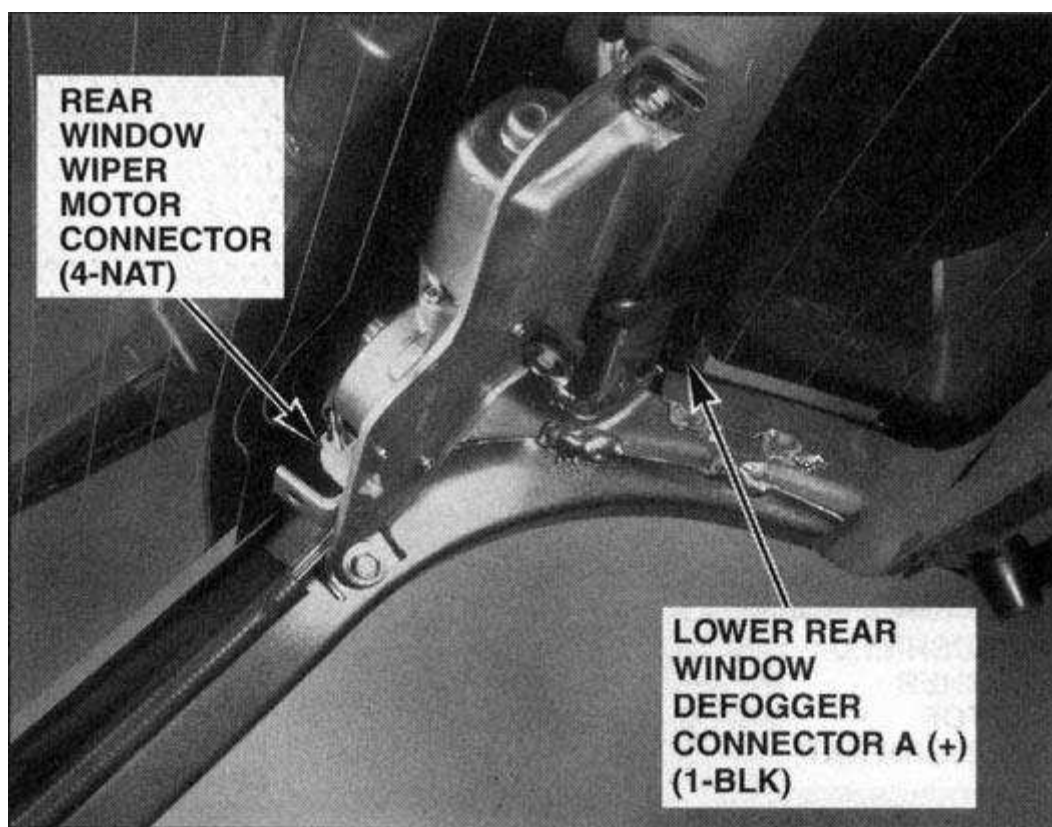

G00421170


Fig. 113: Right Side Of Hatch

Courtesy of AMERICAN HONDA MOTOR CO., INC.

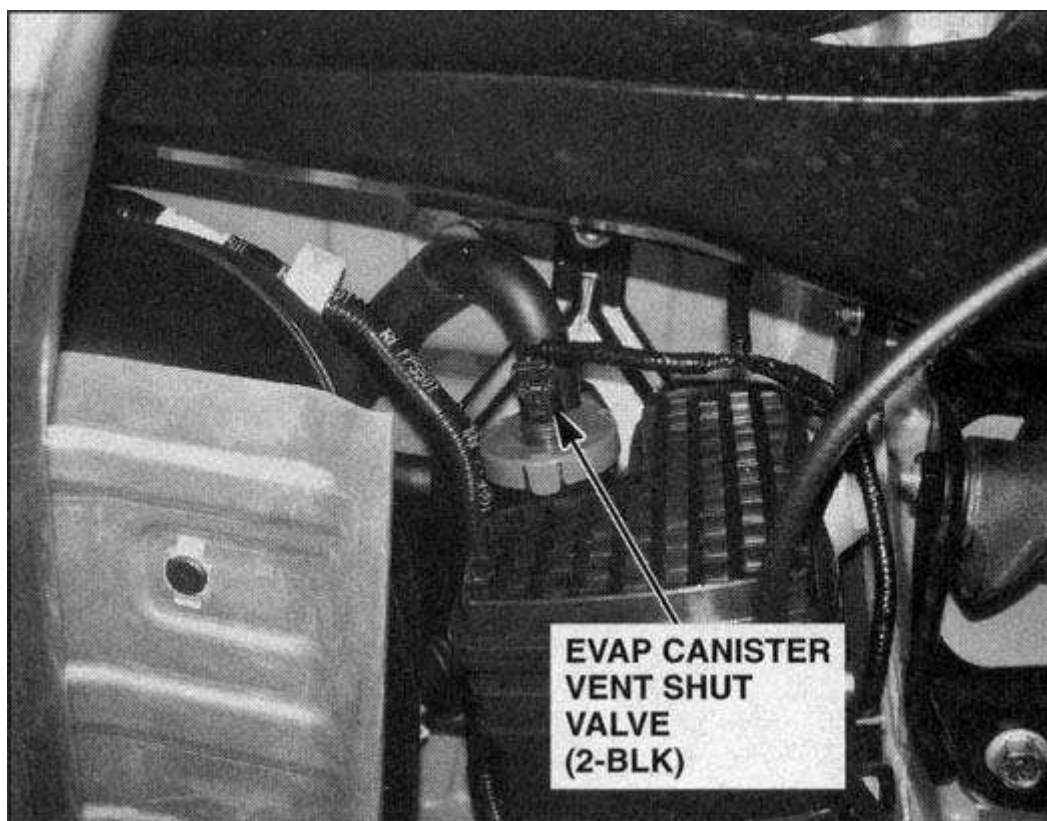

G00421172

Fig. 114: Under Right Rear Side Of Vehicle
Courtesy of AMERICAN HONDA MOTOR CO., INC.

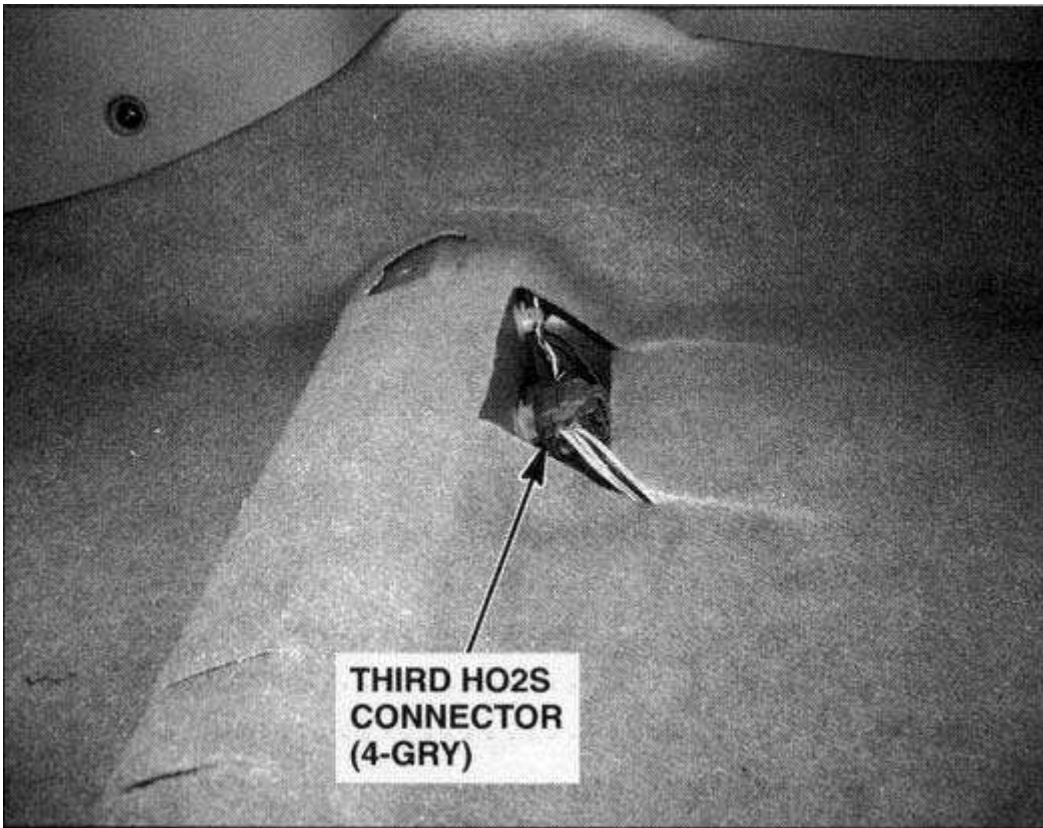

G00421173

Fig. 115: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.