


2000-06 ACCESSORIES & EQUIPMENT

Hood - Insight

ADJUSTMENT

1. Slightly loosen each hood hinge bolt.
2. Adjust the hood alignment:
 - Adjust the hood right and left, as well as forward and rearward, by using the elongated holes on the hood hinge (A).
 - Adjust the hood edge cushions (B) in or out to make the hood fit flush with the body at the side edges.

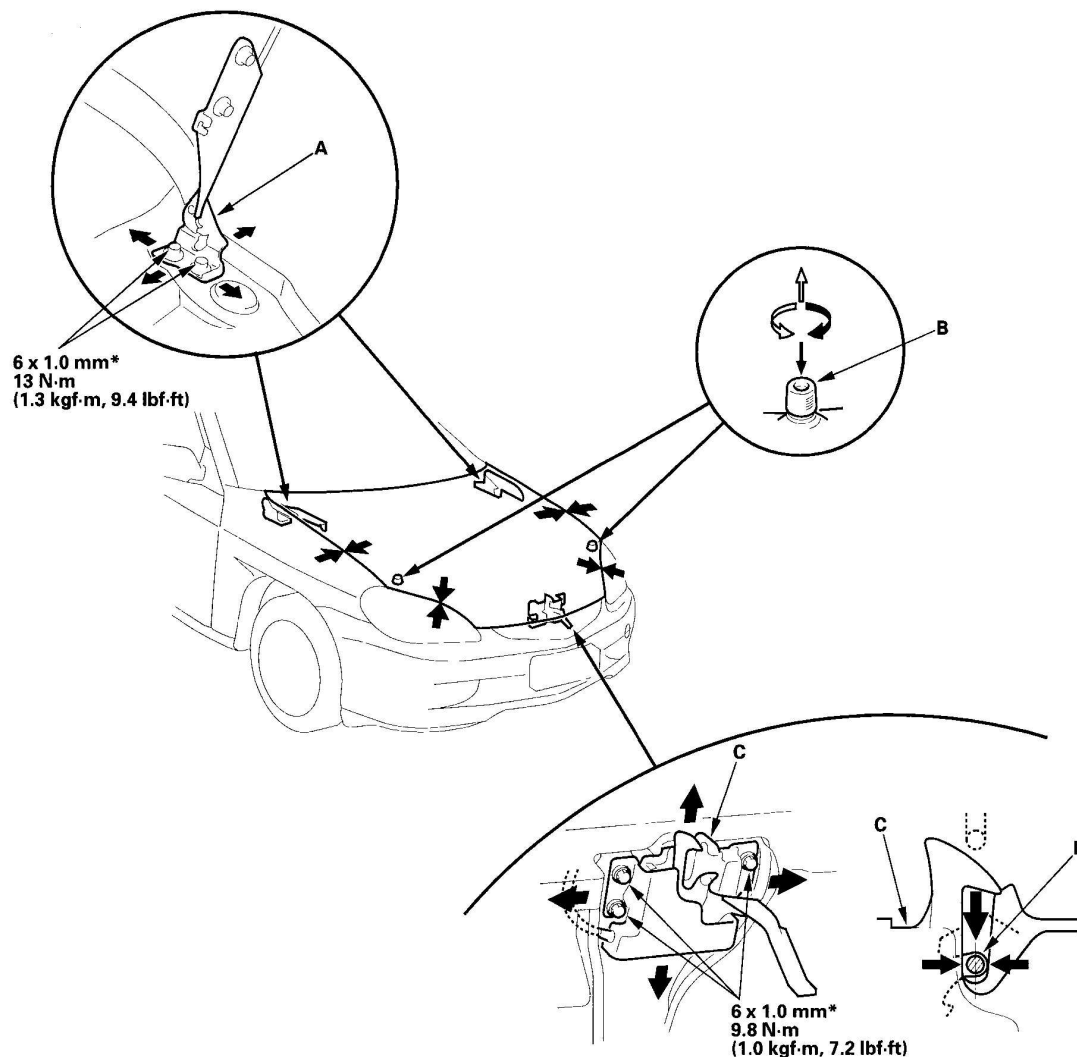

*: CORROSION-RESISTANT BOLT
G03682609

Fig. 1: Adjusting Hood Right And Left Forward With Torque Specifications


Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Adjust the hood latch (C) to obtain the proper height at the forward edge, and move the hood latch right or left until the striker (D) is centered in the hood latch.
4. Tighten each bolt securely.
5. Check that the hood opens properly and locks securely.
6. Apply touch-up paint to the hinge mounting bolts and around the hinges.

2006 Honda Insight

2000-06 ACCESSORIES & EQUIPMENT Hood - Insight

7. Remove the latch cover (A). Apply multipurpose grease to each location of the hood latch (B), hood hinge (C) and hood striker (D) as indicated by the arrows.

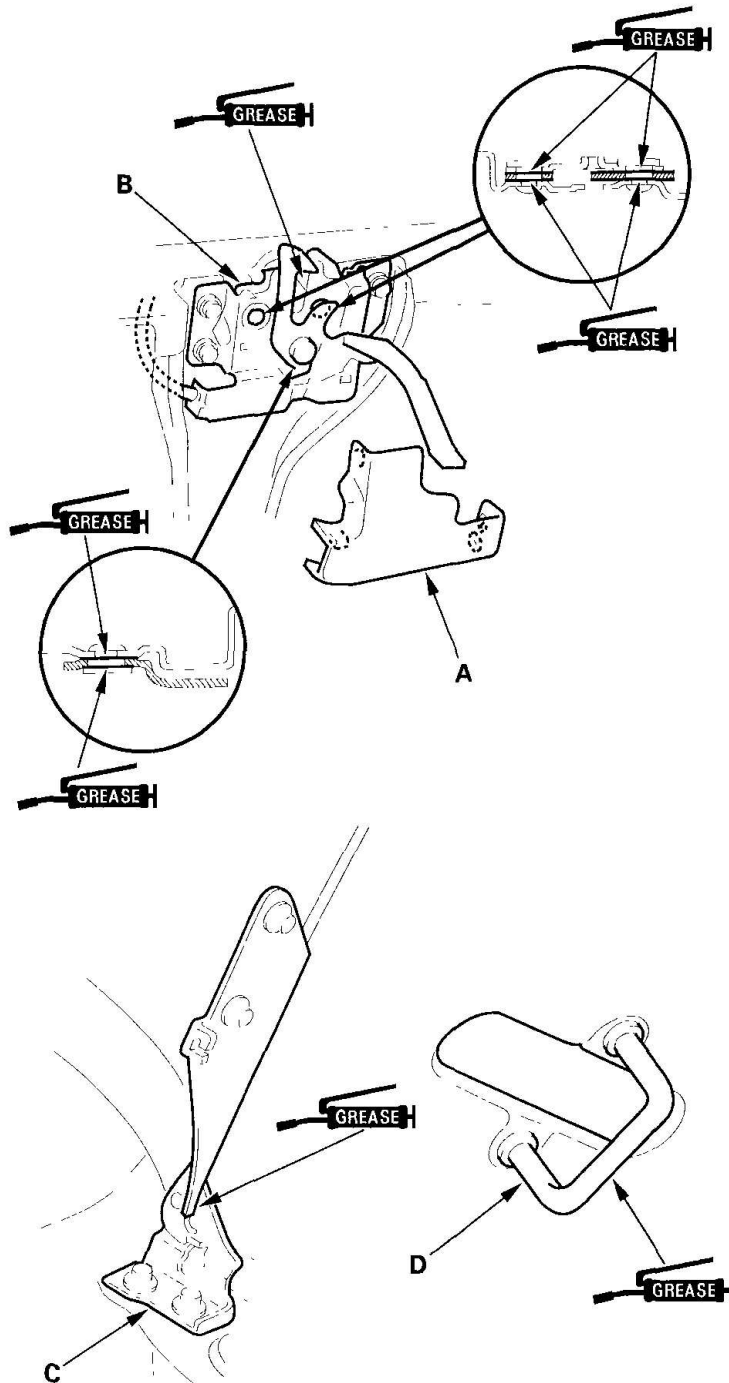

G03682610



Fig. 2: Applying Multipurpose Grease To Latch, Hinge & Striker
Courtesy of AMERICAN HONDA MOTOR CO., INC.

HOOD FRONT SEAL REPLACEMENT

1. Using a clip remover, detach the clips, then remove the hood front seal (A).
Take care not to scratch the hood.

Fastener Locations

▷ : Clip, 6

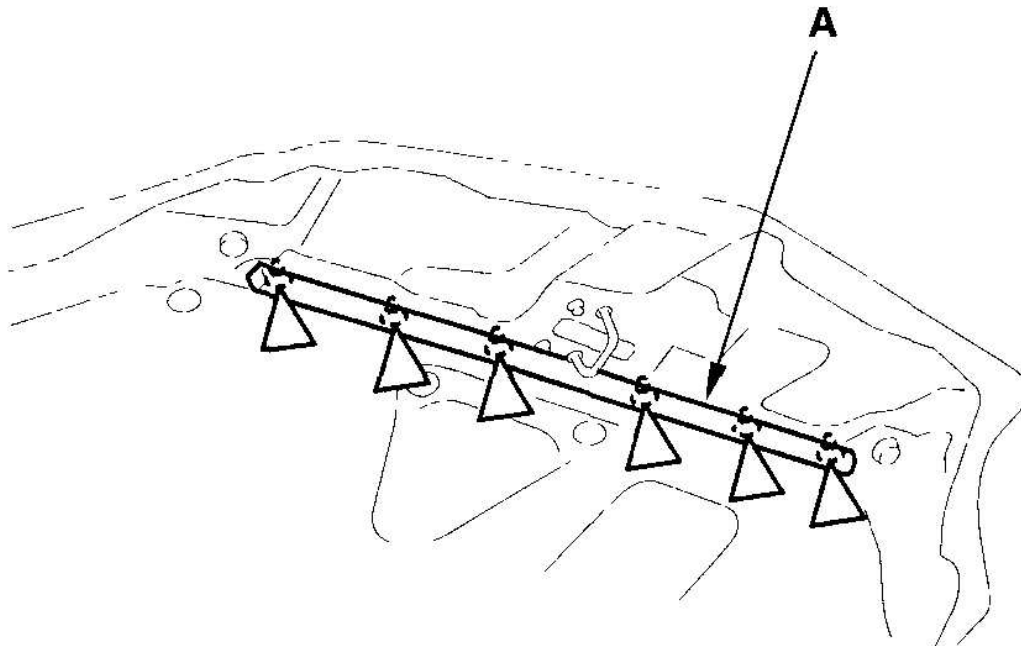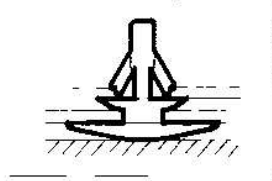

G03682611

Fig. 3: View Of Hood Front Seal

Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Install the seal in the reverse order of removal, and note these items:
 - Check for damaged or stress-whitened clips, and replace them with new ones.
 - Push the seal clips into place securely.

HOOD INSULATOR REPLACEMENT

- NOTE:**
- **Take care not to scratch the hood.**
 - **Use a clip remover to remove the clips.**


 
1. Remove the hood insulator as shown.
2. Install the insulator in the reverse order of removal, and note these items:
 - Check for damaged or stress-whitened clips, and replace them with new ones.
 - Push the clips into place securely.
 - Make sure the windshield washer tubes are connected properly.

2006 Honda Insight

2000-06 ACCESSORIES & EQUIPMENT Hood - Insight

Fastener Locations

A ▷ : Clip, 16

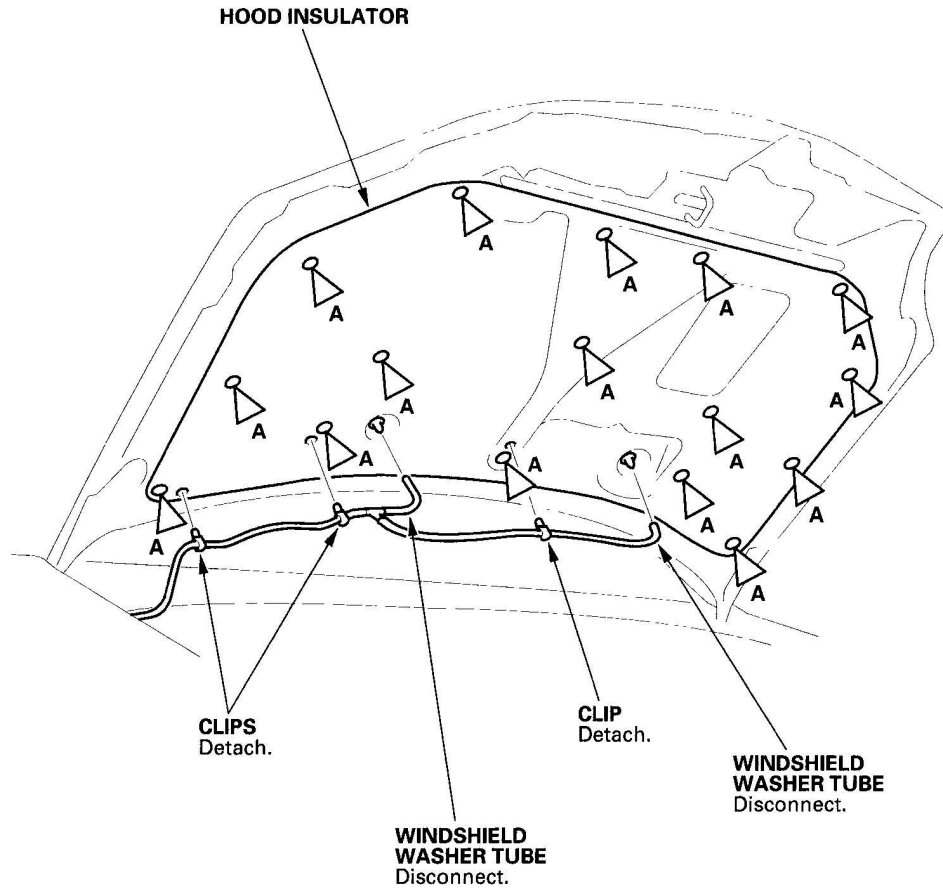

G03682612

Fig. 4: Removing Hood Insulator
Courtesy of AMERICAN HONDA MOTOR CO., INC.