


<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000028UW0
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> SUPPLEMENTAL RESTRAINT SYSTEMS: AIRBAG SYSTEM: B007212; Passenger Seat Belt Pretensioner "A" Deployment Control Circuit Short to Battery; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

<b>DTC</b>	<b>B007212</b>	<b>Passenger Seat Belt Pretensioner "A" Deployment Control Circuit Short to Battery</b>
------------	----------------	---

## DESCRIPTION

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	WARNING INDICATE	DTC OUTPUT FROM	PRIORITY	TEST MODE / CHECK MODE
B007212	Passenger Seat Belt Pretensioner "A" Deployment Control Circuit Short to Battery	<ul style="list-style-type: none"> <li>The airbag ECU assembly detects a short to +B in the passenger seat pretensioner squib circuit for 0.5 seconds.</li> <li>Front seat outer belt assembly RH malfunction</li> <li>Airbag ECU assembly malfunction</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connector</li> <li>Front seat outer belt assembly RH</li> <li>Airbag ECU assembly</li> </ul>	Comes on	SRS Airbag	A	Applies to check mode

## WIRING DIAGRAM

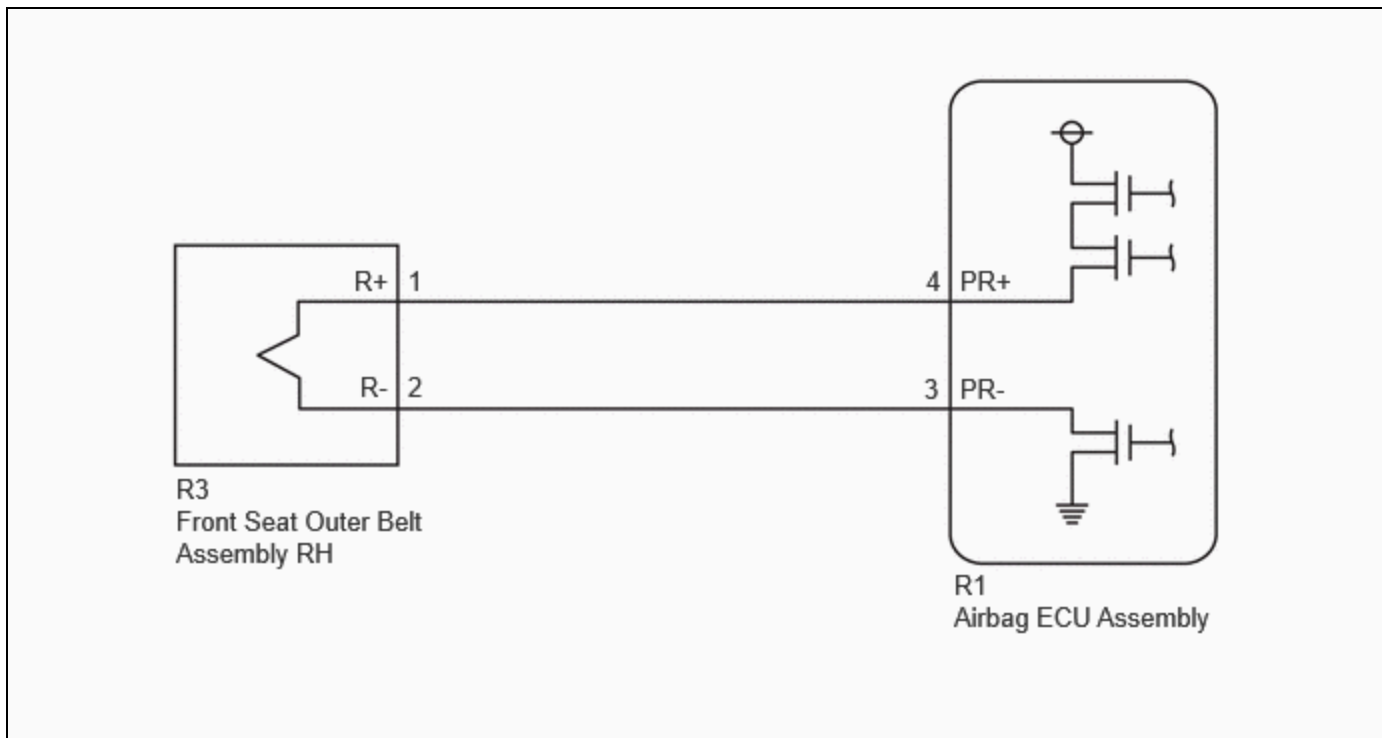

## CAUTION / NOTICE / HINT

### NOTICE:

- After the ignition switch is turned off, there may be a waiting time before disconnecting the negative (-) auxiliary battery terminal.

[Click here](#) **INFO**

### HINT:

When disconnecting and reconnecting the auxiliary battery, there is an automatic learning function that completes learning when the respective system is used.

[Click here](#) **INFO**

- After replacing the airbag ECU assembly, refer to work procedure.

[Click here](#) **INFO**

### HINT:

- To perform the simulation method, enter check mode (signal check) with the GTS.

[Click here](#) **INFO**

- Perform the simulation method while checking the Data List.

[Click here](#) **INFO**

## PROCEDURE

<b>1.</b>	<b>CLEAR DTC</b>
-----------	------------------

Pre-procedure1

(a) Turn the ignition switch to ON, and wait for at least 60 seconds.

Procedure1

(b) Clear the DTCs stored in memory.

**Body Electrical > SRS Airbag > Clear DTCs**

Post-procedure1

(c) Turn the ignition switch off.

**NEXT**



<b>2.</b>	<b>CHECK DTC</b>
-----------	------------------

Pre-procedure1

(a) Turn the ignition switch to ON, and wait for at least 60 seconds.

Procedure1

(b) Check for DTCs.

**Body Electrical > SRS Airbag > Trouble Codes**

RESULT	PROCEED TO
B007212 is output	A
B007212 is not output	B

Post-procedure1

(c) None

**B** **USE SIMULATION METHOD TO CHECK**

**A**



<b>3.</b>	<b>CHECK CONNECTION OF CONNECTORS</b>
-----------	---------------------------------------

Pre-procedure1

(a) Turn the ignition switch off.

(b) Disconnect the cable from the negative (-) auxiliary battery terminal, and wait for at least 60 seconds.

Procedure1

(c) Check that the connectors are properly connected to the front seat outer belt assembly RH and airbag ECU assembly.

OK:

The connectors are properly connected.

Post-procedure1

(d) None

**NG**  **CONNECT CONNECTORS PROPERLY**


**OK**



<b>4.</b>	<b>CHECK CONNECTORS</b>
-----------	-------------------------

Pre-procedure1

(a) Disconnect the airbag ECU assembly connector.

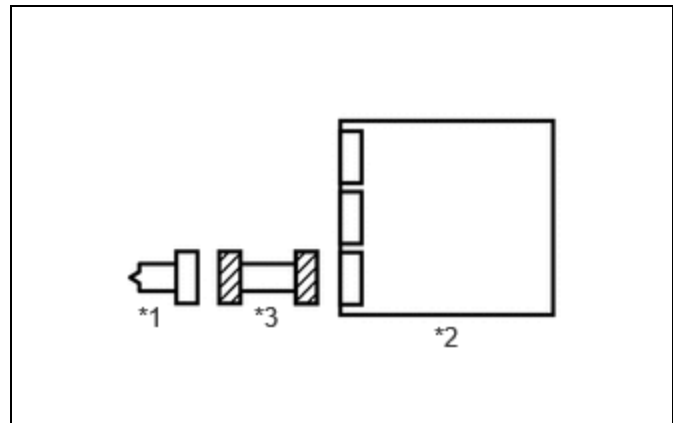

*1	Front Seat Outer Belt Assembly RH
*2	Airbag ECU Assembly
*3	Wire Harness

(b) Disconnect the front seat outer belt assembly RH connector.

Procedure1

(c) Check that the terminals of the connectors are not deformed or damaged.

OK:

The terminals are not deformed or damaged.

(d) Check that the connectors are not loose, deformed or damaged.

OK:

The connector locking button is not disengaged, and the claw of the lock is not deformed or damaged.

(e) Check that the short springs of the activation prevention mechanism of the wire harness connector are not deformed or damaged.

OK:

The short springs are not deformed or damaged.

Post-procedure1

(f) None

**NG** ► REPAIR OR REPLACE HARNESS OR CONNECTOR


**OK**



**5. CLEAR DTC**

Pre-procedure1

(a) Connect the airbag ECU assembly connector.

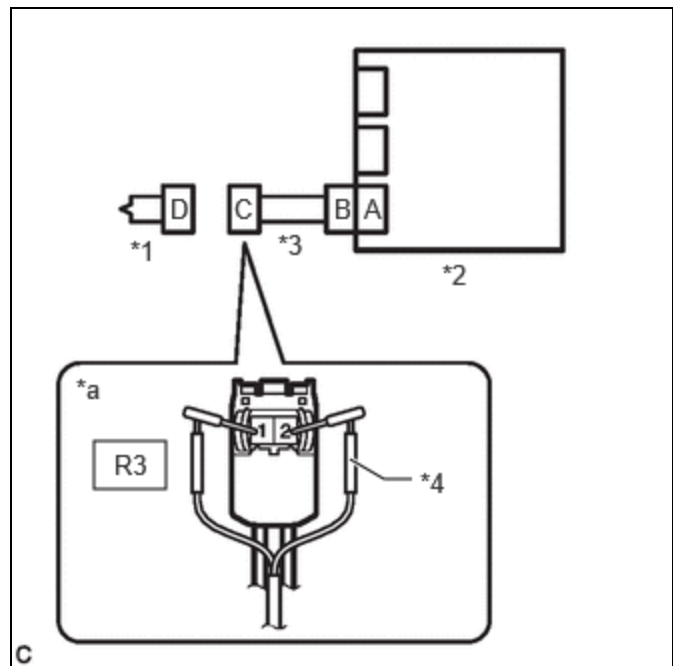

*1	Front Seat Outer Belt Assembly RH
*2	Airbag ECU Assembly
*3	Wire Harness
*4	SST
*a	Front view of wire harness connector (to Front Seat Outer Belt Assembly RH)

(b) Connect SST (resistance: 2.1 Ω) to connector C.

**CAUTION:**

Never connect the tester to the front seat outer belt assembly RH for measurement, as this may lead to a serious injury due to pretensioner deployment.

**NOTICE:**

- Do not forcibly insert SST into the terminals of the connector when connecting SST.
- Insert SST straight into the terminals of the connector.

**SST: 09843-18061**

- (c) Connect the cable to the negative (-) auxiliary battery terminal, and wait for at least 2 seconds.
- (d) Turn the ignition switch to ON, and wait for at least 60 seconds.

Procedure1

- (e) Clear the DTCs stored in memory.

**Body Electrical > SRS Airbag > Clear DTCs**

Post-procedure1

- (f) Turn the ignition switch off.

**NEXT**

<b>6.</b>	<b>CHECK FRONT SEAT OUTER BELT ASSEMBLY RH</b>
-----------	--

Pre-procedure1

- (a) Turn the ignition switch to ON, and wait for at least 60 seconds.

Procedure1

- (b) Check for DTCs.

**Body Electrical > SRS Airbag > Trouble Codes**

RESULT	PROCEED TO
B007212 is not output	A
B007212 is output	B

**HINT:**

Codes other than DTC B007212 may be output at this time, but they are not related to this check.

Post-procedure1

- (c) Turn the ignition switch off.
- (d) Disconnect the cable from the negative (-) auxiliary battery terminal, and wait for at least 60 seconds.
- (e) Disconnect SST from connector C.

**A** **REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH** INFO

**B**  
▼

**7. CHECK HARNESS AND CONNECTOR**

Pre-procedure1

- (a) Disconnect the airbag ECU assembly connector.
- (b) Connect the cable to the negative (-) auxiliary battery terminal, and wait for at least 2 seconds.
- (c) Turn the ignition switch to ON.

Procedure1

- (d) Measure the voltage according to the value(s) in the table below.

Standard Voltage:




[Click Location & Routing\(R3\)](#)

[Click Connector\(R3\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
R3-1 (R+) - Body ground	Ignition switch ON	Below 1 V	V
R3-2 (R-) - Body ground	Ignition switch ON	Below 1 V	V

Result:

PROCEED TO
OK
NG

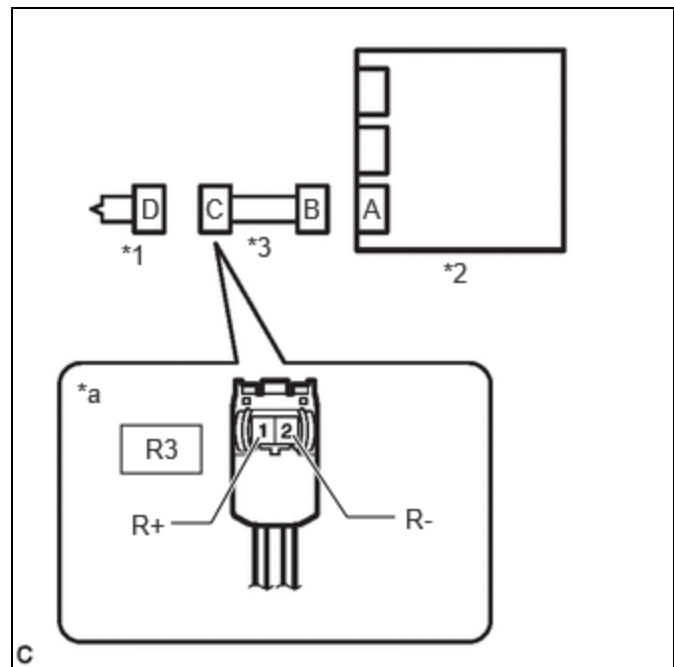

*1	Front Seat Outer Belt Assembly RH
*2	Airbag ECU Assembly
*3	Wire Harness
*a	Front view of wire harness connector (to Front Seat Outer Belt Assembly RH)

Post-procedure1

- (e) Turn the ignition switch off.
- (f) Disconnect the cable from the negative (-) auxiliary battery terminal, and wait for at least 60 seconds.

**NG** ▶ **REPAIR OR REPLACE HARNESS OR CONNECTOR**


**OK**



<b>8.</b>	<b>CLEAR DTC</b>
-----------	------------------

Pre-procedure1

(a) Connect the airbag ECU assembly connector.

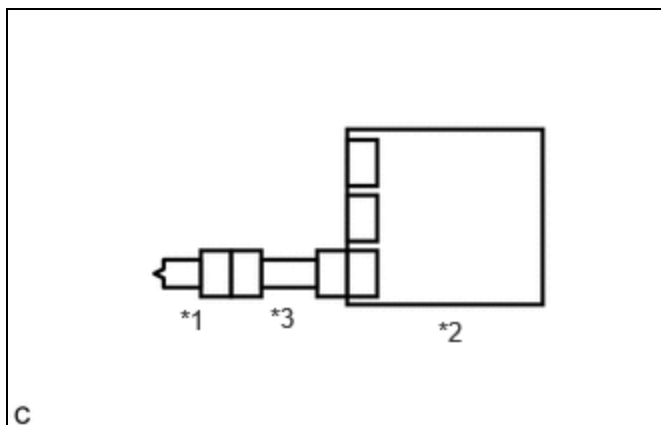

*1	Front Seat Outer Belt Assembly RH
*2	Airbag ECU Assembly
*3	Wire Harness

(b) Connect the front seat outer belt assembly RH connector.

(c) Connect the cable to the negative (-) auxiliary battery terminal, and wait for at least 2 seconds.

(d) Turn the ignition switch to ON, and wait for at least 60 seconds.

Procedure1

(e) Clear the DTCs stored in memory.

**Body Electrical > SRS Airbag > Clear DTCs**

Post-procedure1

(f) Turn the ignition switch off.

**NEXT**



<b>9.</b>	<b>CHECK DTC</b>
-----------	------------------



Pre-procedure1

(a) Turn the ignition switch to ON, and wait for at least 60 seconds.

Procedure1

(b) Check for DTCs.

**Body Electrical > SRS Airbag > Trouble Codes**

RESULT	PROCEED TO
B007212 is not output	A
B007212 is output	B

**HINT:**

Codes other than DTC B007212 may be output at this time, but they are not related to this check.

Post-procedure1

(c) None

**A** ► **USE SIMULATION METHOD TO CHECK**

**B** ► **REPLACE AIRBAG ECU ASSEMBLY** **INFO**

