


## INSTALLATION

### 1. INSTALL CANISTER

- (a) Install the canister with the 4 bolts and clip.  
**Torque: 20 N\*m (204 kgf\*cm, 15 ft.\*lbf)**
- (b) Connect the air inlet line tube to the canister (leak detection pump).

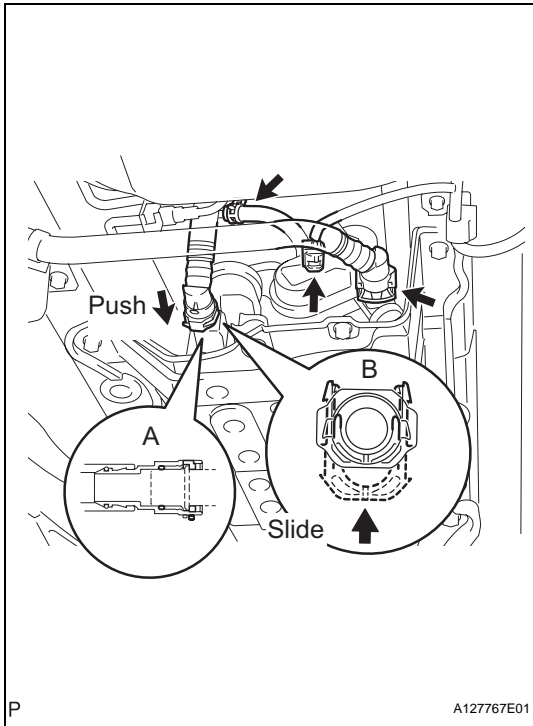

- (c) Install the vent line tube.
  - (1) Connect the pipe to the fuel tube connector, as shown in A in the illustration. Then push up the retainer to lock the claws, as shown in B in the illustration.

#### NOTICE:

- Check that there are no scratches or foreign objects around the connected part of the fuel tube connector and pipe before performing this work.
- After connecting the fuel tank vent tube, check that the fuel tank vent tube is securely connected by pulling the fuel tube connector and pipe.

- (d) Connect the purge line hose.  
HINT:  
Install the hose to the canister, and then attach the retainer.
- (e) Connect the connector to the canister (leak detection pump).

### 2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL