STARTING SYSTEM
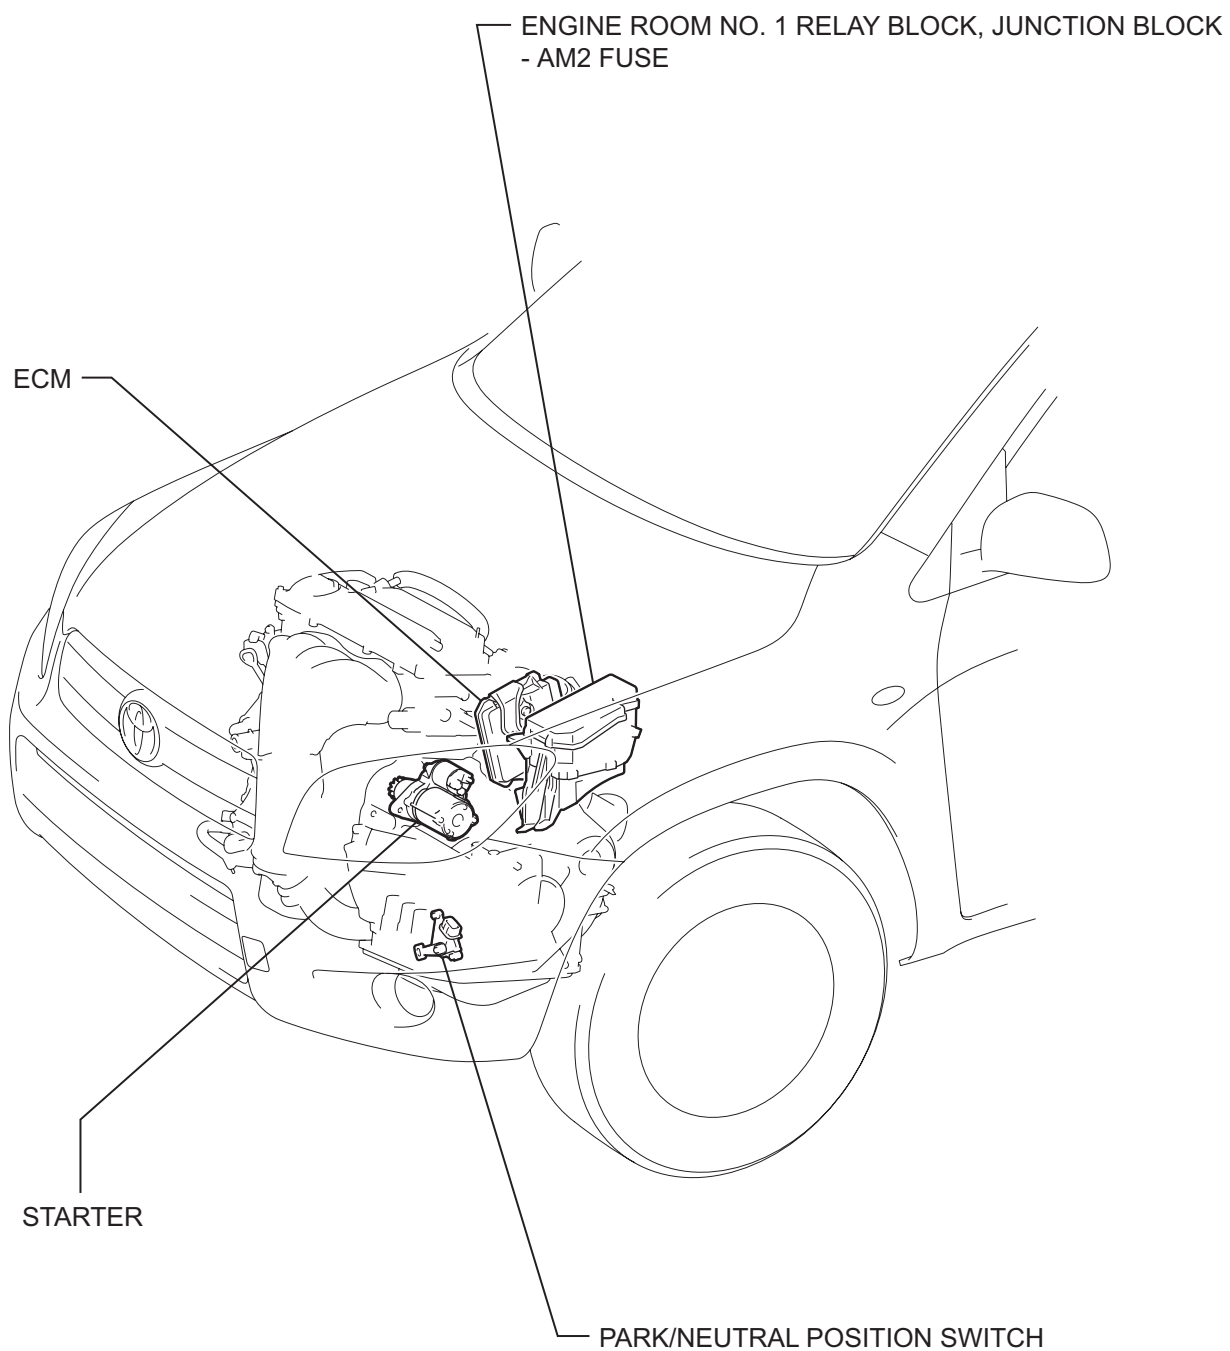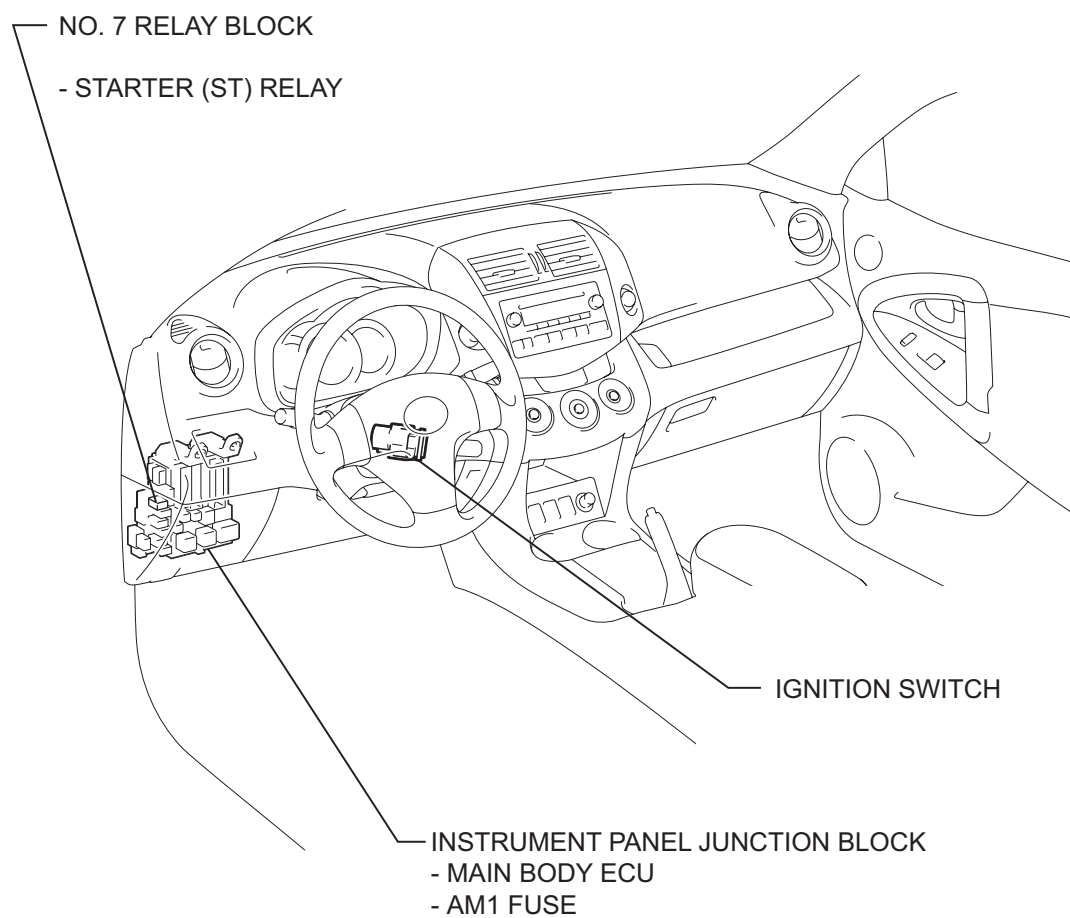
PARTS LOCATION

ENGINE ROOM NO. 1 RELAY BLOCK, JUNCTION BLOCK
- AM2 FUSE

ECM

STARTER

PARK/NEUTRAL POSITION SWITCH

ST

P

A124953E02

NO. 7 RELAY BLOCK

- STARTER (ST) RELAY

IGNITION SWITCH

INSTRUMENT PANEL JUNCTION BLOCK
- MAIN BODY ECU
- AM1 FUSE

ST

A129320E01