


Front Bulkhead / Front Side Frame Extension

Installation

1. Install the new front side frame extension.
2. Set the new front bulkhead into position, and measure the front compartment diagonally. Check the body dimensions (see [section 4](#)).
3. Tack weld the clamped position.
4. Temporarily install the hood, front fender, headlight, and front bumper, and check for differences in level and clearance.
5. Perform the main welding.

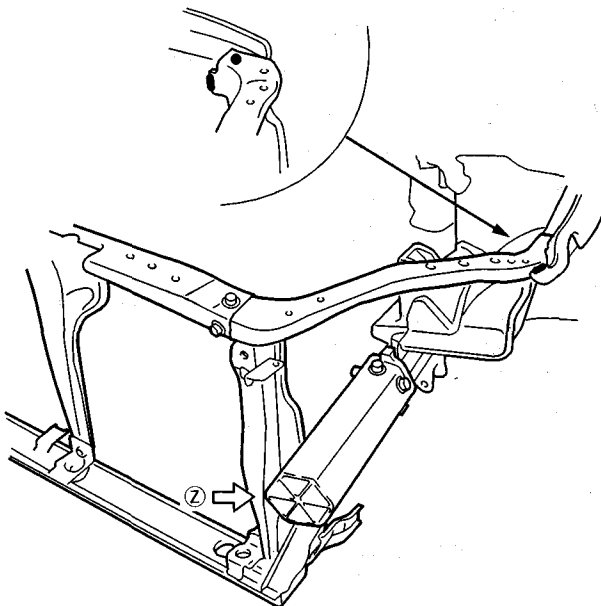

VIEW ②

