


# Front Wheelhouse / Damper Housing


## Installation

1. Set the new damper housing, and front wheelhouse into position, and measure the front compartment diagonally. Check the body dimensions (see [section 4](#)).
2. Tack weld the clamped position.
3. Check the front damper position. Temporarily install the hood, front fender, headlight, and front bumper, and check for differences in level and clearance. Make sure the body lines flow smoothly.
4. Perform the main welding
  - Weld the damper housing, wheelhouse B, and front damper base.

- From passenger compartment side, plug weld the holes in the dashboard lower, wheelhouse B and damper base.

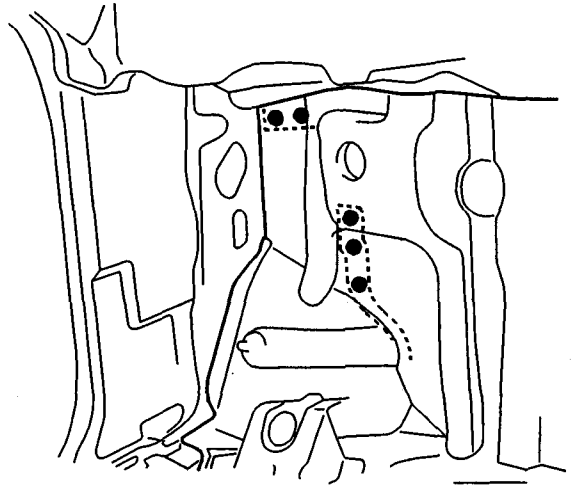

- Weld the front wheelhouse.

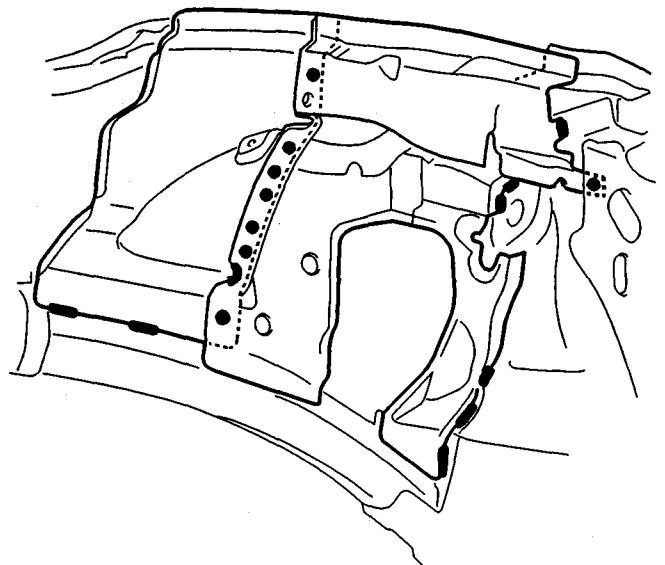

- 
- Weld the wheelhouse upper member.

